

**ROTAX®**

# MAINTENANCE MANUAL HEAVY

FOR ROTAX ENGINE TYPE 916 i A/C24 SERIES

REF NO.: MMH-916 i A/C24 | PART NO.: 898867



## WARNING

**Before starting any maintenance work, please read the Maintenance Manual completely as it contains important safety relevant information. Failure to do so may result in personal injuries including death. Consult the original equipment manufacturers handbook for additional instructions!**

These technical data and the information embodied therein are the property of BRP-Rotax GmbH & CO KG, Austria, acc. BGBl 1984 no. 448, and shall not, without prior written permission of BRP-Rotax GmbH & Co KG, be disclosed in whole or in part to third parties. This legend shall be included on any reproduction of these data, in whole or in part. The Manual must remain with the engine/aircraft in case of sale.

ROTAX® is a trade mark of BRP-Rotax GmbH & Co KG. In the following document the short form of BRP-Rotax GmbH & Co KG = BRP-Rotax is used.

Other product names in this documentation are used purely for ease of identification and may be trademarks of the respective company or owner.

Copyright 2023 © - all rights reserved.

Translation into other languages might be performed in the course of language localization but does not lie within ROTAX® scope of responsibility.

In any case the original text in English language and the metric units are authoritative.



## Table of Content

<b>Chapter</b>	<b>INTRO</b> – GENERAL NOTE
<b>Chapter</b>	<b>LEP</b> – LIST OF EFFECTIVE PAGES
<b>Chapter</b>	<b>TOA</b> – TABLE OF AMENDMENTS
<b>Chapter</b>	<b>00–00–00</b> – GENERAL NOTE
<b>Chapter</b>	<b>24–20–00</b> – Internal Generator
<b>Chapter</b>	<b>61–20–00</b> – Governor
<b>Chapter</b>	<b>71–00–00</b> – Power Plant
<b>Chapter</b>	<b>72–00–00</b> – Engine
<b>Chapter</b>	<b>72–10–00</b> – Propeller gearbox
<b>Chapter</b>	<b>72–10–10</b> – Gearbox re-configure
<b>Chapter</b>	<b>72–20–00</b> – Engine Block
<b>Chapter</b>	<b>72–30–00</b> – Cylinder head
<b>Chapter</b>	<b>72–30–10</b> – Displacement parts
<b>Chapter</b>	<b>73–00–00</b> – Fuel system
<b>Chapter</b>	<b>73–10–00</b> – Fuel system and distribution
<b>Chapter</b>	<b>74–00–00</b> – Ignition unit
<b>Chapter</b>	<b>74–20–00</b> – Distribution
<b>Chapter</b>	<b>75–00–00</b> – Cooling system
<b>Chapter</b>	<b>76–00–00</b> – Engine control
<b>Chapter</b>	<b>76–10–00</b> – Engine Control unit (ECU)
<b>Chapter</b>	<b>76–20–00</b> – Fuse Box
<b>Chapter</b>	<b>76–50–00</b> – Wiring harness
<b>Chapter</b>	<b>76–70–00</b> – Sensors and actuators
<b>Chapter</b>	<b>78–00–00</b> – Exhaust system
<b>Chapter</b>	<b>78–10–00</b> – Exhaust
<b>Chapter</b>	<b>78–20–00</b> – Turbocharger
<b>Chapter</b>	<b>79–00–00</b> – Lubrication system
<b>Chapter</b>	<b>80–00–00</b> – Electric starter

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: INTRO**  
**GENERAL NOTE**

**Foreword**

Before carrying out maintenance work on the engine, read this Maintenance Manual carefully.

If any passages of the Manual are not clearly understood or in case of any questions, please contact your nearest ROTAX® Authorized Aircraft Engines Distributors or their independent Service Centers.

BRP-Rotax wishes you much pleasure and satisfaction flying your aircraft powered by this ROTAX®-aircraft engine.

The structure of the Manual follows whenever it is possible the structure of the ATA (Air Transport Association) standards. The aim is the compatibility with the aircraft manufacturers documentation, which means they must then adapt the documentation to their standard.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: LEP**  
**LIST OF EFFECTIVE PAGES**

Each new revision to the Maintenance Manual will have a new List of Effective Pages.

Chapter	Page	Date	Chapter	Page	Date
	Title page			14	December 01 2023
INTRO	1	December 01 2023		15	December 01 2023
	2	December 01 2023		16	December 01 2023
LEP	1	December 01 2023		17	December 01 2023
	2	December 01 2023		18	December 01 2023
	3	December 01 2023		19	December 01 2023
	4	December 01 2023		20	December 01 2023
	5	December 01 2023		21	December 01 2023
	6	December 01 2023		22	December 01 2023
	7	December 01 2023		23	December 01 2023
	8	December 01 2023		24	December 01 2023
TOA	9	December 01 2023		25	December 01 2023
	10	December 01 2023		26	December 01 2023
	1	December 01 2023		27	December 01 2023
	2	December 01 2023		28	December 01 2023
00-00-00	3	December 01 2023		29	December 01 2023
	4	December 01 2023		29	December 01 2023
	1	December 01 2023		30	December 01 2023
	2	December 01 2023		31	December 01 2023
	3	December 01 2023		32	December 01 2023
	4	December 01 2023		33	December 01 2023
	5	December 01 2023		34	December 01 2023
	6	December 01 2023		35	December 01 2023
	7	December 01 2023		36	December 01 2023
	8	December 01 2023	24-20-00	1	December 01 2023
	9	December 01 2023		2	December 01 2023
10	December 01 2023		3	December 01 2023	
11	December 01 2023		4	December 01 2023	
12	December 01 2023		5	December 01 2023	
13	December 01 2023		6	December 01 2023	



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Chapter	Page	Date
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	27	December 01 2023
	28	December 01 2023
	29	December 01 2023
	30	December 01 2023
	31	December 01 2023
	32	December 01 2023
	33	December 01 2023
	34	December 01 2023
61-20-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023

Chapter	Page	Date
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
71-00-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Chapter	Page	Date
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	27	December 01 2023
	28	December 01 2023
	29	December 01 2023
	30	December 01 2023
72-00-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
72-10-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023

Chapter	Page	Date
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	27	December 01 2023
	28	December 01 2023
	29	December 01 2023
	30	December 01 2023
	31	December 01 2023
	32	December 01 2023
	33	December 01 2023
	34	December 01 2023
	35	December 01 2023
	36	December 01 2023
	37	December 01 2023
	38	December 01 2023
	39	December 01 2023
	40	December 01 2023
	41	December 01 2023
	42	December 01 2023
	43	December 01 2023
	44	December 01 2023
	45	December 01 2023
	46	December 01 2023

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Chapter	Page	Date
72-10-10	47	December 01 2023
	48	December 01 2023
	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
72-20-00	9	December 01 2023
	10	December 01 2023
	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
72-30-00	15	December 01 2023
	16	December 01 2023
	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
4	December 01 2023	
5	December 01 2023	

Chapter	Page	Date
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	27	December 01 2023
	28	December 01 2023
	29	December 01 2023
	30	December 01 2023
	31	December 01 2023
	32	December 01 2023
	33	December 01 2023
	34	December 01 2023
	35	December 01 2023
	36	December 01 2023
	37	December 01 2023
	38	December 01 2023

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Chapter	Page	Date
72-30-10	39	December 01 2023
	40	December 01 2023
	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
73-00-00	21	December 01 2023
	22	December 01 2023
	1	December 01 2023
	2	December 01 2023
73-10-00	3	December 01 2023
	4	December 01 2023
	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023

Chapter	Page	Date
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	27	December 01 2023
	28	December 01 2023
	29	December 01 2023
	30	December 01 2023
	31	December 01 2023
	32	December 01 2023
	33	December 01 2023
	34	December 01 2023
	35	December 01 2023
	36	December 01 2023
	37	December 01 2023
	38	December 01 2023

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Chapter	Page	Date
74-00-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
74-20-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
75-00-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023

Chapter	Page	Date
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	27	December 01 2023
	28	December 01 2023
	29	December 01 2023
	30	December 01 2023
31	December 01 2023	
32	December 01 2023	
76-00-00	1	December 01 2023
	2	December 01 2023
76-10-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Chapter	Page	Date
76-20-00	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	76-50-00	14
15		December 01 2023
16		December 01 2023
17		December 01 2023
18		December 01 2023
1		December 01 2023
2		December 01 2023
3		December 01 2023
4		December 01 2023
5		December 01 2023
6		December 01 2023
7	December 01 2023	

Chapter	Page	Date
76-70-00	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
12	December 01 2023	
13	December 01 2023	
14	December 01 2023	
15	December 01 2023	
16	December 01 2023	
17	December 01 2023	
18	December 01 2023	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Chapter	Page	Date
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	27	December 01 2023
	28	December 01 2023
	29	December 01 2023
	30	December 01 2023
	31	December 01 2023
	32	December 01 2023
	33	December 01 2023
	34	December 01 2023
	35	December 01 2023
	36	December 01 2023
	37	December 01 2023
	38	December 01 2023
78-00-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
78-10-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023

Chapter	Page	Date
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
78-20-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
79-00-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Chapter	Page	Date
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023
	8	December 01 2023
	9	December 01 2023
	10	December 01 2023
	11	December 01 2023
	12	December 01 2023
	13	December 01 2023
	14	December 01 2023
	15	December 01 2023
	16	December 01 2023
	17	December 01 2023
	18	December 01 2023
	19	December 01 2023
	20	December 01 2023
	21	December 01 2023
	22	December 01 2023
	23	December 01 2023
	24	December 01 2023
	25	December 01 2023
	26	December 01 2023
	27	December 01 2023
	28	December 01 2023
	29	December 01 2023
	30	December 01 2023
80-00-00	1	December 01 2023
	2	December 01 2023
	3	December 01 2023
	4	December 01 2023
	5	December 01 2023
	6	December 01 2023
	7	December 01 2023

Chapter	Page	Date
	8	December 01 2023
	Index	
	Back page	

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: TOA**  
**TABLE OF AMENDMENTS**

**Approval\***  
 The technical content of this document is approved under the authority of the DOA ref. EASA.21.J.048.

Edition 0/Rev. 0 July 01 2023

Obsolete with Revision 1, which is a complete re-revision

Revision 1 December 01 2023

Current no.	Chapter	Page	Date of change	Remark for approval	Date of approval from authorities	Date of inclusion	signature
0	INTRO	all	July 01 2023	DOA*			
0	LEP	all	July 01 2023	DOA*			
0	TOA	all	July 01 2023	DOA*			
0	00-00-00	all	July 01 2023	DOA*			
0	24-20-00	all	July 01 2023	DOA*			
0	61-20-00	all	July 01 2023	DOA*			
0	71-00-00	all	July 01 2023	DOA*			
0	72-00-00	all	July 01 2023	DOA*			
0	72-10-00	all	July 01 2023	DOA*			
0	72-10-10	all	July 01 2023	DOA*			
0	72-20-00	all	July 01 2023	DOA*			
0	72-30-00	all	July 01 2023	DOA*			
0	72-30-10	all	July 01 2023	DOA*			
0	73-00-00	all	July 01 2023	DOA*			
0	73-10-00	all	July 01 2023	DOA*			
0	74-00-00	all	July 01 2023	DOA*			
0	74-20-00	all	July 01 2023	DOA*			
0	75-00-00	all	July 01 2023	DOA*			
0	76-00-00	all	July 01 2023	DOA*			
0	76-10-00	all	July 01 2023	DOA*			



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Current no.	Chapter	Page	Date of change	Remark for approval	Date of approval from authorities	Date of inclusion	signature
0	76-20-00	all	July 01 2023	DOA*			
0	76-50-00	all	July 01 2023	DOA*			

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Current no.	Chapter	Page	Date of change	Remark for approval	Date of approval from authorities	Date of inclusion	signature
1	LEP	all	Dec. 01 2023	DOA*			
1	TOA	all	Dec. 01 2023	DOA*			
1	00-00-00	3	Dec. 01 2023	DOA*			
1	24-20-00	2,3,7,- 15,35	Dec. 01 2023	DOA*			
1	61-20-00	16	Dec. 01 2023	DOA*			
1	71-00-00	2,3,14- ,21,22- ,24	Dec. 01 2023	DOA*			
1	72-00-00	2,3	Dec. 01 2023	DOA*			
1	72-30-00	5	Dec. 01 2023	DOA*			
1	74-00-00	2-6	Dec. 01 2023	DOA*			
1	74-20-00	2,3,5,6	Dec. 01 2023	DOA*			
1	76-00-00	1-3	Dec. 01 2023	DOA*			
1	76-20-00	2- 14,17,- 18,21- 24	Dec. 01 2023	DOA*			
1	76-50-00	3,4,7,- 8,22- 26	Dec. 01 2023	DOA*			
1	76-70-00	28	Dec. 01 2023	DOA*			

**Summary of amendments**

Summary of the relevant amendments in this context, but without any claim to completeness.

Current no.	Chapter	Page	Date of change	Comment
1	all	all	Dec. 01 2023	New additional designation of engine type (C24)

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 00-00-00**  
**GENERAL NOTE**

**TOPICS IN THIS CHAPTER**

<b>General</b> .....	<b>2</b>
<b>Type description</b> .....	<b>3</b>
<b>Abbreviations and terms (depending on respective engine type)</b> .....	<b>4</b>
Wiring color codes .....	8
Conversion table .....	9
<b>Safety notice</b> .....	<b>10</b>
Safety information .....	11
Instruction .....	13
Maintenance Concept.....	14
Technical documentation.....	15
Use for intended purpose .....	17
<b>Inspection of parts and report of findings</b> .....	<b>18</b>
<b>Classification of parts for maintenance/repair</b> .....	<b>20</b>
<b>Maintenance</b> .....	<b>23</b>
Fastener information.....	25
LOCTITE Application procedure .....	25
<b>Consumable materials</b> .....	<b>31</b>
<b>Tools</b> .....	<b>35</b>

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## GENERAL

### Purpose

The purpose of this Maintenance Manual is to acquaint maintenance service staff (iRMT) approved by the local aviation authorities with some basic maintenance and safety information for service work.

### Documentation

For more detailed information related to aircraft and aircraft/engine installation, maintenance, safety- or flight operation, consult the documentation provided by the aircraft manufacturer and/or its dealer.

For additional information on engines, maintenance or parts, you can also contact your nearest ROTAX® authorized Aircraft Engines distributor or their independent Service Center.

### ROTAX Distributors

For ROTAX® Authorized Distributors for aircraft engines see latest Operators Manual (OM) or the official website [www.FLYROTAX.com](http://www.FLYROTAX.com).

### Engine serial number

When making inquiries or ordering parts, always indicate the engine serial number. Due to continuous product improvement, engines of the same engine type might require different support and spare parts.

The engine serial number is located on the top of the crankcase, behind the propeller gearbox.

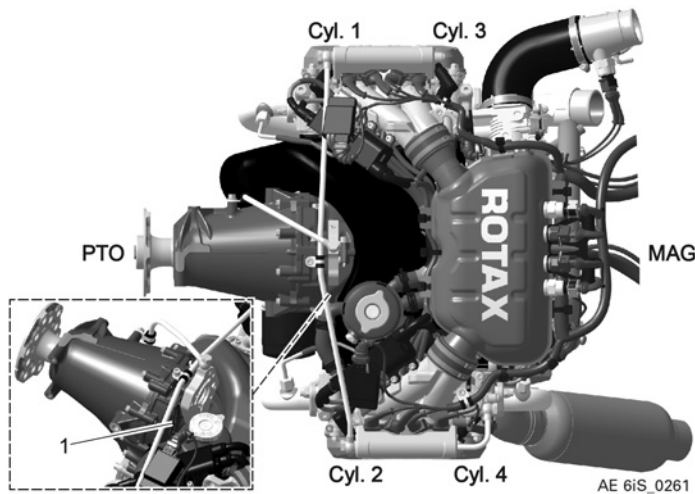


Figure 1.1: Engine serial number


1 Engine serial number



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## TYPE DESCRIPTION

The type description consists of the following parts:

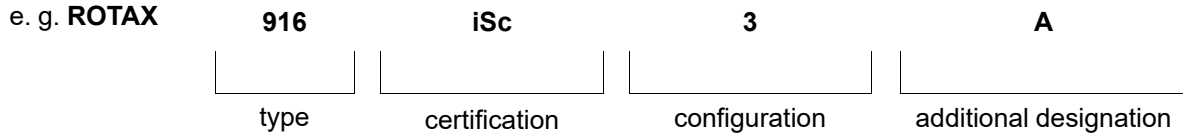

### Designation

Designation		Description
<b>Type</b>	<b>916</b>	4-cylinder horizontally opposed, turbocharged engine
<b>Certification</b>	<b>iSc</b>	Certified to EASA CS-E (TC No.EASA.E.121)
	<b>iS</b>	Approved to according ASTM F2339
<b>Configuration</b>	<b>2</b>	Propeller shaft with flange for fixed pitch propeller.
	<b>3</b>	Propeller shaft with flange for constant speed propeller and drive for hydraulic governor for constant speed propeller.
<b>Additional designation</b>	<b>A</b>	High altitude version
	<b>C24</b>	24 Volt Board Net Supply version

### Options

Available options (optional equipment) for the engine type mentioned above:

	external alternator	governor	exhaust system
<b>for configuration 2</b>	YES	NO	YES
<b>for configuration 3</b>	YES	YES	YES

### NOTE

*Conversion of the configuration 2 to configuration 3 and vice versa may be accomplished by BRP-Rotax Authorized Distributors or their independent Service Centers.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**ABBREVIATIONS AND TERMS (DEPENDING ON RESPECTIVE ENGINE TYPE)**

Abbreviations	Description
*	Reference to another section
⊕	center of gravity
💧	The drop symbol indicates use of sealing agents, adhesives or lubricants (only in the Maintenance Manual Heavy (MMH)).
°C	Degrees Celsius (Centigrade)
°F	Degrees Fahrenheit
rpm	Revolutions per minute
A	Ampere
AAPTS	Ambient Air Pressure Temperature Sensor
AC	alternating current
AD	Airworthiness Directives
Ah	Ampere hour
A/C	Aircraft
AR	as required
assy.	assembly
ASB	Alert Service Bulletin
ACG	Austro Control GmbH
ACL	Anti Collision Light
API	American Petrol Institute
ASTM	American Society for Testing and Materials
ATA	Air Transport Association
AWG	American Wire Gauge
BPS	Boost Pressure Sensor
CAN	Controller Area Network
Coil 1–4	Ignition coils 1–4
CPS 1+2	Crankshaft Position Sensor 1+2
CSA	Constant Speed Actuator
CTS	Cooling Temperature Sensor
CW	clockwise

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

CCW	counter-clockwise
CGSB	Canadian General Standards Board
DCDI	Dual Capacitor Discharge Ignition
DC	direct current
DOA	Design Organization Approval
DOT	Department of Transport
EASA	European Aviation Safety Agency
IM	Installation Manual
ECU	Engine Control Unit
EGT	Exhaust Gas Temperature
INTRO	Introduction
EMS	Engine Management System
EMS GND	Engine system internal ground reference which is intended to be disconnected from aircraft common ground during flight.
EMC	Electromagnetic compatibility
EN	European Standard
ETFE	Ethylene Tetrafluoroethylene
FAA	Federal Aviation Administration
FAR	Federal Aviation Regulations
FOD	Foreign object damage
FL	Flight Level
Fuse box	Power conditioning and distribution for the Engine Management System
hr.	hours
HIC A	Harness Interface Connector A
HIC B	Harness Interface Connector B
IAT	Indicated Air Temperature
ICA	Instructions for Continued Airworthiness
IFR	Instrument Flight Rules
IFSD	In-flight-shutdown
INJ 1–8	Injector 1–8
IPC	Illustrated Parts Catalog
ips	inch per second

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

iRMT	independent ROTAX Maintenance Technician
ISA	International Standard Atmosphere
kg	Kilograms
KNOCK	Knock sensor
Lane A	System A of Engine Management System
Lane B	System B of Engine Management System
LOPC	Loss of power control
MAPS 1+2	Manifold Air Pressure Sensor 1+2
MATS 1+2	Manifold Air Temperature Sensor 1+2
MON	Motor Octane Number
MAG	Magneto Side
N	Newton
n.a.	not available
NDT	Non Destructive Testing
NEW	Parts must be replaced against NEW (mentioned in figures)
Nm	Newtonmeter
NVFR	Night Visual Flight Rules
OAT	Outside Air Temperature
OHM	Overhaul Manual
OHV	Over Head Valve
OM	Operators Manual
OPS	Oil Pressure Sensor
OTS	Oil Temperature Sensor
PCD	Pitch Circle Diameters
PCV	Pressure Control Valve
PMA	Permanent magnet alternator
POA	Production Organization Approval
PS	Power supply
PTFE	Polytetrafluoroethylene (Teflon)
PTO	Power Take Off
Rev.	Revision
ROTAX®	is a trademark of BRP-Rotax GmbH & Co KG





**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

RON	Research Octane Number
RON 424	ROTAX® Standard 424
s.v.	still valid (only Illustrated Parts Catalog)
S/N	Serial Number
SAE	Society of Automotive Engineers
SEP	Single Engine Piston
SB	Service Bulletin
SI	Service Instruction
SI-PAC	Service Instruction Parts and Accessories
SPST	Single pole single throw
STP	Shielded twisted pair wire
SL	Service Letter
SMD	Surface Mounted Devices
TBO	Time Between Overhaul
TC	Type certificate
part no.	Part number
TOA	Table Of Amendment
TOC	Table Of Content
TPS	Throttle Position Sensor
TSN	Time Since New
TSNP	Time Since New Part
TSO	Time Since Overhaul
V	Volt
VFR	Visual Flight Rules
LEP	List of Effective Pages
MM	Maintenance Manual
MEP	Multi Engine Piston
X3	Connector on Engine Management System wiring harness which serves as an interface for power supply
XXXX	shows the serial component number

WIRING COLOR CODES

# IEC 60757

## Color codes (wiring)

black		BK
brown		BN
red		RD
orange		OG
yellow		YE
green		GN
blue		BU
violet		VT
gray		GY
white		WH
pink		PK
turquoise		TQ
Light blue		LBU
Dark blue		DBU
gold		GD
silver		SR
green-yellow		GNYE

10336

Figure 1.2

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**CONVERSION TABLE**

<b>Units of length:</b>	<b>Units of power:</b>
$1 \text{ mm} = 0.03937 \text{ in}$ $1 \text{ in} = 25.4 \text{ mm}$ $1 \text{ ft} = 12 \text{ in}$ $= 0.3048 \text{ m}$	$1 \text{ kW} = 1.341 \text{ hp}$ $1 \text{ hp} = 0.7457 \text{ kW}$ $1 \text{ kW} = 1.3596 \text{ PS}$ $1 \text{ PS} = 0.7355 \text{ kW}$
<b>Units of area:</b>	<b>Units of temperature:</b>
$1 \text{ cm}^2 = 0.155 \text{ sq. in (in}^2\text{)}$ $1 \text{ sq. in (in}^2\text{)} = 6.4516 \text{ cm}^2$	$\text{K} = ^\circ\text{C} - 273,15$ $^\circ\text{C} = (^\circ\text{F} - 32) / 1,8$ $^\circ\text{F} = (^\circ\text{C} \times 1.8) + 32$
<b>Units of volume:</b>	<b>Units of velocity:</b>
$1 \text{ cm}^3 = 0.06102 \text{ cu in (in}^3\text{)}$ $1 \text{ cu in (in}^3\text{)} = 16.3871 \text{ cm}^3$ $1 \text{ dm}^3 = 1 \text{ l}$ $1 \text{ dm}^3 = 0.21997 \text{ gal (UK)}$ $1 \text{ gal (UK)} = 4.5461 \text{ dm}^3$ $1 \text{ dm}^3 = 0.26417 \text{ gal (US)}$ $1 \text{ gal (US)} = 3.7854 \text{ dm}^3$	$1 \text{ m/s} = 3.6 \text{ km/h}$ $1 \text{ ft/min} = 0.3048 \text{ m/min}$ $= 0.00508 \text{ m/sec}$ $1 \text{ m/s} = 196.85 \text{ ft/min}$ $1 \text{ kt} = 1.852 \text{ km/h}$ $1 \text{ km/h} = 0.53996 \text{ kn}$
<b>Units of mass:</b>	<b>spec. fuel consumption:</b>
$1 \text{ kg} = 2.2046 \text{ lbs.}$ $1 \text{ lb.} = 0.45359 \text{ kg}$	$1 \text{ g/kWh} = 0.001644 \text{ lb/hph}$ $1 \text{ lb/hph} = 608.277 \text{ g/kWh}$
<b>Density:</b>	<b>Units of torque:</b>
$1 \text{ g/cm}^3 = 0.016018 \text{ lb/ft}^3$ $1 \text{ lb/ft}^3 = 62.43 \text{ g/cm}^3$	$1 \text{ Nm} = 0.737 \text{ ft lb}$ $= 8.848 \text{ in lb}$ $1 \text{ ft lb} = 1.356 \text{ Nm}$ $1 \text{ in lb} = 0.113 \text{ Nm}$
<b>Units of force:</b>	<b>Cable cross-section: Conversion table-Wire Gauge: AWG-mm<sup>2</sup></b>
$1 \text{ N} = 0.224809 \text{ lbf}$ $1 \text{ lbf} = 4.4482 \text{ N}$	$\text{AWG} \rightarrow \text{mm}^2$ $4 \rightarrow 21$ $6 \rightarrow 13$ $8 \rightarrow 8.4$ $10 \rightarrow 5.3$ $12 \rightarrow 3.3$ $14 \rightarrow 2.1$ $16 \rightarrow 1.3$ $18 \rightarrow 0.8$ $20 \rightarrow 0.52$
<b>Units of pressure:</b>	
$1 \text{ Pa} = 1 \text{ N/m}^2$ $1 \text{ bar} = 100\,000 \text{ Pa} / 1000 \text{ hPa} / 100 \text{ kPa}$ $1 \text{ bar} = 14.503 \text{ lbf/in}^2 \text{ (psi)}$ $1 \text{ in Hg} = 33.8638 \text{ hPa}$	

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### **SAFETY NOTICE**

Although reading such information does not eliminate any hazards, it promotes understanding, and applying of the information will promote correct use of the engine. Always apply common workshop safety rules.

The information and descriptions of components and systems contained in this Manual are correct at the time of publication. BRP-Rotax maintains a policy of continuous improvement of its products without imposing upon itself any obligation to retrofit products previously manufactured.

#### **Revisions**

BRP-Rotax reserves the right to remove, replace or discontinue any design, specification, feature or other at any time, and without incurring obligation.

#### **Measurement**

Specifications are given in the SI metric system with the imperial- and US customary measurement system equivalents in parenthesis.

#### **Symbols used**

This Manual uses the following symbols to emphasize particular information. This information is important and must be observed.

#### **⚠ WARNING**

Identifies an instruction which, if not followed, may cause serious injury or even fatal injury.

#### **⚠ CAUTION**

Identifies an instruction which, if not followed, may cause minor or moderate injury.

#### **NOTICE**

Identifies an instruction which, if not followed, may severely damage the engine or could void any warranty.

#### **NOTE**

*Indicates supplementary information which may be needed to fully complete or understand an instruction.*

#### **ENVIRONMENTAL NOTE**

**Environmental notes give you tips on environmental protection.**

A revision bar outside the page margin indicates a change to text or graphic.



# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### SAFETY INFORMATION

#### Use for intended purpose

#### **⚠ WARNING**

##### **Non-compliance can result in serious injuries or death!**

The user has to assume all risks possibly arising from utilizing auxiliary equipment.

#### **⚠ WARNING**

##### **Non-compliance can result in serious injuries or death!**

Never fly the aircraft equipped with this engine at locations, air speeds, altitudes or in other situations which do not allow a successful no-power landing after sudden engine stoppage.

- This engine is not suitable for aerobatics (inverted flight, etc.). Flight attitudes outside the permissible limits are not allowed
- This engine has exclusively been developed and tested for fixed wing, gyrocopter, pusher and tractor applications. In case of any other usage, the OEM is responsible for testing and the correct function of the engine
- It should be clearly understood that the choice, selection and use of this particular engine on any aircraft is at the sole discretion and responsibility of the aircraft manufacturer, assembler or owner/user
- Due to the varying designs, equipment and types of aircraft, BRP-Rotax grants no warranty on the suitability of its engines use on any particular aircraft. Further, BRP-Rotax grants no warranty on this engines suitability with any other part, component or system which may be selected by the aircraft manufacturer, assembler or user for aircraft application

#### **⚠ WARNING**

##### **Non-compliance can result in serious injuries or death!**

For each use of DAY VFR, NIGHT VFR or IFR in an aircraft the applicable legal requirements and other existing regulations must be adhered to.

- In addition to observing the instructions in our Manual, general safety and accident precautions, legal regulations and regulations of any aeronautical authority must be observed
- Where differences exist between this Manual and regulations provided by any authority, the more stringent regulation shall be applied
- For continued airworthiness see Maintenance Manual Line (MML)
- Unauthorized modifications of engine or aircraft will automatically exclude any liability of the engine manufacturer for consequential damage

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### Engine operation

- The engine must always be operated according to the content of the latest Operators Manual (OM)
- To eliminate the risk of injury or damage, ensure any loose equipment or tools are properly secured before starting the engine
- The use of propellers and their fastenings which exceed the specified values of moment of inertia and imbalance is not allowed and releases the engine manufacturer from any liability
- Improper engine installation, use of unsuitable piping for fuel, cooling and lubrication system and use of unsuitable wiring for electric and engine management system releases the engine manufacturer from any liability

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### INSTRUCTION

Engines require instructions regarding their installation, application, use, operation, maintenance and repair.

Technical documentation and regulations are useful and necessary complementary elements for trainings, but can by no means substitute for theoretical and practical instructions.

These instructions should cover explanation of the technical context, advice for operation, maintenance, installation, use and operational safety of the engine.

### Safety notice

In this technical Manual passages concerning safety are especially marked. Pass on safety warnings to other users!

### Accessories

This engine must only be operated with accessories supplied, recommended and released by BRP-Rotax. Modifications are only allowed after consent of the engine manufacturer.

### Spare parts



See Illustrated Parts Catalog (IPC), latest issue for the respective engine type.

#### NOTICE

**Only use GENUINE ROTAX® spare parts. Spare parts must meet the requirements defined by the engine manufacturer. This can only be guaranteed when using spare parts and/or accessories. Spare parts are available at Authorized Distributors and their independent Service Centers. Any warranty by will become void if spare parts and/ or accessories other than spare parts and/or accessories are used (see latest Warranty Conditions).**

See relevant Service Letter on [www.flyrotax.com](http://www.flyrotax.com).

### Standard tools / Special tools

#### NOTICE

**Only use tools and appliances which are suitable for the relevant task according to the latest Manuals.**

### State of delivery

#### ⚠ WARNING

**Engine and gearbox are delivered in “dry” conditions (without fuel, oil and coolant).**

Before putting the engine into operation it must be filled with oil and cooling liquid. Use only oil and coolant as specified.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY



See latest Operators Manual (OM) and Service Instruction SI-916 i-001 "Selection of suitable operating fluids", current issue.

### MAINTENANCE CONCEPT

#### General note

The maintenance functions detailed in this Manual are divided into two categories:

- Maintenance I (Line Maintenance)
- Maintenance II (Heavy Maintenance)

#### Maintenance I (Line Maintenance)

Chapter 00,05 and 12

The scope of line maintenance consists of servicing and adjustment of engine components (including part wear). All procedures in this Manual are to be considered line maintenance.

#### NOTE

*Where applicable, you will be referred to the Heavy Maintenance Manual for work above and beyond line maintenance.*

#### Maintenance II (Heavy Maintenance)

Separate Manual.

Maintenance Manual II details removal, installation and repair of components or parts normally considered beyond the scope of the "Line Maintenance".

#### NOTE

*This Manual can only be used in combination with Maintenance Manual I (Line Maintenance), as it builds up on it.*

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## TECHNICAL DOCUMENTATION

These documents form the instructions ensuring continued airworthiness of ROTAX® aircraft engines.

The information contained herein is based on data and experience that are considered applicable for authorized mechanics (IRMT, see MML, Chapter 05–00–00 section “Authorized Personnel”) under normal conditions for engine removal and installation. Concerning design of engine installation in depth knowledge of aircraft design is required.

Due to the fast technical progress and fulfillment of particular specifications of the customers it may occur that existing laws, safety prescriptions, constructional and operational regulations may not be sufficient or cannot be transferred completely to the object bought, in particular for special constructions.

### Documentation

- Installation Manual (IM)
- Operators Manual (OM)
- Maintenance Manual Line (MML)
- Maintenance Manual Heavy (MMH)
- Overhaul Manual (OHM)
- Illustrated Parts Catalog (IPC)
- Alert Service Bulletin (ASB)
- Service Bulletin (SB)
- Service Instruction / Service Instruction-Parts and Accessories (SI-PAC)
- Service Letter (SL)



### Status

The status of the Manuals can be determined by checking the table of amendments. The first column of this table indicates the revision status, which should be compared with the revision provided on the ROTAX®-Website: [www.FLYROTAX.com](http://www.FLYROTAX.com)  
Amendments and current versions can be downloaded free of charge.

### Replacement pages

Furthermore the Manual is constructed in such a way that single pages can be replaced instead of the complete document. The list of affected pages is given in the chapter LEP. The particular edition and revision number is given on the footer of each page.

### Reference

This Manual is only part of the technical documentation and will be supplemented by the respective Operators Manual (OM), Maintenance Manuals and Illustrated Parts Catalog (IPC).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTICE

**Pay attention to references to other documentation, found in various parts of this Manual.**

If not stated otherwise, any reference to a document refers to the latest edition issued by BRP-Rotax.



This symbol informs you of additional references (data sheets, Manuals, etc.) associated with the given subject.

## Illustrations

The illustrations in this Manual are merely sketches and show typical arrangements. They may not represent full detail or the exact shape of the parts but should outline the same or similar function. Therefore deriving dimensions or other details from illustrations is not permitted.

TYPICAL indicates a general view which may not represent exact details.

### NOTE

*The Illustrations in this Manual are stored in a graphic database system and are provided with a consecutive, irrelevant, number.*

*This number (e.g. AE 5iS001) is of no significance for the content.*

Some measurements are given in the drawings, these are manufacturing dimensions and are subject to corresponding tolerances.

## Installation drawings

Installation drawings and a DMU-model for (virtual) installation analysis are available from the ROTAX® Authorized Distributors or their independent Service Centers on special request and relevant non disclosure and copyright regulations.

The illustrations in this Manual show a possible installation variant including non certified parts.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**USE FOR INTENDED PURPOSE**

**⚠ WARNING**

**Explosion hazard.**

Flying components can cause serious injuries.  
Never run an engine without propeller.

**Use**

The engine ROTAX® 916 iSc A intended for use in certified aircraft. In case of doubt the regulations of the national authorities or the respective sportive federations have to be observed.

**Certified engines**

The certified aircraft engine ROTAX® 916 iSc A has been tested as per aeronautical standards for safety and time between overhaul. It was developed to conform to the latest technological standards and has been rigorously tested.

**Non certified engines**

The ROTAX® 916 iS A are not type certified. These engines have not received any aeronautical standards or regulatory safety or durability testing, and do not conform to any aircraft standards. These engines are meant for use in experimental, uncertificated aircraft and vehicles only in which an engine failure will not compromise safety.

**NOTE**

*These engines are technically equivalent to certified engines and have been manufactured by BRP-Rotax using the same quality assurance system.*

**Engine stoppage**

In using the engine the operator assumes all risk of use and acknowledges that he/she knows this engine is subject to sudden stoppage.

**Maintenance and repair conditions**

Use for intended purpose also includes observation of the operational, maintenance and repair conditions prescribed by the manufacturer. This is a crucial factor concerning the reliability of the engine and can increase the durability of the engine.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION OF PARTS AND REPORT OF FINDINGS

### General note

Measure all parts listed in the dimension sheets. These are attached directly after each section.

All measurements must be entered in the corresponding dimension sheets as shown.


### Filling in the dimension sheets

Following the description how to fill in the dimension sheets.

**NOTICE**

If the engine is overhauled/repaired before the end of the TBO, the 50 % specified values for wear limits do not apply and must be calculated separately in accordance with section "Classification of parts for maintenance/repair".

Description	Code	Reading new		wear limit	wear limit		Readings			
		min	max	100%	50%		Cyl. 1	Cyl. 2	Cyl. 3	Cyl. 4
<b>Piston</b>										
							Cyl. 1	Cyl. 2	Cyl. 3	Cyl. 4
Piston red 79,5 mm / 3,1 in.	PI01	79,4080 3,1294	79,5020 3,1300	79,3900 3,1256	79,4390 3,1275	actual				
						renewed				

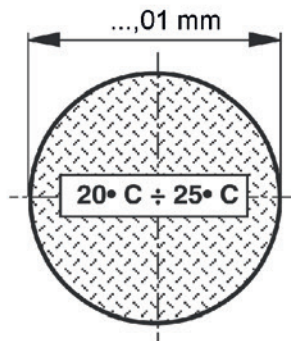

10067

Figure 1.3: EXAMPLE ONLY

- Look up the desired control point code (1) in the illustration in the specified section
- The maximum limits for wear are divided into the columns maximum wear 100 % (2) and 50 % wear (3)
- The first line (4) gives the maximum permissible value in [mm], the second line (5) in [inches]



# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

- The respective actual value must be entered in the corresponding box (6) in [mm] or [inches]
- The actual value for any part which has been replaced must be entered in the corresponding field (7) in [mm] or [inches]

### List of abbreviations

The following table shows the abbreviations used for the control points.

Abbreviation	Description
AL	alternator
CA	camshaft
CC	crankcase
CH	cylinder head
CR	conrod
CS	crankshaft
CY	cylinder
EL	electric
ES	electric starter
EX	exhaust
GB	gearbox
GO	governor
OP	oil pump
PI	piston pin
ST	stator
VT	valve train
WP	water pump

### NOTICE

Where measurement values are taken in hundredth of a millimeter or more precisely, the temperature of the part must be 20 to 25 °C (68 to 77 °F).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

## **CLASSIFICATION OF PARTS FOR MAINTENANCE/REPAIR**

### **General note**

As for an overhaul, parts for maintenance/repair must be classified. They are classified either as “parts usable” (“On-Condition”) or as “parts to be replaced” (“100 % Parts”).

### **Criteria**

The classification is made on the basis of following criteria:

- Hours of operation (decisive are the total operating hours of the part/engine or hours since the last overhaul)
- Determined (measured) actual dimension of the respective parts

### **Max. permissible wear**

Proceed as follows:

- Determine the hours of operation for the part in question (logbook etc.)
- Determine wear as a percentage of the wear tolerance (see the dimension sheets attached directly after each section for the wear limit (100 %) of the part in question)
- The classification is carried out as per following table:

<b>TSN [h] Time Since New</b>		<b>max. permissible wear for repair [%]</b>
<b>from</b>	<b>to</b>	<b>TBO 2000 h - 916 i Series</b>
0	50	8
51	100	16
101	150	24
151	200	30
201	250	34
251	300	38
301	350	42
351	400	46
401	450	50
451	500	53
501	550	56
551	600	59
601	650	62
651	700	65
701	750	67
751	800	69
801	850	71
851	900	73

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


TSN [h] Time Since New		max. permissible wear for repair [%]
from	to	TBO 2000 h - 916 i Series
901	950	75
951	1000	77
1001	1050	79
1051	1100	81
1101	1150	83
1151	1200	84
1201	1250	85
1251	1300	86
1301	1350	87
1351	1400	88
1401	1450	89
1451	1500	90
1501	1550	91
1551	1600	92
1601	1650	93
1651	1700	94
1701	1750	95
1751	1800	96
1801	1850	97
1851	1900	98
1901	1950	99
1951	2000	100

**Determination of actual wear [%]**

- Determine actual dimension F of the part in question
- For new dimension (max.) B and wear limit C see the corresponding dimension sheets attached after each section
- Determine the actual wear [%] with following formula

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

$$\text{Actual wear} = \frac{\{\text{Actual dimension (F) - New dimension max. (B)}\} \times 100}{\{\text{Wear limit (C) - New dimension max. (B)}\}} \quad [\%]$$

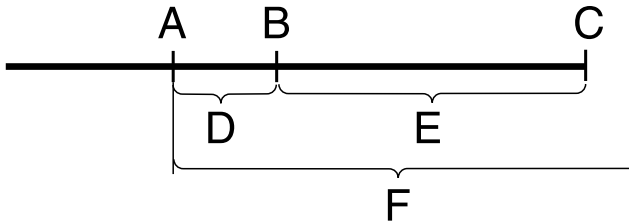

10068

Figure 1.4: Formula

- |                              |                                  |
|------------------------------|----------------------------------|
| <b>A</b> New dimension (min) | <b>B</b> New dimension (max)     |
| <b>C</b> Wear limit          | <b>D</b> New dimension tolerance |
| <b>E</b> Wear tolerance      | <b>F</b> Actual dimension        |

**NOTICE**

New dimension (max.) B is always the dimension which is closest to wear limit C.

Classification of „On-Condition“ parts at maintenance/repair:

Actual wear [%] is <b>greater</b> than or <b>equal</b> to the <b>max. permissible wear</b> [%] calculated from the table	Parts must be replaced
Actual wear [%] is <b>smaller</b> than the <b>max. permissible wear</b> [%] calculated from the table	Parts can be used again

**NOTE**

*A negative result means that the actual dimension F is within the new dimension tolerance D and the part can be used again.*

**Example**

The hours of operation are indicated with 300 h. The determined percentage of maximum permissible wear is therefore 36 %.

New dimension (max.)	<b>B</b>	28.03 mm (1.1035 in.)
Wear limit	<b>C</b>	28.10 mm (1.1062 in.)
Actual dimension	<b>F</b>	28.07 mm (1.1051 in.)
Actual wear		57.1%

This part must be replaced because it is excessively worn for only 300 hours of operation.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### MAINTENANCE

#### General note

Beyond the maintenance and special checks (see therefore Line Maintenance Manual), as well as the system descriptions hitherto, the following sections describe the maintenance procedures for affected engine type. The description is subdivided into subsections and descriptions of the function of the various systems.  
Some overlapping maintenance instructions are treated as generally valid information at the beginning of this section.

#### Troubleshooting

In the Operators Manual (OM) possible problems as well as feasible remedies are listed. At the same time, brief reference is made to the necessary remedial action.



See the respective section in the Operators Manual (OM) for the engine Type 916 i A Series.

#### Tightening torques

Tighten fasteners to the torque specified in the exploded view(s) and/or in the written procedure.

Accepted accuracy for different measuring tools:

Torque: +/- 10%

The changes above are accounting for:

- variations/errors of tools (when used in normal operating conditions)
- accuracy of tools and their related tolerance

#### **⚠ WARNING**

##### **Non-compliance can result in serious injuries or death!**

Exactly observe the tightening torques for screws and nuts. Overtightening or a connection which is too loose could cause serious engine damage.

In order to avoid a poor assembly, tighten screws, bolts, or nuts in accordance with the following procedure:

- Manually screw all screws, bolts and/or nuts
- Apply half the recommended torque value
- Tighten fastener to the recommended torque value

#### **NOTICE**

**Be sure to use the recommended tightening torque for the specified fastener.**

#### **NOTE**

*When possible, always apply torque on the nut.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**NOTE**

*Always torque screws, bolts and/or nuts using a crisscross pattern when multiple fasteners are used to secure a part. Some parts must be torqued according to a specific sequence and torque pattern as detailed in the installation procedure.*

**NOTICE**

If not specified otherwise, the threads are not lubricated when fastened.

**Calibration**

The professional calibration of your torque wrench is an essential prerequisite for ensuring the quality of the tightening torques in the long term. Calibration is also a fundamental part of ISO 9001 certification.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## FASTENER INFORMATION

### Self locking fasteners procedure

The following describes common procedures used when working with self-locking fasteners (Hardware supplies with pre-applied adhesive).

Use a metal brush on the fastener threads or a tap to clean the hole properly, then use a solvent. Allow the solvent time to act, then wipe off or blow out with shop air. Solvent utilization is to ensure proper adhesion of the product used for locking the fastener.

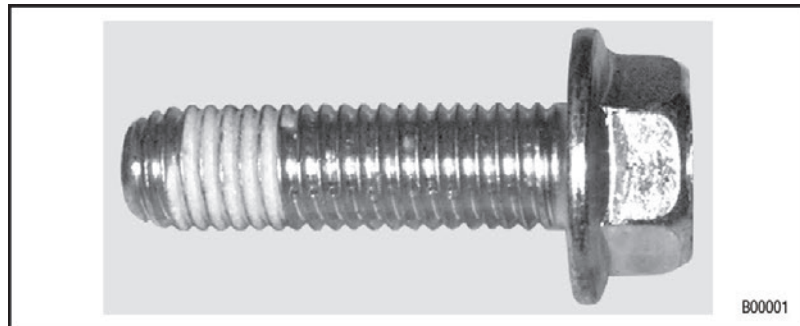


Figure 1.5: Fastener Information

## LOCTITE APPLICATION PROCEDURE

The following describes common procedures used when working with LOCTITE products.

### NOTE

*Always use proper strength LOCTITE product as recommend in this Manual.*



Observe the instructions of the manufacturer!

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## Thread locker application

Thread locker application for uncovered holes (Bolts and nuts).

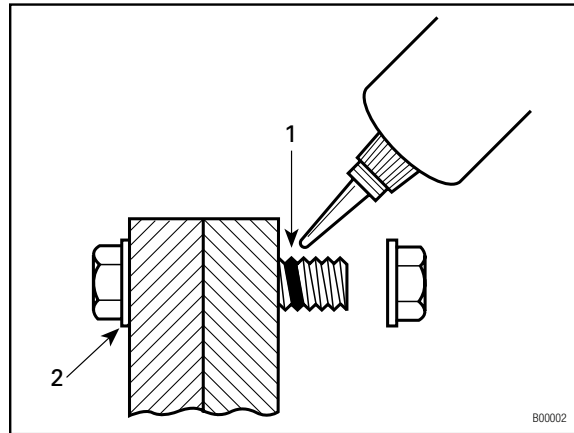


Figure 1.6: Application for uncovered holes (Bolts and nuts)

1 Apply here

2 Do not apply

Step	Procedure
1	Clean threads (bolt and nut) with solvent.
2	Apply LOCTITE 7063 on threads and allow to dry.
3	Choose proper strength LOCTITE thread locker.
4	Fit bolt in the hole.
5	Apply a few drops of thread locker at proposed tightened nut engagement area.
6	Position nut and tighten as required.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Thread locker  
for blind holes**

Thread locker application for blind holes.

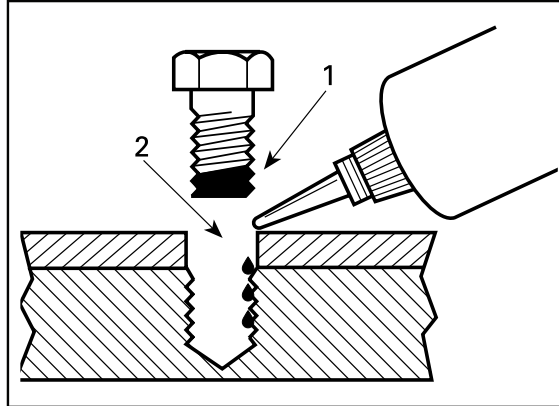


Figure 1.7: Application for blind holes

1 On fastener threads

2 On threads and at the bottom of hole

Step	Procedure
1	Clean threads (bolt and nut) with solvent.
2	Apply LOCTITE 7063 on threads and allow to dry.
3	Choose proper strength LOCTITE thread locker.
4	Apply several drops along the threaded hole and at the bottom of the hole.
5	Apply several drops on bolt threads.
6	Tighten as required.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## Thread locker for stud installation

Thread locker application for stud installation in blind holes.

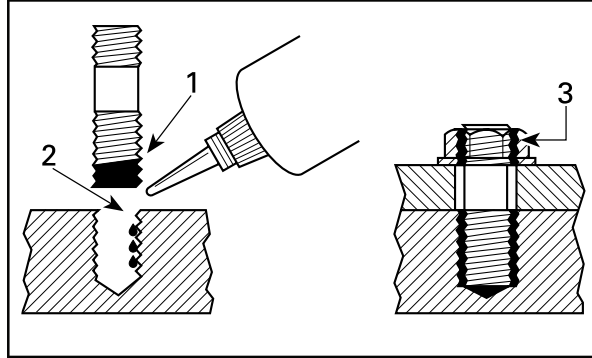


Figure 1.8: Application for stud installation in blind holes

- 1 On stud threads
- 2 On threads and in the hole
- 3 On retaining nut threads

Step	Procedure
1	Clean threads (stud and hole) with solvent.
2	Apply LOCTITE 7063 on threads and allow to dry.
3	Put 2 or 3 drops of proper strength LOCTITE thread locker on female threads and in hole.

### NOTE

*To avoid a hydro lock situation, do not apply to much LOCTITE.*

Step	Procedure
4	Apply several drops of proper strength LOCTITE on stud threads.
5	Install stud.
6	Install cover, part, etc.
7	Apply a few drops of proper strength LOCTITE on uncovered stud threads.
8	Install and tighten retaining nut(s) as required.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## Thread locker for pre-assembled parts

Thread locker application for pre-assembled parts.

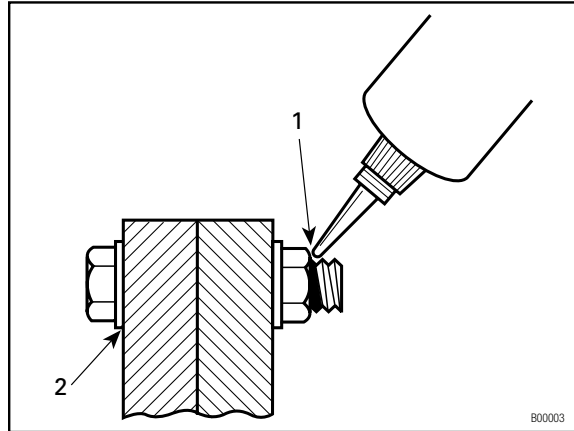


Figure 1.9: Application for pre-assembled parts

1 Apply here

2 Do not apply

Step	Procedure
1	Clean bolts and nuts with solvent.
2	Assemble components.
3	Tighten nuts.
4	Apply a few drops of proper strength LOCTITE on bolt/nut contact surfaces.
5	Avoid touching metal with tip of flask.

### NOTE

*For preventive maintenance on existing equipment, retighten nuts and apply proper strength LOCTITE on bolt/nut contact surfaces.*

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## Thread locker for an adjustment screw

Thread locker application for an adjustment screw.

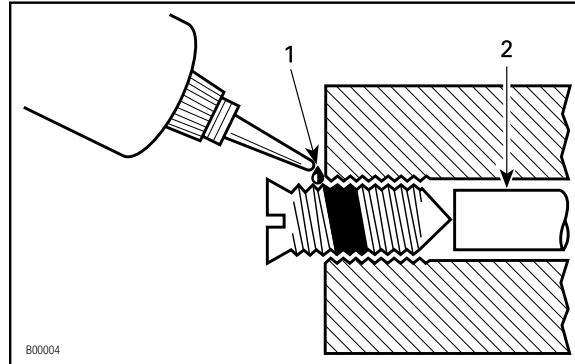


Figure 1.10: Application for an adjustment screw

1 Apply here

2 Plunger

Step	Procedure
1	Adjust screw to proper setting.
2	Apply a few drops of proper strength LOCTITE thread locker on screw/body contact surfaces.
3	Avoid touching metal with tip of flask.

### NOTE

*If it is difficult to readjust, heat screw with a soldering iron (232 °C) (450 °F).*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**CONSUMABLE MATERIALS**

<b>NOTICE</b>
<b>Use only the specified or technically equivalent materials for all maintenance work.</b>

<b>NOTICE</b>
<b>When handling chemicals, comply with all the customary regulations and specifications of the producer, including the expiry date and instructions of use.</b>



Consider the curing time of the sealing surface compound as stated by the manufacturers instructions.

The materials listed have undergone long term testing and are suitable for all operating conditions indicated by the manufacturer.

No.	Part no.	Description, application	Qty.
AC	899796	<b>LOCTITE 577</b> Yellow medium duty screw locking agent, oil and coolant tolerant	50 ml (0.013 gal (US))
AG	897186	<b>Silicon heat compound</b> Application of the heat conduction compound will increase heat transfer. The greaselike, temperature-resistant silicone compound fills cavities between components and cooling elements (e.g.: spark plug - cylinder head), which otherwise do not contribute to heat conduction	150 g (0.33 lb)
B	897651	<b>LOCTITE 243</b> Blue medium duty screw locking agent, oil tolerant	10 ml (0.003 gal (US))
C	899788	<b>LOCTITE 648</b> Green high temperature screw locking agent + retaining compound	5 ml (0.001 gal (US))
E	297434	<b>LOCTITE ANTI SEIZE 8151</b> Long-term lubricant for shaft seals	50 ml (0.013 gal (US))
F	n.a.	<b>LOCTITE 7063</b> For degreasing and cleaning surfaces	AR
H	897870	<b>FILTER OIL</b>	14.8 ml (0.004 gal (US))

## BRP-Rotax MAINTENANCE MANUAL HEAVY

No.	Part no.	Description, application	Qty.
I	897330	<b>LITHIUM-BASE GREASE</b> Electrical isolating	250 g (0.55 lb)
O	n.a.	<b>Engine oil</b> For easier assembly of components or for first lubrication before first engine start	AR
P	899791	<b>LOCTITE 5910</b> Flange sealant provides flexibility and adhesion	50 ml (0.013 gal (US))
V	898570	<b>Locking paint</b>	20 ml (0.006 gal (US))
Z	899789	<b>LOCTITE 603</b> Oil tolerant retaining compound, heavy-duty	10 ml (0.003 gal (US))

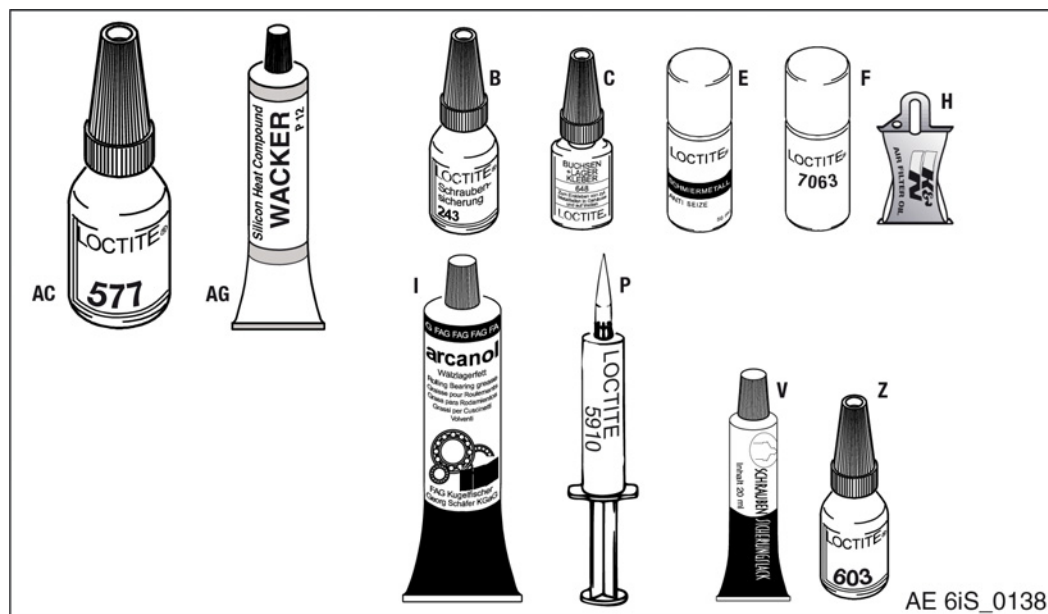


Figure 1.11: Consumables

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Additional materials**

**NOTICE**

**All metal and synthetic parts should be cleaned with suitable cleaning agents. Before using new and unknown cleaning agents, check their compatibility with the materials they are being used on.**

No.	Part no.	Description, application	Qty.
1	n.a.	<p><b>Cleaning agent/solvent/parts cleaner</b>            Soak combustion chamber, piston and cylinder head with cleaning agent and remove combustion residues with a bronze brush. Cleaning agents that are solvent - cold cleaner, free of halogen, on the basis of selected fuel fractions and biodegradable are recommended. Never use caustic or corrosive cleaning agents.</p>	AR
2	n.a.	<p><b>Multipurpose grease</b>            Generally usable, neutrally colored multipurpose grease, water resistant and highly adherent. Usable for temperatures from -35 °C to +120 °C (-31 °F to 248 °F) and can be subjected to high mechanical loads.</p>	AR
3	n.a.	<p><b>Preservation oil</b>            This special oil has excellent penetrating capabilities and reaches even tiny gaps, its highly effective additives protect against corrosion of metal surfaces.</p>	AR
4	n.a.	<p><b>Flexible web for surface finishing 3M Scotch-Brite Multi Flex - very fine or ultra fine (or equivalent)</b>            Is sold by the meter and used for manual removal of smaller rust spots or oxidation, especially for optimum ground connections. It is particularly suitable for removing LOCTITE from surfaces or threads to make them metallic clean. Before re-applying LOCTITE, clean surfaces with nitrothinner or degreasing agent (CASTROL ZA 30 or OMV - SOFT SOL). When using solvents, observe the safety regulations for persons and the environment.</p>	AR
5	n.a.	<p><b>MS4 / DC4 corning #4 (or equivalent)</b>            Electrical insulation compound for protection of electrical connections.</p>	AR

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

No.	Part no.	Description, application	Qty.
6	n.a.	<p><b>Valve lapping paste</b>            This paste, produced by various manufacturers, is a fine granulate lapping paste for manual lapping of valve seats and valves. The paste is usually available in 3 different granulate sizes. Use as per manufacturers instructions.</p>	AR
7	n.a.	<p><b>Compressed air blasting using a solid blasting agent</b>            This method is suitable for local and gradual very fine treatment of steel parts with rust film (propeller shaft). The Compressed air blasting contains no harmful substances, is approved by the competent authorities and guarantees optimum cleaning. The granulates used are of sizes 40 to 60 <math>\mu</math>. The achievable surface roughness is between 0.5 and 1 <math>\mu</math>, which corresponds to ultra fine machining of surfaces.</p>	AR

<b>NOTICE</b>
---------------

**Exhaust valves and intake valves may NOT undergo a compressed air blasting treatment with solid blasting, strong abrasive material. Due to this surface treatment one does gain a microscopic surface which does allow as a consequence the adhesion of fuel residues. These deposits are then involved in a chemical reaction (especially of the sulfur and lead content of AVGAS) with the valve material. This effect may cause hot-gas corrosion on the affected parts.**



# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### TOOLS

#### Auxiliary tools

- Compression tester or 2 pressure gauges with calibrated orifice, adapter for dial gauge in spark plug thread
- Valve spring mounting pliers
- Step punch for valve guide
- Adjustable reamer 6.5 to 7.5 mm (0.256 to 0.295 in.)
- Valve seat machining device, valve lapping paste
- Gearbox support plate
- Stud extraction tool
- Scraper, very fine emery cloth, grinding tool, cover sheet, adhesive tape
- Cleaning agent, approved cleaners, funnel, graphite marker
- Magnetic holder
- Screw extractor set
- Torque wrenches from 0 to 300 Nm (0 to 221 ft.lb)
- Magnetic particle tester

#### Disassembly device

- Manual hydraulic press

#### Measuring tools

Calliper rule, dial gauge indicator, micrometer, inner micrometer, inner fine measuring device, feeler gauge, spring scale up to 50 kp (500 N) (112.5 lbf).

Accepted accuracy for different measuring tools:

Pressure: +/- 5%

Distances:

- Inside micrometer or similar: +/- 0.01 mm (0.0004 in.)
- Digital caliper or similar: +/- 0.001 mm (0.00004 in.)
- Bow micrometer or similar: +/- 0.002 mm (0.000079 in.)
- Caliper or similar: +/- 0.03 mm (0.0012 in.)

The changes above are accounting for:

- variations/errors of tools/measurement instruments (when used in normal operating conditions)
- accuracy of tools/measurement instruments and their related tolerance

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### Multimeter:

- FLUKE Series 70, Series 80 or equivalent
- Electronic, 3 1/2 digit indication
- Current range 10 A
- Direct voltage range 200 V minimum
- Resistance range 200  $\Omega$  to 2 M $\Omega$
- Acoustic continuity tester

### Oscilloscope:

TEKTRONIX 2225 or equivalent

- 2 channels
- Analog
- Sensitivity 5 mV to 5V/div
- Frequency limit 50 MHz

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


**Chapter: 24–20–00**  
**INTERNAL GENERATOR**

**TOPICS IN THIS CHAPTER**

<b>Special Tools</b> .....	<b>4</b>
<b>Service Products</b> .....	<b>5</b>
<b>System description</b> .....	<b>7</b>
EMS Power Supply .....	7
Drive .....	7
Safety instruction .....	7
Maintenance .....	8
General information – removal .....	8
Before the internal generator is removed .....	8
<b>Measurement of generator A and B</b> .....	<b>9</b>
<b>Removal</b> .....	<b>15</b>
Ignition housing – removal .....	15
Fly wheel assy. removal .....	18
Stator assy. — Removal .....	18
<b>Inspection</b> .....	<b>22</b>
Ignition housing .....	22
Ignition housing — inspection .....	22
Bearing bushing — inspection .....	22
Stator assy. — inspection .....	23
Flywheel assy. –inspection .....	23
Crankshaft position sensor (CPS_1/CPS_2) — inspection .....	23
Oil pressure sensor (OPS) – inspection .....	24
<b>Wear limits</b> .....	<b>25</b>
<b>Assembly</b> .....	<b>26</b>
Ignition housing - assembly .....	26
Oil seal replacement .....	26
Oil seal — installation .....	26
Stator assy. — installation .....	27
Stator connectors - installation .....	28
<b>Installation</b> .....	<b>31</b>
Fly wheel assy. — Installation .....	31
Ignition housing assy. — installation .....	31
Finishing work .....	35

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE A

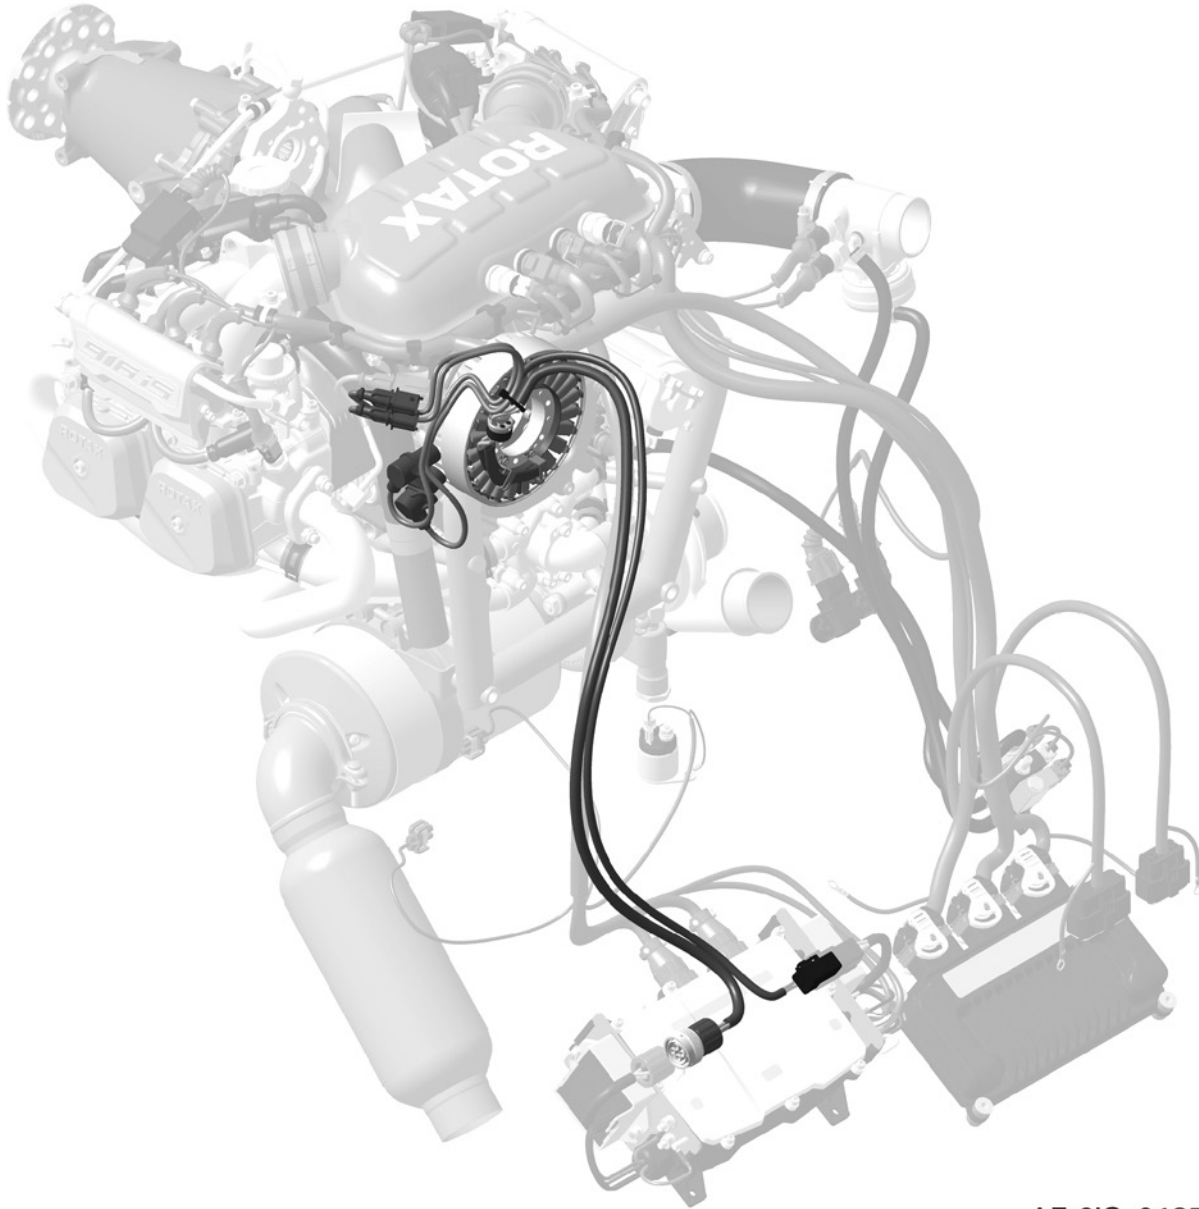


AE 6iS\_0185

Figure 2.1: Location on the engine

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE C24

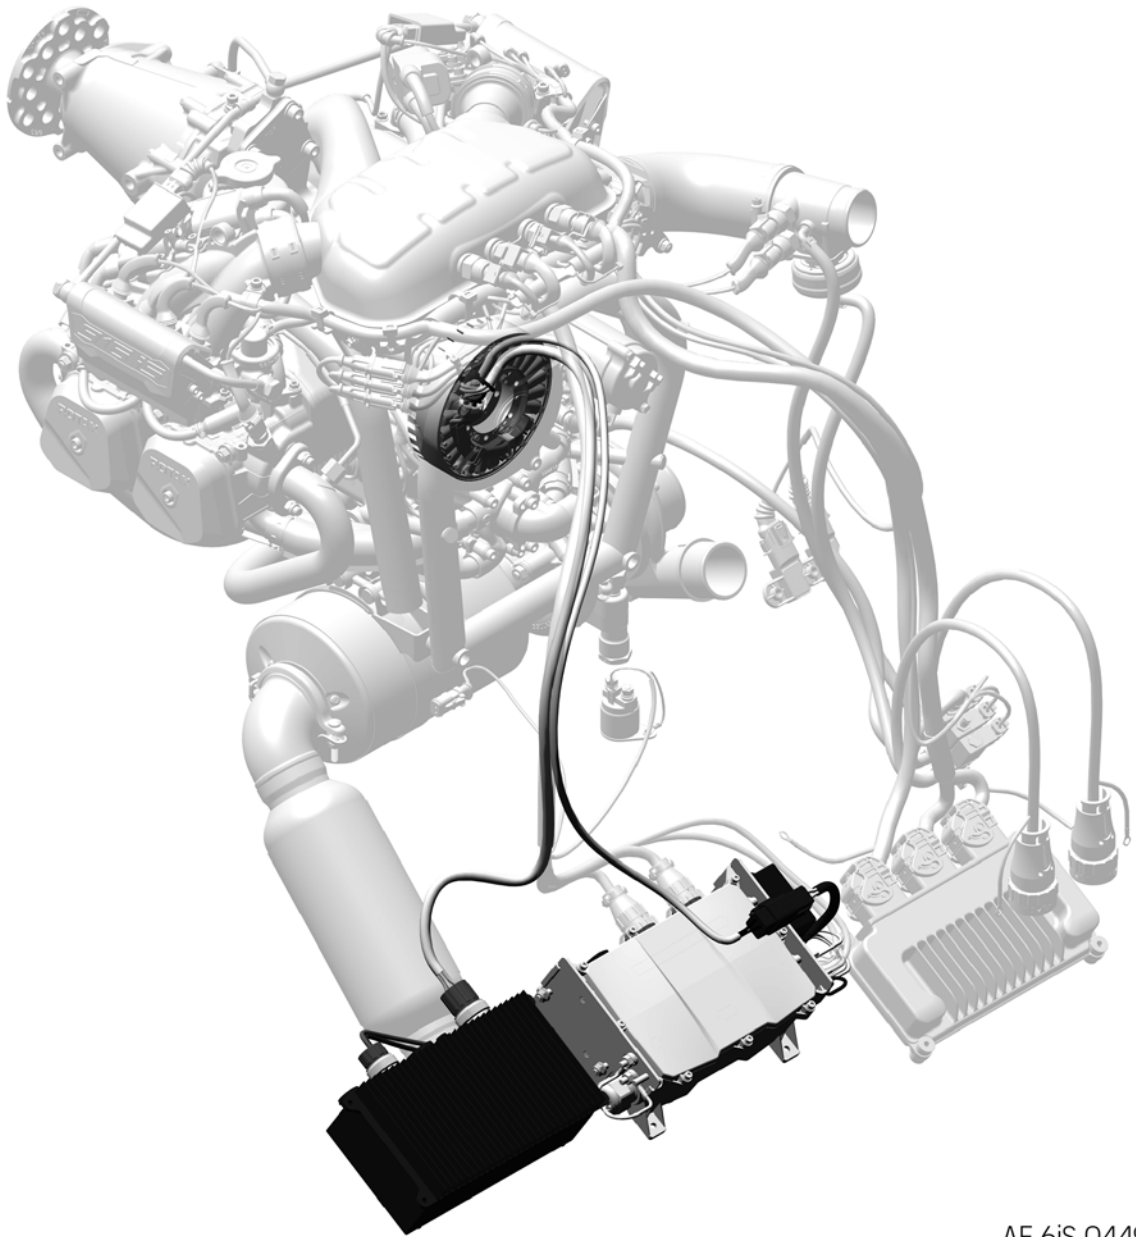

AE\_6iS\_0449

Figure 2.2: Location on the engine

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SPECIAL TOOLS**

Description	Part number
Puller assy.	876010
Insertion jig	876020
Protection mushroom	877419
Locking pin	240880
Current measuring clamp	n.a.
Multimeter	n.a.

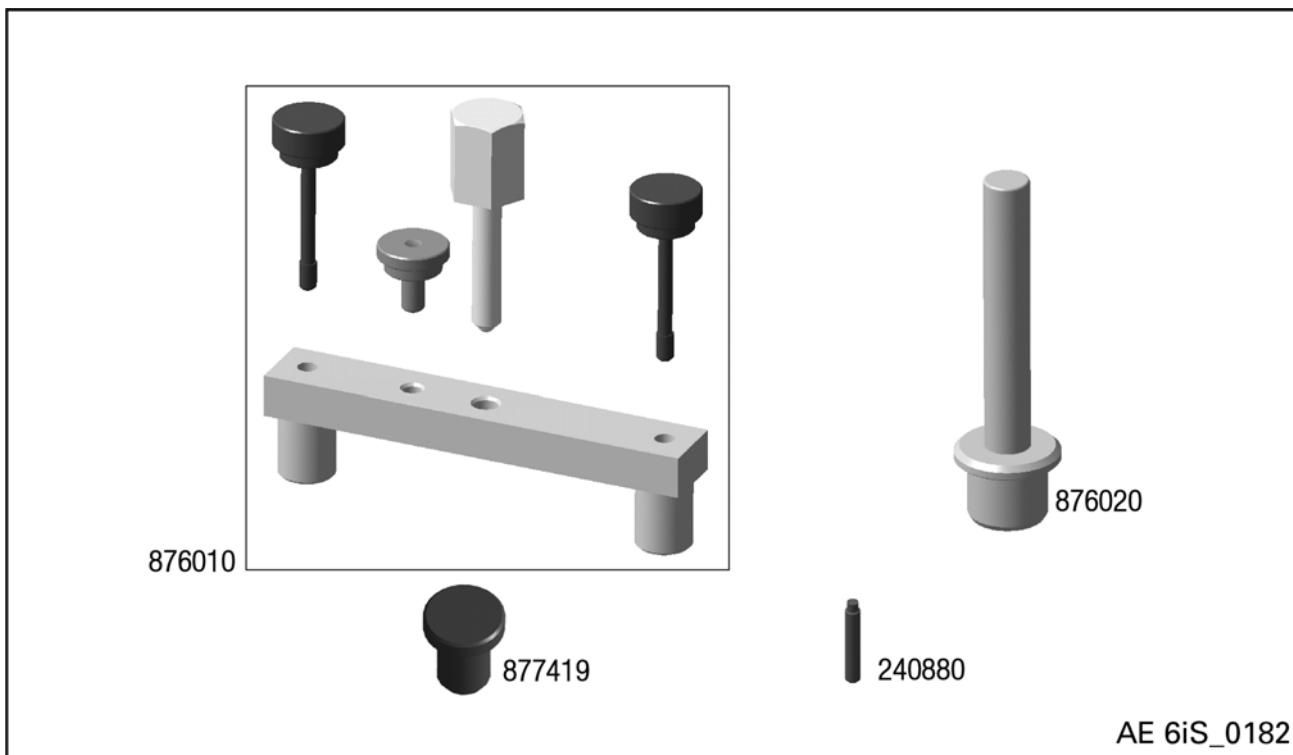


Figure 2.3: Special Tools

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SERVICE PRODUCTS**

Description	Part number
LOCTITE 243	897651
LOCTITE 648	899788
LOCTITE 603	899789
LOCTITE 5910	899791
LOCTITE 7063	n.a.
Engine oil	n.a.
Abrasive pad	n.a.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

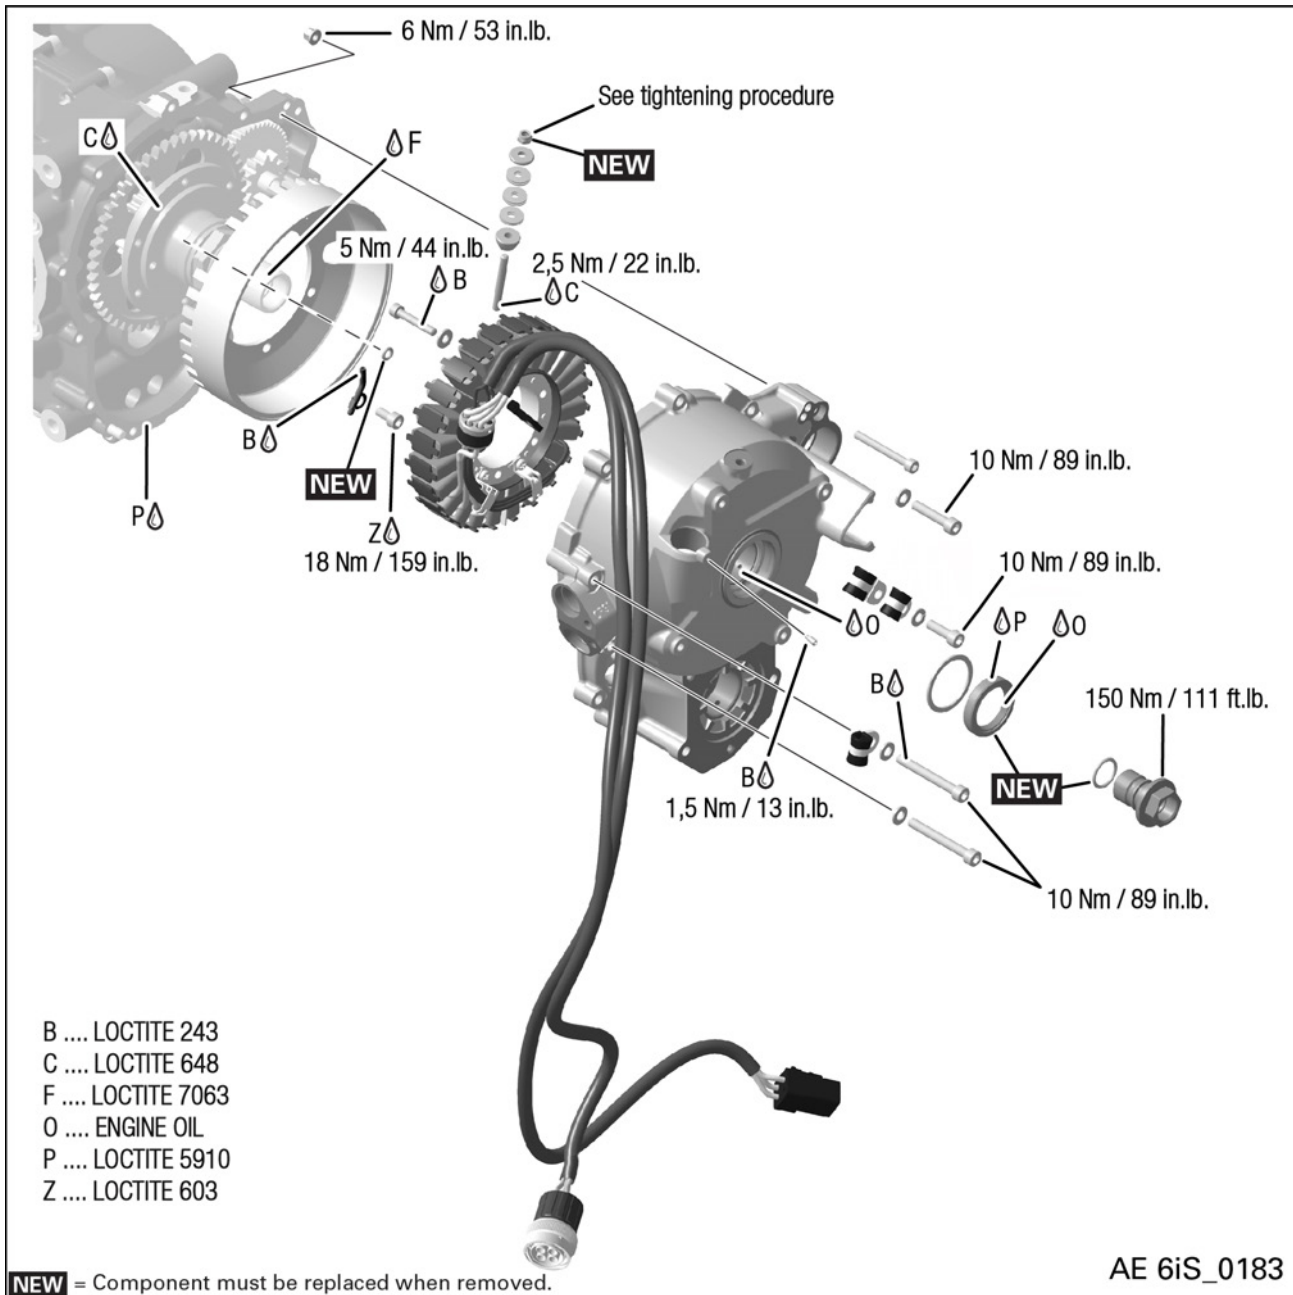


Figure 2.4



# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### SYSTEM DESCRIPTION

This ROTAX® aircraft engine has an electronically controlled double-ignition system with an integrated generator.

#### TYPE A

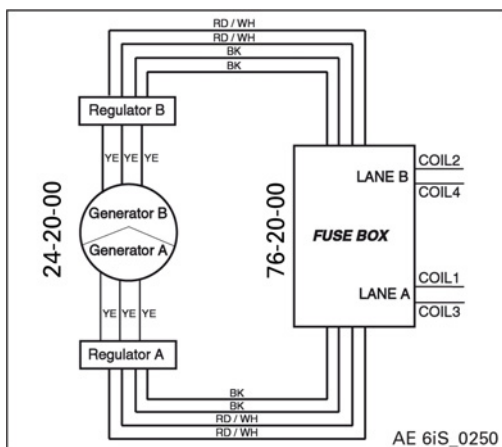


Figure 2.5: Schematic

#### TYPE C24

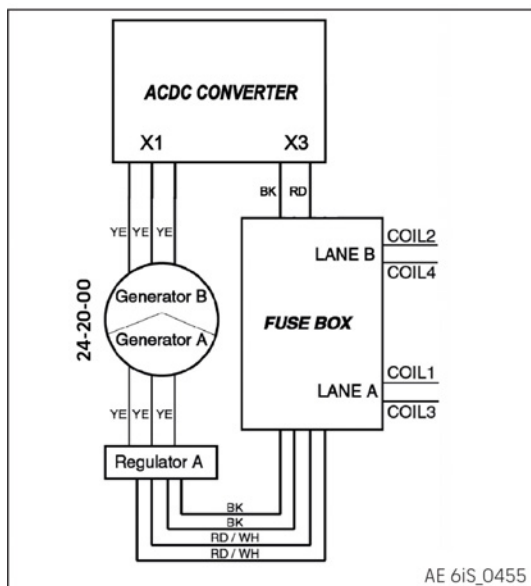


Figure 2.6: Schematic

### EMS POWER SUPPLY

The EMS power supply consists essentially of 2 permanent magnet generators. The two 3-phase AC generators are physically separate power supplies which are integrated in the engine. One of the generators is used for the ECU and the other is available to the aircraft frame.

### DRIVE

They are driven by the crank drive and do not need an external power supply once the engine has reached idle speed.

### NOTE

*Until idle speed is reached, a 12 V external power supply of the EMS from the aircraft's on-board power system is required.*

### SAFETY INSTRUCTION

#### ⚠ WARNING

**Danger of damage to engine! There is a risk of short circuits and cable fires during work on the electric system.**

All installation work on the electric system should be carried out with the engine switched off and the battery (negative terminal) disconnected. Ignition, main and LANE selector switches must be "OFF"!

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## WARNING

Danger of severe burns and scalds! Always allow the engine to cool down to ambient temperature before starting any work.

## ENVIRONMENTAL NOTE

Please observe the disposal regulations applicable in your area.

## ENVIRONMENTAL NOTE

Observe the safety instructions of the manufacturer of hazardous substances (coolant, oil or fuel) and the applicable regional waste disposal regulations.

## ENVIRONMENTAL NOTE

Work with the utmost care to ensure that no water pollutants can penetrate into the soil, water or the sewerage system.

## MAINTENANCE



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

## GENERAL INFORMATION – REMOVAL

Before the component is removed, the work described below must be carried out to identify any further faults in the component and rectify them as part of repair work.

## BEFORE THE INTERNAL GENERATOR IS REMOVED

### NOTICE

If these checks are omitted, it may be necessary to dismantle the product again to rectify any faults after repair work.



General visual inspection.  
See Maintenance Manual Line (MML) for the respective engine type.



Engine cleaning.  
See Maintenance Manual Line (MML) for the respective engine type.



Carry out an engine test run.  
See Maintenance Manual Line (MML) for the respective engine type.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

## **MEASUREMENT OF GENERATOR A AND B**

### **General**

#### **NOTE**

*The engine must run during the measuring period (except resistance measurement) and the oil temperature must be > 80 °C (176 °F).*

**⚠ WARNING**

**Danger of death due to high voltage!**

Only carry out work on the ignition unit with the appropriate protective measures and devices!

**⚠ WARNING**

**Danger of life threatening injuries caused by the propeller, rotating and stressed parts of the engine!**

Always observe the engine from a safe place while it is running. Check that the cockpit is occupied by a competent operator.

### **Voltage - measurement**

#### **NOTE**

*All measurements must be performed at an engine speed from 2000 rpm to 5000 rpm in 1000 rpm steps.*

<b>Step</b>	<b>Procedure</b>
1	Use a multimeter to check the voltage of each generator side one after the other. Disconnect stator connector A (Deutsch) from the rectifier regulator on the fuse box.
2	Measure the voltage between phase 1 and 2 on stator connector A.
3	Measure the voltage between phase 1 and 3 on stator connector A.
4	Connect the stator connector A to the rectifier regulator on the fuse box.
5	Disconnect stator connector B (amphenol) from the rectifier regulator on the fuse box.
6	Measure the voltage between phase 1 and 2 on stator connector B.
7	Measure the voltage between phase 1 and 3 on stator connector B.
8	Connect the stator connector B to the rectifier regulator on the fuse box.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

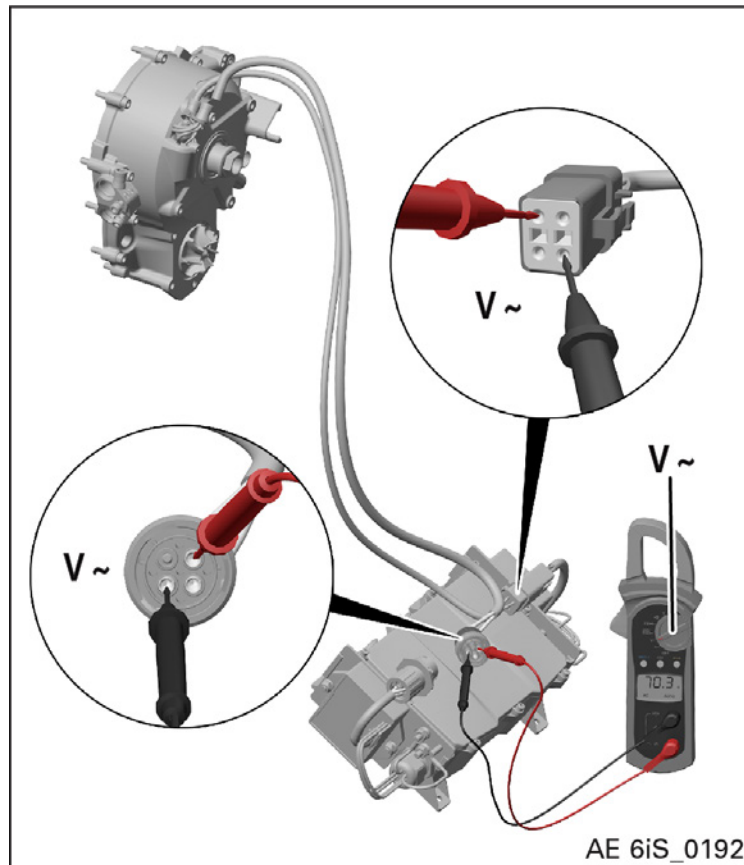


Figure 2.7: Check voltage of generator A and B

	Engine speed [rpm]	(P1 - P2) U <sub>12</sub> [Volt]			(P1 - P3) U <sub>13</sub> [Volt]	
		Min.	Max.	Average	Min.	Max.
<b>GEN A</b>	2000	32.40	33.50	33.10	32.70	33.70
	3000	50.00	50.40	50.20		
	4000	65.80	66.30	66.05	64.90	65.50
	5000	81.90	82.20	82.05		
<b>GEN B</b>	2000	31.50	32.60	32.05	31.60	32.60
	3000	46.50	46.70	46.60		
	4000	61.50	62.00	61.75	61.20	61.80
	5000	76.30	77.00	76.65		

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

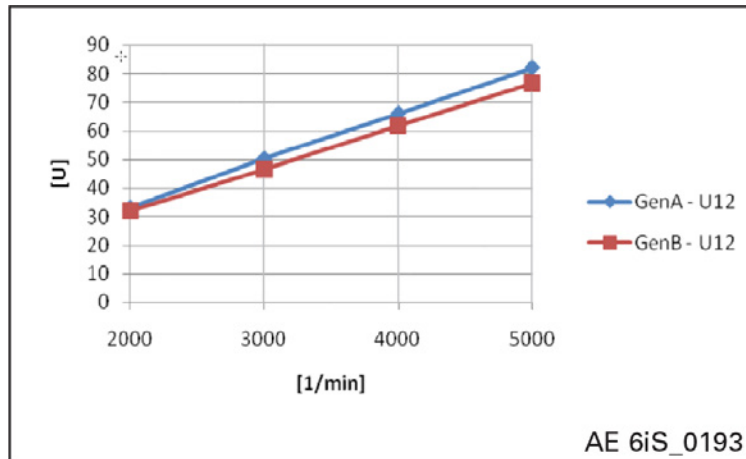


Figure 2.8: Diagram

**Current - measurement**

**NOTE**

*For this measurement the generator must not be disconnected from the rectifier regulators.*

**NOTE**

*All measurements must be performed at an engine speed from 2000 rpm to 5000 rpm in 1000 rpm steps.*

Step	Procedure
1	Use the current measuring clamp and place it over each phase, first P1 then P2 and at least P3 (on both stator connectors).

## BRP-Rotax MAINTENANCE MANUAL HEAVY

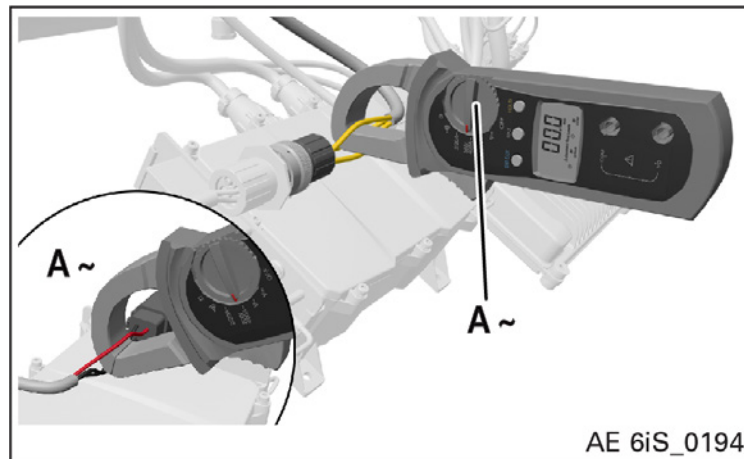


Figure 2.9: Check current of generator A and B

	Engine speed [rpm]	(P1) I <sub>1</sub> [Amp]			(P2) I <sub>2</sub> [Amp]		(P3) I <sub>3</sub> [Amp]	
		Min.	Max.	Aver.	Min.	Max.	Min.	Max.
<b>GEN A</b>	2000	14.00	14.10	14.10	14.00	14.10	13.90	13.90
	3000	13.80	13.80	13.80				
	4000	13.70	13.70	13.70	13.50	13.50	13.70	13.70
	5000	13.50	13.50	13.50				
<b>GEN B</b>	2000	22.70	22.80	22.80	22.50	22.60		
	3000	23.50	23.60	23.60				
	4000	23.60	23.60	23.60	23.30	23.30		
	5000	23.00	23.00	23.00				

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

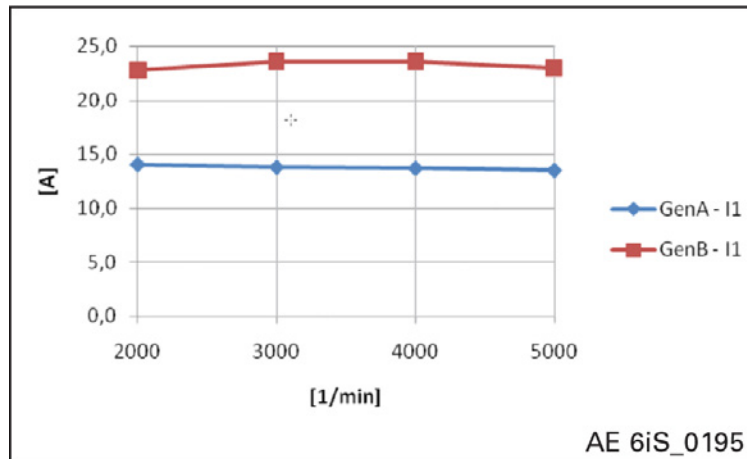


Figure 2.10: Diagram

**Resistance - measurement**

**NOTE**

*At resistance measurements the engine must not run.*

**NOTE**

*This measurement can also be done on a disassembled stator.*

Step	Procedure
1	Disconnect stator connectors A and B from the rectifier regulators on the fuse box.
2	Measure the resistance between phase 1 and 2, 1 and 3, 2 and 3 on stator connector A.
3	Measure the resistance between phase 1 and 2, 1 and 3, 2 and 3 on stator connector B.
4	Connect stator connectors A and B on the rectifier regulators on the fuse box.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

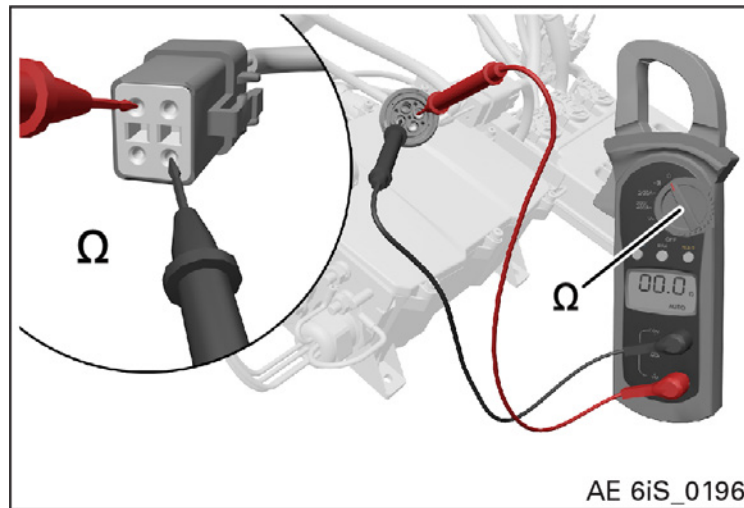


Figure 2.11: Check resistance of generator A and B

Limit	(P1 - P2) [Ohm]	(P1 - P3) [Ohm]	(P2 - P3) [Ohm]
<b>GEN A</b>	0.6	0.6	0.6
<b>GEN B</b>	0.3 - 0.4	0.3 - 0.4	0.3 - 0.4





# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

### Preparation

**NOTICE**

Use appropriate protective coverings to prevent the ingress of foreign bodies into connected lines and connections.

- 
Drain coolant. See current Maintenance Manual Line (MML) for the respective engine type.
- 
Drain oil. See current Maintenance Manual Line (MML) for the respective engine type.

- Turn the ignition switch OFF.
- Remove coolant hoses from cylinder head, water inlet elbow and water pump housing. See Chapter 75-00-00 section [Water pump housing with lower form hoses — removal](#)
- Remove the electric starter. See Chapter 80-00-00 section [Electric starter — removal](#)
- Remove crankshaft position sensors (CPS\_1/2). See Chapter 76-70-00 section [Crankshaft position sensor \(CPS\\_1/CPS\\_2\) — removal](#).

### NOTE

*The assemblies and lines are only to be removed if necessary.*

### IGNITION HOUSING – REMOVAL

Step	Procedure
1	Detach the electrical connection to the stator by disconnecting the connector (stator).
2	Press in the latch on the top of the connector (Generator A Deutsch black) or unscrew the connector (Generator B Amphenol) and disconnect the connectors.

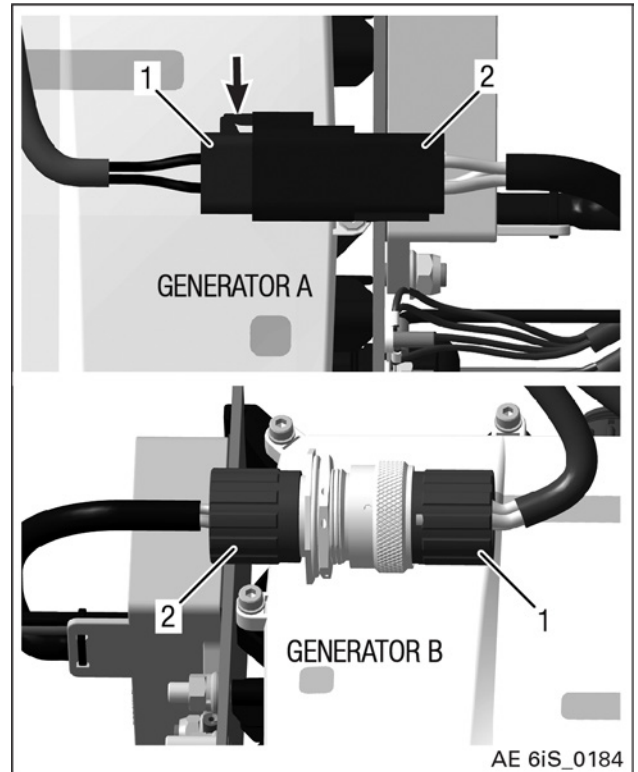


Figure 2.12

- 1 Stator connector (Generator A, B)
- 2 Connection socket (Regulator A, B)

#### TYPE C24

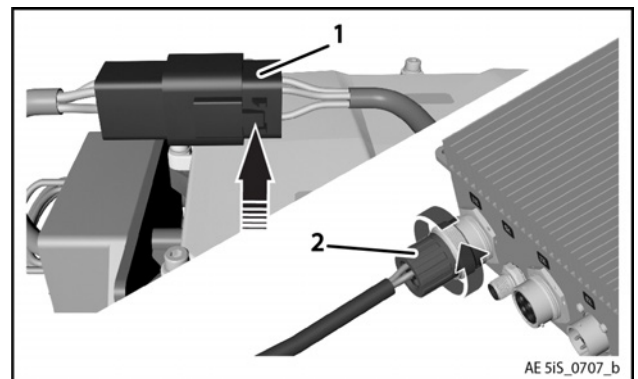


Figure 2.13

- 1 Stator connector A (DEUTSCH black)
- 2 Stator connector B (Amphenol)

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
3	Loosen the lock nut and remove it along with the washer.

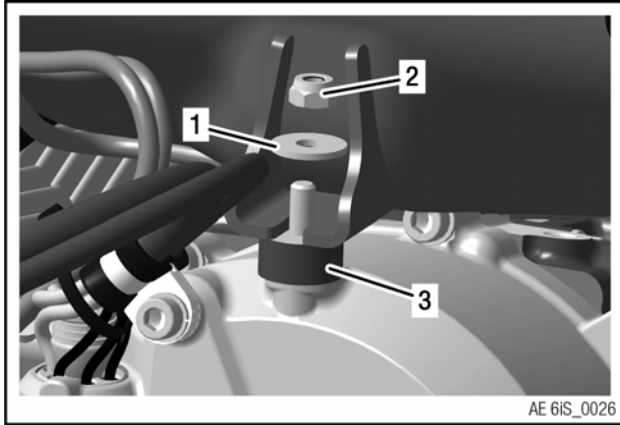


Figure 2.14

- 1 Washer
- 2 Lock. nut
- 3 Rubber buffer

### NOTE

*Push airbox upwards and wedge in place.*

Step	Procedure
4	Loosen 2 Allen screws and hex. nuts on electric starter position.

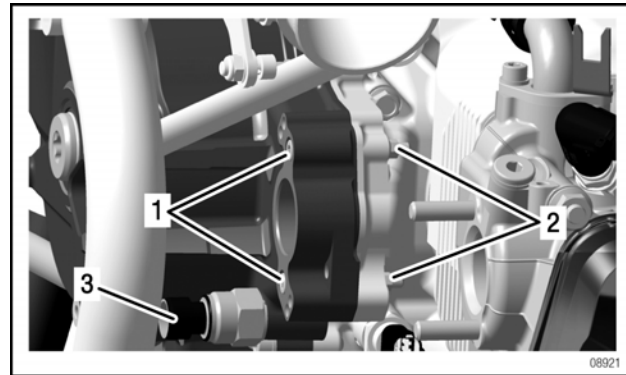


Figure 2.15: TYPICAL

- 1 Allen screw
- 2 Hex. nut
- 3 Oil pressure sensor (OPS)



Fix the crankshaft. See current Maintenance Manual Line (MML) for the respective engine type.

Step	Procedure
5	Loosen plug screw.

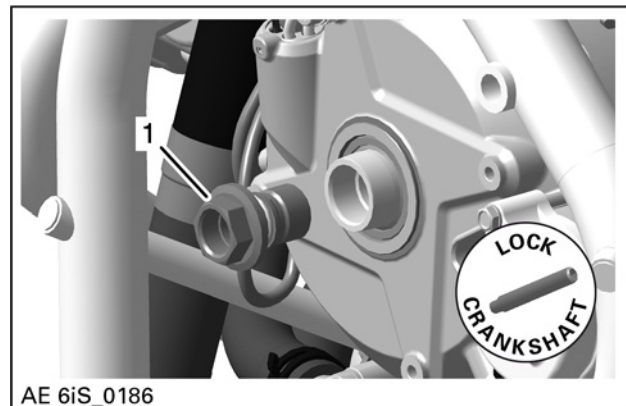


Figure 2.16

- 1 Plug screw with O-ring

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
6	Loosen 5 Allen screws M6x30 and 2 Allen screws M6x50 with washers 6.4.
7	Disconnect oil pressure sensor (OPS).

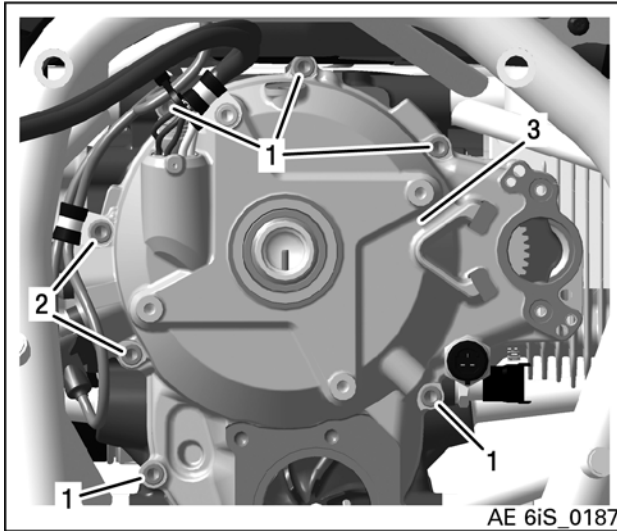


Figure 2.17

- 1 Allen screws M6x30
- 2 Allen screws M6x50
- 3 Ignition housing assy.

Step	Procedure
8	Place the protection mushroom part no. 877419 on the crankshaft and use a puller part no. 876010 to take off the ignition housing.

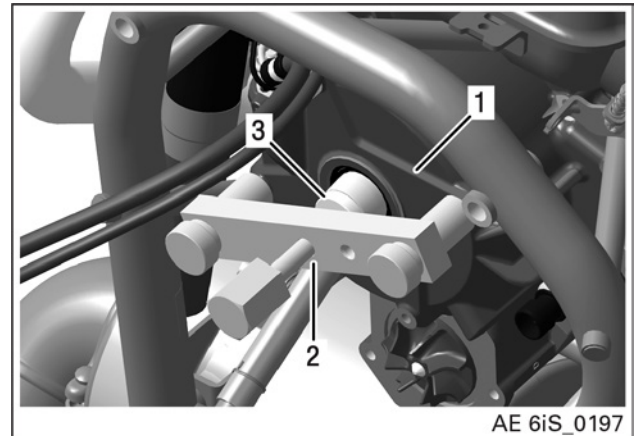


Figure 2.18

- 1 Ignition housing assy.
- 2 Puller assy. part.no. 876010
- 3 Protection mushroom part no. 877419

Step	Procedure
9	Remove O-ring from the crankcase or the ignition housing.

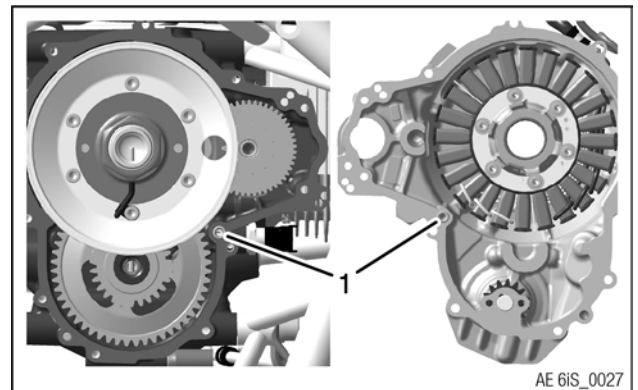


Figure 2.19

- 1 O-ring

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**FLY WHEEL ASSY. REMOVAL**

**Preparation**

**NOTE**

*The fly wheel assy. does not have to be disassembled for changing the sprag clutch. For instructions see [Chapter 72–20–00, section Removal](#).*

Step	Procedure
1	Loosen 6 Allen screws.
2	Remove the oil spray nozzle from the oil outlet of the sprag clutch housing.
3	Remove the fly wheel.

**NOTE**

*The location of the fly wheel does not have to be marked on the sprag clutch housing.*

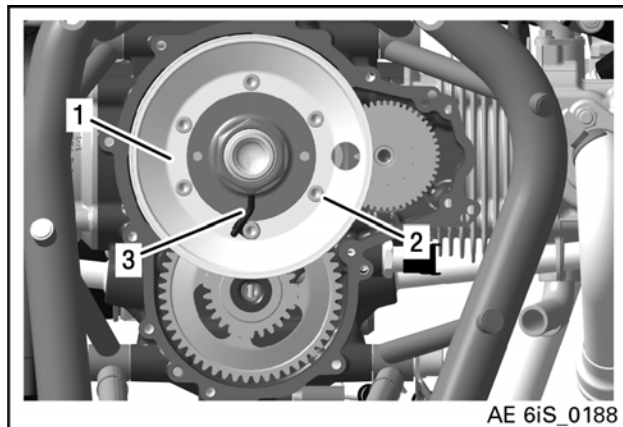


Figure 2.20

- 1 Fly wheel
- 2 Allen screw
- 3 Oil spray nozzle

**STATOR ASSY. — REMOVAL**

**NOTICE**

**Mark cables and connectors before removing the connector receptacle. Generator A and B have different sizes and power.**

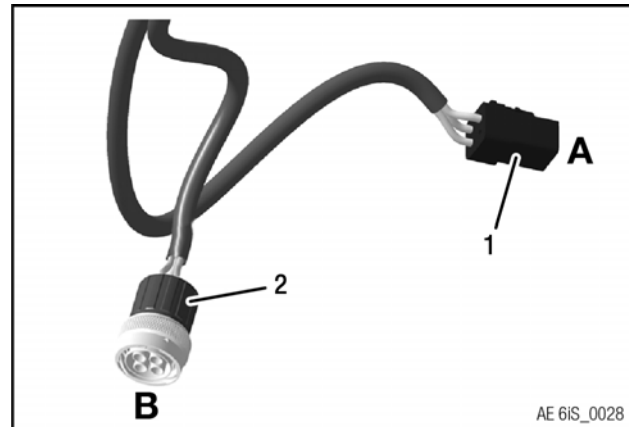


Figure 2.21

- 1 Stator connector A (DEUTSCH)
- 2 Stator connector B (AMPHENOL)

**Stator connector B (Amphenol) - disassembly**

Step	Procedure
1	Unscrew the connector cap and remove the rubber seal out of the sleeve.
2	Mark the position of wires.
3	Push each pin out using a pin extractor tool.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

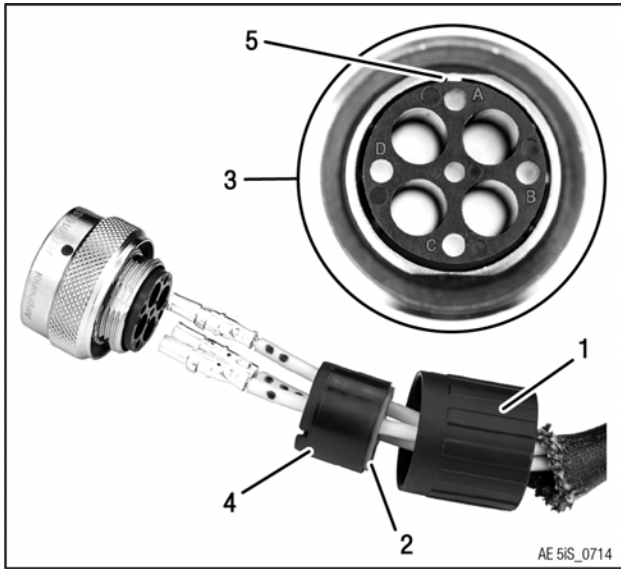


Figure 2.22

- 1 Connector cap
- 2 Rubber seal
- 3 Position letter
- 4 Sleeve
- 5 Key slot

**Stator connector A (Deutsch) - disassembly**

Step	Procedure
4	Pull out the orange latch with a needle nose plier.

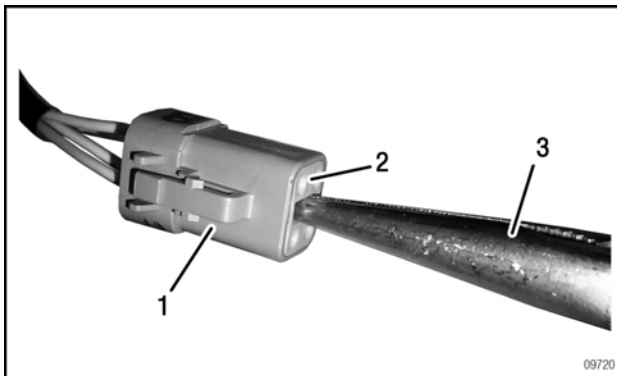


Figure 2.23: TYPICAL

- 1 Connector
- 2 Latch
- 3 Needle nose plier

Step	Procedure
5	Mark position of the wires.
6	Bend back the retaining tab and at the same time carefully pull on the cable until the terminal is detached.

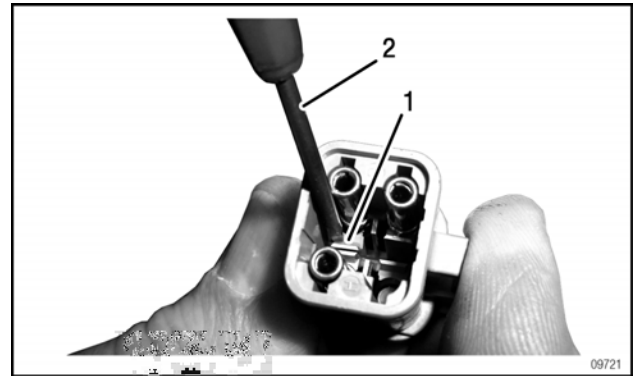


Figure 2.24

- 1 Retaining tab
- 2 Screwdriver

Step	Procedure
7	Pull off the rubber seal.

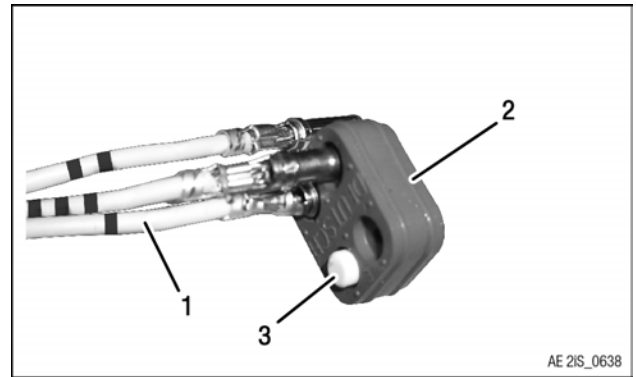


Figure 2.25

- 1 Cable
- 2 Rubber seal
- 3 Filler plug

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
8	Unscrew Allen screw and remove with lock washer and cable clamps.
9	Unscrew lock nut and remove the washer, disk springs and distance sleeve.

### NOTE

*Mark the location of the cable clamps for reassembly!*

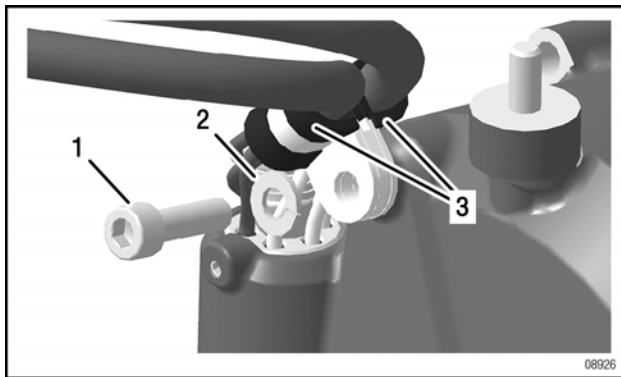


Figure 2.26

- 1 Allen screw
- 2 Lock washer
- 3 Cable clamp

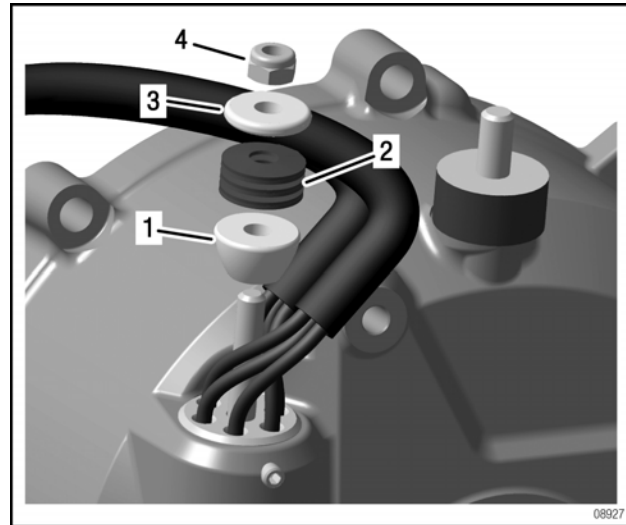


Figure 2.27

- 1 Distance sleeve
- 2 Disk springs (6 pcs.)
- 3 Washer
- 4 Lock nut

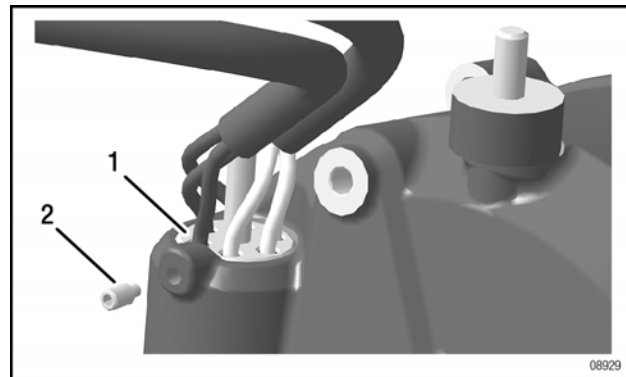


Figure 2.28

- 1 Grommet
- 2 Adjustment screw

Step	Procedure
10	Remove the adjustment screw.
11	Loosen 6 Allen screws with washers and remove stator assy.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

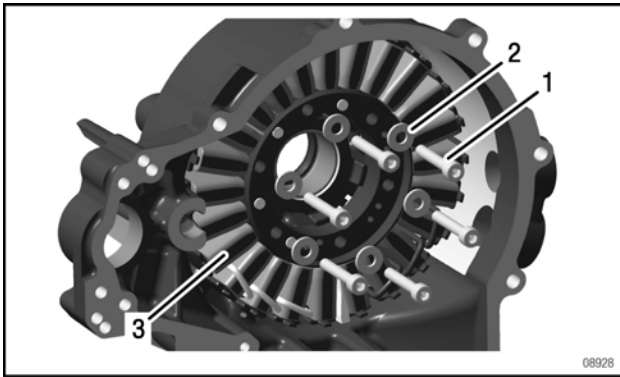


Figure 2.29

- 1 Allen screw
- 2 Washer
- 3 Stator assy.

Step	Procedure
12	Push the grommet in and pull out the cable.

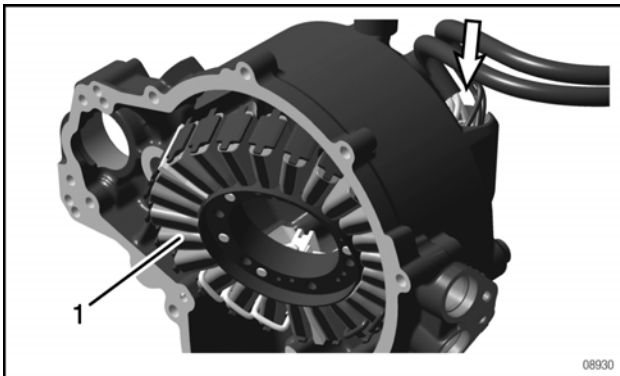


Figure 2.30

- 1 Stator assy.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION

### IGNITION HOUSING



Clean all parts carefully. See current Maintenance Manual Line (MML) for the respective engine type.

### IGNITION HOUSING — INSPECTION

Step	Procedure
1	Carry out visual inspection of sealing surfaces.
2	Unscrew oil pressure sensor (OPS), see <a href="#">Chapter 76–70–00 section Sensors and actuators</a> .

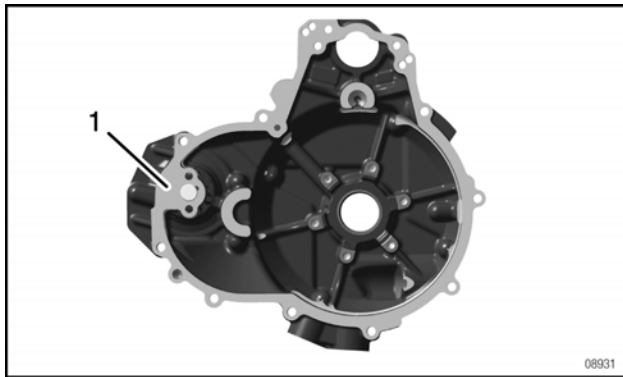


Figure 2.31

1 Sealing surface

Step	Procedure
3	Blow compressed air through the lubrication bore and check it is clear.
4	Check that the caulked ball is sealed.

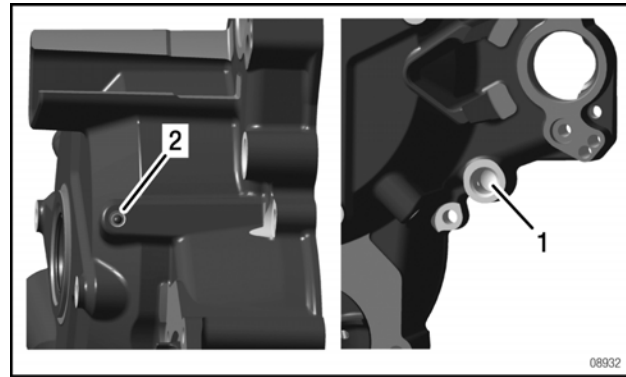


Figure 2.32

1 Lubrication bore      2 Caulked ball

Step	Procedure
5	Check the sealing surface of the rubber grommet for scratches (especially lengthways).

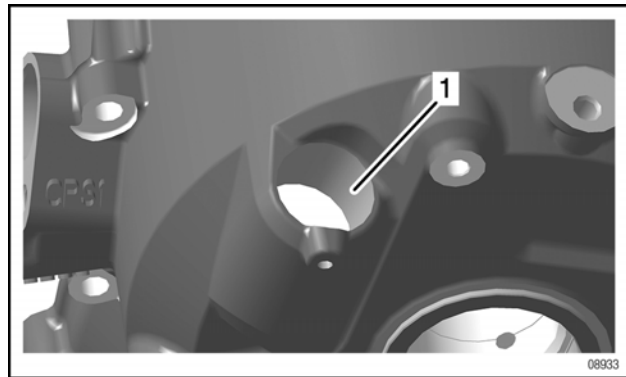


Figure 2.33

1 Sealing surface for rubber grommet

### BEARING BUSHING — INSPECTION

#### NOTE

*It is not possible to replace the bearing bushing, as the inner bore and the lubrication bore are machined after the bushing has been pressed. If the bearing bushing is worn, the entire ignition housing must be replaced.*



# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
1	Check the bearing bushing for damage and wear.
2	Check that the oil bore is clear.

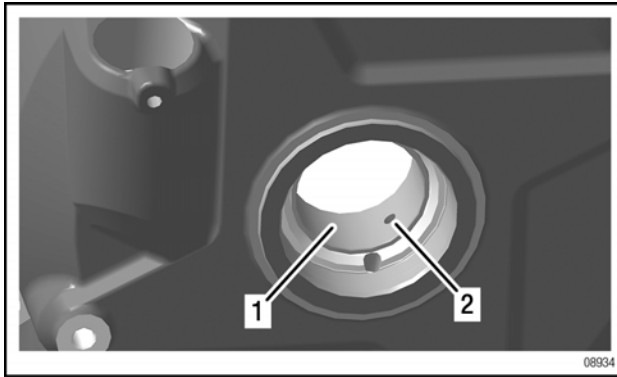


Figure 2.34

- 1 Bearing bushing      2 Oil bore

## STATOR ASSY. — INSPECTION

<b>NOTICE</b>
<b>Danger of consequent damage to engine!</b> The stator may not be repaired! If the stator or its wiring is damaged or worn, it must be replaced with a new part.

Step	Procedure
1	Carry out a visual inspection of the stator assy. and wiring, checking for damage and wear.

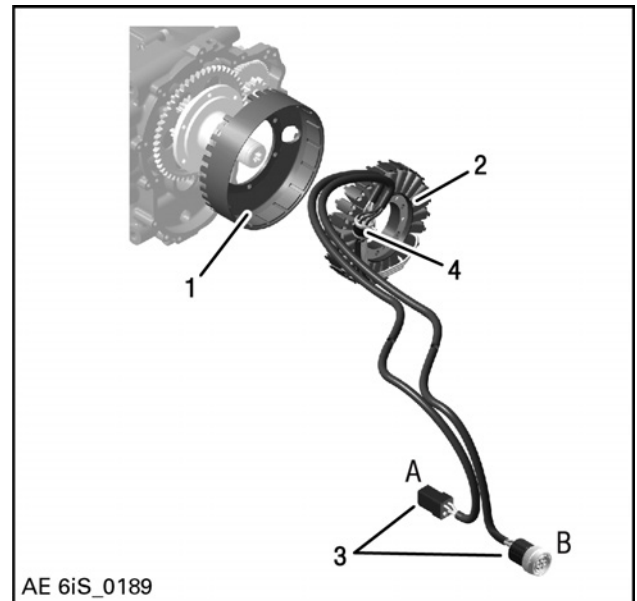


Figure 2.35

- 1 Fly wheel assy.      2 Stator assy.  
3 Stator connectors A, B      4 Grommet

## FLYWHEEL ASSY. — INSPECTION

<b>NOTICE</b>
<b>Signs of wear on the magnet are not permissible! Damaged parts on the fly wheel are not permissible!</b>

Step	Procedure
1	Carry out a visual inspection of the fly-wheel assy. and checking for damage and wear.

## CRANKSHAFT POSITION SENSOR (CPS\_1/CPS\_2) — INSPECTION

To inspect the crankshaft position sensor see Chapter 76-70-00 section [Crankshaft position sensor \(CPS\\_1/CPS\\_2\) — inspection](#).

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**OIL PRESSURE SENSOR (OPS) –  
INSPECTION**

To inspect the oil pressure sensor see Chapter 76-70-00, section [Oil pressure sensor \(OPS\) — inspection](#).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**WEAR LIMITS**

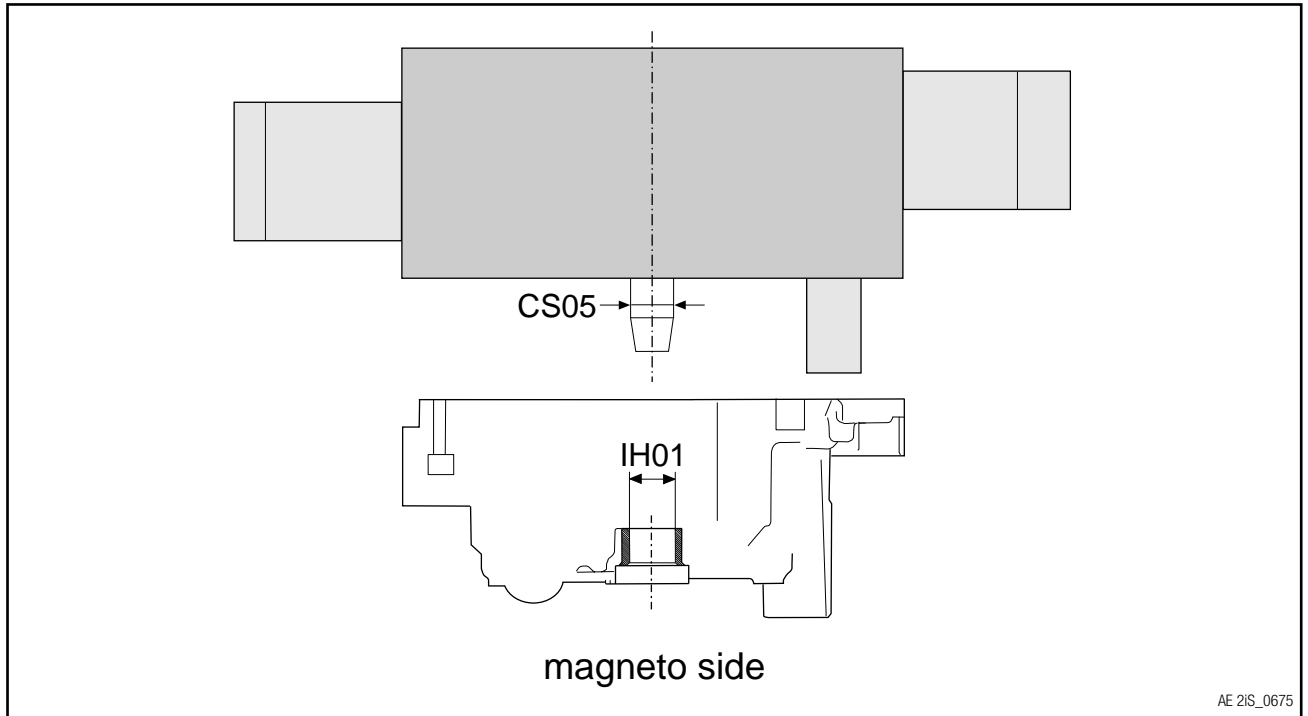


Figure 2.36: Ignition housing

Description	Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements
		min	max	100 %	50 %		
Bearing bushing in ignition housing	IH01	28.04 mm 1.104 in.	28.05 mm 1.1044 in.	28.11 mm 1.1067 in.	28.08 mm 1.1055 in.	current replaced	
Radial clearance	IH01/ CS05	0.03 mm 0.0012 in.	0.05 mm 0.0020 in.	0.12 mm 0.0047 in.	0.09 mm 0.0033 in.	current replaced	
Crankshaft end	CS05	27.970 mm 1.1012 in.	28.000 mm 1.103 in.	27.930 mm 1.0996 in.	27.950 mm 1.1004 in.	current replaced	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**ASSEMBLY**

**IGNITION HOUSING - ASSEMBLY**

Step	Procedure
1	Polish and then clean the contact surface for the oil seal.

**NOTICE**

**All gaskets, O-rings and oil seals must be replaced!**

**OIL SEAL REPLACEMENT**

**NOTICE**

**The oil seal must be replaced!**

**NOTE**

*There is a 1.5 mm (0.06 in.) washer behind the oil seal.*

Step	Procedure
1	If the crankshaft is damaged or worn in the area of the oil seal sealing lip, the channel in the sealing lip can be moved 1.5 mm (0.06 in.) by omitting the washer.

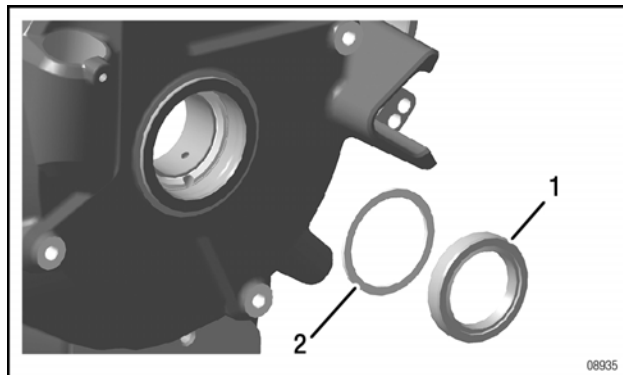


Figure 2.37

- 1 Oil seal                      2 Washer

**OIL SEAL — INSTALLATION**

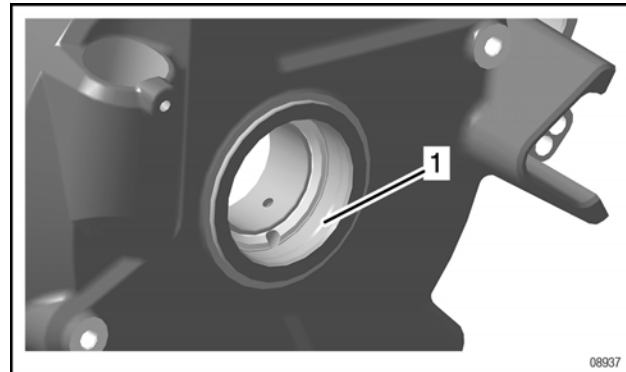


Figure 2.38

- 1 Contact surface

Step	Procedure
2	Place new oil seal on insertion jig part no. 876020 and lubricate. Outer: LOCTITE 5910. Inner: Engine oil.

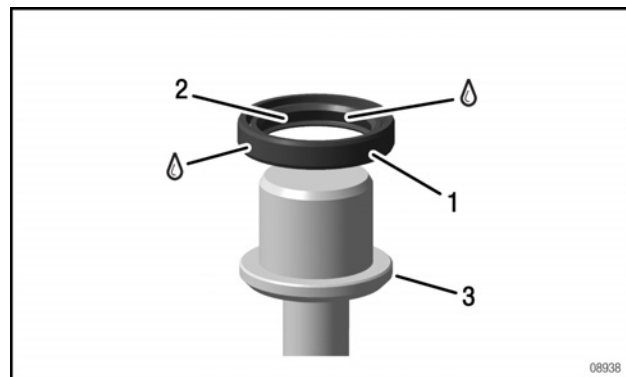


Figure 2.39

- 1 Outer oil seal                      2 Inner oil seal  
 3 Insertion jig part no. 876020

Step	Procedure
3	Using a soft-faced hammer, tap the oil seal with the insertion jig to press it into the ignition housing as far as it will go.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

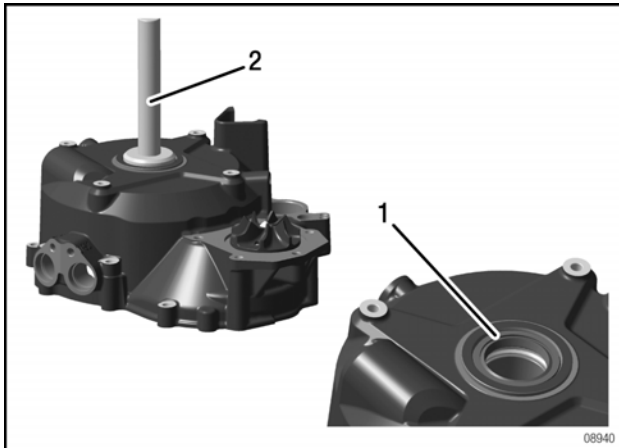


Figure 2.40: TYPICAL

- 1 Oil seal position      2 Insertion jig part no. 876020

**STATOR ASSY. — INSTALLATION**

Step	Procedure
1	Thread in the cable and position the rubber grommet, then secure adjustment screw M4x8 with LOCTITE 243 and tighten it. Tightening torque 1.5 Nm (13 in.lb.).

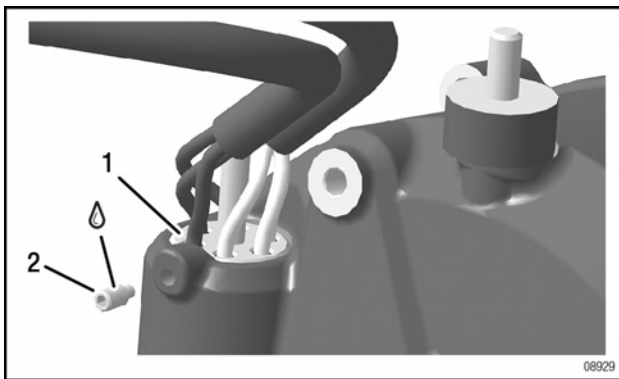


Figure 2.41

- 1 Rubber grommet      2 Adjustment screw M4x8

Step	Procedure
2	Position the stator assy. Then secure 6 Allen screws M5x30 including washers A 5.5 with LOCTITE 243 and tighten them. Tightening torque 5 Nm (44 in.lb.).

**NOTE**

*The separation paper of the two generator coils are in proximity with the water pump gear.*

**NOTE**

*When positioning, make sure there is as little spacing possible between the cable lead-through in the ignition cover and the cable connection to the coils.*

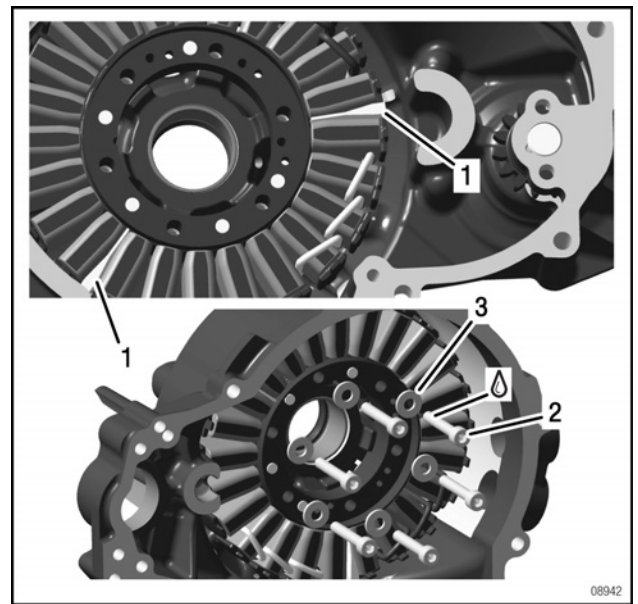


Figure 2.42

- 1 Separation paper between the two generator coils  
 2 Allen screw M5x30      3 Washer A 5.5

Step	Procedure
3	If necessary, tighten stud M5x44 with the shorter thread into the grommet using LOCTITE 648. Tightening torque 2.5 Nm (22 in. lb).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

4	Install the distance sleeve, disk springs 15x5.2x0.7 and washer 5.1/15.5/2.5.
5	Tighten new lock nut M5. Tightening torque 3 Nm (27 in. lb.) and then open counter-clockwise by 1.5 turns.
6	Slip on the full length of the black protection hoses.

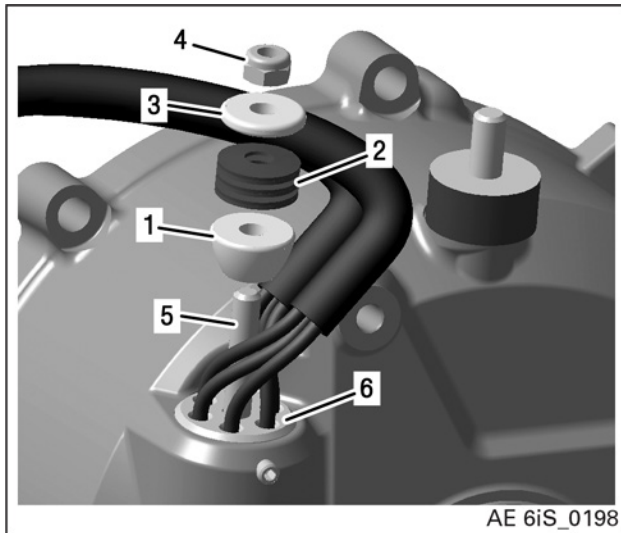


Figure 2.43

- |                       |                           |
|-----------------------|---------------------------|
| 1 Distance sleeve     | 2 Disk springs 15x5.2x0.7 |
| 3 Washer 5.1/15.5/2.5 | 4 Lock nut M5             |
| 5 Stud M5x44          | 6 Grommet                 |

**STATOR CONNECTORS - INSTALLATION**

**Stator connector A (Deutsch) - installation**

Step	Procedure
1	Position the filler plug correctly. Position wires correctly to connector pin labels, using previously applies marks on wire insulation.
2	Thread the lines through the insulator (rubber).
3	Make the cable sleeves latch.

**NOTE**

*Cables of generator B are thicker than cables of generator A. Cables of generator B are yellow.*

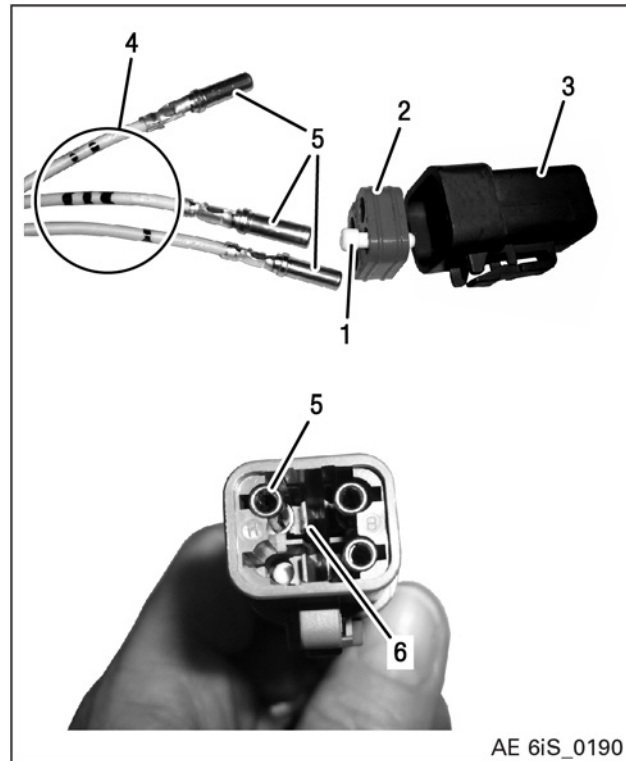


Figure 2.44

- |                        |                      |
|------------------------|----------------------|
| 1 Filler plug          | 2 Insulator (rubber) |
| 3 Connector receptacle | 4 Marks              |
| 5 Cable sleeves        | 6 Latch              |

Step	Procedure
4	Install the orange lock

Part no. of connector set	Corresponding tool
866420 (black)	DEUTSCH HDT- 48 - 00
866422 (gray)	DEUTSCH HDT- 48 - 00

# BRP-Rotax MAINTENANCE MANUAL HEAVY

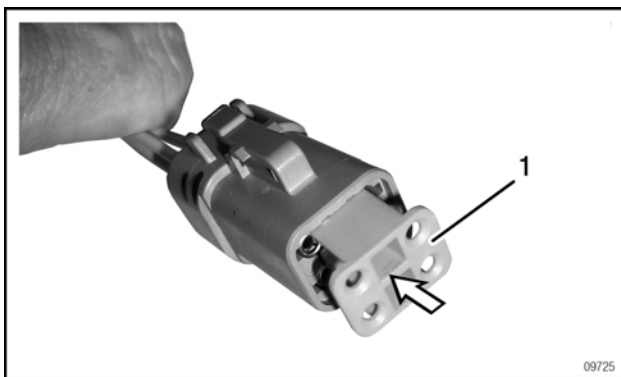


Figure 2.45: TYPICAL

1 Lock

### NOTE

*At malfunctions such as wire breakage and faulty plugs, the particular damage can be repaired.*

*Cable must be long enough after repair is made. Repair of malfunctions with the tools mentioned here must conform to the aircraft standards of the respective country.*

See also relevant Illustrated Parts Catalog for the respective engine type.

### Stator connector B (Amphenol) - installation

### NOTE

*Cables of generator B are thicker than cables of generator A. Cables of generator B are yellow.*

Step	Procedure
1	Install connector cap, push the rubber seal into the sleeve and push it onto the cables.
2	Push each wire into connector until its pin snaps securely in place.

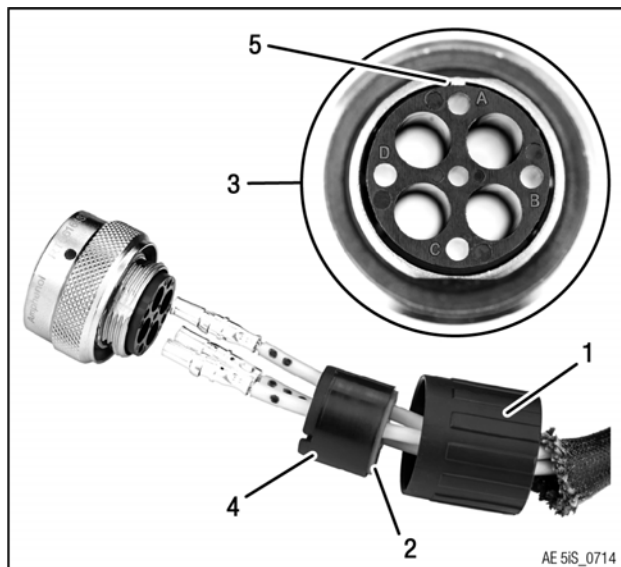


Figure 2.46

- 1 Connector cap
- 2 Rubber seal
- 3 Position letter
- 4 Sleeve
- 5 Key slot

### NOTE

*Correctly secured pins will travel further into connector and lock in place.*

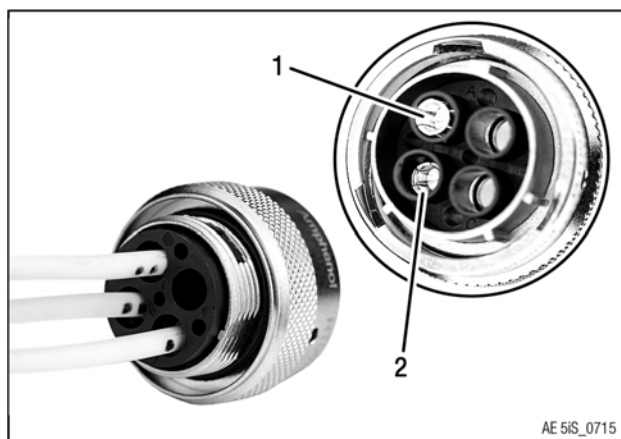


Figure 2.47

- 1 Secured pin
- 2 Un-secured pin

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
3	With all connector pins secured, push the sleeve and screw on the connector cap.  <b>NOTE</b> <i>The sleeve and the key slot have to be aligned.</i>
4	Place plastic sealing plug into empty position of the rubber seal.

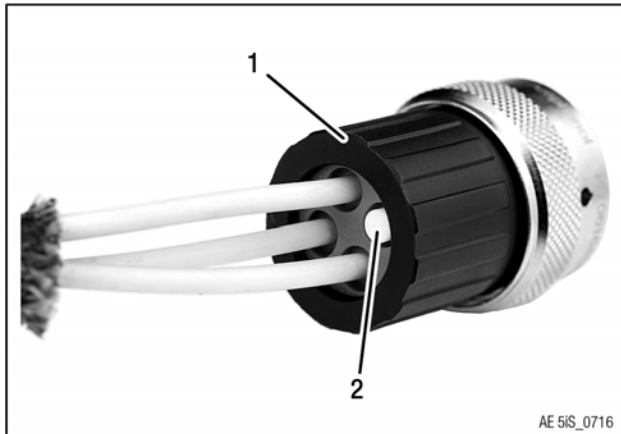


Figure 2.48

- 1 Connector cap      2 Plastic sealing plug

Step	Procedure
5	Install cable clamps 8/M6.

### NOTE

*The bends of the cable clamps must be installed in an opposed manner (back to back).*

Step	Procedure
6	Adjust cables. Tighten Allen screw M6x20 with lock washer A6. Tightening torque 10 Nm (89 in. lb.).

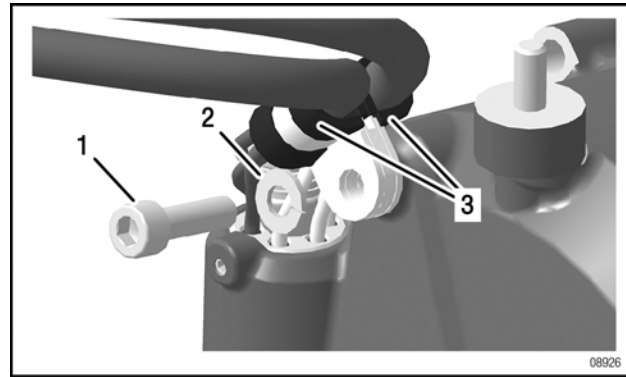


Figure 2.49

- 1 Allen screw M6x20      2 Lock washer A6  
3 Cable clamps 8/M6



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**FLY WHEEL ASSY. — INSTALLATION**

**NOTE**

*Clean all flat surfaces of the sprag clutch housing.*

Step	Procedure
1	Apply a small thin layer of LOCTITE 648 to the flat surface of the sprag clutch housing.
2	Place fly wheel on top.
3	Install the oil spray nozzle at the oil outlet of the sprag clutch housing using LOCTITE 243 and screw it together with the magneto fly wheel.  <b>NOTE</b> <i>Use only a thin amount of LOCTITE 243 to be sure not to clog the oil spray nozzle.</i>
4	Secure 6 Allen screws M6x12 (12.9 screw strength) with LOCTITE 603 and tighten them. Tightening torque 18 Nm (159 in. lb.).

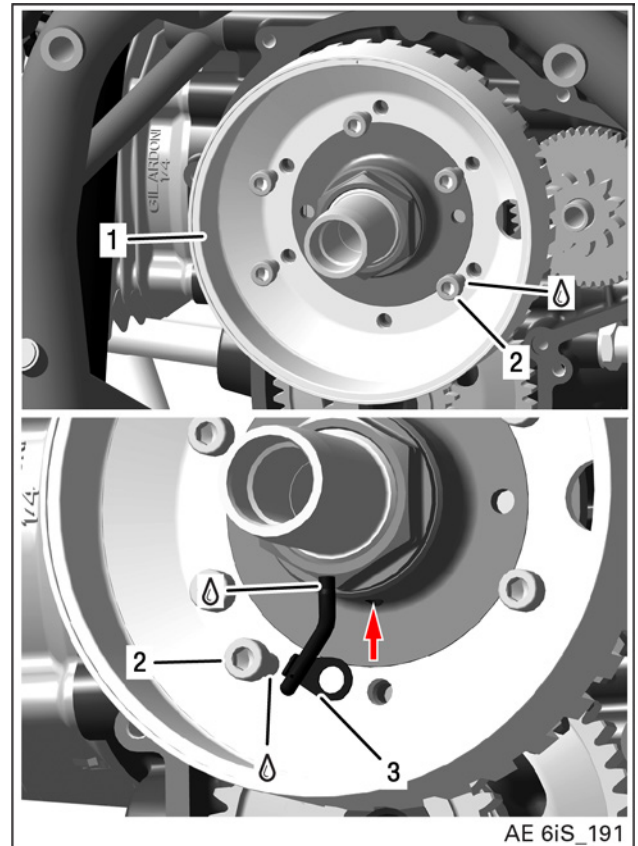


Figure 2.50

- 1 Magneto fly wheel
- 2 Allen screw M6x12
- 3 Oil spray nozzle

**IGNITION HOUSING ASSY. —  
INSTALLATION**

**NOTE**

*Check whether dowel pin has been inserted.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

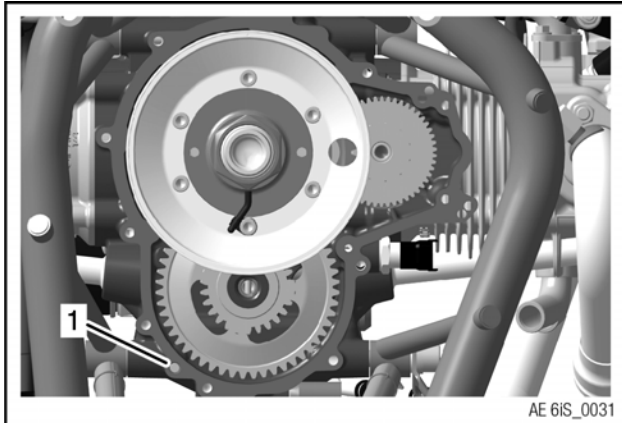


Figure 2.51

1 Dowel pin 6x20

Step	Procedure
1	Lubricate oil seal, bearing bushing and crankshaft stub with Engine oil.
2	Insert new O-ring 5x2 into the crankcase and lubricate with Lithium-base grease to hold in position.

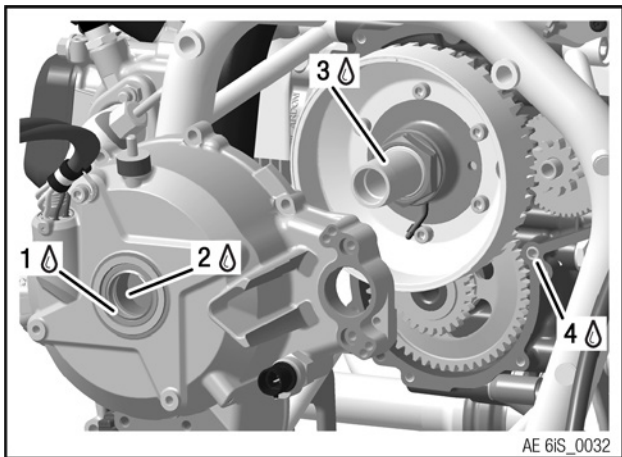


Figure 2.52

1 Oil seal                      2 Bearing bushing  
 3 Crankshaft stub          4 O-ring 5x2

Step	Procedure
3	Install puller assy. part no. 876010 on ignition housing. Lubricate the sealing surface of the ignition housing with LOC-TITE 5910.

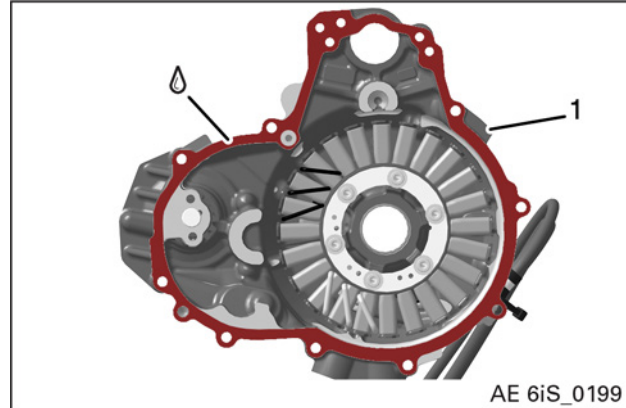


Figure 2.53

1 Ignition housing

**⚠ WARNING**

**Danger of injury!**The magnet of the fly wheel pulls the ignition cover towards the engine/sealing surface with high force. Fingers can be crushed.

Make sure screw of puller assy. is rotated inwards so the ignition cover is not pulled towards the engine.

Step	Procedure
4	Place the protection mushroom part no. 877419 on the crankshaft.
5	Install ignition housing on the crankcase with puller assy. part no. 876010.
6	Turn the water pump wheel slightly so that the gear wheels can match.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

**NOTICE**

**The ignition housing must be attached manually without tapping.**

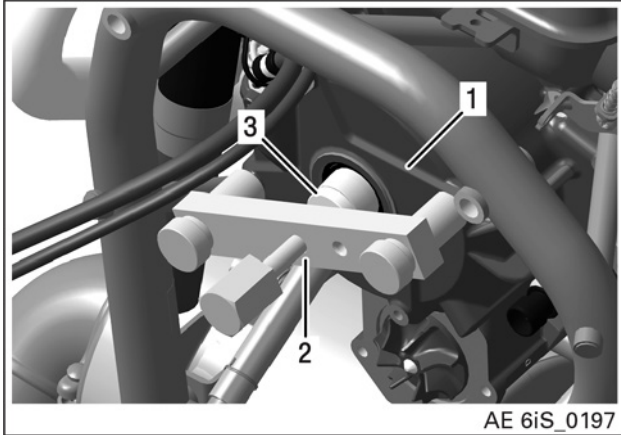


Figure 2.54

- 1 Ignition housing
- 2 Puller assy. part no. 876010
- 3 Protection mushroom part no. 877419

Step	Procedure
7	Install crankshaft position sensors (CPS_1/2). See Chapter 76-70-00, section <a href="#">Crankshaft position sensor (CPS_1/ CPS_2) — installation.</a>
8	Fasten the ignition housing to the crankcase using 5 Allen screws M6x30 and 2 Allen screws M6x50 with Washers A 6.4. Tightening torque 10 Nm (89 in. lb.).  <b>NOTE</b> <i>Line CPS_1/ 2 cables through the cable clamp and tighten upper Allen screw M6x50 with LOCTITE 243.</i>

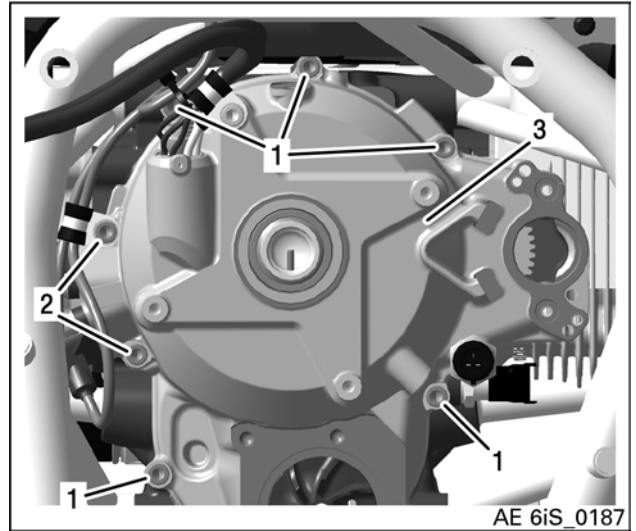


Figure 2.55

- 1 Allen screws M6x30
- 2 Allen screws M6x50
- 3 Ignition housing assy.

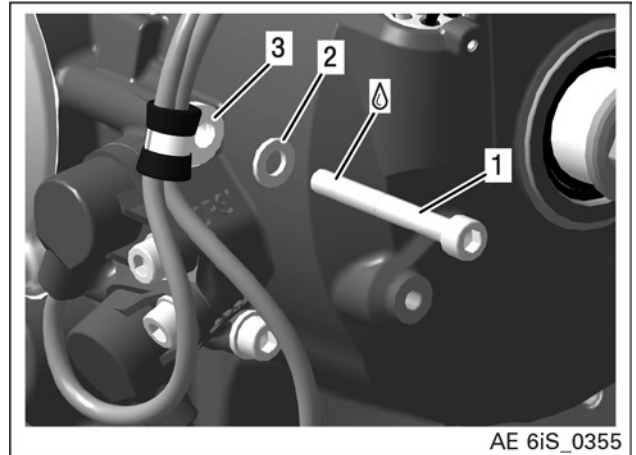


Figure 2.56

- 1 Allen screw M6x50
- 2 Washer A 6.4
- 3 Cable clamp

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTICE

**Do not use a longer screw! The screw would press on the cylinder sleeve and cause damage to piston and cylinder.**

## NOTE

*The through-bore of the Allen screw M6x50 penetrates as far as the crankcase. The engine is not leakproof if this screw is not seated with LOCTITE 243.*

## NOTICE

**If the water pump is not installed straight away, then 2 M6x65 temporary screws with washers must be screwed in so that the sealing surface is evenly clamped.**

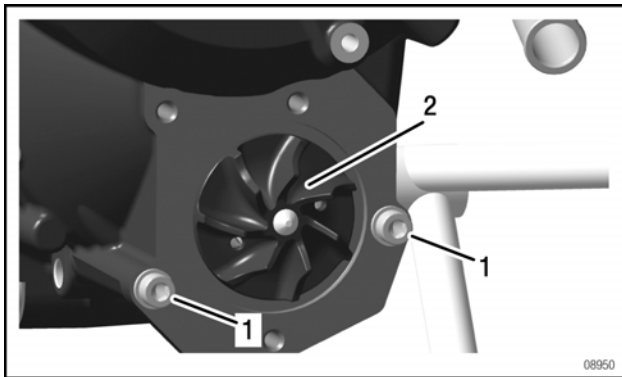


Figure 2.57

- 1 Allen screw M6x65 with washers      2 Water pump wheel

Step	Procedure
9	Fasten hex. screws M5x45 for the starter. Tightening torque 6 Nm (53 in. lb.)

## NOTE

*No washers are used for these screws, as otherwise the starter does not lie flat on the flange surface.*

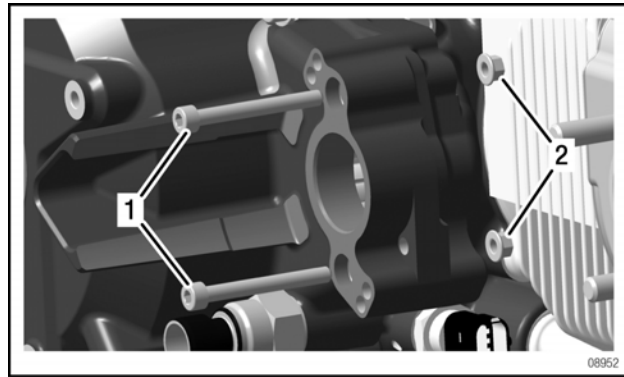


Figure 2.58: TYPICAL

- 1 Hex. screw M5x45      2 Hex. collar nut M5



Fix the crankshaft. See current Maintenance Manual Line (MML) for the respective engine type.

Step	Procedure
10	Fasten the plug screw with a new O-ring 15.9x2.3. Tightening torque 150 Nm (111 ft. lb.)

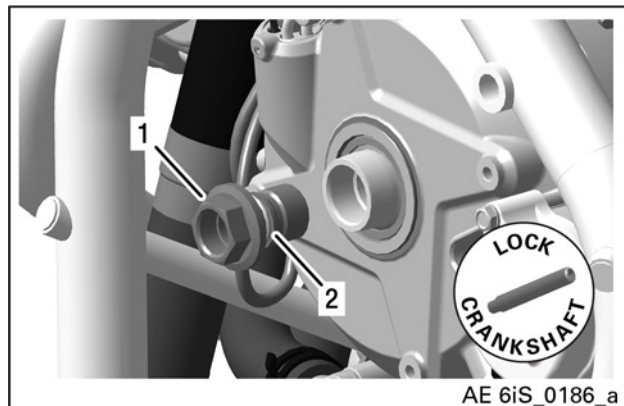


Figure 2.59

- 1 Plug screw M20x1.5      2 O-ring 15.9x2.3

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## 916 i TYPE A

Step	Procedure
11	Connect the stator connectors (Generator A, B) with the connector socket (Regulator A, B) on the fuse box. See Chapter 76-10-00, section <a href="#">Fuse box – installation</a> .

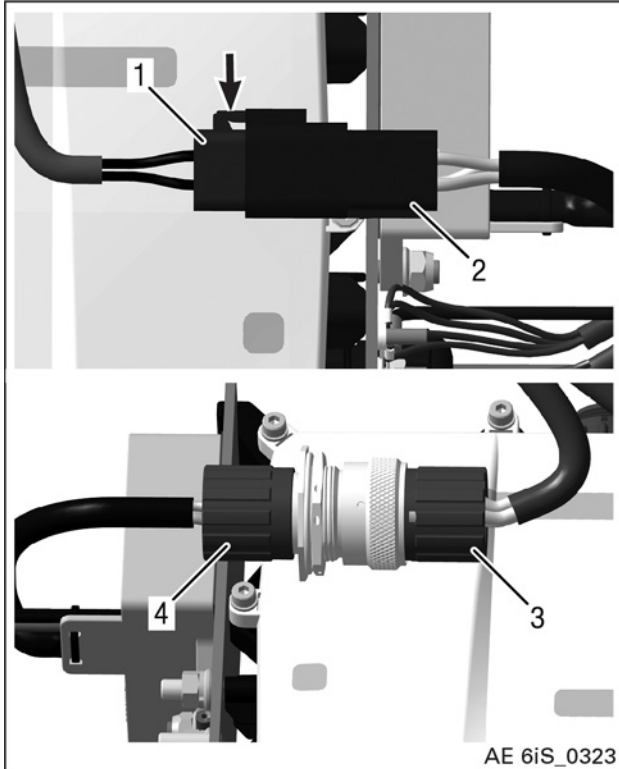


Figure 2.60

- |  |   |
|--|---|
| <p>1 Stator connector A<br/>(Deutsch black)</p> <p>3 Stator connector B<br/>(Amphenol)</p> | <p>2 Connection socket<br/>(Regulator A)</p> <p>4 Connection socket<br/>(Regulator B)</p> |
|--|---|

## 916 i TYPE C24

Step	Procedure
11	Connect the stator connector (Generator A) with the connector socket (Regulator A) on the fuse box and stator connector (Generator B) with connector socket (28 V AC-DC Converter X1). See Chapter 76-10-00, section <a href="#">Fuse box – installation</a> .

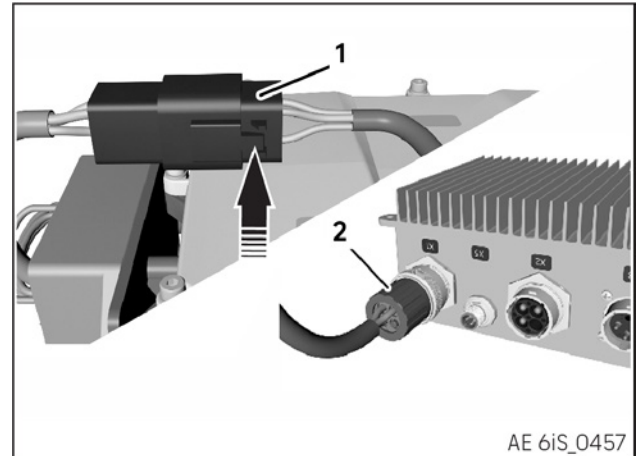


Figure 2.61

- |   |  |
|---|--|
| <p>1 Stator connector A<br/>(DEUTSCH black)</p> | <p>2 Stator connector B<br/>(Amphenol)</p> |
|---|--|

## FINISHING WORK

- Install water pump housing.  
See [Chapter 75-00-00 Cooling system](#)
- Install electric starter.  
See [Chapter 80-00-00 Electric starter](#).
- Install oil pressure sensor (OPS).  
See [Chapter 76-70-00 Sensors and actuators](#).
- Install airbox on ignition housing.  
See [Chapter 73-00-00 Fuel system](#).



Unlock the crankshaft.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY



Fill with operating fluids or check filling levels.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Flush the engine cooling system.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system.



Purge the oil system.

See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Carry out an engine test run.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 61-20-00**  
**GOVERNOR**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>3</b>
<b>Service Products</b> .....	<b>4</b>
<b>System description</b> .....	<b>6</b>
Safety instruction.....	6
Maintenance .....	6
<b>Removal</b> .....	<b>7</b>
Governor — removal .....	7
Governor flange — removal .....	7
Oil inlet flange adaptor - removal .....	8
Governor drive - removal.....	9
Blinding shim - removal.....	10
Needle bearing and oil inlet flange— removal .....	10
<b>Inspection</b> .....	<b>11</b>
Governor - inspection .....	11
Governor drive — inspection .....	11
<b>Wear limits</b> .....	<b>13</b>
<b>Installation</b> .....	<b>14</b>
Needle sleeve — installation .....	14
Ball bearing — installation.....	14
Blinding shim - installation.....	15
Needle bearing and oil inlet flange — installation .....	15
Governor drive — installation .....	15
Governor flange — installation.....	15
Governor - installation.....	18
Oil inlet flange adaptor - installation.....	18
Finishing work .....	19



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


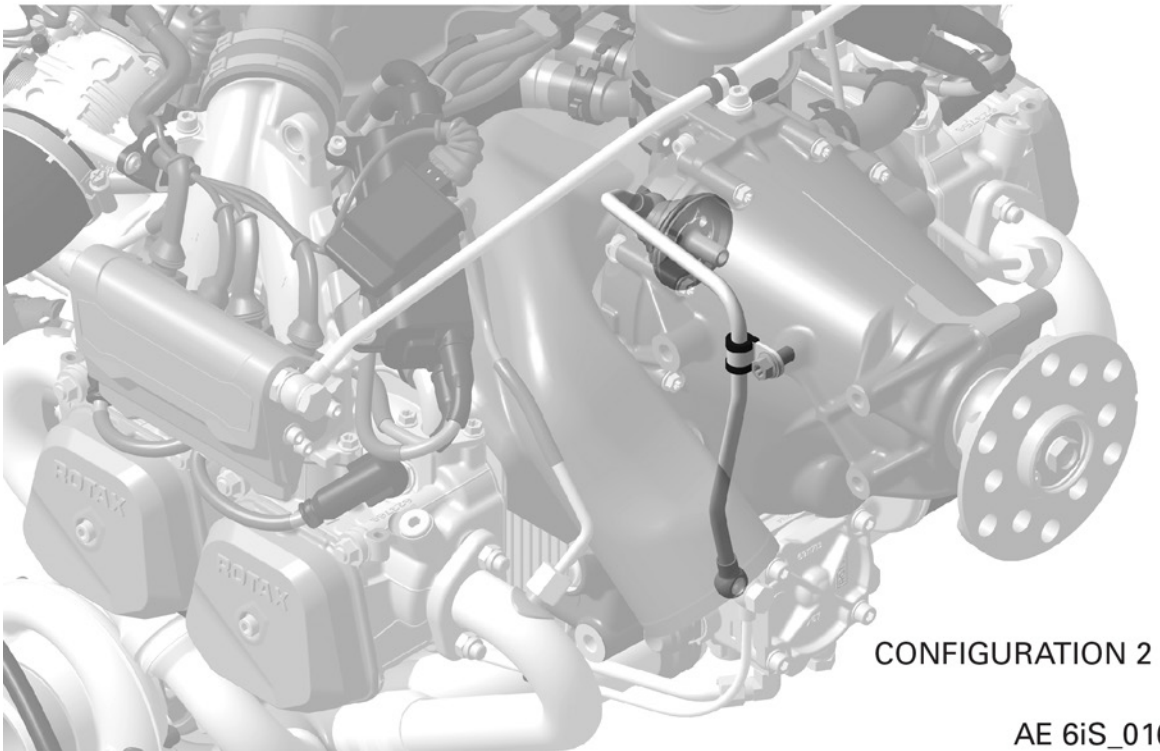


Figure 3.1: Location on the engine

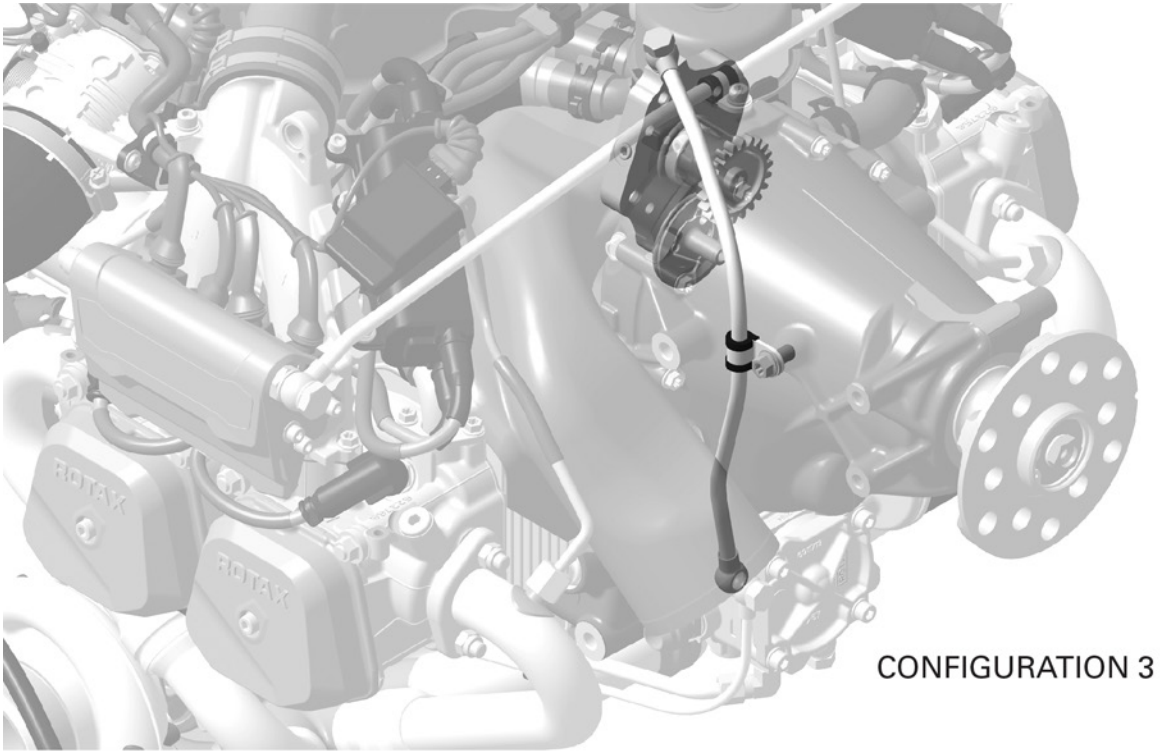

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SPECIAL TOOLS**

Description	Part number
Puller	876489
Insertion jig assy.	276332
Retaining device	242661
Ring spanner a/f 10/13	876470
Press-in mushroom	877595
Press-in mushroom	877597

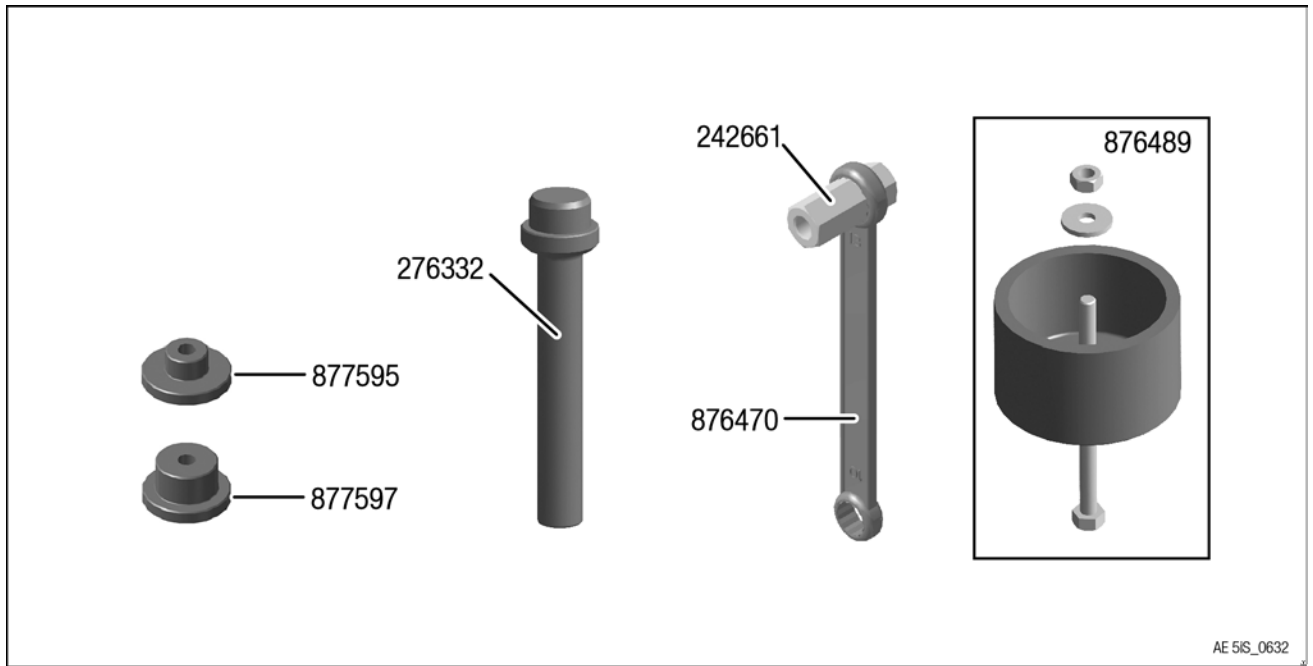


Figure 3.2: Special tools

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE 243	897651
LOCTITE 648	899788
Engine oil	n.a.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

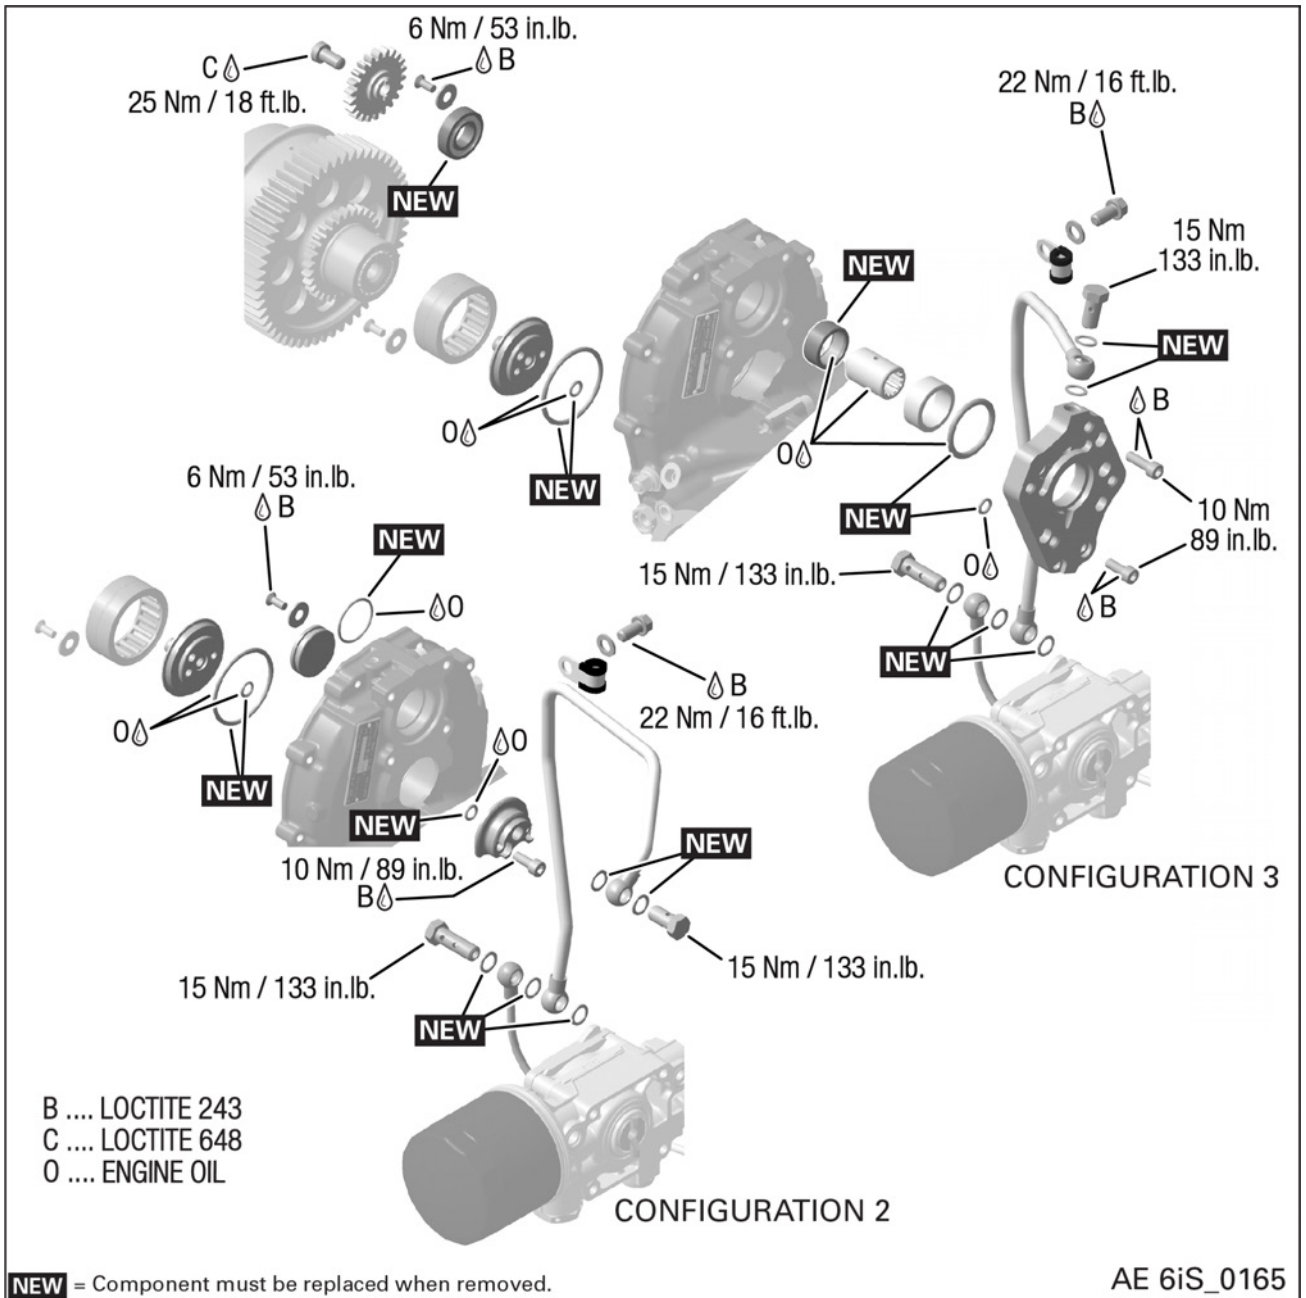


Figure 3.3: Service Products

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SYSTEM DESCRIPTION

For operation with a hydraulic constant-speed propeller on configuration 3 of this engine, a hydraulic governor can be attached to control the propeller. The governor for constant speed propeller is not delivered by ROTAX®



For maintenance see instructions of the aircraft manufacturer.

Gear ratio (i)		
Crankshaft: Propeller shaft	56: 22	2.545
Propeller shaft: Governor	22: 29	0.759
Total	1.93	

## SAFETY INSTRUCTION

### **WARNING**

**Follow the general safety instructions during all work on the engine and the assemblies around it.**

## MAINTENANCE






As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY


## REMOVAL

### Preparation

- 
 General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.
- 
 Carry out engine test run to check proper functioning of the governor. See current Maintenance Manual Line (MML) for the respective engine type.
- 
 Drain oil. See current Maintenance Manual Line (MML) for the respective engine type.

### GOVERNOR — REMOVAL

#### CONFIGURATION 3

- 
 Remove the governor according to the instructions in the aircraft manufacturer's manual.

**NOTICE**

**Follow the governor manufacturer's instructions for maintenance, inspection and repair.**

### GOVERNOR FLANGE — REMOVAL

#### CONFIGURATION 3

Step	Procedure
1	Remove banjo bolt M10x1x23 with sealing rings from the governor flange and banjo bolt M10x1x34 with sealing rings from the oil pump housing.
2	Loosen the Hex./Torx-flange screw and remove pressure oil line assy. and washer from the gearbox housing.

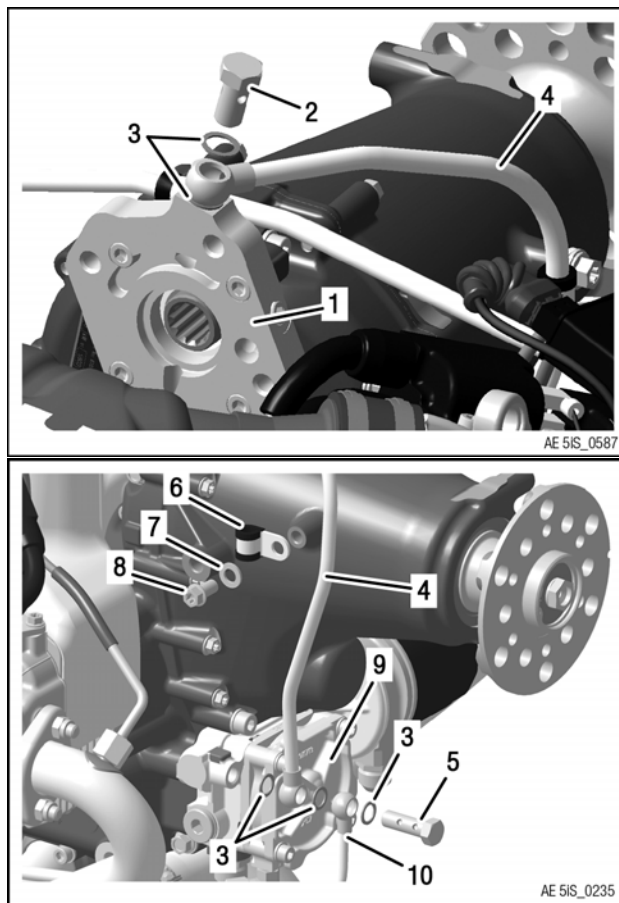


Figure 3.4

- |                       |                            |
|-----------------------|----------------------------|
| 1 Governor flange     | 2 Banjo bolt M10x1x23      |
| 3 Sealing rings       | 4 Pressure oil line assy.  |
| 5 Banjo bolt M10x1x34 | 6 Cable clamp              |
| 7 Washer              | 8 Hex./Torx-flange screw   |
| 9 Oil pump housing    | 10 Turbo pressure oil line |

Step	Procedure
3	Loosen 4 Allen screws and 2 Allen screws from the governor flange.
4	Remove the governor flange with the 3 O-rings and spacer.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

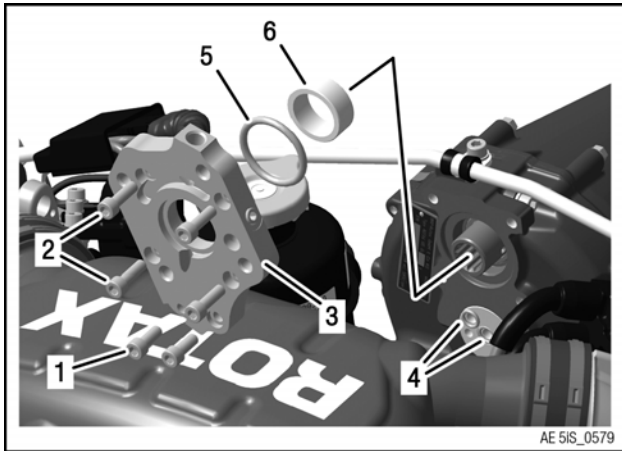


Figure 3.5

- |                   |                |
|-------------------|----------------|
| 1 Allen screws    | 2 Allen screws |
| 3 Governor flange | 4 O-ring       |
| 5 O-ring          | 6 Spacer       |

**OIL INLET FLANGE ADAPTOR -  
REMOVAL**

CONFIGURATION 2

Step	Procedure
1	Remove banjo bolt M10x1x19 with sealing rings from the oil inlet flange adaptor and banjo bolt M10x1x34 with sealing rings from the oil pump housing.
2	Loosen the Hex./Torx-flange screw and remove gearbox oil line. and washer from gearbox housing.

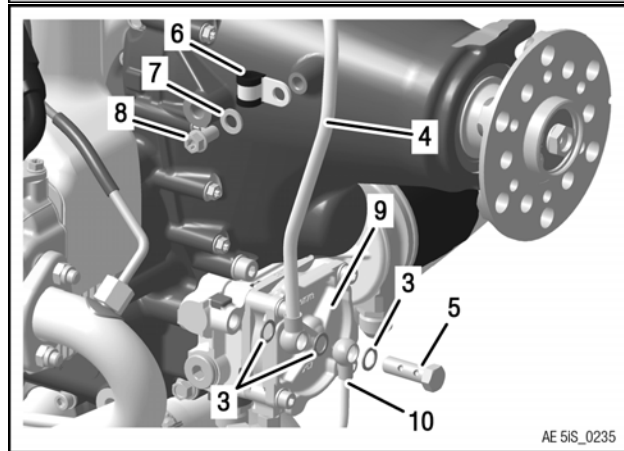
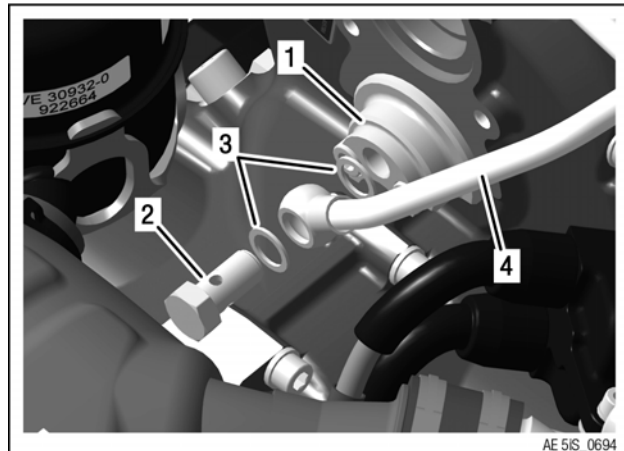


Figure 3.6: TYPICAL

- |                            |                            |
|----------------------------|----------------------------|
| 1 Oil inlet flange adaptor | 2 Banjo bolt M10x1x19      |
| 3 Sealing rings            | 4 Gearbox oil line         |
| 5 Banjo bolt M10x1x34      | 6 Cable clamp              |
| 7 Washer                   | 8 Hex./Torx-flange screw   |
| 9 Oil pump housing         | 10 Turbo pressure oil line |

Step	Procedure
3	Loosen 2 Allen screws from the oil inlet adaptor.
4	Remove the oil inlet flange adaptor with the 2 O-rings.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

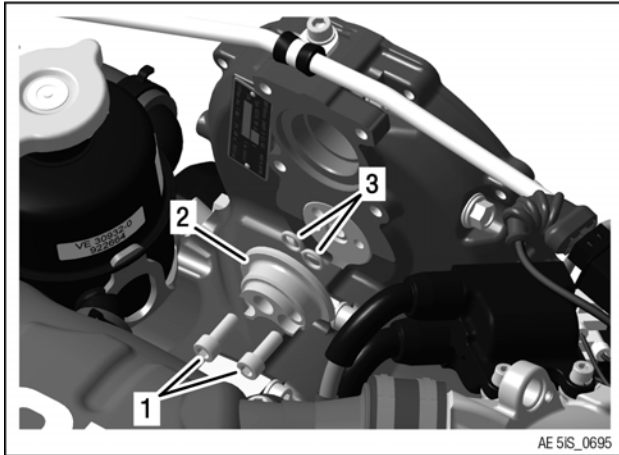


Figure 3.7

- 1 Allen screws
- 2 Oil inlet flange adaptor
- 3 O-rings

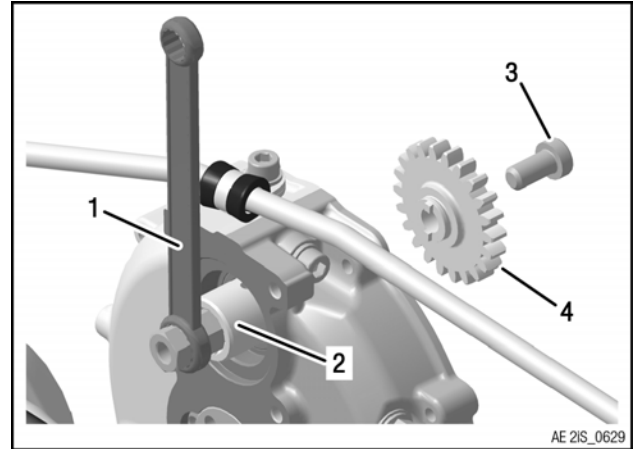


Figure 3.8

- 1 Retaining tool part no. 242661 and 876470
- 2 Drive sleeve
- 3 Allen screw
- 4 Vacuum pump gear

## GOVERNOR DRIVE - REMOVAL

### CONFIGURATION 3

#### Preparation



Remove the propeller gearbox, see current Maintenance Manual Line (MML) for the respective engine type.

Step	Procedure
1	Fix the drive sleeve with retaining tool part no. 242661 and 876470.
2	Loosen the Allen screw and remove the vacuum pump gear with the drive sleeve.

Step	Procedure
3	Loosen the countersunk screw with retaining washer for the ball bearing fastening.
4	Press the needle sleeve along with the ball bearing out towards the gearbox with a suitable insertion jig part no. 276332.

#### NOTE

*The needle sleeve and ball bearing are damaged by this and must be replaced.*

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

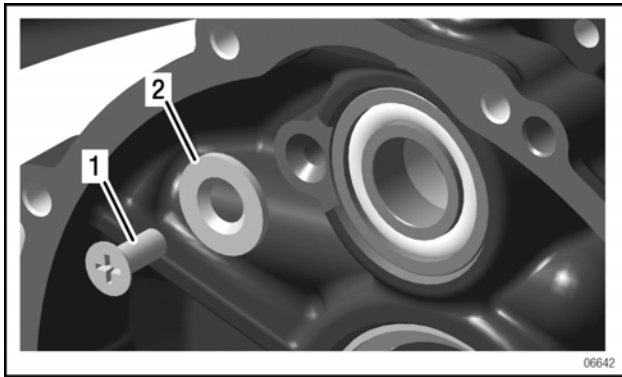


Figure 3.9

- 1 Countersunk screw    2 Thrust washer

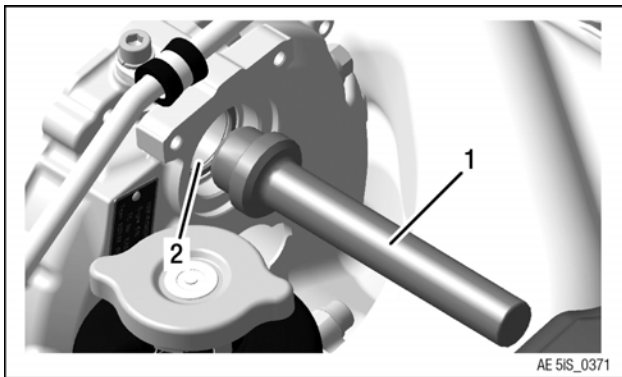


Figure 3.10

- 1 Insertion jig part no. 276332    2 Needle bearing and ball bearing

## **BLINDING SHIM - REMOVAL**

### **CONFIGURATION 2**

See [Chapter 72-10-00 Propeller gearbox](#).

## **NEEDLE BEARING AND OIL INLET FLANGE— REMOVAL**

See [Chapter 72-10-00 Propeller gearbox](#).



## INSPECTION

### GOVERNOR - INSPECTION

NOTICE
<b>Follow the governor manufacturer's instructions for maintenance, inspection and repair.</b>

### GOVERNOR DRIVE — INSPECTION

#### Preparation



Clean all parts carefully. See current Maintenance Manual Line (MML) for the respective engine type.



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.

Step	Procedure
1	Measure the inner diameter of the torsion shaft (GB05). See Chapter 72-10-00, section <a href="#">Wear limits</a> .
2	Measure the journal of the oil inlet flange (GB06). See Chapter 72-10-00, section <a href="#">Wear limits</a> .

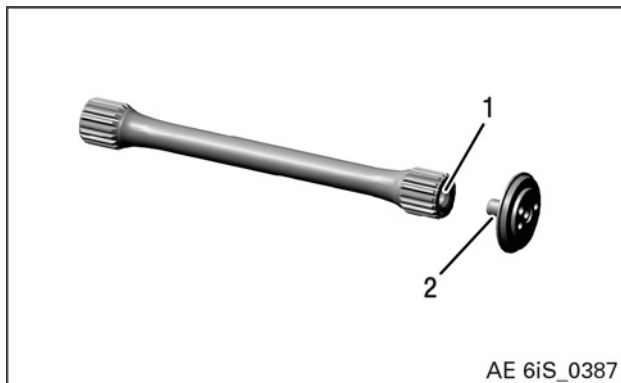


Figure 3.11: Typical

- 1 Torsion shaft inner diameter      2 Oil inlet flange

#### NOTE

*Wear usually appears as a flattened area on the journal.*

Step	Procedure
3	Check the gear-tooth system of the dog gear and vacuum pump gear.

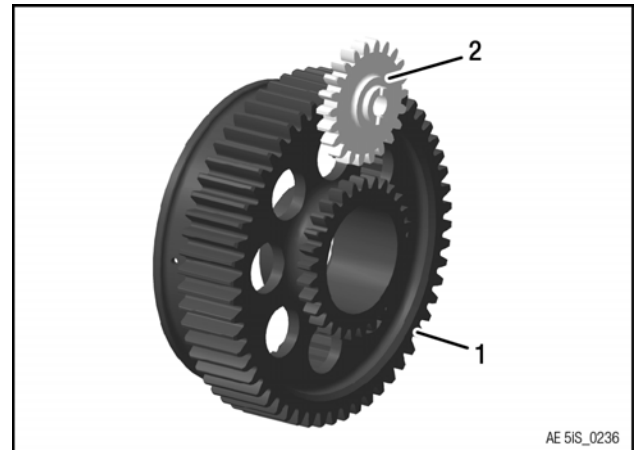


Figure 3.12

- 1 Dog gear      2 Vacuum pump gear

Step	Procedure
4	Check that all oil bores in the governor flange or oil inlet flange adaptor are clear.

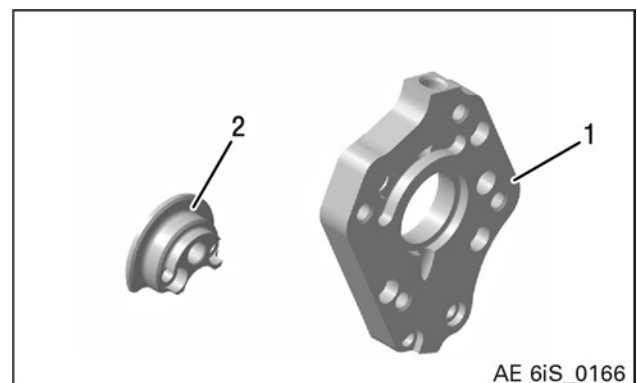


Figure 3.13

- 1 Governor flange      2 Oil inlet flange adaptor

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

Step	Procedure
5	Check the gearing of the drive sleeve for damage.

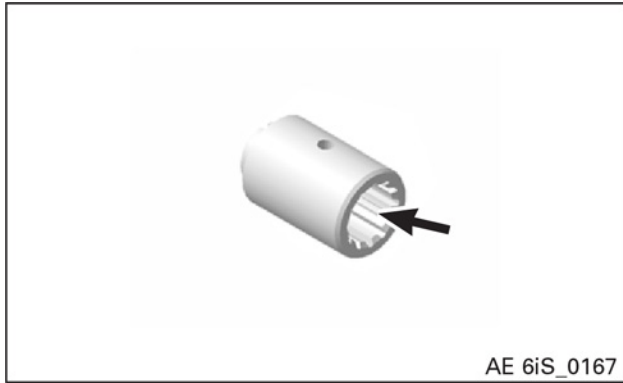


Figure 3.14

**WEAR LIMITS**

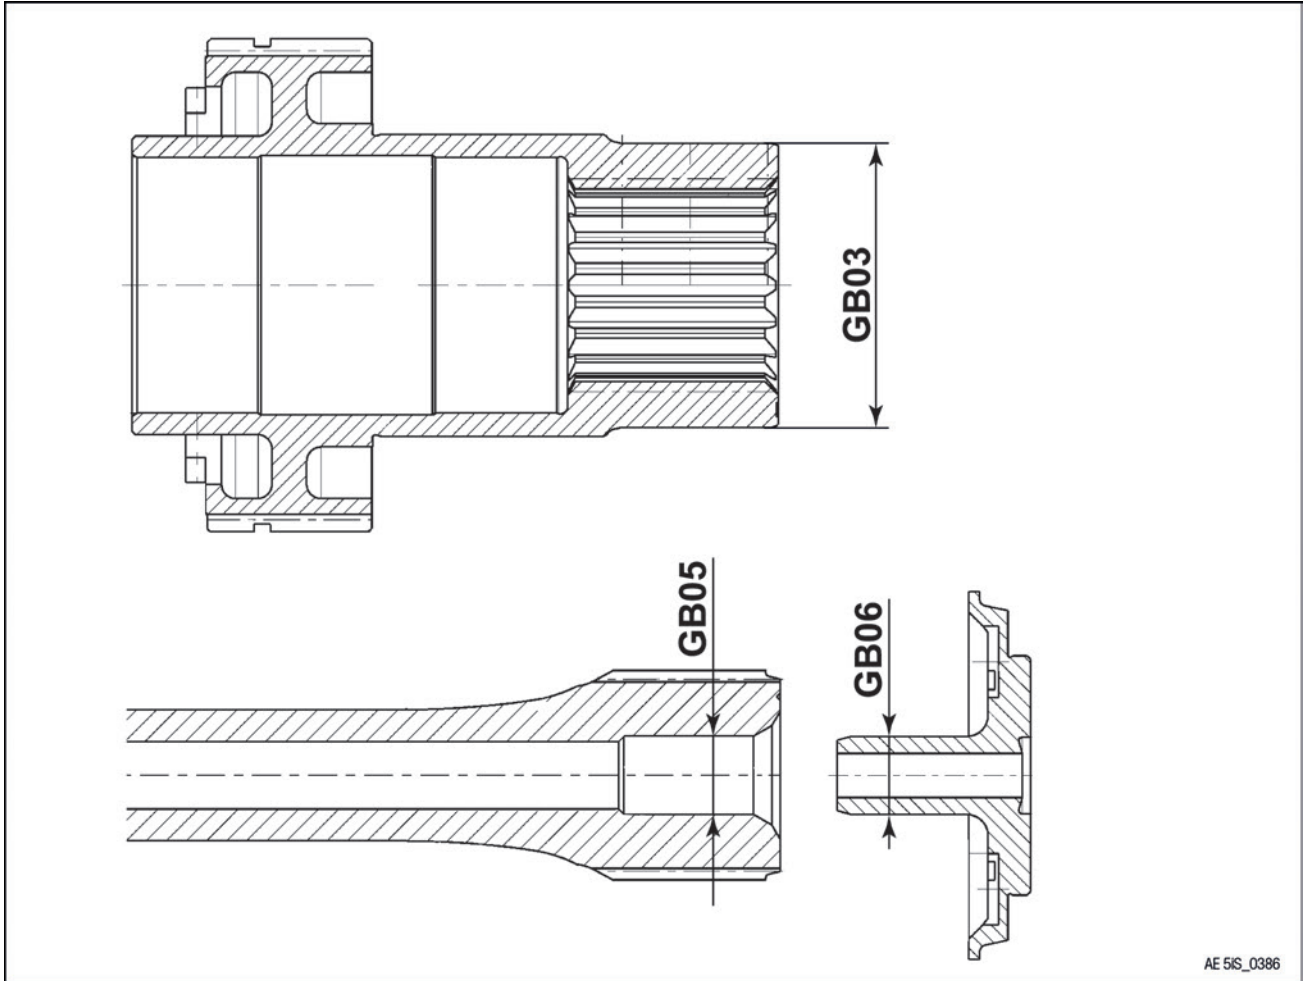


Figure 3.15: Propeller gearbox

For detailed information and measurements see Chapter [72-10-00 Wear limits](#).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

<b>NOTICE</b>
<b>All gaskets, O-rings and oil seals must be replaced!</b>

**NEEDLE SLEEVE — INSTALLATION**

CONFIGURATION 3

Step	Procedure
1	Lubricate the new needle sleeve.
2	Apply the puller part no. 876489 on the governor pump side.
3	Place the press-in mushroom part no. 877597 on the needle sleeve and fix it with the hex. nut M6 and washer 6.2/18/2.
4	The needle sleeve is pressed in as far as it will go by turning the hex. screw clockwise.

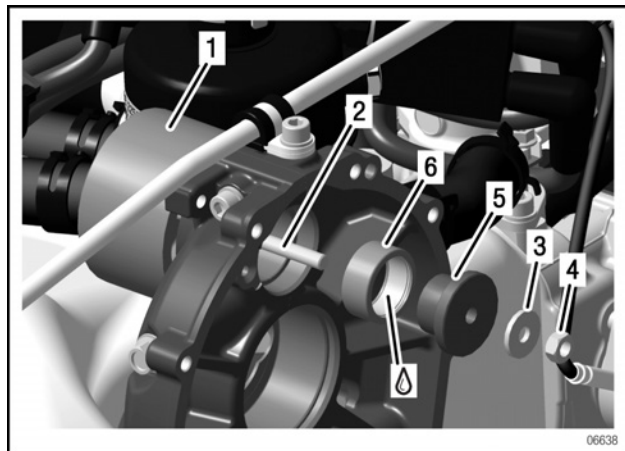


Figure 3.16: TYPICAL

- 1 Puller part no. 876489    2 Hex. screw M6x80
- 3 Washer 6.2/18/2        4 Hex. nut M6
- 5 Press-in mushroom part no. 877597    6 Needle sleeve

**BALL BEARING — INSTALLATION**

CONFIGURATION 3

Step	Procedure
1	Apply the puller part no. 876489 on the governor pump side.
2	Insert the press-in mushroom part no. 877595 into the new ball bearing and fix it with hex. nut M6 and washer 6.2/18/2.
3	The ball bearing is pressed in as far as it will go by turning the hex. screw clockwise.

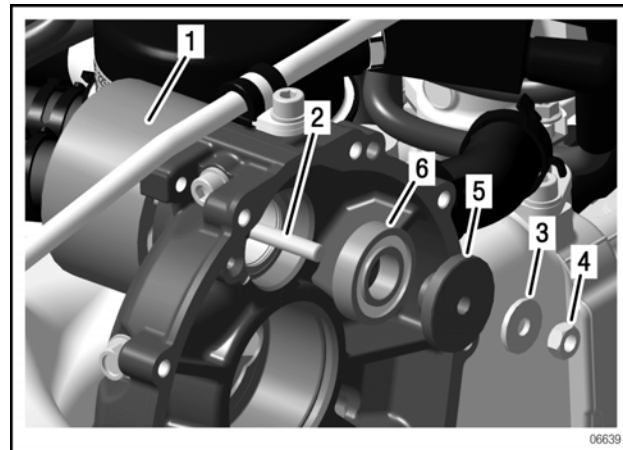


Figure 3.17: TYPICAL

- 1 Puller part no. 876489    2 Hex. screw M6x80
- 3 Washer 6.2/18/2        4 Hex. nut M6
- 5 Press-in mushroom part no. 877595    6 Ball bearing

Step	Procedure
4	Secure M5x12 countersunk screw including the retaining washer with LOCTITE 243 and tighten it. Tightening torque 6 Nm (53 in.lb.)

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

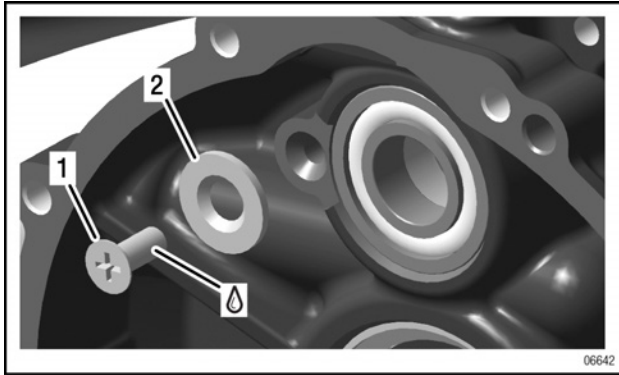


Figure 3.18

- 1 *M5x12 countersunk screw*      2 *Retaining washer*

**BLINDING SHIM - INSTALLATION**

**CONFIGURATION 2**

See [Chapter 72-10-00 Propeller gearbox.](#)

**NEEDLE BEARING AND OIL INLET FLANGE — INSTALLATION**

See [Chapter 72-10-00 Propeller gearbox.](#)

**GOVERNOR DRIVE — INSTALLATION**

Step	Procedure
1	Insert the lubricated drive sleeve. Hold with the retaining tool part no. 242661 and 876470. Then align slots of drive sleeve with gear.
2	Secure Allen screw M8x16 with LOCTITE 648 and tighten it. Tightening torque 25 Nm (18 ft.lb).

**NOTICE**

The Allen screw M8 for the vacuum pump gear is 16 mm (0.63 in.) long and has a low profile screw head.

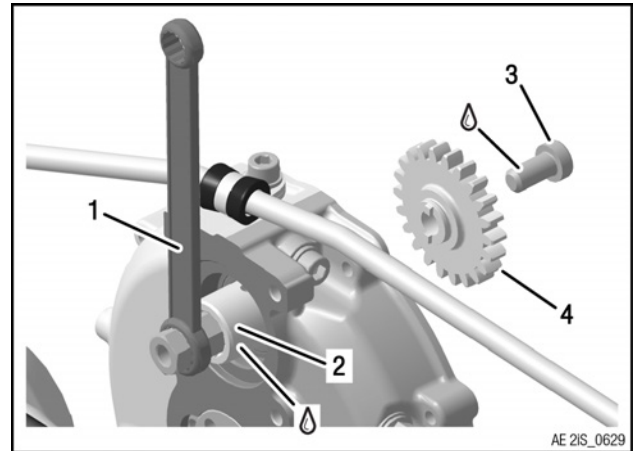


Figure 3.19

- 1 *Retaining tool part no. 242661 and 876470*      2 *Drive sleeve*  
 3 *Allen screw M8x16*      4 *Vacuum pump gear*

**GOVERNOR FLANGE — INSTALLATION**

Step	Procedure
1	Install the governor flange including the distance sleeve in the crankcase with a new O-ring 32x4.
2	Place one O-ring 7x2 each in the oil inlet flange and governor flange and hold them in position with a little bit of grease.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

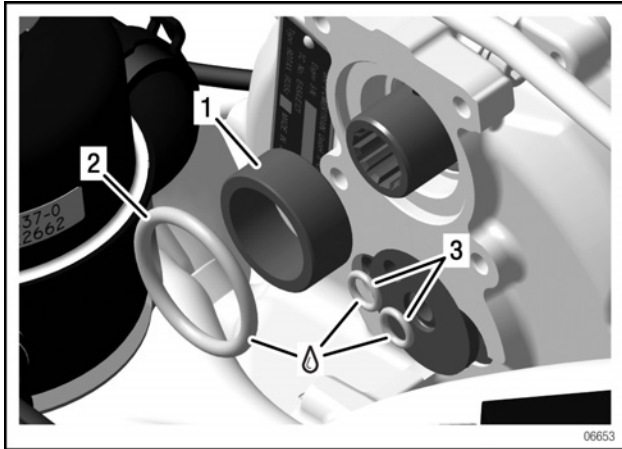


Figure 3.20: TYPICAL

- 1 Distance sleeve
- 2 O-ring 32x4
- 3 O-ring 7x2

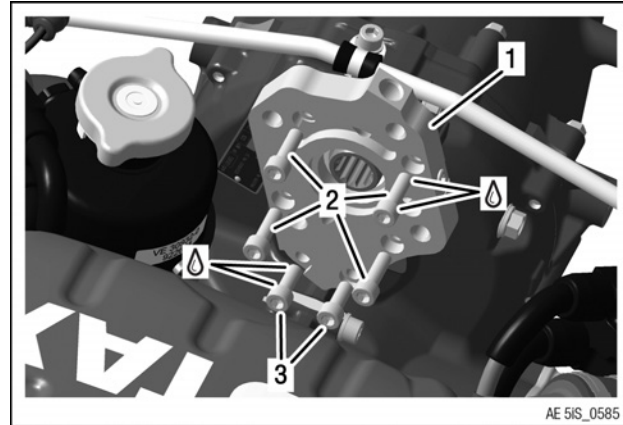


Figure 3.21

- 1 Governor flange
- 2 Allen screw M6x20
- 3 Allen screw M6x16

Step	Procedure
3	Place on the governor flange, secure it using LOCTITE 243 with 4 Allen screws M6x20 on the crankcase and with 2 Allen screws M6x16 on the oil inlet flange, and tighten the screws. Tightening torque 10 Nm (89 in. lb.).  <b>NOTE</b> <i>Put LOCTITE 243 onto the thread and the head of the Allen screws.</i>

**NOTE**

*LOCTITE 5910 can be used on the sealing surfaces of the governor flange.*

NOTICE	
<b>Avoid too much LOCTITE 243!</b> LOCTITE 243 may stick the small O-rings and occur a leakage.	

NOTICE	
<b>Longer screws may destroy the oil inlet flange and bearings.</b> Observe the length of the screws.	

Step	Procedure
4	Install the propeller gearbox. See latest Maintenance Manual Line (MML) of the respective engine type.
5	Install pressure oil line assy. with banjo bolts M10x1x23 and two new sealing rings A10x14 on the governor flange. Tightening torque 15 Nm (133 in.lb.)
6	Install pressure oil line and turbo pressure oil line with banjo bolt M10x1x34 and 3 new sealing rings A10x14 on oil pump housing. Tightening torque 15 Nm(133 in. lb.).
7	Fasten the pressure oil line with the cable clamp 8/M8 on gearbox housing using washer 8 and Hex./Torx-flange screw M8X16 secured with LOCTITE 243. Tightening torque 22 Nm (16 ft.lb.)

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

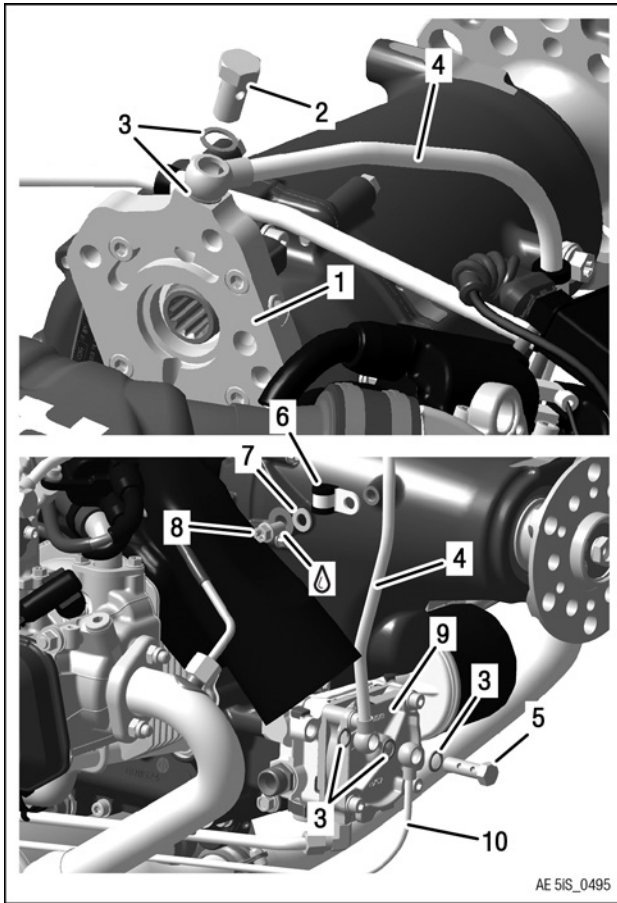


Figure 3.22

- |                       |                                    |
|-----------------------|------------------------------------|
| 1 Governor flange     | 2 Banjo bolt M10x1x23              |
| 3 Sealing ring A10x14 | 4 Governor pressure oil line assy. |
| 5 Banjo bolt M10x1x34 | 6 Cable clamp 8/M8                 |
| 7 Washer 8            | 8 Hex./Torx-flange screw M8x18     |
| 9 Oil pump housing    | 10 Turbo pressure oil line         |

**NOTE**

*The plug screws usually remain installed. If necessary, a manometer can be connected to check the governor pressure.*

Step	Procedure
8	Secure the plug screw M8x1 with LOC-TITE 243. Tightening torque 10 Nm (89 in. lb.).

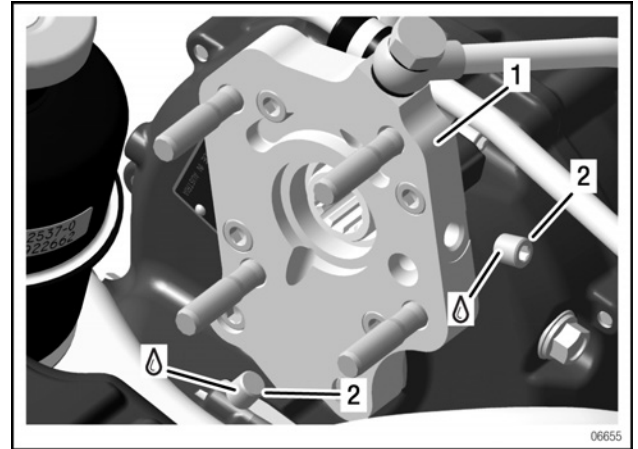


Figure 3.23: TYPICAL

- |                   |                   |
|-------------------|-------------------|
| 1 Governor flange | 2 Plug screw M8x1 |
|-------------------|-------------------|



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**GOVERNOR - INSTALLATION**

CONFIGURATION 3

**NOTE**

*The gear-tooth system of the governor must engage when installed.*



Install the governor according to the instructions in the aircraft manufacturer's manual.

**OIL INLET FLANGE ADAPTOR - INSTALLATION**

CONFIGURATION 2

Step	Procedure
1	Install new O-rings 7x2 in the oil inlet flange and oil inlet flange adaptor and hold them in position with a little bit of grease.
2	Align the oil inlet flange. Install the oil inlet flange adaptor with two Allen screws M6x16 and secure with LOCTITE 243 into the crankcase. Tightening torque 10 Nm (89 in.lb).

**NOTICE**

**Avoid too much LOCTITE 243!**  
LOCTITE 243 may stick the small O-rings and occur a leakage.

**NOTICE**

**Longer screws may destroy the oil inlet flange and bearings.**  
Observe the length of the screws.

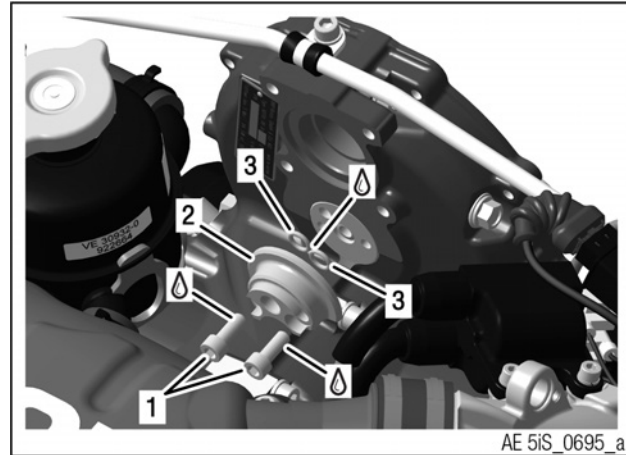



Figure 3.24: TYPICAL

- 1 Allen screws M6x16    2 Oil inlet flange adaptor  
3 O-rings 7x2

Step	Procedure
3	Install gearbox oil line with banjo bolts M10x1x19 and two new sealing rings A10x14 on oil inlet flange adaptor. Tightening torque 15 Nm (133 in.lb.)
4	Install gearbox oil line and turbo pressure oil line with banjo bolt M10x1x34 and 3 new sealing rings A10x14 on oil pump housing. Tightening torque 15 Nm (133 in.lb.).
5	Fasten the gearbox oil line with cable clamp 8/M8 on gearbox housing using washer 8 and Hex./Torx-flange screw M8x16 secured with LOCTITE 243. Tightening torque 15 Nm (133 in.lb.)



# BRP-Rotax MAINTENANCE MANUAL HEAVY

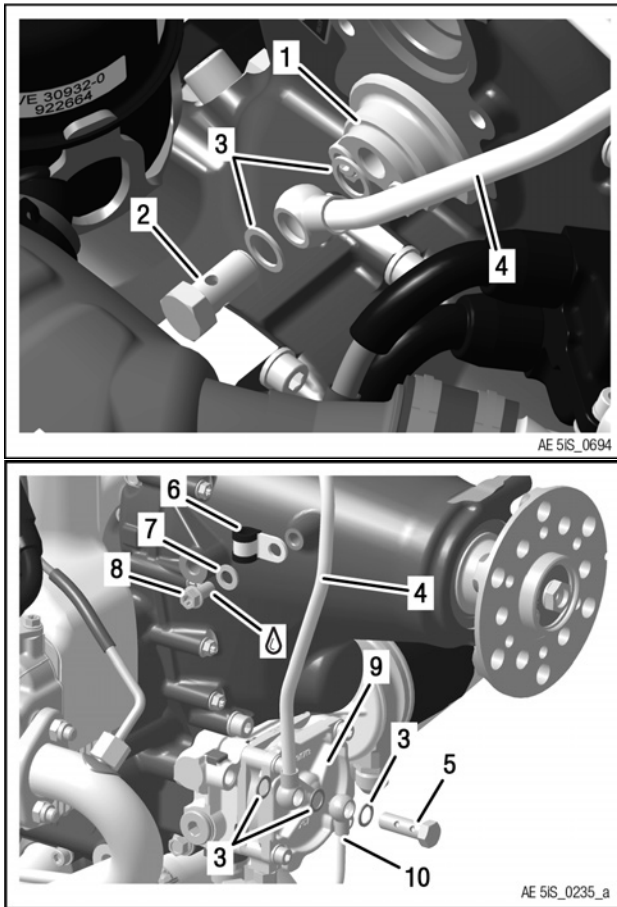

Purge the oil system.  
See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

Figure 3.25

- |                            |                                |
|----------------------------|--------------------------------|
| 1 Oil inlet flange adaptor | 2 Banjo bolt M10x1x19          |
| 3 Sealing rings A10x14     | 4 Gearbox oil line             |
| 5 Banjo bolt M10x1x34      | 6 Cable clamp 8/M8             |
| 7 Washer 8                 | 8 Hex./Torx-flange screw M8x16 |
| 9 Oil pump housing         | 10 Turbo pressure oil line     |

## FINISHING WORK



Fill with operating fluids or check filling levels.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


**Chapter: 71-00-00**  
**POWER PLANT**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>4</b>
<b>Service products</b> .....	<b>5</b>
<b>Installation checklist</b> .....	<b>6</b>
<b>General Note</b> .....	<b>9</b>
Delivery of the engine .....	9
Engine preservation.....	9
Return to service .....	11
Treating rust and surface damage.....	11
<b>System description</b> .....	<b>12</b>
Description of design .....	12
Technical data .....	12
Operating limits .....	12
Operating fluids/capacities .....	12
Weights .....	12
Serial and part no. ....	12
Serial number .....	12
Part No. ....	12
Engine/components, general.....	13
Engine components, engine views, cylinder designation and definition of main axes .....	14
<b>Maintenance</b> .....	<b>19</b>
<b>Power plant</b> .....	<b>20</b>
Safety instruction.....	20
Power plant — removal.....	20
Removal of the power plant from the aircraft.....	21
Power plant – installation .....	21
<b>Trestle adapter assy. – Installation and removal</b> .....	<b>23</b>
Trestle adapter assy. – removal .....	24
Finishing work.....	25
<b>Engine suspension frame</b> .....	<b>26</b>
Engine suspension frame — removal.....	26
<b>Inspection</b> .....	<b>28</b>
Engine suspension frame – inspection .....	28
<b>Installation</b> .....	<b>29</b>
Engine suspension frame – installation .....	29
Finishing work.....	30

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE A

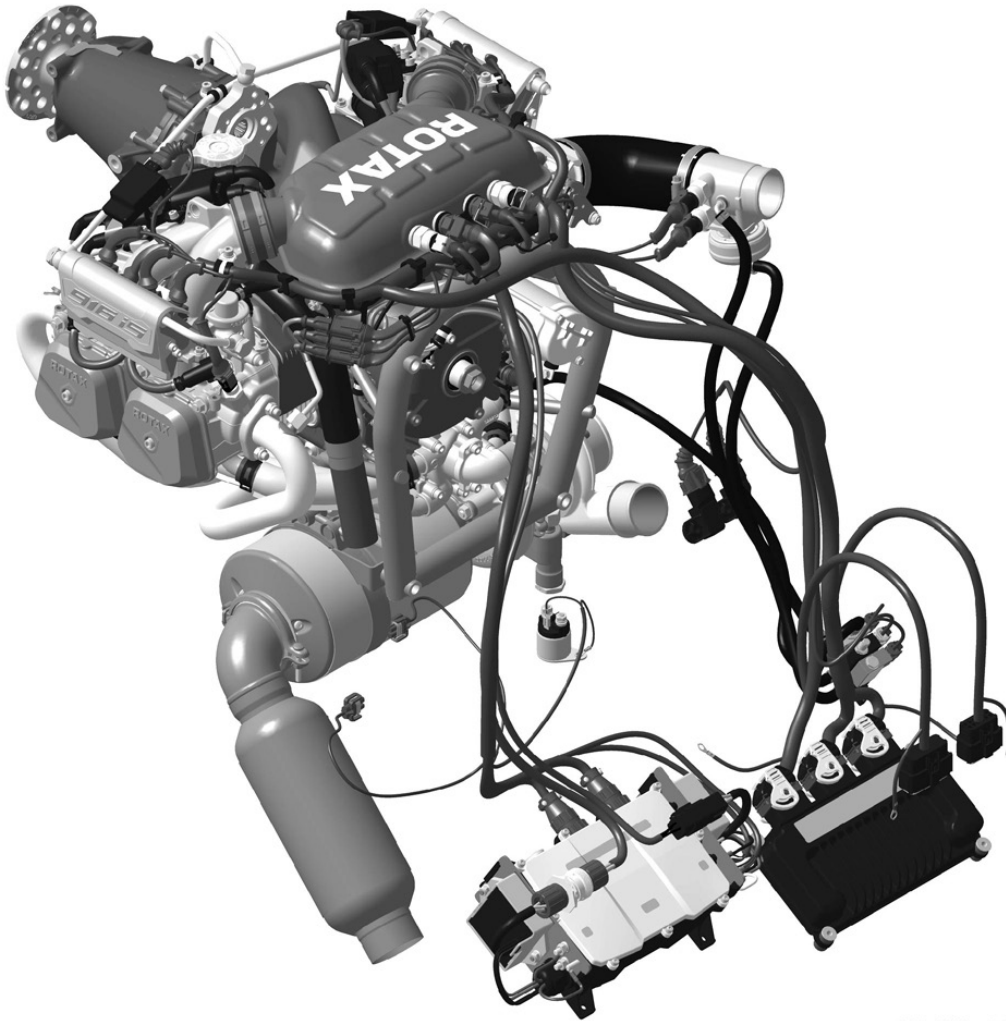


AE 6iS\_0200

Figure 4.1: Power plant

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE C24

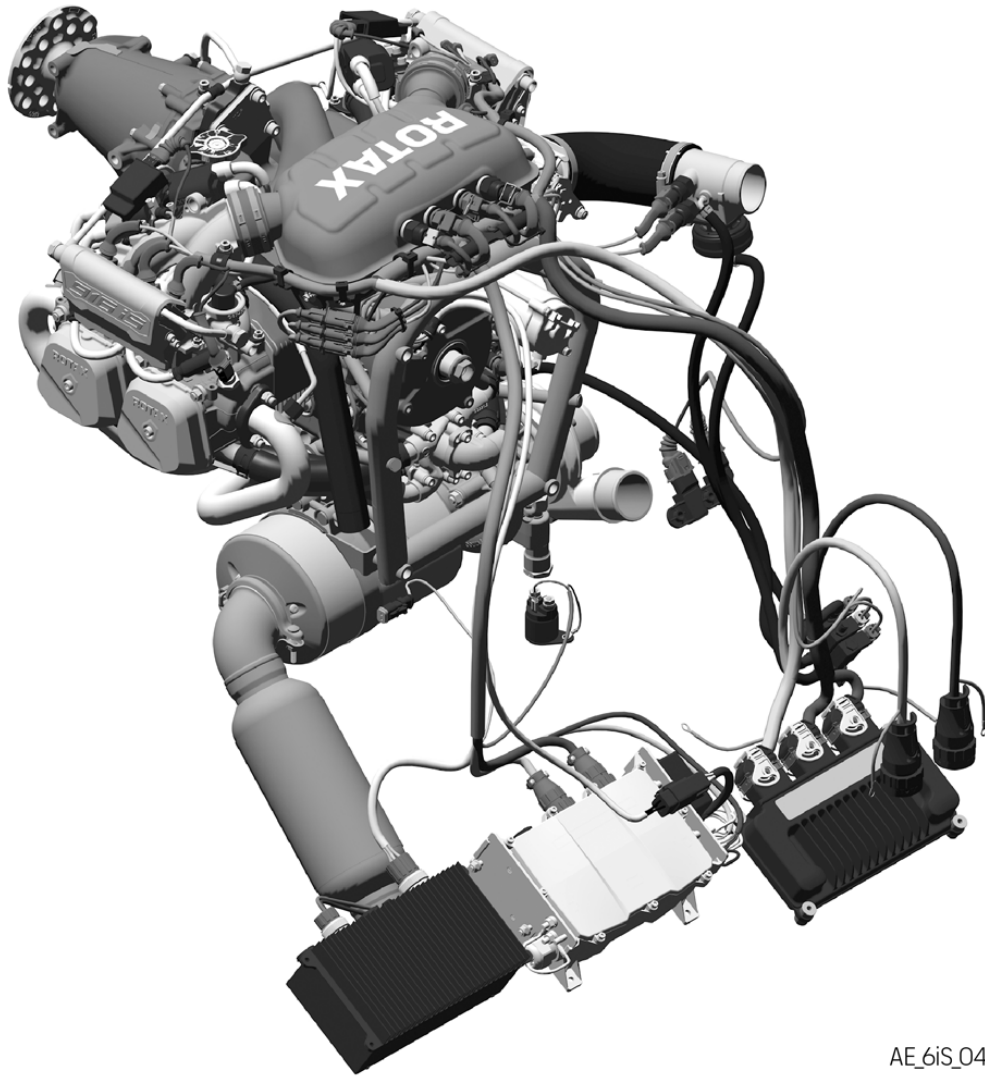

AE\_6iS\_0445

Figure 4.2: Power plant

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SPECIAL TOOLS**

Description	Part number
Engine lifting kit assy.	876040
Trestle support	877930
Trestle adapter assy.	876050
Socket driver hex. 8 ball head	876240

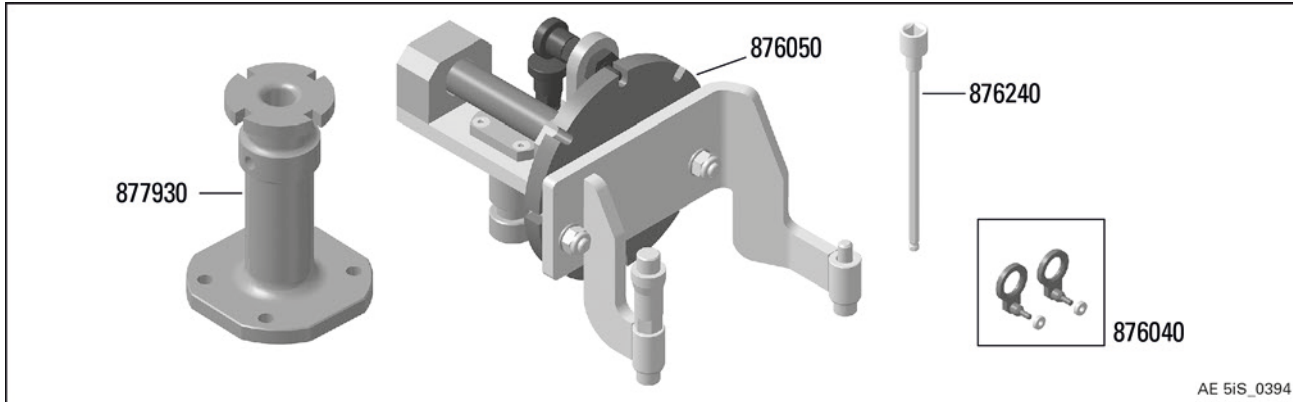


Figure 4.3: Special tools

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE 243	897651
LOCTITE 648	899788

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION CHECKLIST**

The following installation checklist must be copied and filed in during power plant/engine installation.

<b>Installation checklist for power plant assy.</b>	
<b>Aircraft</b>	
Type	
Serial number	
Registration number	
Manufacturer	
<b>Engine</b>	
Type	
Serial number	
FUSE BOX serial number	
ECU part no. (S/N)	
Manufacturer	BRP-Rotax GmbH&Co KG, 4623 Gunskirchen, Austria
Specifications/version	
<b>Miscellaneous data</b>	
Installation date	
Mechanic (surname and forename)	

Installation-related point	OK	Remark
Control unit (ECU) checked for damage and corrosion. Insulated construction checked.		
Fuse unit (FUSE BOX) checked for damage and corrosion. Fuses checked.		
Fuse unit (FUSE BOX) connections checked for secure connection. See also Chapter <a href="#">76-10-00 Fuse box – installation</a> .		
Protective coverings removed.		
Fuel filters/prefilters on the aircraft frame side cleaned.		



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Installation-related point	OK	Remark
All fuel tanks and fuel lines cleaned. See "Documentation of aircraft manufacturer". See relevant Maintenance Manual Line (MML) Chapter 12-20-00 Planned maintenance.		
Checking the engine for contamination and damage. See relevant Maintenance Manual Line (MML) Chapter 05-00-00 Maintenance.		
Installation of the engine and its components. See also Chapter <a href="#">71-00-00 Power plant</a> .		
Control unit (ECU) connections checked for secure connection. Connector lock in position! See also Chapter 76-10-00 section <a href="#">ECU - installation</a> .		
Routing of wiring harness checked. See <a href="#">Chapter 76-50-00 Wiring harness</a> .		
Grounding cable checked according to aircraft manufacturer's specifications. Allocation checked. See documentation of aircraft manufacturer.		
Fuel pump connection checked. See documentation of aircraft manufacturer. See also Chapter 73-00-00 Fuel system.		
Fuel system checked for leaks. See relevant Maintenance Manual Line (MML) Chapter 12-20-00		
Fuel filter checked for blockages. See relevant Maintenance Manual Line (MML) Chapter 12-20-00.		
Propeller installed according to the aircraft manufacturer's and propeller manufacturer's specifications. See "Documentation of aircraft manufacturer".		
Lubrication system filled and purged. To do this, see relevant Maintenance Manual Line (MML) Chapter 12-10-00 section Adding operating fluids + Chapter 12-20-00 section Purging of oil system.		

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Installation-related point	OK	Remark
Cooling system flushed and filled. To do this see relevant Maintenance Manual Line (MML) Chapter 12-10-00 section Adding operating fluids + Chapter 12-20-00 section Flushing the engine cooling system.		
Engine test run/functional test. See relevant Maintenance Manual Line (MML) Chapter 12-20-00.		

<p><b>General notes/remarks:</b>          (Please fill in using block capitals!)</p>
<p><b>Location:</b> _____ <b>Date:</b> _____  <b>Signature:</b> _____ <b>Print name:</b> _____</p>

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## GENERAL NOTE

### DELIVERY OF THE ENGINE

#### Delivery and handling of the engine and assemblies

- When the engine is delivered, check that the original ROTAX® packaging is not damaged
- If the packaging is damaged, contact the authorised sales and service partner for ROTAX® aircraft engines
- If the packaging is not damaged, the engine can be unpacked according to the instructions below

#### Unpacking the engine

To unpack the new, repaired or overhauled engine, proceed as follows:

Step	Procedure
1	Remove the wooden lid.
2	Remove the protective packaging.
3	Remove the protective foil packaging of the engine.

#### NOTICE

**Use the engine lifting kit part no. 876040 to lift the engine out.**

#### Checking the state of delivery

#### NOTICE

**Danger of consequent damage to the engine and aircraft due to corrosion and damage.**  
In the event of any kind of negative diagnosis of the engine after the packaging has been removed, immediately contact an authorised sales or service partner for ROTAX® aircraft engines. A corroded or damaged engine must never be installed in an aircraft!

After the engine has been unpacked, carry out the following steps to check the state of delivery:

Step	Procedure
1	Check that the serial number and engine type description on the type plate match the data on the delivery note.
2	Check the engine for damage or corrosion. If everything is found "OK", the engine can be accepted.

#### Removal of protective coverings and preservation

Step	Procedure
1	Remove protective foil, waxed paper or something similar.
2	The protective coverings attached for transport or preservation must be removed.

## ENGINE PRESERVATION

**If limit is exceeded or preservation was not performed annually - this section is valid for:**  
Storage and preservation requirements for a new engine or an engine which has been in operation. Following steps need to be checked before return to operation:

- Removal of the gearbox and one cylinder.
- Visual inspection for possible corrosion on gear set, propeller shaft, clutch, crankshaft, camshaft, con rod, piston rings and valves.

#### NOTE

*If there is any corrosion of the components, the engine must be overhauled according to the current Overhaul Manual (OHM) for the respective engine type.*

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTICE

The preservation is in the responsibility of the engine owner or any other service contracted partner of him or her. The relevant documentation to approve that the preservation was done correctly also is in the responsibility of the previous named parties. BRP-Rotax can not approve, if a preservation was done correctly or not. If no documentation of preservation is available, BRP-Rotax recommends to perform the checks according to part "Following steps need to be checked before return to operation".

## ⚠ WARNING

**Non-compliance can result in serious injuries or death!**  
The engine must not be put into operation.

## NOTE

The maximum possible storage period of the engine is limited to 24 months.

### Finishing work:

- Install cylinder and cylinder head. See [Chapter 72-30-10 section Cylinder - installation](#) and [Chapter 72-30-00 section Cylinder head - installation](#).



Install propeller gearbox assy.  
See current Maintenance Manual Line (MML) for the respective engine type.

- Install the gearbox oil line assy. (configuration 2) or pressure oil line (configuration 3). See [Chapter 61-20-00 Governor](#).



Fill with operating fluids or check filling levels.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system.  
See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Flush the engine cooling system.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system.



Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

### Storage and preservation of an engine which has been in operation

Thanks to the special cylinder wall coating, the ROTAX® aircraft engine does not generally need any special anti-corrosion measures.

## NOTICE

**Storage is possible up to 12 months if the following steps are observed.**

## NOTE

*In the event of longer out of service periods repeat the whole preservation procedure annually.*



Carry out oil change.  
See current Maintenance Manual Line (MML) for the respective engine type.

- Seal all openings, exhaust pipe and air filters on the cold engine to prevent contamination and humidity.
- Spray steel parts on the outside with preservation oil.
- If the engine is out of service for longer periods, the whole preservation process must be repeated annually.

# BRP-Rotax MAINTENANCE MANUAL HEAVY



See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00, section “Planned maintenance”.

## RETURN TO SERVICE



See current Maintenance Manual Line (MML) for the respective engine type.

### **⚠ WARNING**

**Non-compliance can result in serious injuries or death!**

Work on the engine must be carried out by authorised personnel and certified.

Step	Procedure
1	Remove all plugs.
2	Clean the spark plugs with solvent and a plastic brush.
3	If preservation has been carried out less than a year ago, it is not necessary to change the oil again.
4	If the engine has been out of service for more than a year, the 100-hour inspection must be carried out.

## TREATING RUST AND SURFACE DAMAGE

### CORROSION

Environmental corrosion (on the external surfaces) is a naturally occurring process which can inevitably affect the continued airworthiness of the engine, engine mounted components and accessories.

Susceptibility to corrosion is influenced by a number of factors, including but not limited to, geographical location, season and usage. All general preventive (technical) measures, identification, control and treatment of corrosive attack on aircraft structures and engine materials has to be carried out in accordance with Advisory Circular AC 43-4B from FAA and also in accordance with the information of the aircraft manufacturers Instruction for Continued Airworthiness. Furthermore the preservation procedures for

stored and inactive aircraft (engines) provides an effective means for combating and minimizing the corrosion condition and should be adhered to.

Advisory Circular AC 43-4B This advisory circular (AC) is a summary of the current available data regarding identification and treatment of corrosive attack on aircraft structures and engine materials. Corrosion inspection frequency, corrosion identification, and especially corrosion treatment continues to be the responsibility of the operator. These inspections should be accomplished per this AC, the manufacturer’s recommendations, or the operator’s own maintenance program. The procedures in this AC are an acceptable means, but not the only acceptable means, of corrosion treatment. The information in this AC is applicable to aircraft for which the manufacturer has not published corrosion control information.

During longer out-of-service periods, flash rust can form on various metal parts. In the event of considerable corrosion or severely rusted screws, nuts, washers, bearings, bushings etc. replacement is absolutely necessary.

- Propeller shaft — To prevent surface rust, the flange should be lightly greased, see [Chapter 72-10-00 section Propeller shaft - inspection](#).
- For the electric system, see [Chapter 74-00-00](#).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SYSTEM DESCRIPTION

### DESCRIPTION OF DESIGN



A ROTAX® 916 i A Series engine consists basically of several main components and add-on assemblies, which are described in more detail in the Operators Manual (OM), Chapter 1.

### TECHNICAL DATA

#### NOTICE

**Observe detailed technical data relevant for operation.**  
See the latest Operators Manual.

### OPERATING LIMITS



See current Operators Manual (OM) of the respective engine type, section “Operating instructions”.

### OPERATING FLUIDS/CAPACITIES



See current Operators Manual (OM) of the respective engine type, section “Operating media”.

### WEIGHTS



See current Operators Manual (OM) of the respective engine type, section “Technical data”.

### SERIAL AND PART NO.

The parts are labelled with serial and part numbers. The following description explains the main two versions of serial and part numbers.

### NOTE

*If additional parts are purchased, part of the serial and part numbering of the aeronautical equipment manufacturer is included.*

### SERIAL NUMBER

The number system for the serial number consists of a two-digit number block and a four-digit number block with a point separating them.

The first number block of the serial number indicates the year of manufacture, the second is a consecutive number.

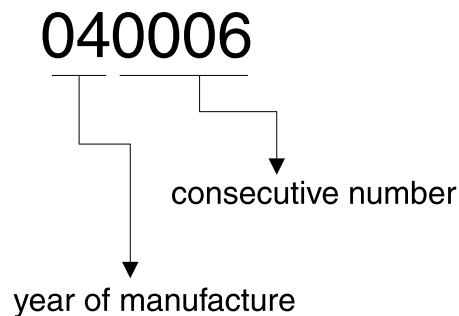


Figure 4.4: e.g. serial number

### PART NO.

The part number consists of a simple six-digit number block.

This number block is a consecutive number.

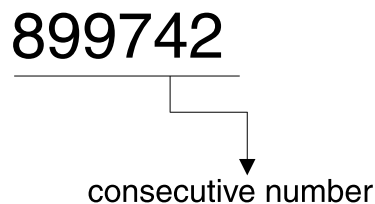


Figure 4.5: e.g. part no.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**ENGINE/COMPONENTS, GENERAL**

Design	4-cylinder turbocharged engine
Bore	84 mm
Stroke	61.0 mm
Displacement	1352 cm <sup>3</sup>
Cylinders	Light alloy cylinder with Nicasil plating
Pistons	Light alloy piston with 3 piston rings
Cylinder head	4 single cylinder heads
Compression	8.2:1
Intake valve	38 mm, valve seat plated
Exhaust valve	32 mm NIMONIC, valve seat stellite-plated, sodium filled
Valve clearance	Automatic valve clearance compensation by means of hydraulic valve tappet
Valve drive	OHV, hydraulic valve tappet, push-rods and rocker arms
Camshaft	Steel, heat- and surface-treated
Crankshaft	Supported in 5 plain bearings, case hardened
Cooling system	Liquid-cooled cylinder heads, ram air cooled cylinders
Lubrication	1) Main oil pump circuit: Dry sump forced lubrication system, trochoid pump driven by the camshaft, oil return by the blow-by gases 2) Suction pump circuit: Extra trochoid pump driven by the camshaft returns oil from the lower oil sump of the turbocharger to the oil tank
Oil pressure	See latest Operators Manual (OM) of the respective engine type.
Oil delivery rate	1) Main oil pump: approx. 9 l/min. at 5500 rpm 2) Suction pump circuit: approx 1.3 l/min. at 5500 rpm
Firing order	1-4-2-3
Spark plugs	12 mm. See Maintenance Manual Line (MML), Chapter 12-20-00.
Integrated generator	2 permanent magnet 3-phase generators. 200 and 400 W.
Rectifier regulators	12 V 20 A DC
Fuel pumps	2 electric fuel pumps
Starter	Electric starter, 12 V or 24 V
Propeller gearbox	Integrated gearbox with mechanical vibration damping and overload clutch
Gear transmission ratio	2.54:1
Direction of rotation	Counterclockwise, seen from the front in the direction of the propeller flange

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Turbocharger	Exhaust gas turbine with wastegate, pop off valve
AC-DC converter (optional Type C24)	Provide electrical power to the aircraft and the EMS at desired voltage levels. The advantage of this system is in the high efficiency, the possibility to have outputs at different voltage levels.

**ENGINE COMPONENTS, ENGINE VIEWS, CYLINDER DESIGNATION AND DEFINITION OF MAIN AXES**

**NOTE**

*Allow  $\pm 1$  mm on all stated dimensions as manufacturing tolerance.*

<b>PTO</b>	Power take off side
<b>MS</b>	Magneto side
<b>A</b>	Attachment points (for engine transport)
<b>Z<math>\oplus</math></b>	Center of gravity
<b>P</b>	Zero reference point (starting point for all dimensions)
<b>x, y, z</b>	Coordinate system axes
<b>Cyl. 1</b>	Cylinder 1
<b>Cyl. 2</b>	Cylinder 2
<b>Cyl. 3</b>	Cylinder 3
<b>Cyl. 4</b>	Cylinder 4



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**Components, engine views**


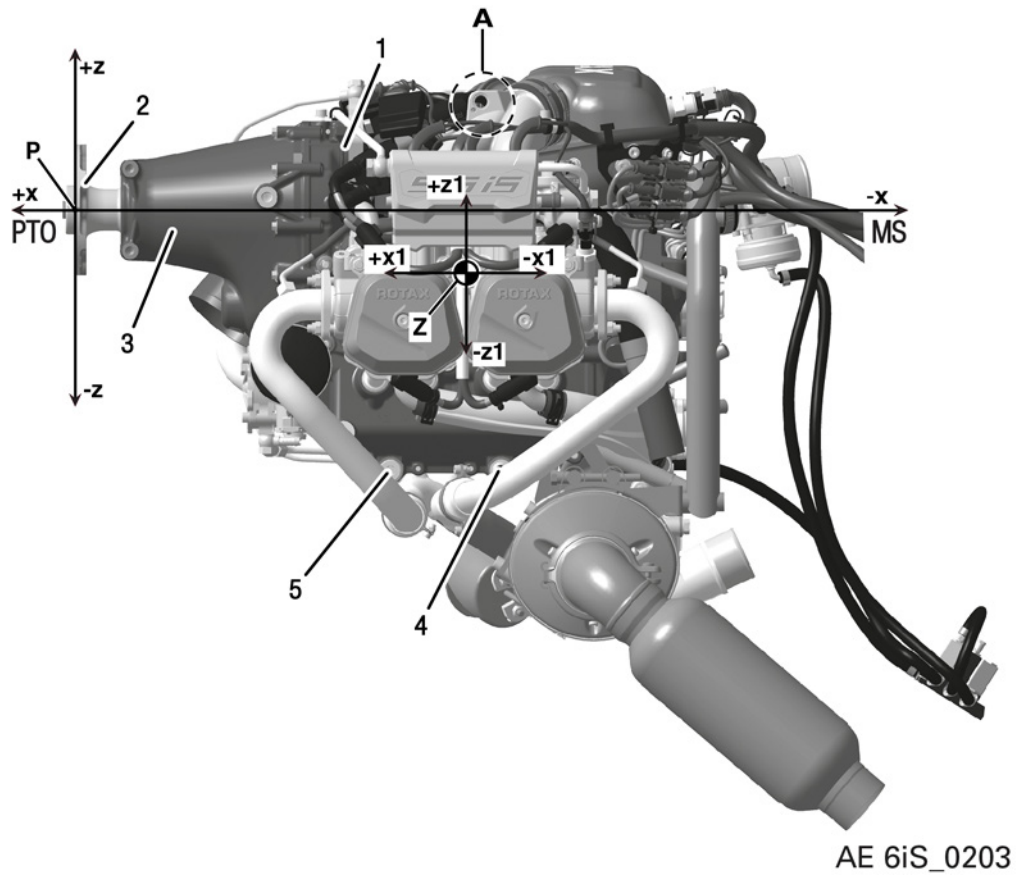


Figure 4.6: Side view

- |   |                            |   |                            |
|---|----------------------------|---|----------------------------|
| 1 | Engine serial number       | 2 | Propeller flange           |
| 3 | Propeller gearbox          | 4 | Connection for return line |
| 5 | Connection for return line |   |                            |

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

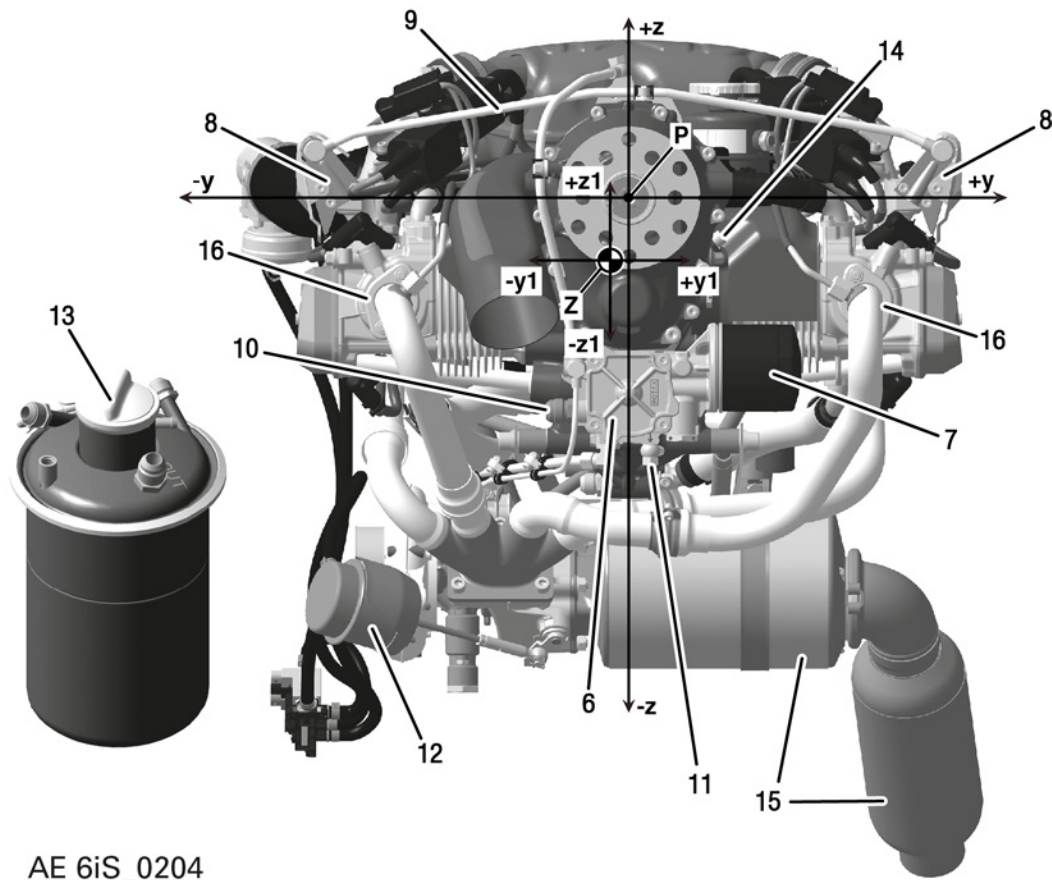

AE 6iS\_0204

Figure 4.7: Front view

- |    |                                   |    |  |
|----|-----------------------------------|----|--|
| 6  | Oil pump housing                  | 7  | Oil filter                                   |
| 8  | Fuel rail left/right              | 9  | Fuel line assy.                              |
| 10 | Connection for oil feed line      | 11 | Connection for turbo oil return line to tank |
| 12 | Wastegate actuator assy.          | 13 | Oil tank (metric or UNF)                     |
| 14 | Crankshaft locking screw position | 15 | Muffler assy.                                |
| 16 | Exhaust flange                    |    |  |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

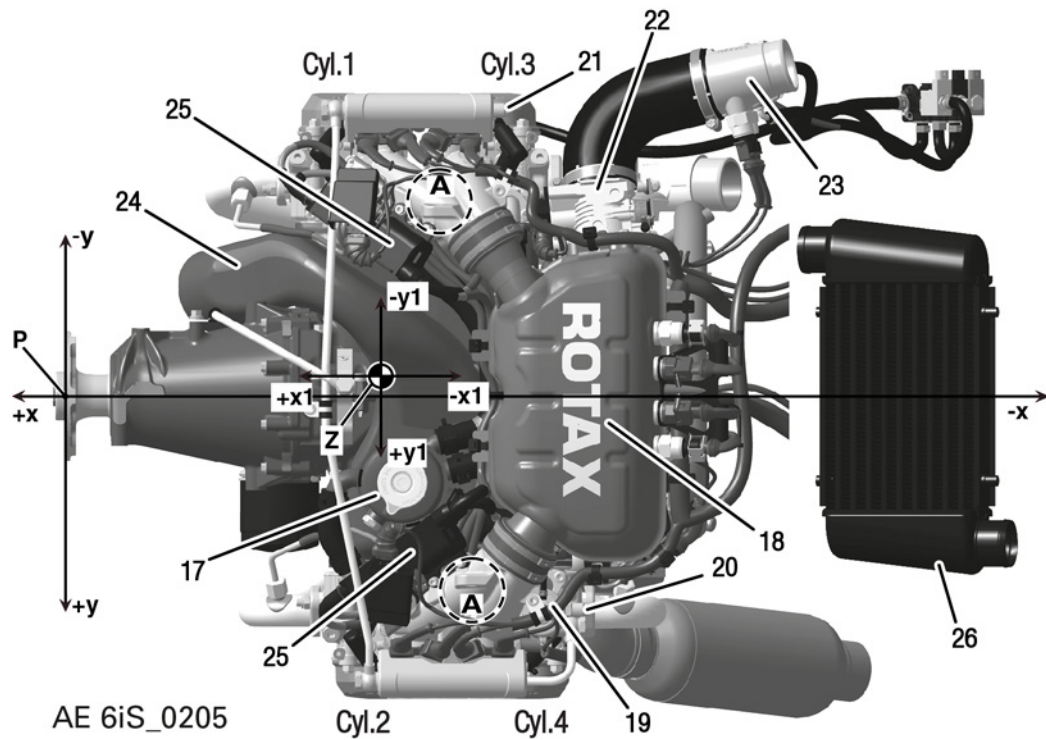


Figure 4.8: Top view

- |    |                               |    |                                 |
|----|-------------------------------|----|---------------------------------|
| 17 | Expansion tank assy.          | 18 | Airbox                          |
| 19 | Fuel pressure regulator       | 20 | Connection for fuel return line |
| 21 | Connection for fuel feed line | 22 | Throttle body                   |
| 23 | Pop off valve                 | 24 | Cooling air baffle              |
| 25 | Dual ignition coils           | 26 | Inter cooler                    |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

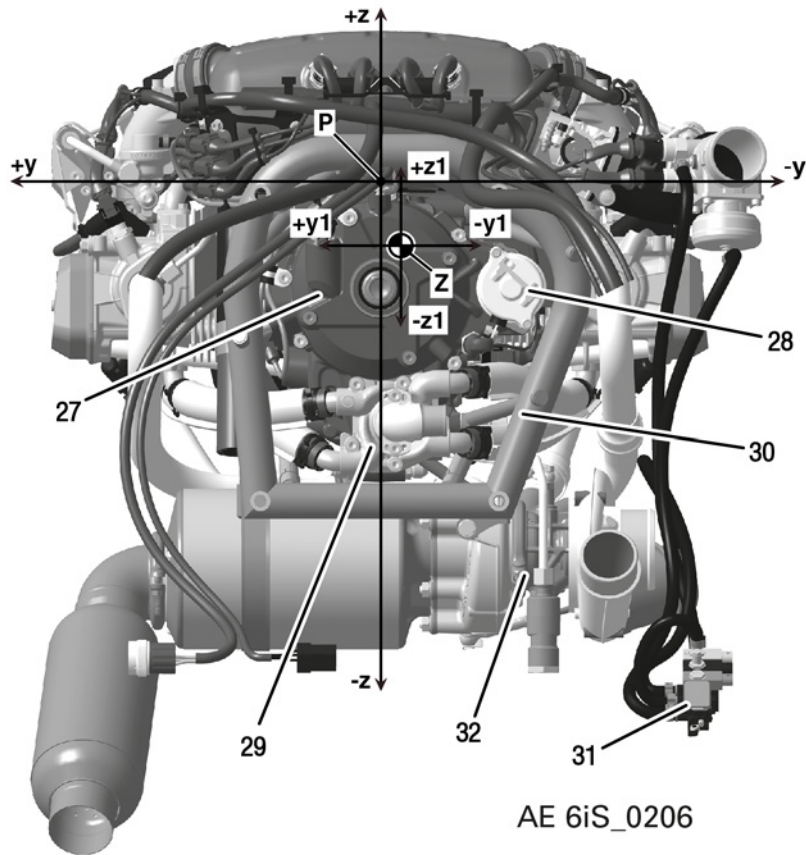


Figure 4.9: Rear view

27 Ignition housing

29 Water pump housing

31 Solenoid valve (PCV)

28 Electric starter

30 Engine suspension frame

32 Turbocharger assy.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### POWER PLANT

#### SAFETY INSTRUCTION

##### ⚠ WARNING

**Danger of severe burns and scalds! Always allow the engine to cool down to ambient temperature before starting any work.**

##### ⚠ WARNING

**Danger of serious injury! During work on the lubrication system there is a risk of injury due to pressure!**

##### ENVIRONMENTAL NOTE

**Please observe the disposal regulations applicable in your area.**

##### ENVIRONMENTAL NOTE

**Observe the safety instructions of the manufacturer of hazardous substances (coolant, oil or fuel) and the applicable regional waste disposal regulations.**

##### ENVIRONMENTAL NOTE

**Work with the utmost care to ensure that no water pollutants can penetrate into the soil, water or the sewerage system.**

#### NOTE

*Ensure that the lubrication system is no longer pressurized!*

### POWER PLANT — REMOVAL

#### Preparation Engine

- Switch the ignition key OFF



Drain the oil. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.



Drain the coolant. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.



Drain the fuel. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.



Remove the feed line of fuel rail 1/3 and return line of fuel rail 2/4 and fuel pressure regulator. Follow the instructions of the aircraft manufacturer..



Remove the oil hoses from oil feed line, return line and turbo return line. Follow the instructions of the aircraft manufacturer..



Remove the coolant hoses (inlet, outlet and overflow bottle). Follow the instructions of the aircraft manufacturer..



For disconnection of the ground cables follow the instructions of the aircraft manufacturer.



For disconnection of the fuel pump follow the instructions of the aircraft manufacturer.



Disconnect the connector HIC\_A / HIC\_B. Follow the instructions of the aircraft manufacturer.



For disconnection of the starter relay, follow the instructions of the aircraft manufacturer.

- Disconnect the positive pole on the electric starter. See [Chapter 80-00-00 Electric starter](#).
- Disconnect Ambient Air Pressure and Temperature Sensor (APTS), fusebox and ECU see [Chapter 76-50-00 Wiring harness](#).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

- Disconnect AC–DC Converter. Only 916 i C24.  
See [Chapter 76-50-00 Wiring harness](#).



Remove Pressure Control Valve (PCV).  
Follow the instructions of the aircraft  
manufacturer.

- Install the lifting kit part no. 876040.

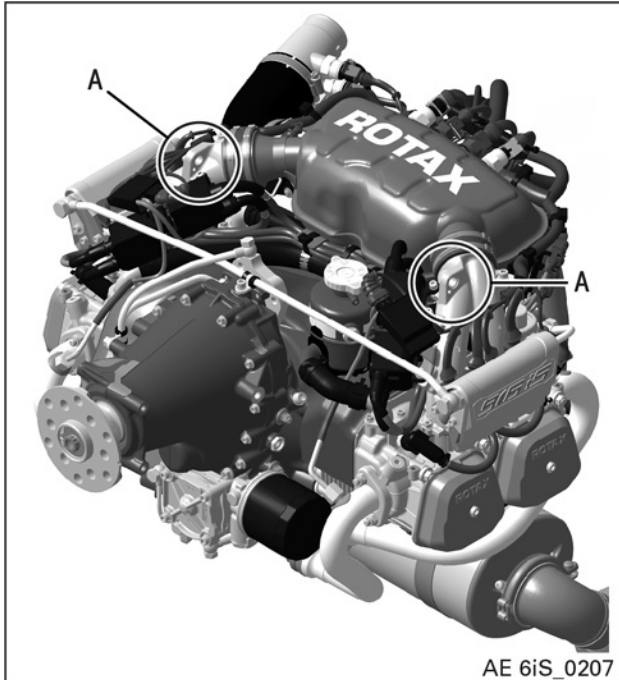


Figure 4.10

A Attachment points (for  
engine transport)

## REMOVAL OF THE POWER PLANT FROM THE AIRCRAFT

### ⚠ WARNING

**Danger of injury due to falling parts!**When the engine is removed there is a risk of injury due to the engine or its assemblies falling!  
Use ROTAX lift set, no other lifting points allowed.  
Note center of gravity! Do not walk under the lifted engine!Wear protective footwear!

### NOTICE

**Danger of damage to the engine and aircraft!**  
Before the engine is removed, ensure that all detachable connections between the engine and the aircraft, i.e. hoses, lines, cables, cable ties and clamps have been disconnected and moved out of position so that they do not obstruct removal!

### NOTICE

**For removal and installation of the power plant proceed according to the aircraft manufacturer's instructions.**

## POWER PLANT – INSTALLATION



Install Pressure Control Valve (PCV) according to the aircraft manufacturer's instructions.



Install the feed line of fuel rail 1/3 and return line of fuel rail 2/4 and fuel pressure regulator. Follow the instructions of the aircraft manufacturer.



Install the oil hoses for oil feed line, return line and turbo return line. Follow the instructions of the aircraft manufacturer.



Install the coolant hoses (inlet, outlet and overflow bottle). Follow the instructions of the aircraft manufacturer.



For connection of the ground cables follow the instructions of the aircraft manufacturer.



For connection of the fuel pump follow the instructions of the aircraft manufacturer.



Connect the connector HIC\_A / HIC\_B. Follow the instructions of the aircraft manufacturer.



## BRP-Rotax MAINTENANCE MANUAL HEAVY



For connection of the starter relay, follow the instructions of the aircraft manufacturer.

- Connect the positive pole on the electric starter. See [Chapter 80-00-00 Electric starter](#)
- Connect Ambient Air Pressure and Temperature Sensor (AAPT), fusebox and ECU see [Chapter 76-50-00 Wiring harness](#).
- Remove the lifting kit.
- Connect AC-DC Converter. Only 916 i C24, see [Chapter 76-50-00 Wiring harness](#).



Fill with operating fluids or check filling levels. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system. See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Flush the engine cooling system. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system.



Carry out an engine test, see current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.



## **TRESTLE ADAPTER ASSY. – INSTALLATION AND REMOVAL**

**⚠ WARNING**

**Danger of injury due to falling parts! When the engine is removed there is a risk of injury due to the engine or its assemblies falling!**  
 Use ROTAX lift set, no other lifting points allowed.  
 Note center of gravity! Do not walk under the lifted engine!  
 Wear protective footwear!

**Preparation**

- Remove turbocharger assy. See [Chapter 78-20-00 Turbocharger assy. – removal.](#)

**NOTE**

*The assemblies and lines are only to be removed if necessary.*

**NOTICE**

**Make sure that no foreign bodies get into connected lines and connections.**

Step	Procedure
1	Remove plug screw or adapter (metric or UNF) with sealing ring (cylinder 1/3).
2	Install bolt of tool part no. 876050 into the crankcase tightening torque 35 Nm (26 ft. lb.).


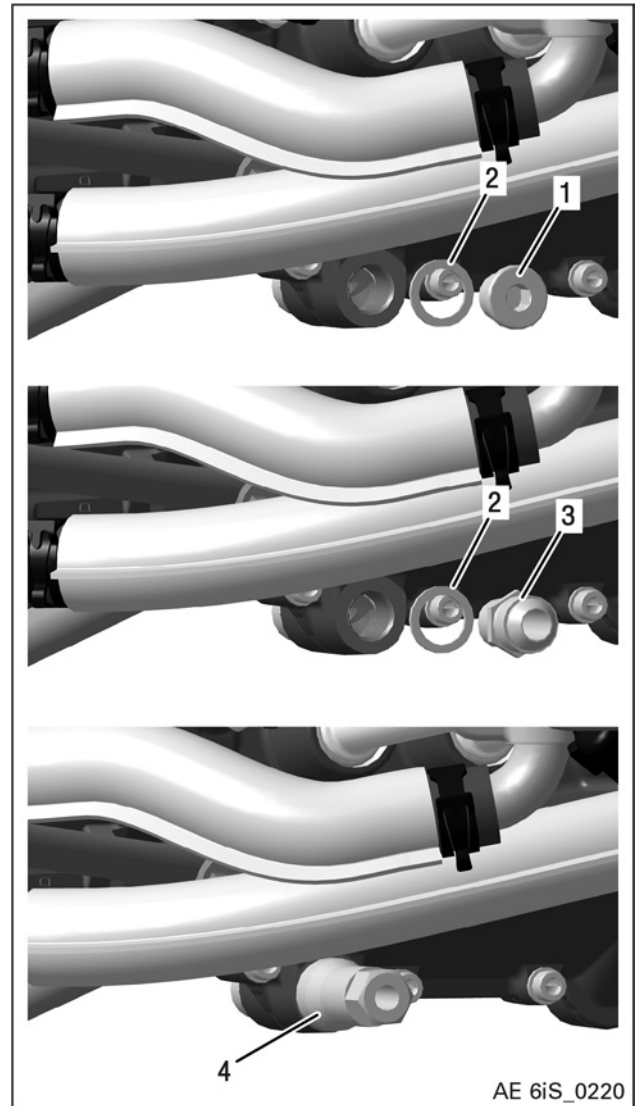


Figure 4.11: TYPICAL

- |              |                |
|--------------|----------------|
| 1 Plug screw | 2 Sealing ring |
| 3 Adapter    | 4 Bolt         |

Step	Procedure
3	Install trestle adapter assy. part no. 876050 onto the crankcase with two Allen screws M10x50 tightening torque 35 Nm (26 ft. lb.).
4	Install engine including trestle adapter assy. part no. 876050 into the trestle support part no. 877930.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

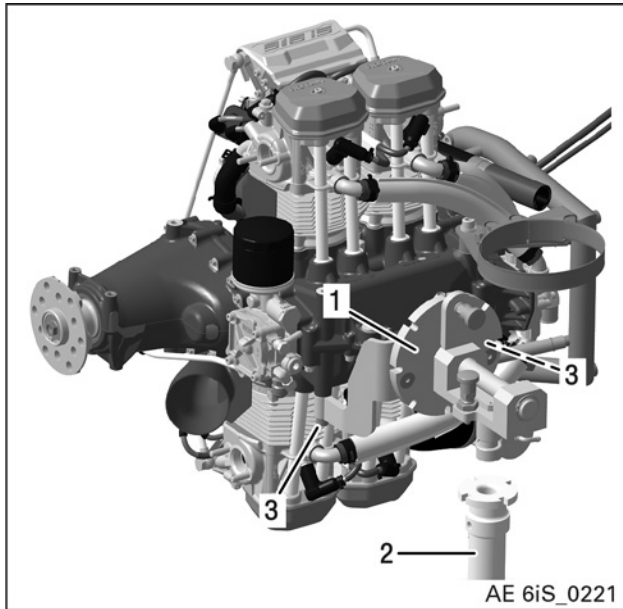

**NOTICE**

**Make sure that no foreign bodies get into connected lines and connections.**

Step	Procedure
4	Install plug screw M16x1.5 with a new sealing ring 16x22 and LOCTITE 243 or adapter (metric or UNF) with a new sealing ring 16x22 and LOCTITE 648. Tightening torque 35 Nm (26 ft. lb.) .

Figure 4.12

- 1 *Trestle adapter assy. part no. 876050*
- 2 *Trestle support part no. 877930*
- 3 *Allen screws M10x50*

**TRESTLE ADAPTER ASSY. – REMOVAL**

Step	Procedure
1	Remove engine including trestle adapter assy. part no. 876050 from the trestle support part no. 877930.
2	Loosen 2 Allen screws M10x50 and remove with trestle adapter assy. part no. 876050 from the engine.
3	Remove bolt of tool part no. 876050 from the crankcase.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

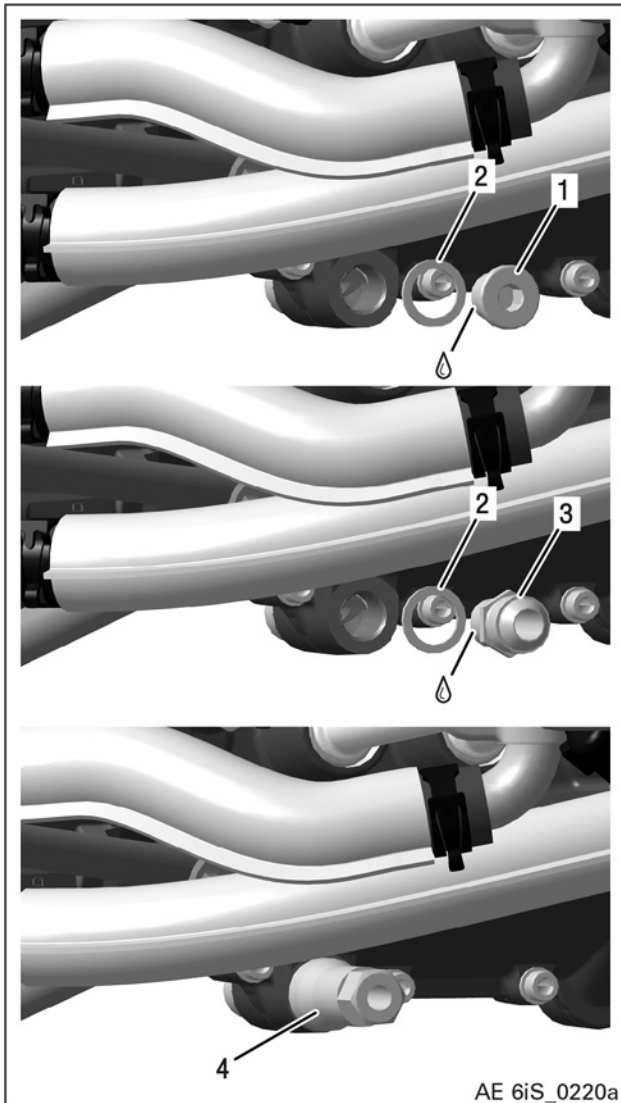







Figure 4.13: TYPICAL

- |                           |                      |
|---------------------------|----------------------|
| 1 Plug screw M16x1.5      | 2 Sealing ring 16x22 |
| 3 Adapter (metric or UNF) | 4 Bolt               |

## FINISHING WORK

- Install turbocharger assy. See Chapter 78-20-00 [section Turbocharger assy. – installation](#).
- Install the power plant into the aircraft according to the aircraft manufacturer's instructions and see also section [Power plant - Installation](#).

-  Install surrounding components according to the aircraft manufacturer's instructions.
-  Fill with operating fluids or check filling levels.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.
-  Flush the engine cooling system.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system.
-  Purge the oil system.  
See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.
-  Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

## **ENGINE SUSPENSION FRAME**

### **ENGINE SUSPENSION FRAME — REMOVAL**

**⚠ WARNING**

**Danger of severe burns and scalds!**  
Always allow the engine to cool down to ambient temperature before starting any work.



Drain the coolant.  
See current Maintenance Manual Line (MML) for the respective engine type.



Remove the coolant hoses (feed and return) according to the aircraft manufacturer's instructions.

#### **Preparation**


- Remove the water pump housing and coolant hoses. See [Chapter 75-00-00](#) Coolant system.
- Remove muffler and turbocharger if necessary. See [Chapter 78-20-00](#) section [Turbocharger assy. removal](#).

Step	Procedure
1	Remove the Allen screws (1x M10x110, 2x M10x50 and 1x M10x35) including lock washers, washers and spacers.
2	Remove the engine suspension frame including the thrust washers.

**NOTICE**

**On the left-hand side (cylinders 2/4), thrust washers can be installed for tension-free assembly. Use as required.**

Do not lose them!

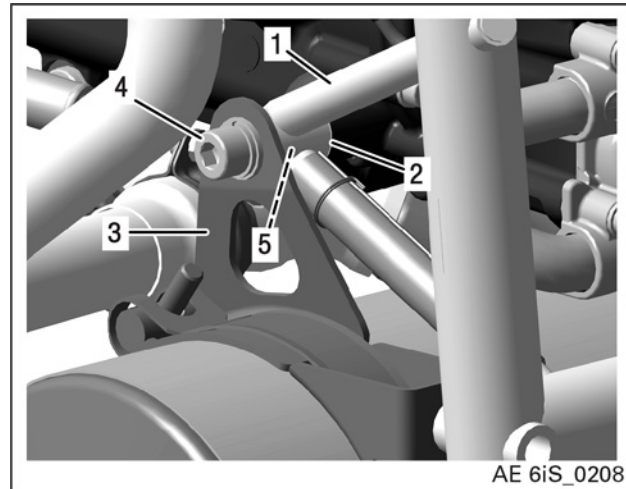

AE 6iS\_0208

Figure 4.14

- |   |   |
|---|---|
| <p>1 Engine suspension frame</p> <p>3 Exhaust bracket</p> <p>5 Spacer</p> | <p>2 Thrust washer</p> <p>Allen screw M10x50 with lock washer and washer</p> <p>4</p> |
|---|---|

**NOTICE**

**Do not damage the Coolant Temperature Sensor (CTS) and Exhaust Temperature Sensor (EGT) on cylinder 4!**

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

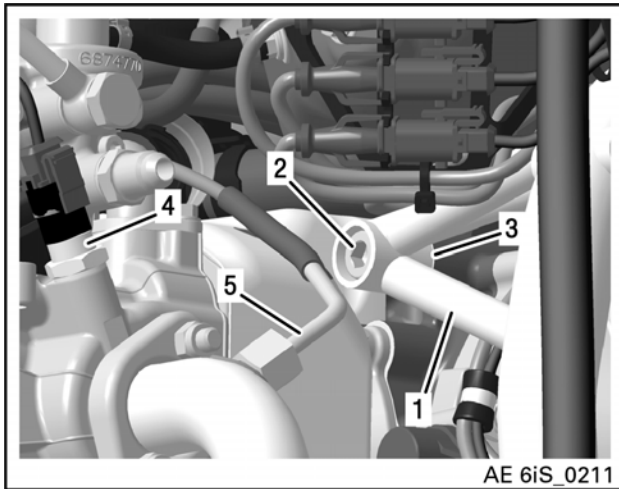


Figure 4.15

- |   |                                      |   |                                     |
|---|--------------------------------------|---|-------------------------------------|
| 1 | Engine suspension frame              | 2 | Allen screw M10x35 with lock washer |
| 3 | Thrust washer                        | 4 | Coolant Temperature Sensor (CTS)    |
| 5 | Exhaust Gas Temperature sensor (EGT) |   |                                     |

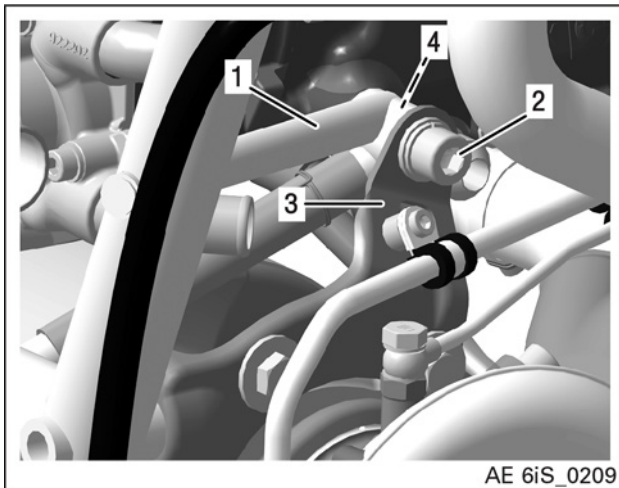


Figure 4.16

- |   |                         |   |  |
|---|-------------------------|---|--|
| 1 | Engine suspension frame | 2 | Allen screw M10x50 with lock washer and washer |
| 3 | Turbocharger bracket    | 4 | Spacer   |

**NOTICE**

Do not damage the Exhaust Gas Temperature sensor (EGT) on cylinder 3!

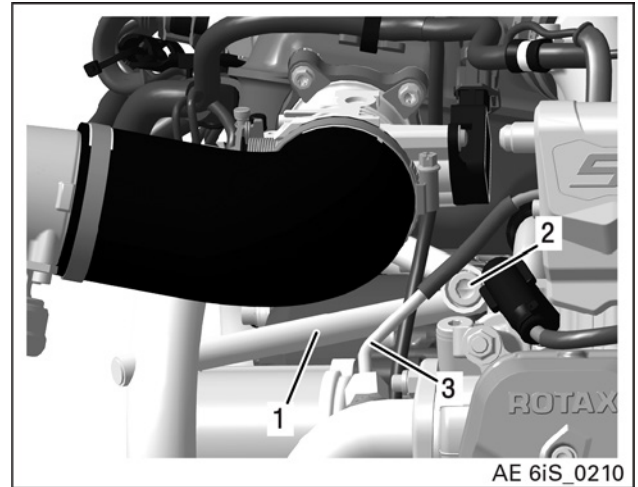


Figure 4.17

- |   |                                      |   |                                      |
|---|--------------------------------------|---|--------------------------------------|
| 1 | Engine suspension frame              | 2 | Allen screw M10x110 with lock washer |
| 3 | Exhaust Gas Temperature sensor (EGT) |   |                                      |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSPECTION**

**ENGINE SUSPENSION FRAME –  
 INSPECTION**

Step	Procedure
1	All components must be visually inspected.

**NOTE**

*If necessary, a transfer flight to a repair company is permissible, as long as not more than one tube or strut is not more than 50% detached. If it is completely detached, immediate replacement is necessary.*

**NOTE**

*Detailed visual inspection of the engine suspension frame in the vicinity of all welded connections between the tube and the struts.*

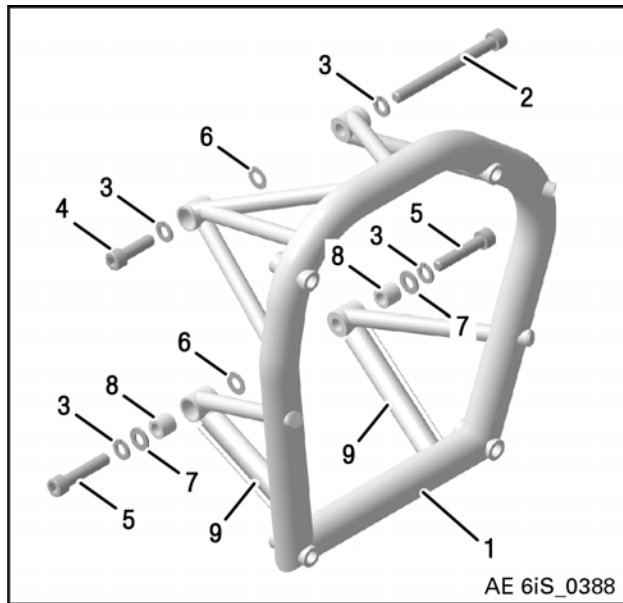


Figure 4.18

- |                                     |                       |
|-------------------------------------|-----------------------|
| 1 Engine suspension frame           | 2 Allen screw M10x110 |
| 3 Lock washer                       | 4 Allen screw M10x35  |
| 5 Allen screw M10x50                | 6 Thrust washer       |
| 7 Washer                            | 8 Spacer              |
| 9 Protection tube (110 mm/4.33 in.) |                       |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**ENGINE SUSPENSION FRAME –  
 INSTALLATION**

**NOTICE**

The engine suspension frame must be installed in a tension-free manner. Space out the engine suspension frame with thrust washers, as necessary to fill any gap.

Step	Procedure
1	Install protection tube (110 mm/4.33 in.) onto the lower arms of the engine suspension frame.
2	Install spacer into the lower arms of the engine suspension frame.
3	Tighten the engine suspension frame (cylinder3) with Allen screws M10x110 including lock washer A10 and Allen screws M10x50 including washer 10.5 and lock washers A10 with 60 Nm (44 ft. lb.) and secured with LOCTITE 243.

**NOTE**

*The Allen screws M10x110 must conform to strength class 10.9.*

**NOTICE**

Do not damage the Exhaust Gas Temperature sensor (EGT) on cylinder 3!

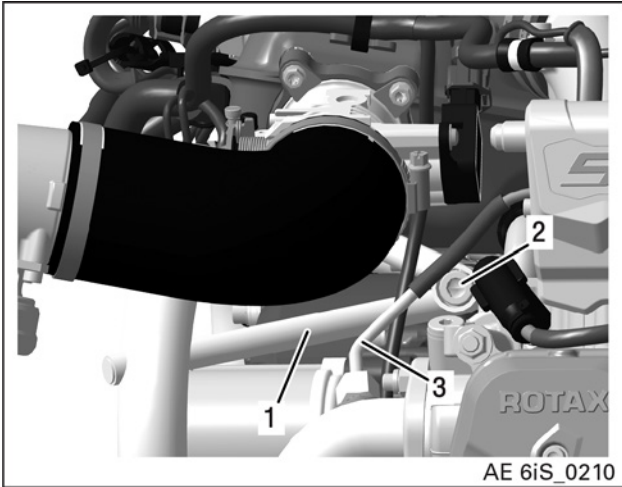


Figure 4.19

- 1 Engine suspension frame
- 2 Allen screw M10x110 with lock washer A10
- 3 Exhaust gas temperature sensor (EGT)

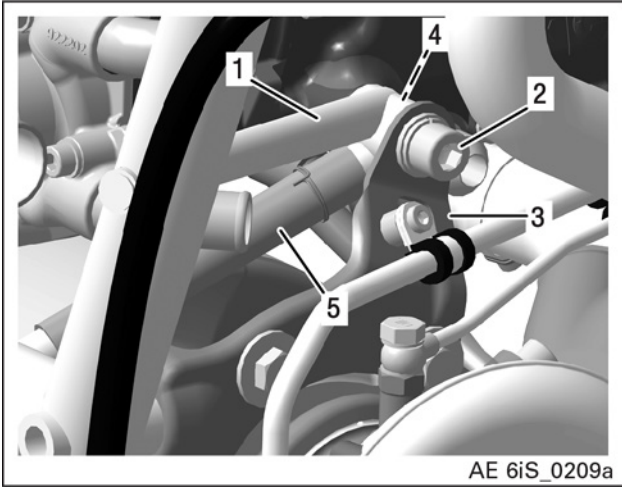


Figure 4.20

- 1 Engine suspension frame
- 2 Allen screw M10x50 with lock washer A10 and washer 10.5
- 3 Turbocharger bracket
- 4 Spacer
- 5 Protection tube



# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
4	<p>Now install thrust washers 10.1/20/0.5 between the crankcase and the engine suspension frame (cylinder 4).</p> <p><b>NOTE</b></p> <p><i>Maximum allowed shimming distance is 2 mm (0.08 in.).</i></p>
5	<p>Tighten the engine suspension frame (cylinder 4) with Allen screws M10x35 including the lock washers A10 and Allen screws M10x50 including washer 10,5 and lock washers A10 with 60 Nm (44 ft. lb.) and secured with LOCTITE 243.</p>

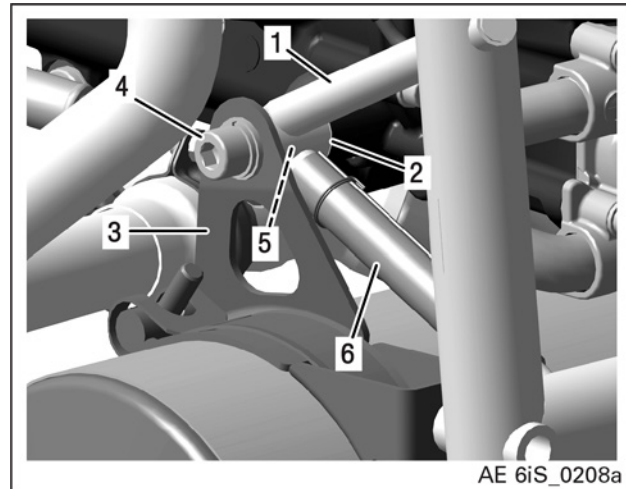


Figure 4.22

- |   |                                |   |  |
|---|--------------------------------|---|--|
| 1 | <i>Engine suspension frame</i> | 2 | <i>Thrust washers 10.1/20/0.5</i>                              |
| 3 | <i>Exhaust bracket</i>         | 4 | <i>Allen screw M10x50 with lock washer A10 and washer 10.5</i> |
| 5 | <i>Spacer</i>                  | 6 | <i>Protection tube</i>   |

NOTICE

Do not damage the Coolant Temperature Sensor (CTS) and Exhaust Temperature Sensor (EGT) on cylinder 4!

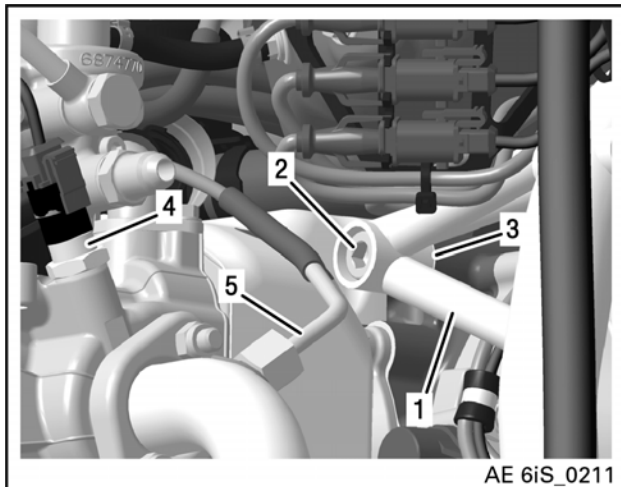


Figure 4.21

- |   |   |   |  |
|---|---|---|--|
| 1 | <i>Engine suspension frame</i>              | 2 | <i>Allen screw M10x35 with lock washer A10</i> |
| 3 | <i>Thrust washers 10.1/20/0.5</i>           | 4 | <i>Coolant Temperature Sensor (CTS)</i>        |
| 5 | <i>Exhaust Gas Temperature sensor (EGT)</i> |   |  |

## FINISHING WORK

- Install the water pump housing and coolant hoses. See [Chapter 75-00-00 Coolant system](#).



Install the coolant hoses (feed and return) according to the aircraft manufacturer's instructions.

- Install muffler and turbocharger, if necessary. See [Chapter 78-20-00 section Turbocharger Assy. – installation](#).



Fill with operating fluids or check filling levels.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system. See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



## BRP-Rotax MAINTENANCE MANUAL HEAVY



Flush the engine cooling system.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system..



Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 72-00-00**  
**ENGINE**

**TOPICS IN THIS CHAPTER**


<b>System description</b> .....	<b>4</b>
Safety instruction .....	4
<b>Crankshaft distortion — inspection</b> .....	<b>5</b>
Finishing work .....	7
<b>Wear limits</b> .....	<b>9</b>

This section describes the maintenance of the ROTAX® 916 i A/C24 Series engine. The description is divided into subsections and explanations of system functions.

<b>Subject</b>	<b>Section</b>
Engine	<a href="#">Chapter 72-00-00</a>
Propeller gearbox	<a href="#">Chapter 72-10-00</a>
Engine block	<a href="#">Chapter 72-20-00</a>
Cylinder head	<a href="#">Chapter 72-30-00</a>
Displacement parts	<a href="#">Chapter 72-30-10</a>

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

916 i TYPE A

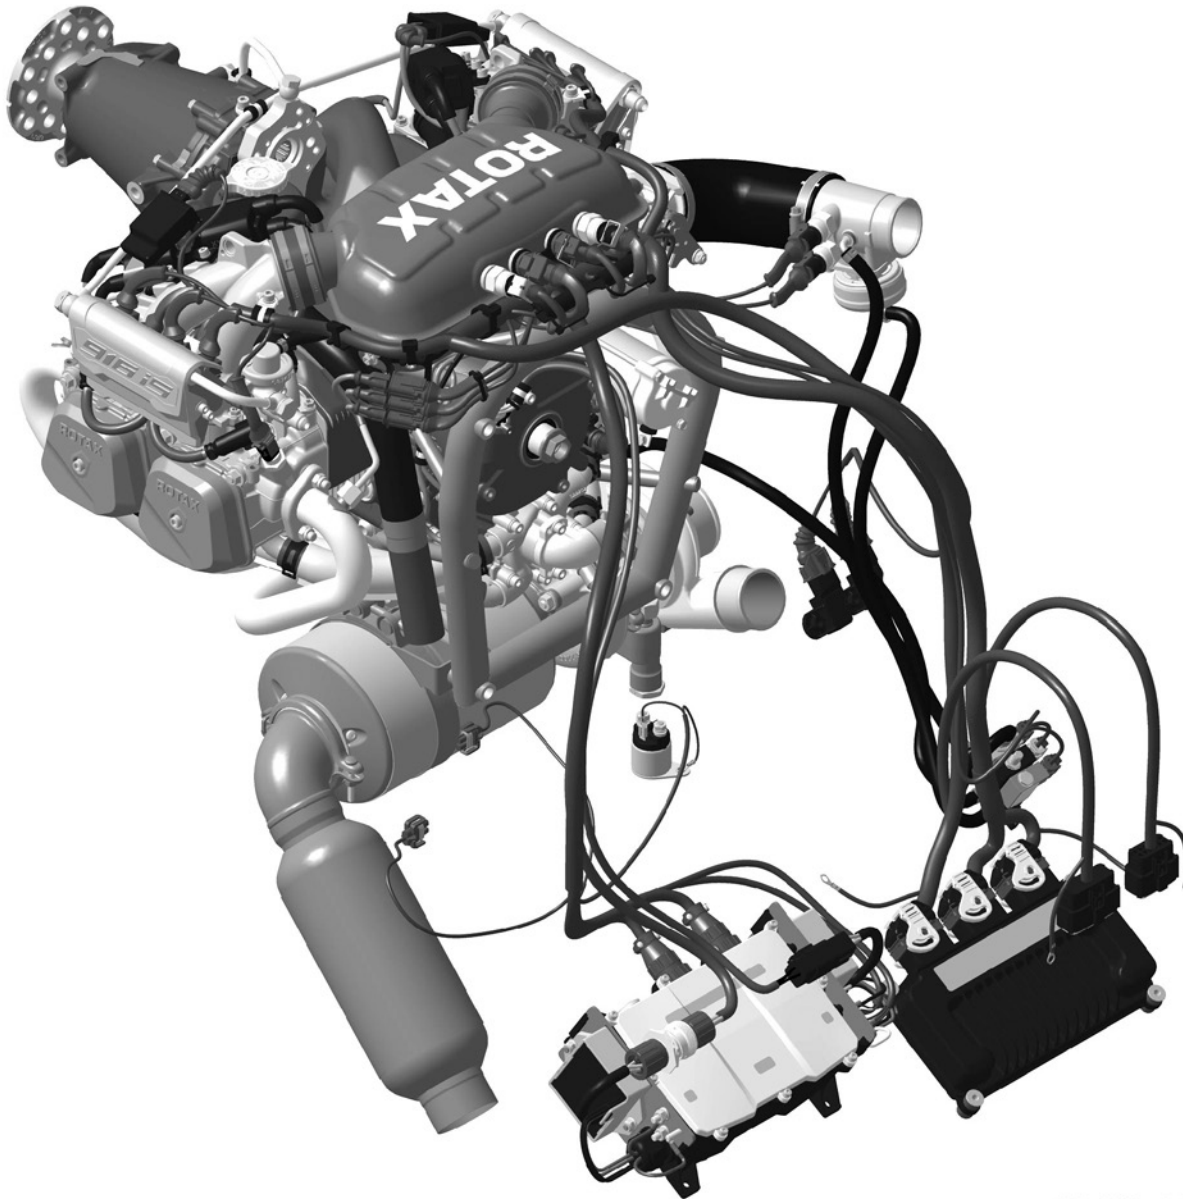


AE 6iS\_0200

Figure 5.1: Engine

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE C24

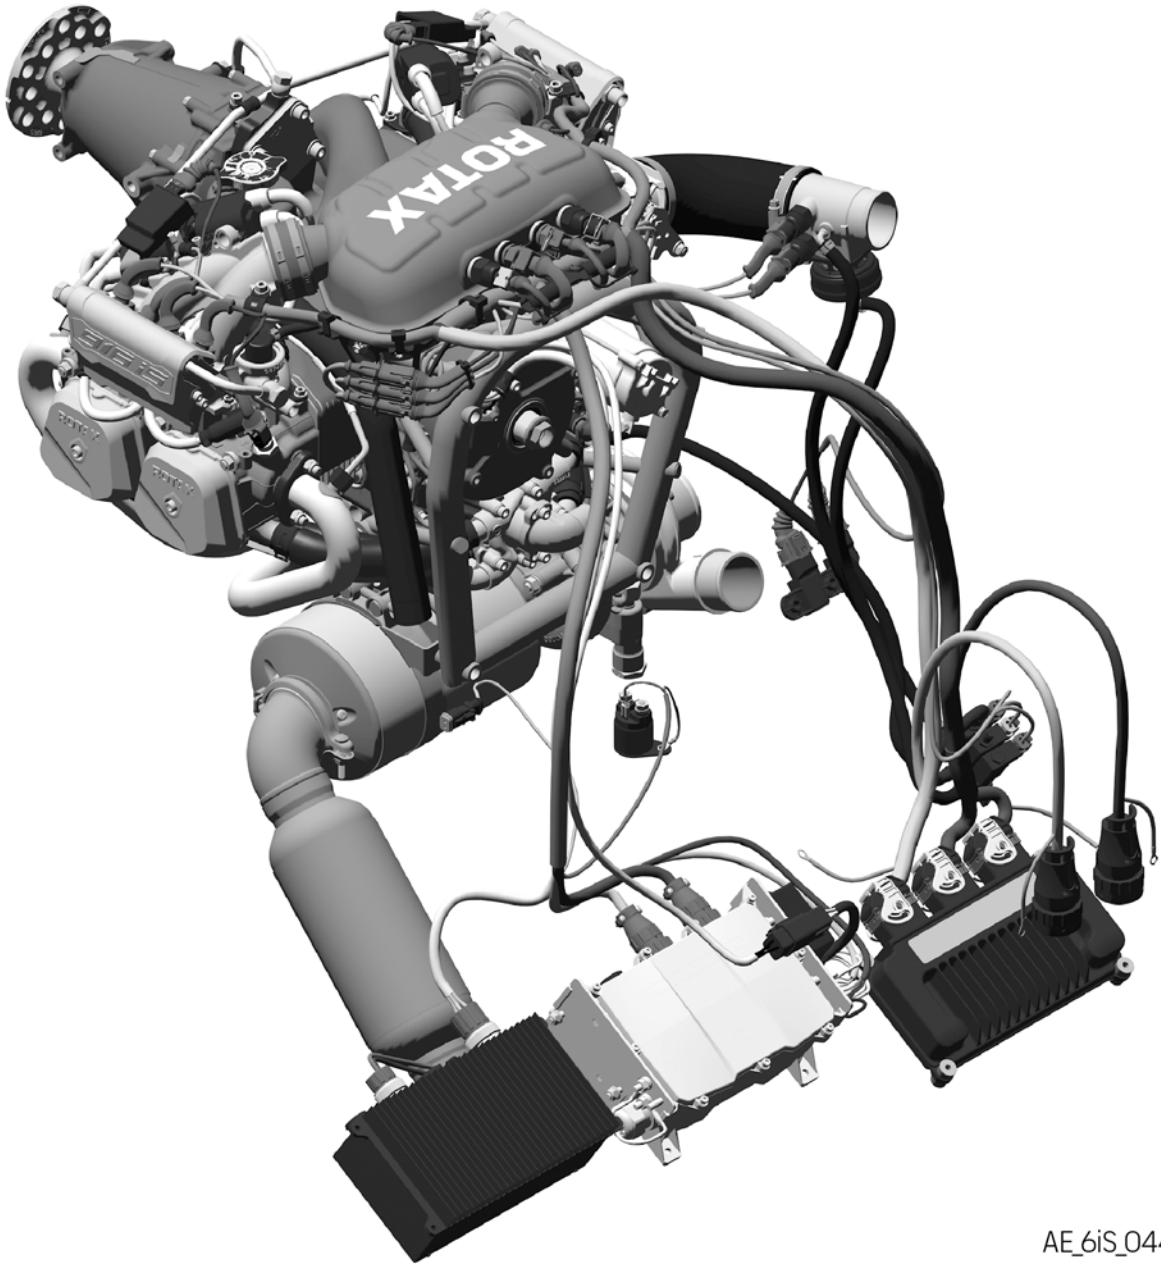

AE\_6iS\_0445

Figure 5.2: Engine

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

## **SYSTEM DESCRIPTION**

The ROTAX® 916 i A/C24 Series engine is a 4-cylinder, four-stroke, horizontally opposed engine with manifold injection.

This engine has liquid cooled cylinder heads and ram air cooled cylinders; this engine also has a fully redundant, electronic engine management system (EMS) including fuel injection, map-controlled ignition etc. Dry sump forced lubrication ensures constant oil pressure.

## **SAFETY INSTRUCTION**

**⚠ WARNING**

**Danger of severe burns and scalds!**

Always allow the engine to cool down to ambient temperature before starting any work.

**⚠ WARNING**

**Risk of injury due to spring-loaded parts!**

**NOTICE**

**Ensure that the ignition is switched off!**



Disconnect the battery! Prevent the engine from being unintentionally switched on!

## **NOTE**

*Precautions for escaping oil must be taken at the installation site.*

## **CRANKSHAFT DISTORTION — INSPECTION**

### **Preparation**

-  Drain oil. See current Maintenance Manual Line (MML) for the respective engine type.
-  Remove the propeller gearbox. See current Maintenance Manual Line (MML) for the respective engine type.

### **NOTE**

*The inspection of the crankshaft only makes sense if the shaft runout of the crankshaft AS or MS is less than 0.080 mm (0.0031 inch).*

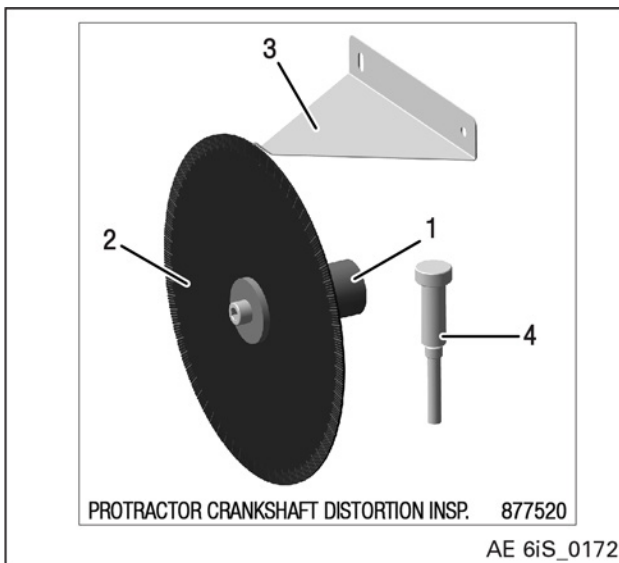


Figure 5.3

- 1 *Bushing*
- 2 *Gauge block*
- 3 *Indicator*
- 4 *Piston stopper*

<b>NOTICE</b>	
<b>Do not damage the crankshaft</b>	

Step	Procedure
1	Carefully mount bushing for gauge block onto the crankshaft.
2	Install the indicator between the ball bearing and the roller bearing with Allen screws M6x20.

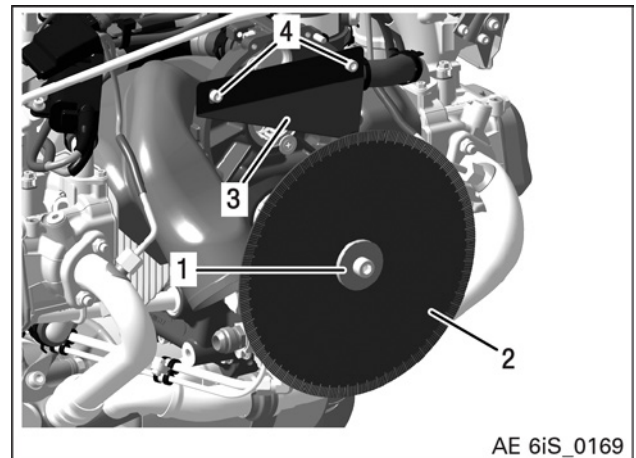


Figure 5.4: TYPICAL

- 1 *Bushing*
- 2 *Gauge block*
- 3 *Indicator*
- 4 *Allen screw M6x20*

<b>NOTICE</b>	
<b>Make sure that no foreign bodies get into open spark plug hole.</b>	

Step	Procedure
3	Remove the upper spark plugs. See current Maintenance Manual Line (MML) of the respective engine type, Chapter 12-20-00.
4	Install the piston stopper into cylinder 1 completely.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**NOTE**

*On all 4 cylinders the piston stopper has to be installed in the upper spark plug thread.*

**NOTE**

*Make sure that the piston stopper has been screwed in completely – so there is no space between the spark plug hole and the tooling surface.*

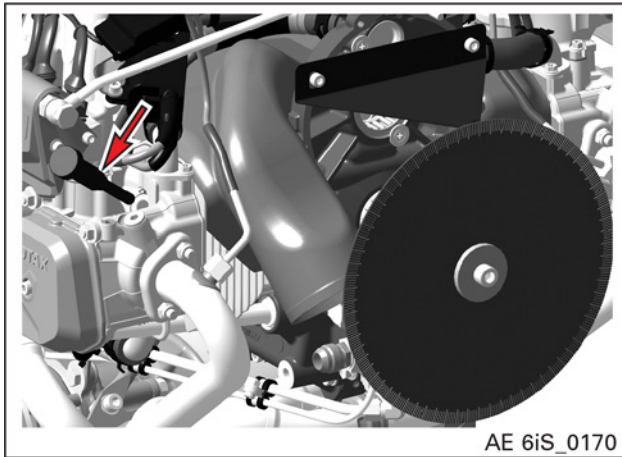


Figure 5.5: TYPICAL – Piston stopper

Step	Procedure
5	Turn the crankshaft carefully in direction of engine rotation until the piston touches the piston stoppers.

**NOTE**

*Always turn the crankshaft in direction of engine rotation, to move the piston towards the piston stopper.*

**NOTE**

*The force applied should be strong enough to break-through possible accumulations on the piston's surface.*

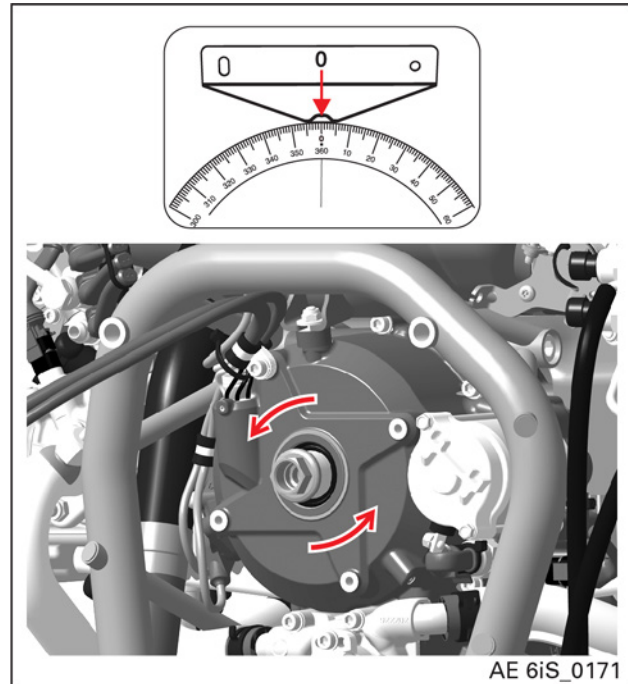


Figure 5.6: TYPICAL — Direction of engine rotation

Step	Procedure
6	Turn the gauge block itself until the arrow of the indicator points to 0°. Then tighten the Allen screw of the gauge block holder.

**NOTE**

*From this point onwards until the measurement procedure has ended the protractor must not be turned on the metal sheet.*

**NOTE**

*In this position the piston of cylinder 1 touches the piston stopper.*



# BRP-Rotax MAINTENANCE MANUAL HEAVY

**NOTICE**

**Values can always be positive or negative, which is very important for the whole measurement.**

Step	Procedure
7	Turn the piston slightly away from the piston stopper so it is easier to remove it.
8	Install the piston stopper at cylinder 2 and proceed like at cylinder 1.
9	Note the difference to 0° from the protractor
10	Turn the piston slightly away from the piston stopper so it is easier to remove it. Repeat this procedure for cylinder 3 and 4. The piston will be stopped at 180°. Note the difference to 180° from the protractor for cylinder 3 and 4.

**NOTICE**

**If a value exceeds the GB20 limit, then the engine has to be overhauled according to the current Overhaul Manual (OHM) for the respective engine type. Overhaul Manual (OHM) and its appendix is available for any appropriately rated person or entity on request and by following the standards of the original manufacturer.**

**NOTICE**

**The deviation of the crank pin (as a whole) must not exceed the GB20 value. For GB20 see “wear limits”.**

Example showing the results from measuring a crankshaft, where the GB20 threshold is not exceeded.

Cylinder	Deviation – good
1	0°
2	+2°
3	0°
4	+1°

Example showing the results from measuring a crankshaft, where the GB20 threshold is exceeded.

Cylinder	Deviation – bad
1	0°
2	+2°
3	0°
4	-1°

## FINISHING WORK

- Install the upper spark plug. See current Maintenance Manual Line (MML) of the respective engine type, Chapter 12-20-00 Installation of the spark plug.



Install propeller gearbox assy. See current Maintenance Manual Line (MML) for the respective engine type.



Fill with operating fluids or check filling levels. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system. See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system. It must be carried out in accordance with SI-916 i-003, “Purging the lubrication system”, latest issue.

# BRP-Rotax MAINTENANCE MANUAL HEAVY



Carry out an engine test run.  
See current Maintenance Manual Line  
(MML) for the respective engine type,  
Chapter 12-20-00 section Planned  
maintenance.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**WEAR LIMITS**

Description	Code	Reading new		Wear limit			Readings			
		min.	max.	100 %	50 %					
<b>CRANKSHAFT</b>							<b>Cyl. 1</b>	<b>Cyl. 2</b>	<b>Cyl. 3</b>	<b>Cyl. 4</b>
Crank-shaft angle of twist	GB20	0 (degrees)	2 (degrees)			actual				
						renewed				

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK


**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 72-10-00**  
**PROPELLER GEARBOX**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>3</b>
<b>Service products</b> .....	<b>5</b>
<b>System description</b> .....	<b>8</b>
Safety instructions .....	8
Connections for display systems.....	8
Maintenance .....	8
<b>Removal</b> .....	<b>9</b>
Torsion shaft— removal .....	9
<b>Disassembly</b> .....	<b>11</b>
Propeller gearbox - disassembly.....	11
Propeller shaft - removal .....	11
Ball bearing and oil seal - removal .....	12
Blinding shim - removal.....	13
Needle bearing - removal .....	13
Overload clutch assy. - disassembly.....	15
Damper clutch assy. - disassembly .....	16
<b>Inspection</b> .....	<b>20</b>
Propeller gearbox single parts — inspection .....	20
Gear cover assy. - inspection.....	20
Propeller shaft — inspection.....	21
Overload clutch — inspection .....	22
Damper clutch — inspection.....	23
Torsion bar - inspection .....	24
Checking the splines.....	25
Checking the gear set .....	25
Pitting, general information.....	26
Slight pitting .....	26
Destructive pitting.....	27
Flake pitting (large-area flank fractures) .....	28
<b>Wear limits</b> .....	<b>29</b>
<b>Assembly</b> .....	<b>34</b>
Ball bearing - installation .....	34
Propeller shaft — installation .....	35
Torsion shaft — installation.....	36
Overload clutch assy. - assembly.....	38
Damper clutch assy. - assembly.....	39
Propeller gearbox assy. - assembly.....	43
<b>Installation</b> .....	<b>45</b>
Blinding shim — installation .....	45
Oil inlet flange - installation.....	45
Needle bearing — Installation .....	47
Finishing work.....	48

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

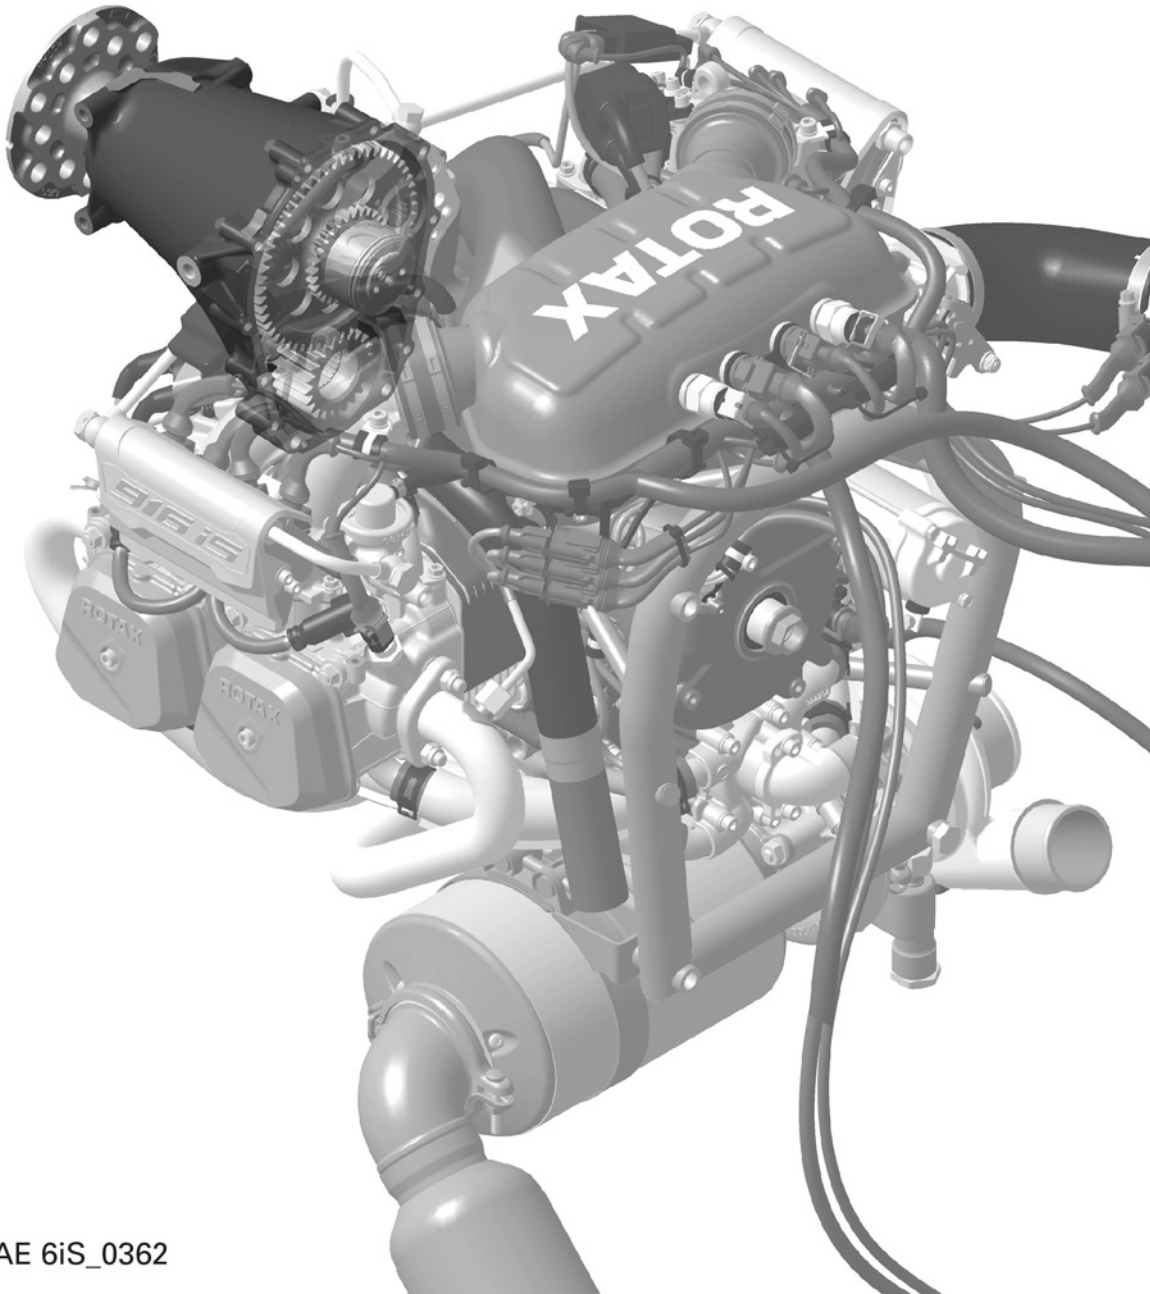

AE 6iS\_0362

Figure 6.1

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SPECIAL TOOLS**

<b>Description</b>	<b>Part number</b>
Hot air gun	n.a.
Hand operated hydraulic press	n.a.
Socket wrench assy. 41x12.5	877445
Handle for insertion jig	877650
Puller assy.	877660
Extractor assy.	877615
Press-in jig	276000
Press-out mushroom	276002
Pull stud	276004
Socket wrench AF 46	276006
Centering ring	276950
Insertion jig	276952
Centering plate	276954
Centering plate	276956
Support plate	276958
Twist tool	276962
Insertion jig	276964
Insertion jig	276966
Retaining ring tool	276968
Insertion sleeve	276972
Insertion jig	276974
Thread bolt M8x50	240880

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

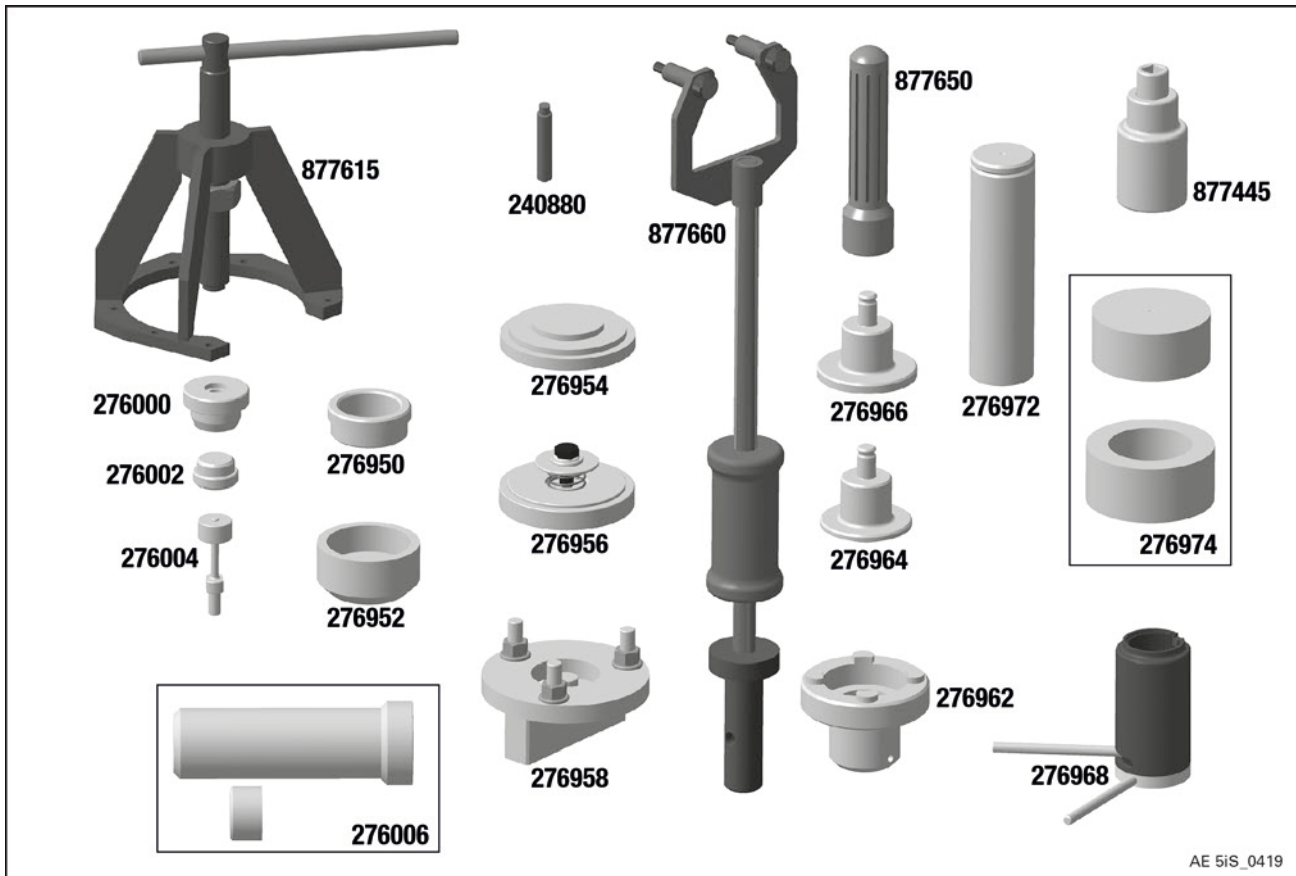


Figure 6.2: Special tools



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
Engine oil	n.a.
LOCTITE 243	897651
LOCTITE 603	899789
LOCTITE 648	899788
LOCTITE 7063	n.a.
LOCTITE 5910	899791
LOCTITE ANTI SEIZE 8151	297434

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

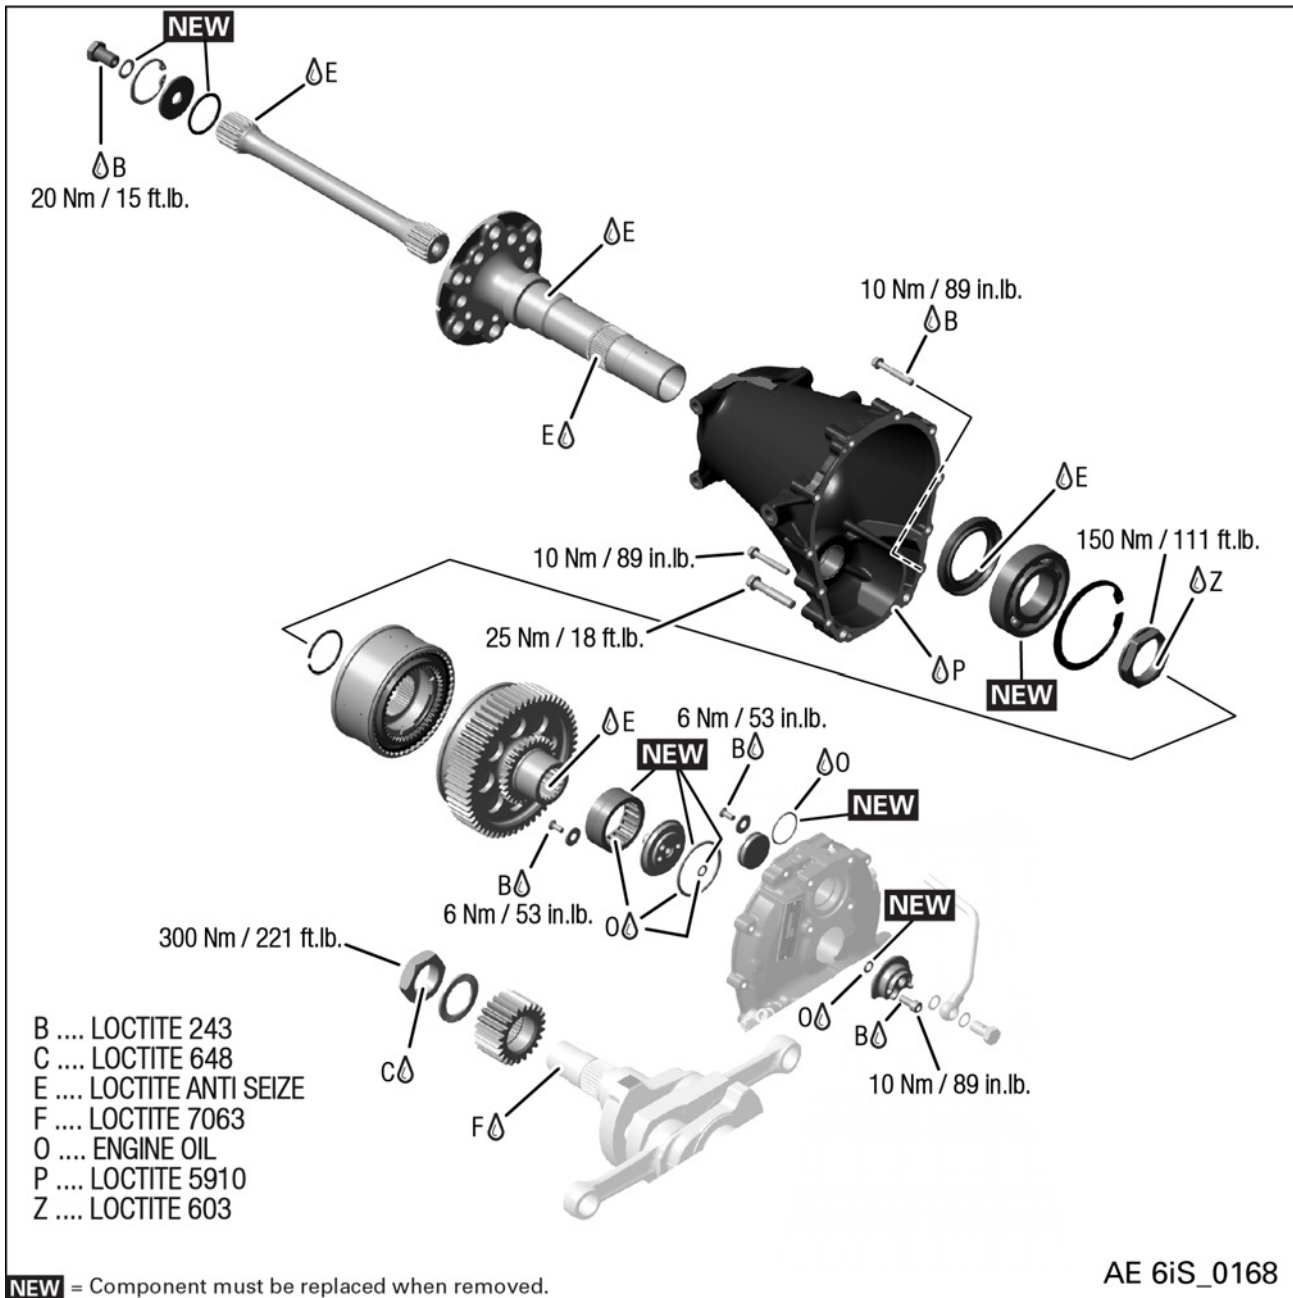


Figure 6.3: Service Products

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

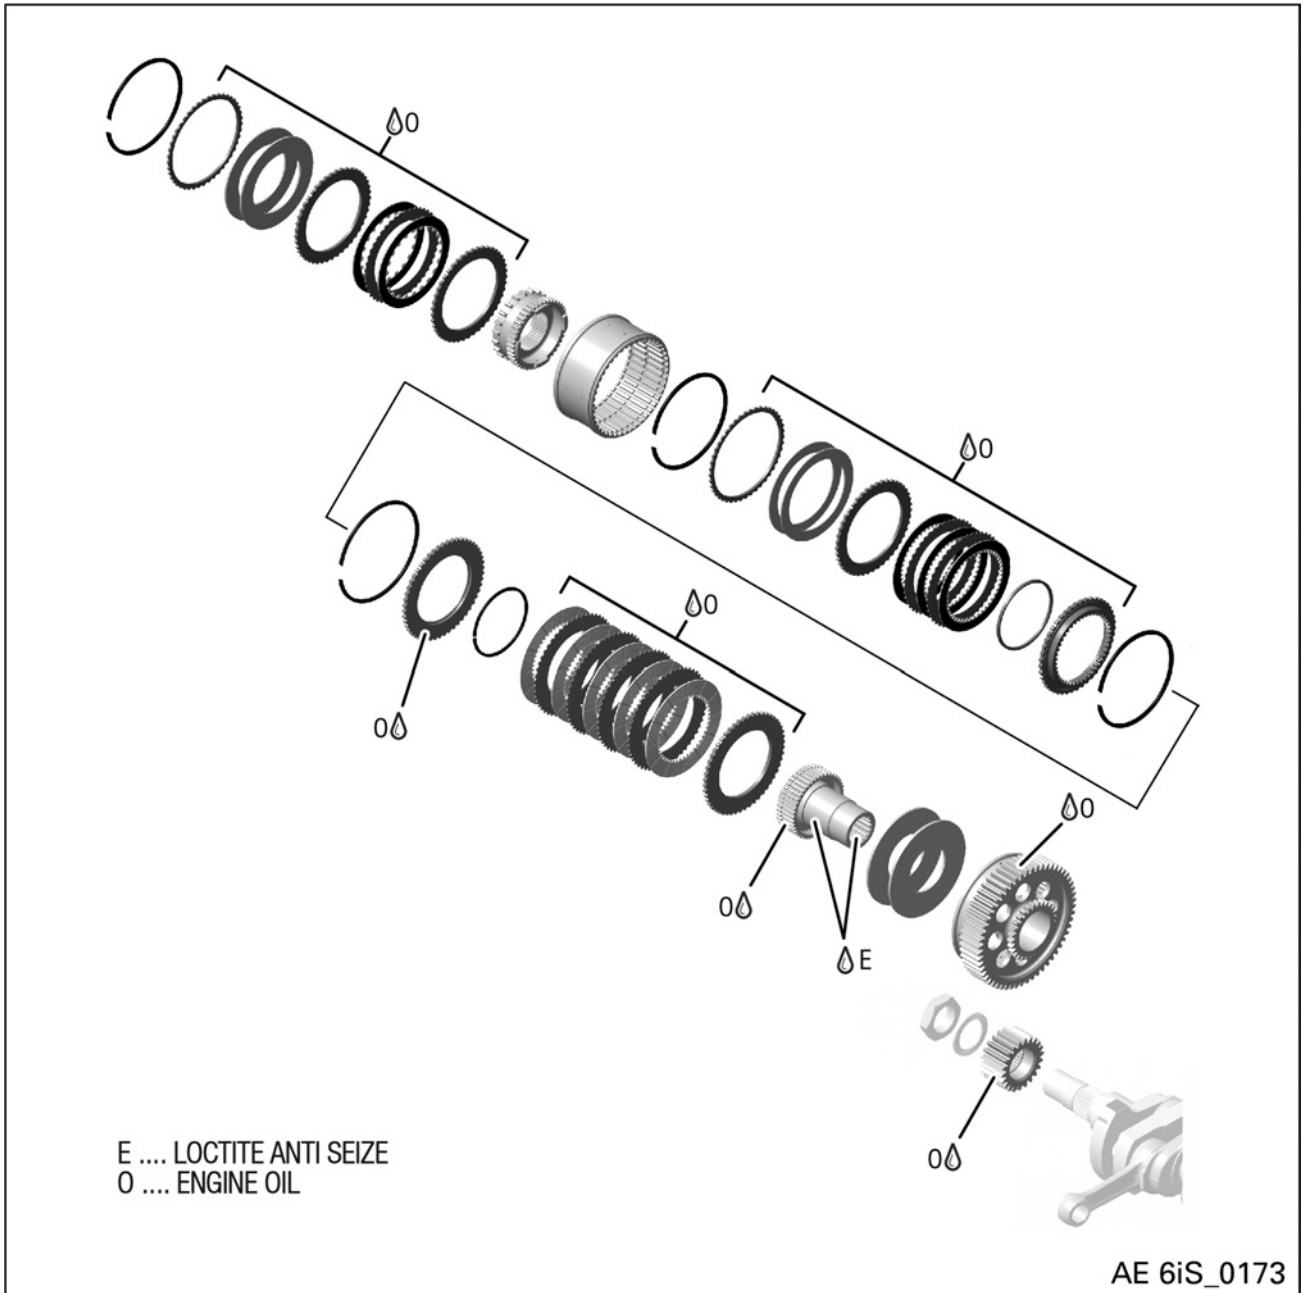


Figure 6.4: Service Products

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## **SYSTEM DESCRIPTION**

The propeller shaft is driven by the crankshaft by means of a spur gear unit. Gear ratio Crankshaft : propeller shaft 2.54:1.

The power transmission from the crankshaft to the propeller consists of: overload clutch, damper clutch and torsion shaft. The damper clutch and torsion shaft absorbs vibrations and/or shocks caused by engine running and/or the propeller. The overload clutch protects the crankshaft in case of a propeller strike.

## **SAFETY INSTRUCTIONS**

### **⚠ WARNING**

#### **Danger of severe burns and scalds!**

Always allow the engine to cool down to ambient temperature before starting any work.

### **⚠ WARNING**

#### **During work on the engine there is a risk of life-threatening injuries from the propeller and rotating parts in the engine!**

Ensure that the ignition is switched off!

Disconnect the battery

Prevent the engine from being unintentionally switched on!

## **CONNECTIONS FOR DISPLAY SYSTEMS**

### **NOTICE**

**Follow the instructions in the Installation Manual (IM) for respective engine type regarding connections for instrumentation.**

## **MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

### Preparation

Before the propeller gearbox is removed, the pressure oil line assy. (configuration 3) or the gearbox oil line assy. (configuration 2) must be removed. See Chapter 61-20-00, section [GOVERNOR FLANGE - REMOVAL \(CONFIGURATION 3\)](#) or [OIL INLET FLANGE ADAPTOR- REMOVAL \(CONFIGURATION 2\)](#).



For removal of the propeller gearbox, see current Maintenance Manual Line (MML) for the respective engine type.

## TORSION SHAFT— REMOVAL

### NOTE

*If the clutches can not be removed, then remove the torsion shaft first.*

Step	Procedure
1	Remove the clutches.

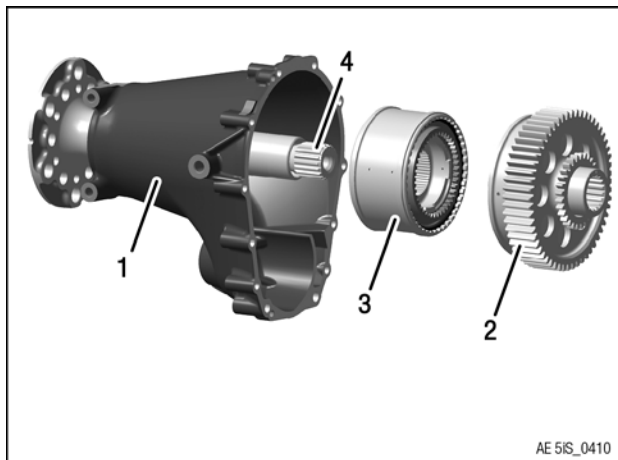


Figure 6.5

- |                       |                         |
|-----------------------|-------------------------|
| 1 Propeller gearbox   | 2 Overload clutch assy. |
| 3 Damper clutch assy. | 4 Torsion shaft         |

Step	Procedure
2	Remove the hex. screw with washer.
3	Remove the retaining ring with circlip pliers. Remove the sealing washer and the O-ring.

### CONFIGURATION 3

### NOTE

*Hex. screw M12x20 is different between config. 2 and config. 3.*

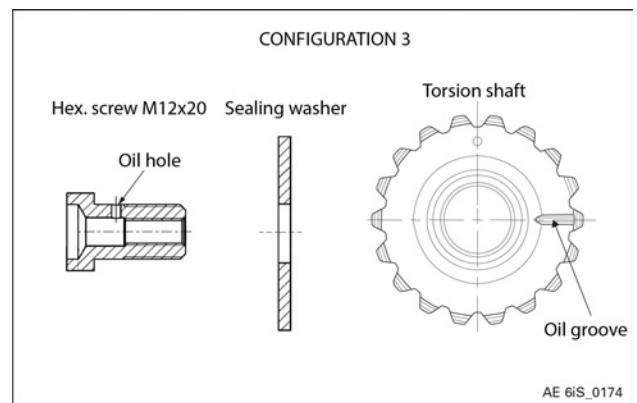


Figure 6.6

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

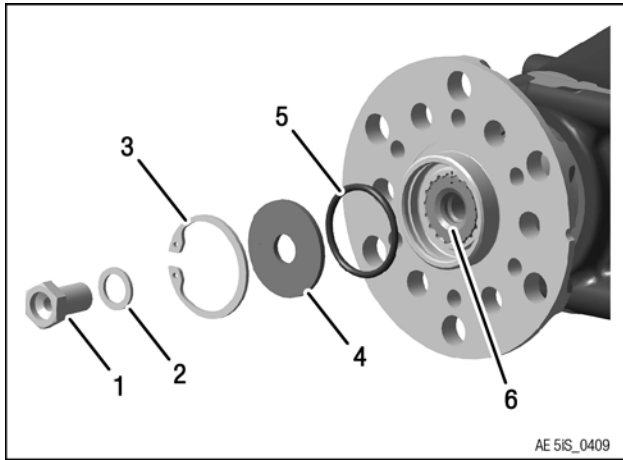


Figure 6.7

- 1 Hex. screw
- 2 Washer
- 3 Retaining ring
- 4 Sealing washer
- 5 O-ring
- 6 Torsion shaft

**CONFIGURATION 2**

**NOTE**

Hex. screw M12x20 is different between config. 2 and config. 3.

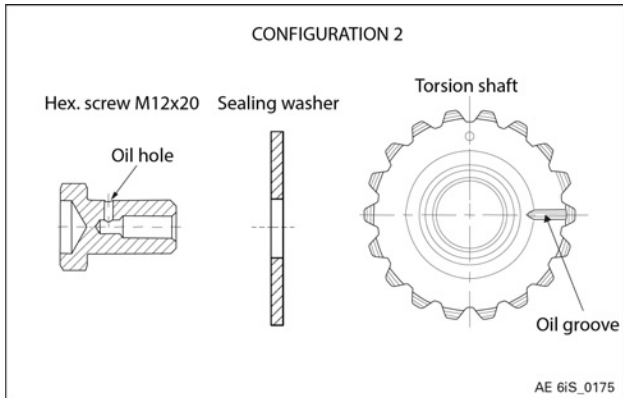


Figure 6.8

Step	Procedure
4	Carefully knock out the torsion shaft with a suitable punch.

**NOTICE**

**Torsion shaft may be damaged.**  
 Material of the plug tool should be soft (plastic, aluminium).

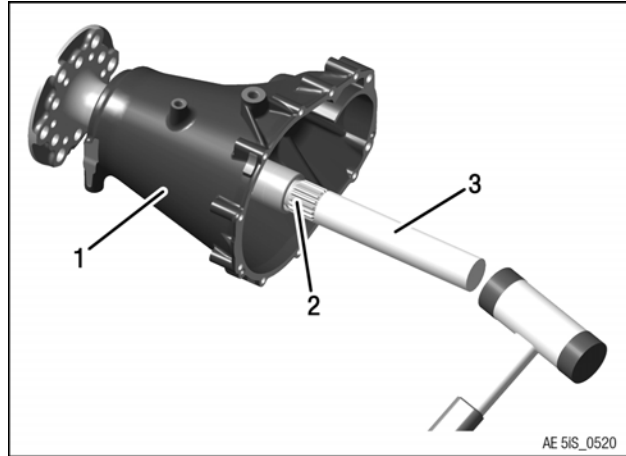


Figure 6.9

- 1 Propeller gearbox
- 2 Torsion shaft
- 3 Plug tool

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**DISASSEMBLY**

**PROPELLER GEARBOX - DISASSEMBLY**

Step	Procedure
1	The propeller flange must be fixed to the support plate part no. 276958. The plate should be fixed in a bench vise.
2	Remove the retaining ring with tool part no. 276968.

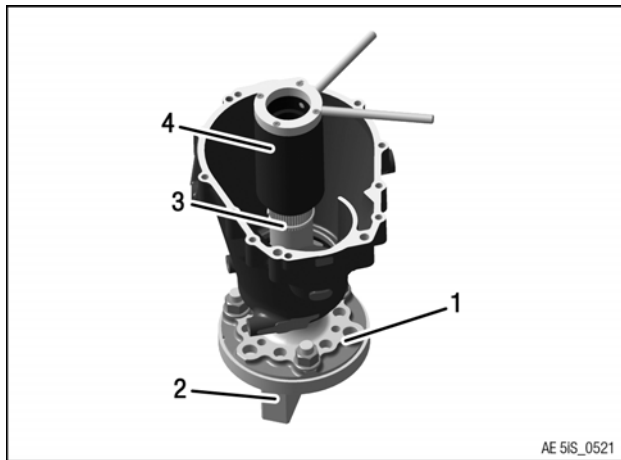


Figure 6.10

- |                    |                                       |
|--------------------|---------------------------------------|
| 1 Propeller flange | 2 Support plate part no. 276958       |
| 3 Retaining ring   | 4 Retaining ring tool part no. 276968 |

Step	Procedure
3	Loosen the collar nut (left hand thread) for receiving axial thrust of the propeller shaft using the deep socket wrench part no. 276006.
<p><b>NOTE</b></p> <p><i>The collar nut is secured with LOC-TITE 648.</i></p> <p><i>For removal, warm up the collar nut with a hot air gun.</i></p>	

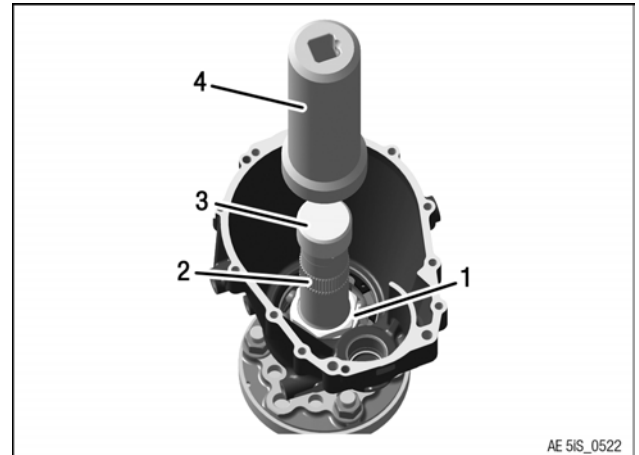


Figure 6.11

- |                                       |                                 |
|---------------------------------------|---------------------------------|
| 1 Collar nut                          | 2 Propeller shaft               |
| 3 Protective mushroom part no. 276006 | 4 socket wrench part no. 276006 |

**PROPELLER SHAFT - REMOVAL**

**NOTICE**

**If the propeller shaft is removed, the oil seal and ball bearing must be replaced!**

Step	Procedure
1	Fix the support plate part no. 276958 in a bench vise and place the gearbox housing on it.
2	Press out the propeller shaft with the extractor part no. 877615.

**NOTICE**

**Damage to the machined inner diameter of the propeller shaft possible.**

The protection piece (press-out mushroom) must be used.

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
3	Plug the press-out mushroom part no. 276002 into the propeller shaft end and screw the extractor onto the gearbox housing with six M6 Allen screws.
4	Place the pull-in spindle into the extractor support and screw the M24x1.5 hex. nuts onto the spindle from the inside.
5	Held with the spanner, the propeller shaft is pushed out of the gearbox housing by turning the spindle clockwise.

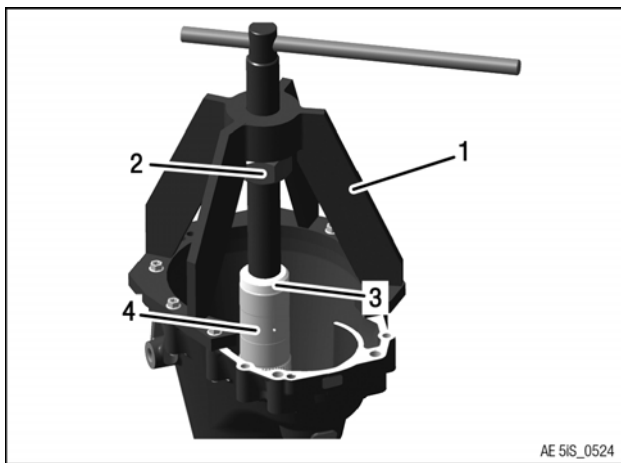


Figure 6.12

- |                                      |                    |
|--------------------------------------|--------------------|
| 1 Extractor                          | 2 Hex. nut M24x1.5 |
| 3 Press-out mushroom part no. 276002 | 4 Propeller shaft  |

### BALL BEARING AND OIL SEAL - REMOVAL

#### ⚠ WARNING

**Danger of severe burns and scalds!**  
Wear heat resistant gloves!

#### NOTICE

**If the propeller shaft is removed, the oil seal and ball bearing must be replaced!**

Step	Procedure
1	Remove the retaining ring with the circlip pliers.

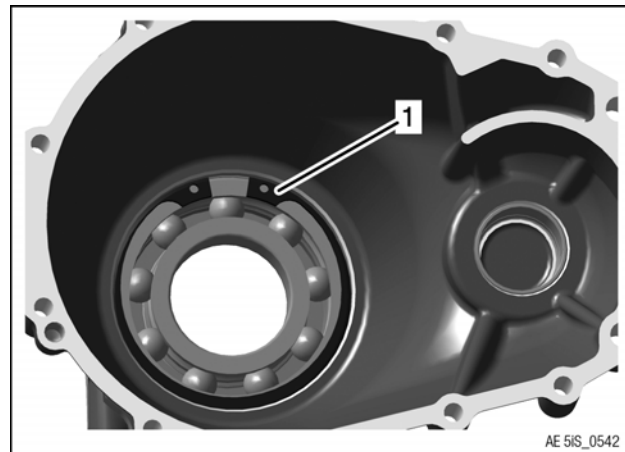


Figure 6.13

- 1 Retaining ring

Step	Procedure
2	Heat the gearbox housing to approx. 100 to 120 °C (212 °F to 248 °F) and press-out the ball bearing together with the oil seal using a suitable punching tool.



## BRP-Rotax MAINTENANCE MANUAL HEAVY

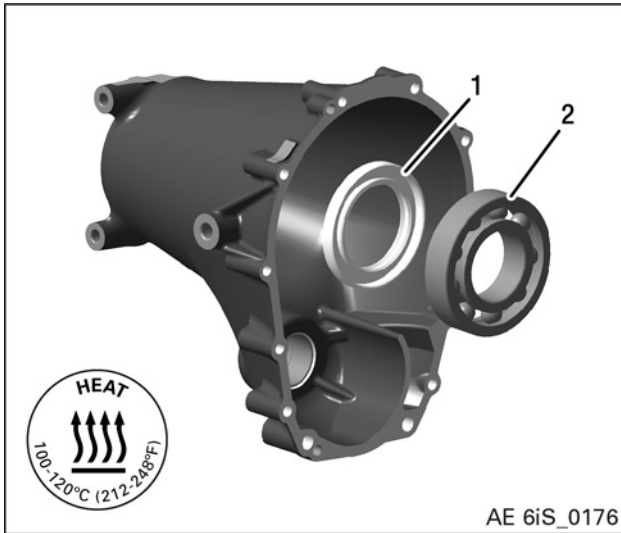


Figure 6.14

- 1 Oil seal
- 2 Ball bearing

### BLINDING SHIM - REMOVAL

#### CONFIGURATION 2

Step	Procedure
1	Loosen the countersunk screw with thrust washer for the blinding shim fastening.
2	Press the blinding shim out towards the gearbox with the insertion jig part no. 276332.

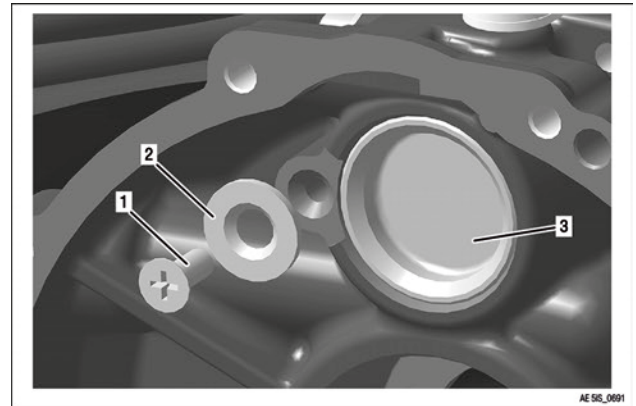


Figure 6.15

- 1 Countersunk screw
- 2 Thrust washer
- 3 Blinding shim

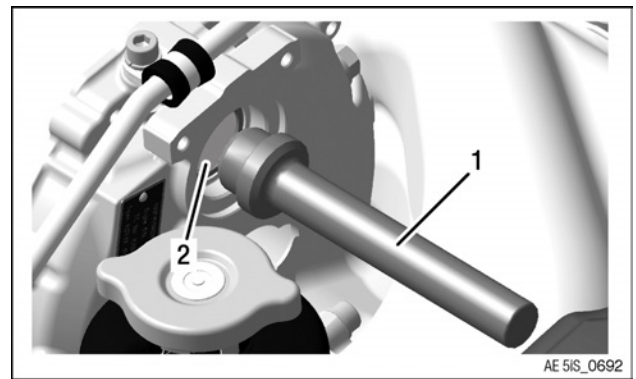


Figure 6.16: : TYPICAL

- 1 Insertion jig part no. 276332
- 2 Blinding shim

### NEEDLE BEARING - REMOVAL

#### Preparation

CONFIGURATION 2: Remove the oil inlet flange adaptor, see [Chapter 61-20-00, Oil inlet flange adaptor - removal](#).

CONFIGURATION 3: Remove the governor flange, see [Chapter 61-20-00 Governor flange - removal](#).

Step	Procedure
1	Loosen the countersunk screw with thrust washer from the engine block.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

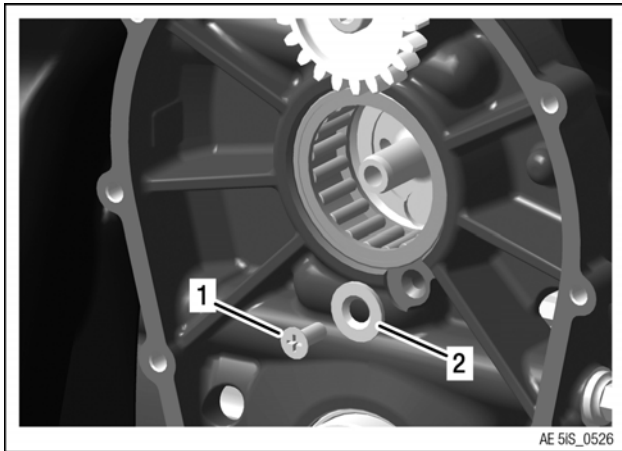


Figure 6.17: TYPICAL

- 1 Countersunk screw    2 Thrust washer

Step	Procedure
2	Mount press-in jig part no. 276000 to the needle bearing.
3	Install the threaded pin of special tool part no. 276004 through the plunger and the oil inlet flange. Fix it with the knurled nut on the other side.

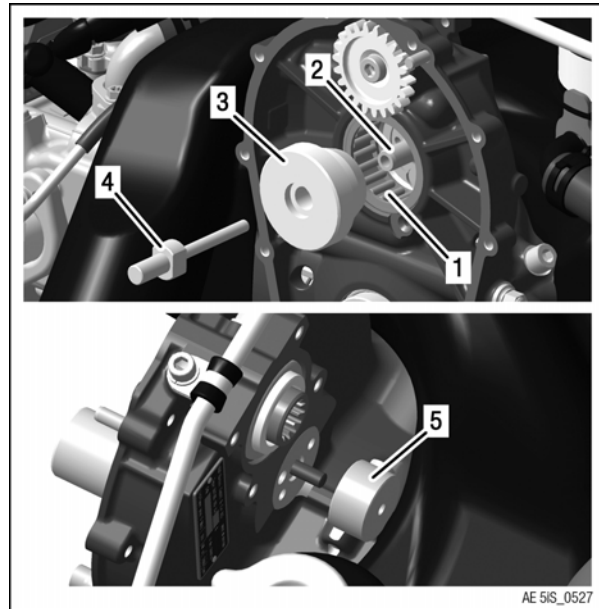


Figure 6.18: TYPICAL

- 1 Needle bearing    2 Oil inlet flange  
 3 Press-in jig part no. 276000    4 Threaded pin of tool 276004  
 5 Knurled nut of tool 276004

Step	Procedure
4	Install extractor part no. 877615 with 6 screws onto the propeller gearbox.
5	Screw extractor spindle and threaded pin of special tool part no. 276004 together.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

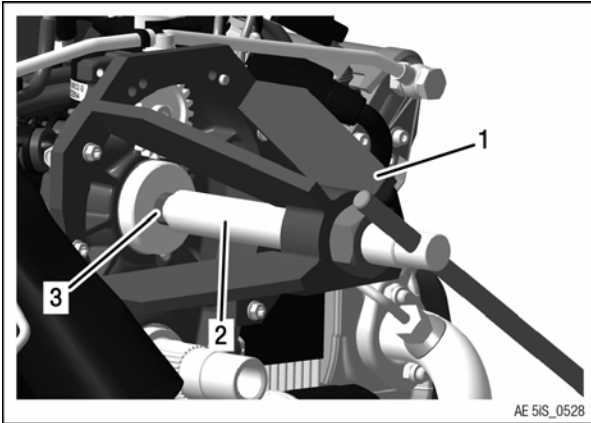


Figure 6.19: TYPICAL

- 1 Extractor part no. 877615
- 2 Extractor spindle
- 3 Threaded pin of tool 276004

Step	Procedure
6	Remove the needle bearing and oil inlet flange by turning the extractor spindle.
7	Remove the O-ring.

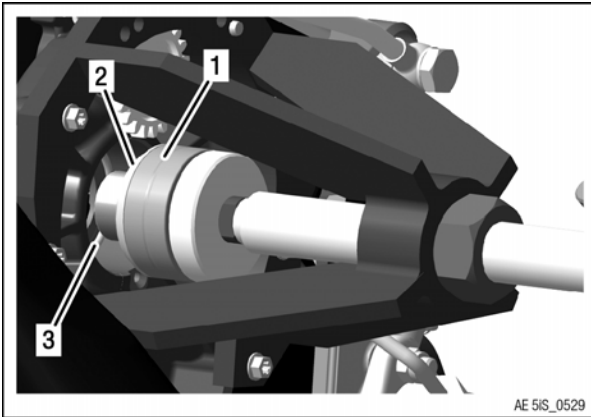


Figure 6.20: TYPICAL

- 1 Needle bearing
- 2 Oil inlet flange
- 3 O-ring

## OVERLOAD CLUTCH ASSY. - DISASSEMBLY

For disassembly use a hand operated hydraulic press or similar.

Step	Procedure
1	Insert overload clutch into the insertion jig part no. 276974.

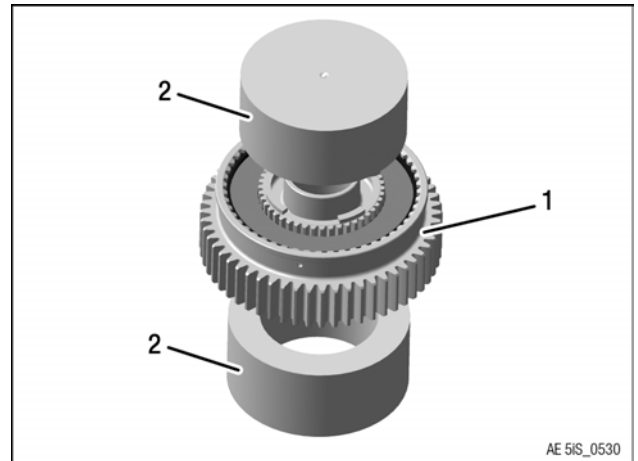


Figure 6.21

- 1 Overload clutch
- 2 Insertion jig part no. 276974

Step	Procedure
2	Press clutch assy. with insertion jig part no. 276974 until the circlip is free for removal.
3	Remove the circlip using a small screwdriver.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

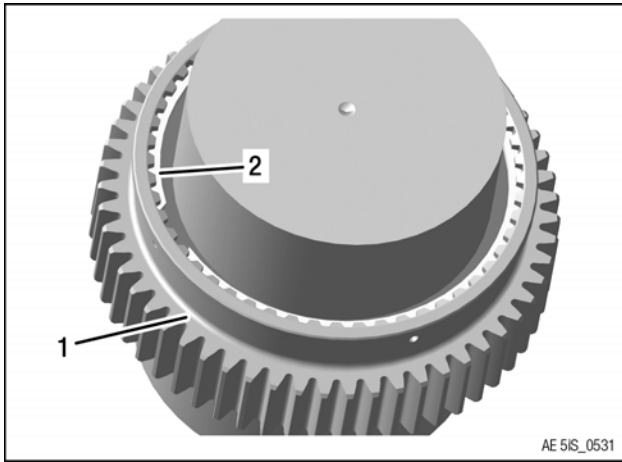


Figure 6.22

- 1 Clutch assy.                      2 Circlip

Step	Procedure
4	After removing the circlip, remove the clutch assy.  <b>NOTE</b> <i>Mark the positions of the disk springs. They have different thickness.</i>

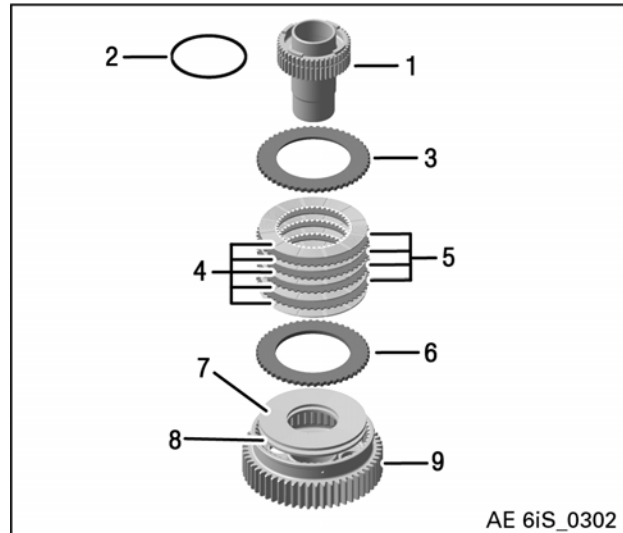


Figure 6.23

- |                             |                                |
|-----------------------------|--------------------------------|
| 1 Intermediate shaft        | 2 Circlip                      |
| 3 Steel friction plate 4 mm | 4 Sinter friction plate 1.8 mm |
| 5 Steel friction plate 1 mm | 6 Steel friction plate 4 mm    |
| 7 Disk spring 102x49x2.9    | 8 Disk spring 102x49x3.1       |
| 9 Gear                      |                                |

**NOTE**

*Remove circlip on the intermediate shaft only if necessary.*

**DAMPER CLUTCH ASSY. - DISASSEMBLY**

For disassembly use a hand operated hydraulic press or similar.

**ENGINE SIDE**

Step	Procedure
1	Place the damper clutch (large chamfer) on the centering plate part no. 276954 and insert the centering ring part no. 276950.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

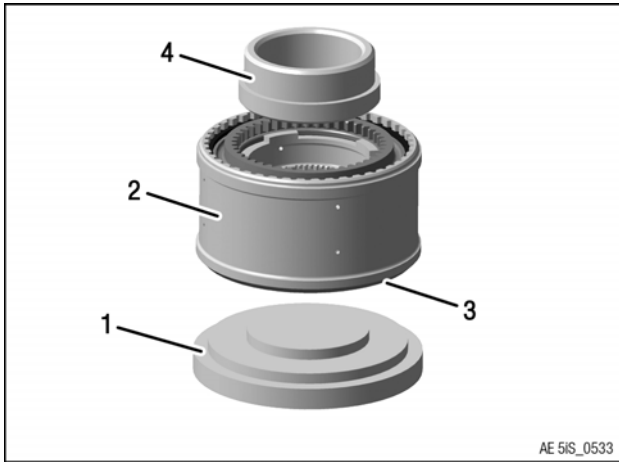


Figure 6.24: TYPICAL

- 1 Centering plate 276954
- 2 Damper clutch
- 3 Large chamfer
- 4 Centering ring 276950

Step	Procedure
2	Press clutch assy. with insertion jig part no. 276952 until the retaining ring is free for removal.
3	To remove the retaining ring take a pin with a diameter of max. 3 mm (0.12 in.) and push it through the existing bore on clutch drum. Then remove the retaining ring using a small screwdriver.

**NOTE**

*If necessary, the retaining ring can be turned to reach it through the bore of the clutch drum.*

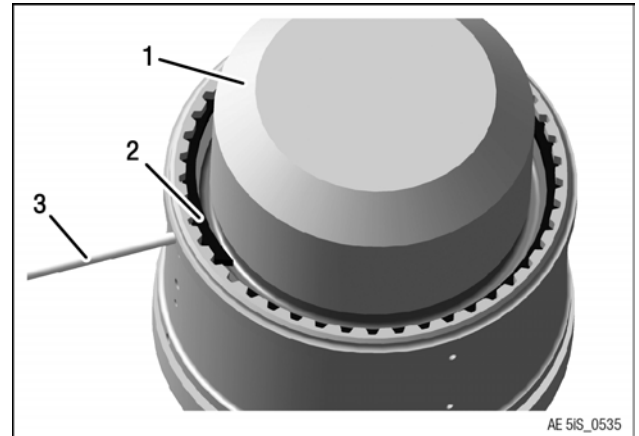


Figure 6.25: TYPICAL

- 1 Insertion jig 276952
- 2 Retaining ring
- 3 Pin

Step	Procedure
4	Now the damper clutch can be disassembled on the engine side.

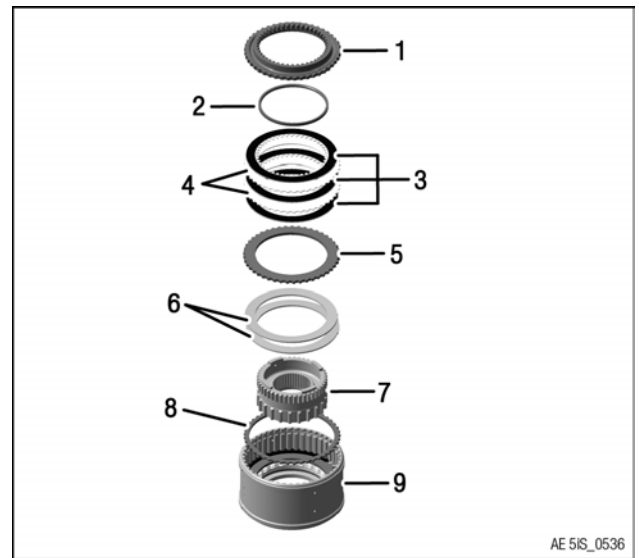


Figure 6.26: TYPICAL

- 1 Driving collar
- 2 Spacer ring
- 3 Friction plate 1.54 mm
- 4 Steel friction plate 1 mm

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

- |   |                           |   |              |
|---|---------------------------|---|--------------|
| 5 | Steel friction plate 3 mm | 6 | Disk springs |
| 7 | Clutch hub                | 8 | Support ring |
| 9 | Clutch drum               |   |              |

**PROPELLER SIDE**

Step	Procedure
1	Place the damper clutch on the centering plate part no. 276954 and insert the centering ring part no. 276950.

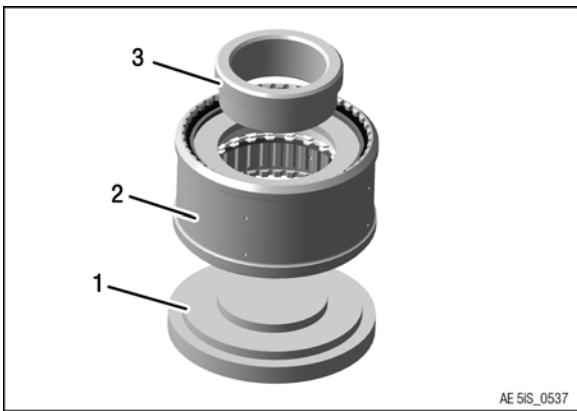


Figure 6.27: TYPICAL

- |   |                        |   |               |
|---|------------------------|---|---------------|
| 1 | Centering plate 276954 | 2 | Damper clutch |
| 3 | Centering ring 276950  |   |               |

Step	Procedure
2	Press clutch assy. with insertion jig part no. 276952 until the circlip ring is free for removal.
3	To remove the retaining ring take a pin with a diameter of max. 3 mm (0.12 in.) and push it through the existing bore on the clutch drum. Then remove the retaining ring using a small screwdriver.

**NOTE**

*If necessary, the retaining ring can be turned to reach it through the bore of the clutch drum.*

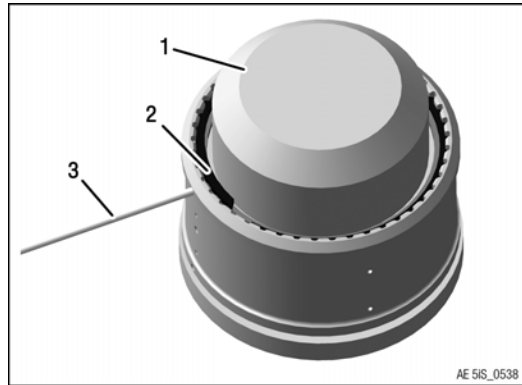


Figure 6.28: TYPICAL

- |   |               |   |                |
|---|---------------|---|----------------|
| 1 | Insertion jig | 2 | Retaining ring |
| 3 | Pin           |   |                |

Step	Procedure
4	Now the damper clutch can be disassembled on the propeller side.

**NOTE**

*Remove retaining ring inside the clutch drum only if necessary.*

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

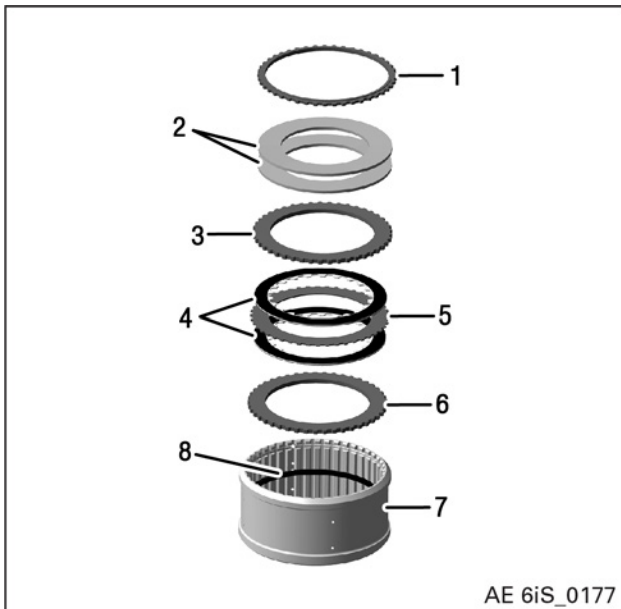


Figure 6.29: TYPICAL

- |                    |                          |
|--------------------|--------------------------|
| 1 Support ring     | 2 Disk springs           |
| 3 Steel plate 3 mm | 4 Friction plate 1.54 mm |
| 5 Steel plate 1 mm | 6 Steel plate 3 mm       |
| 7 Clutch drum      | 8 Retaining ring         |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSPECTION**

**PROPELLER GEARBOX  
 SINGLE PARTS — INSPECTION**

**Preparation**



Clean all parts carefully. See current Maintenance Manual Line (MML) for the respective engine type.



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.

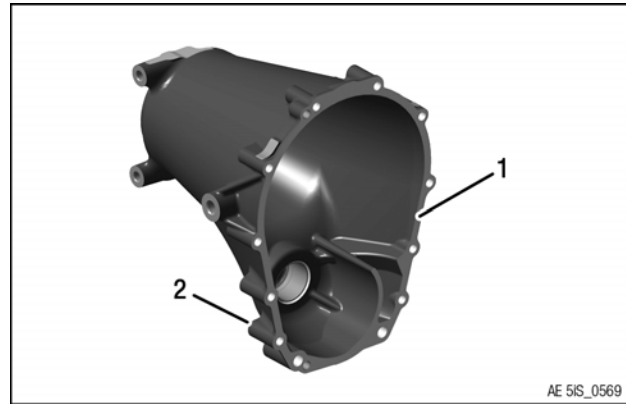


Figure 6.30

1 Flat sealing surface    2 Contact surface

**GEAR COVER ASSY. - INSPECTION**

Step	Procedure
1	Inspect the gear cover for cracks.

**NOTE**

*Only carry out in the case of prop strike!*

Step	Procedure
2	Inspect gear cover for damage. <ul style="list-style-type: none"> <li>• Depressions and scratches outside flat and sealing surfaces up to a maximum of 0.5 mm (0.020 in.) in depth and 2 mm (0.078 in.) in diameter are permissible.</li> <li>• Traces of corrosion and pitting outside sealing surfaces up to a maximum of 0.3 mm (0.012 in.) in depth and 2 mm (0.078 in.) in diameter are permissible.</li> </ul>
3	Inspect contact surfaces for Allen screws. <ul style="list-style-type: none"> <li>• Indentations up to a maximum of 0.2 mm (0.008 in.) are permissible.</li> <li>• Bumps up to a maximum of 0.2 mm (0.008 in.) are permissible.</li> </ul>

Step	Procedure
4	Inspect that the bearing bushing for supporting the crankshaft in the gear cover is secure and measure dimension (GB01). See <a href="#">Chapter 72-10-00 section Wear limits</a> .

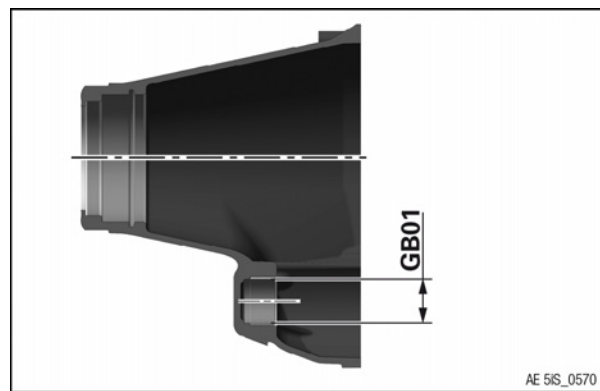


Figure 6.31: Bearing bushing



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## PROPELLER SHAFT — INSPECTION

NOTICE
<p><b>The entire propeller shaft including fastening bores must be free from corrosion; there must be no fretting corrosion at the bearing points.</b></p>

Step	Procedure
1	Measure bearing seat. See <a href="#">Chapter 72-10-00 section Wear limits (GB02 and GB03)</a>
2	Roll the propeller shaft and check for run-out. Check the axial runout of the propeller flange. See <a href="#">Chapter 72-10-00 section Wear limits (GB04)</a>
3	Check the oil seal running surface for scratches and wear.

### NOTE

*The ball bearing must have an interference fit between the outer ring and the gearbox housing, and between the inner ring and the propeller shaft. See [Chapter 72-10-00 section Wear limits](#).*

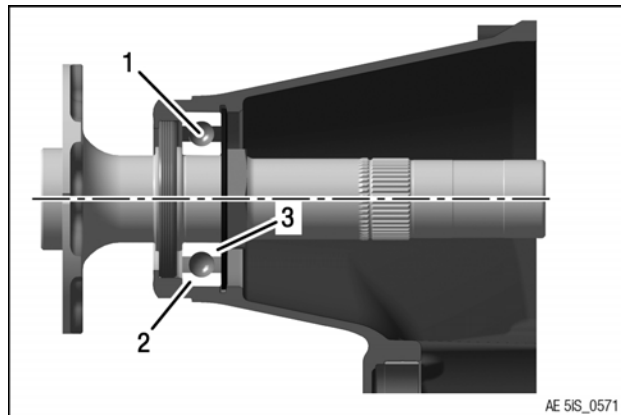


Figure 6.32

- |                |              |
|----------------|--------------|
| 1 Ball bearing | 2 Outer ring |
| 3 Inner ring   |              |

Step	Procedure
4	Check the groove for the retaining ring and spline for wear and damage.

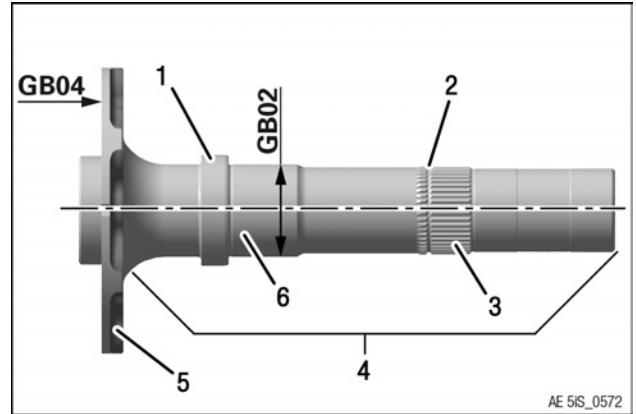


Figure 6.33

- |                            |                             |
|----------------------------|-----------------------------|
| 1 Oil seal running surface | 2 Groove for retaining ring |
| 3 Gear-tooth system        | 4 Propeller shaft           |
| 5 Propeller flange         | 6 Ball bearing seat GB02    |

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### Treatment of corrosion damage and surface damage on the propeller flange.

See [Chapter 72-10-00 section Wear Limits](#)

The flange of the propeller shaft is susceptible to flash rust. After the propeller shaft has been covered with an adhesive plastic tape or a plastic tube, the propeller flange can be treated with a blasting medium.

#### NOTICE

**To apply the protective paint, carefully cover the flange surface, fastening bores and the propeller shaft.**

To prevent corrosion damage, the rear of the propeller flange should be coated with a layer of anti-corrosion paint.

In the event of more severe corrosion damage which has affected the material, the propeller shaft must be replaced.

### OVERLOAD CLUTCH — INSPECTION

Step	Procedure
1	Check the overload clutch visually for damage and wear.
2	Check the overload clutch visually for any deposits (e.g. lead from AVGAS).
3	Measure GB03, see <a href="#">Chapter 72-10-00 section Wear limits</a> .

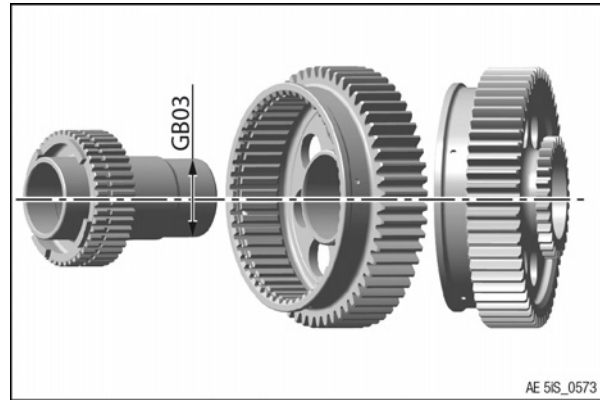


Figure 6.34

Step	Procedure
4	Check the steel friction plates and the sinter friction plates for wear and discoloration (heat).
5	Measure the thickness of the steel friction plates and the sinter friction plates (GB17); see <a href="#">Chapter 72-10-00 section Wear limits</a> .
6	Check disc springs (GB18), see <a href="#">Chapter 72-10-00 section Wear limits</a> .

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

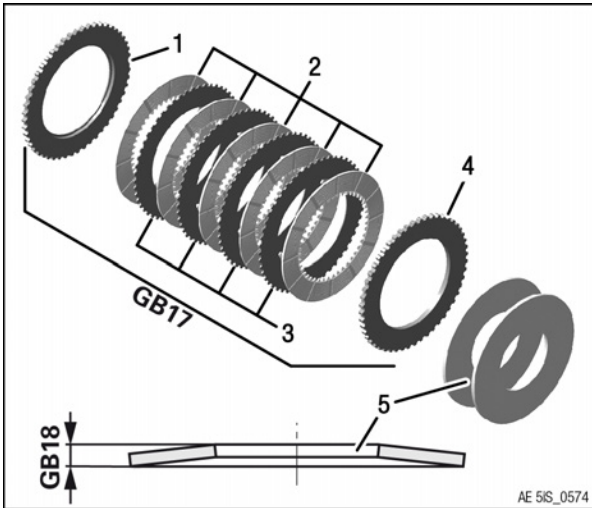


Figure 6.35

- |   |  |
|---|--|
| <p>1 Steel friction plate 4.0 mm</p> <p>3 Steel friction plate 1.0 mm</p> <p>5 Disc springs</p> | <p>2 Sinter friction plate 1.8 mm</p> <p>4 Steel friction plate 4.0 mm</p> |
|---|--|

**DAMPER CLUTCH — INSPECTION**

Step	Procedure
1	Check the damper clutch visually for damage and wear.
2	Check the damper clutch visually for any deposits (e.g. lead from AVGAS)

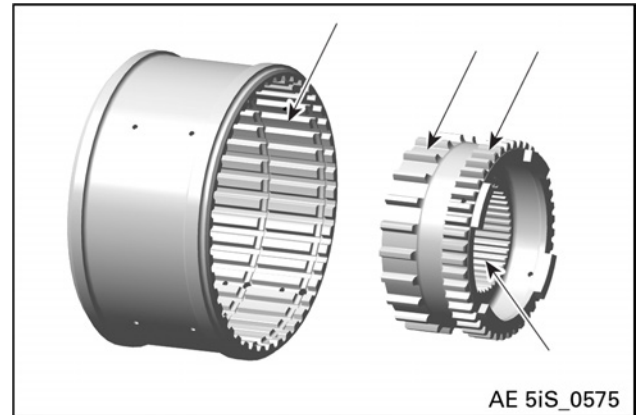


Figure 6.36

Step	Procedure
3	Check the steel friction plates and friction plates for wear and discoloration (heat).
4	Measure the thickness of the steel friction plates and the friction plates (GB19 +GB22); see <a href="#">Chapter 72-10-00 section Wear limits</a> .
5	Check disc springs (GB20-21), see <a href="#">Chapter 72-10-00 section Wear limits</a> .

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

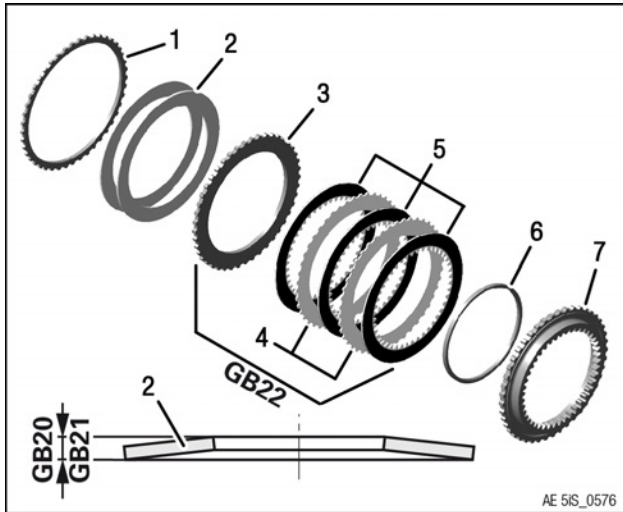


Figure 6.37

**TORSION BAR - INSPECTION**

NOTICE	
<b>Torsion bar must not be reworked.</b>	

Step	Procedure
1	Check for corrosion and damage, if necessary exchange complete torsion bar.

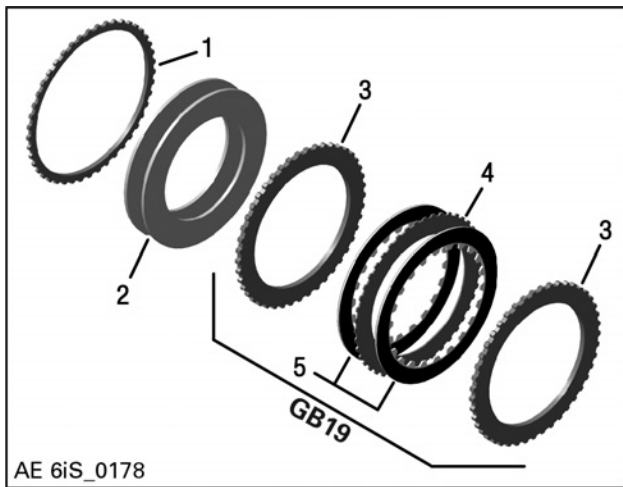


Figure 6.38

- |                             |                             |
|-----------------------------|-----------------------------|
| 1 Support ring              | 2 Disc springs              |
| 3 Steel friction plate 3 mm | 4 Steel friction plate 1 mm |
| 5 Friction plate 1.54 mm    | 6 Spacer ring               |
| 7 Driving collar            |                             |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## CHECKING THE SPLINES

There are 4 essential splined shaft connections in the gearbox.

1. Propeller shaft to damper clutch.
2. Torsion shaft to propeller shaft.
3. Torsion shaft to overload clutch.
4. Crankshaft to drive gear GB 07 / GB23.

### NOTE

*To check the splines, determine the tooth widths at the tip circle of the respective inner or outer gear-tooth system. The smallest value in each case is significant.*

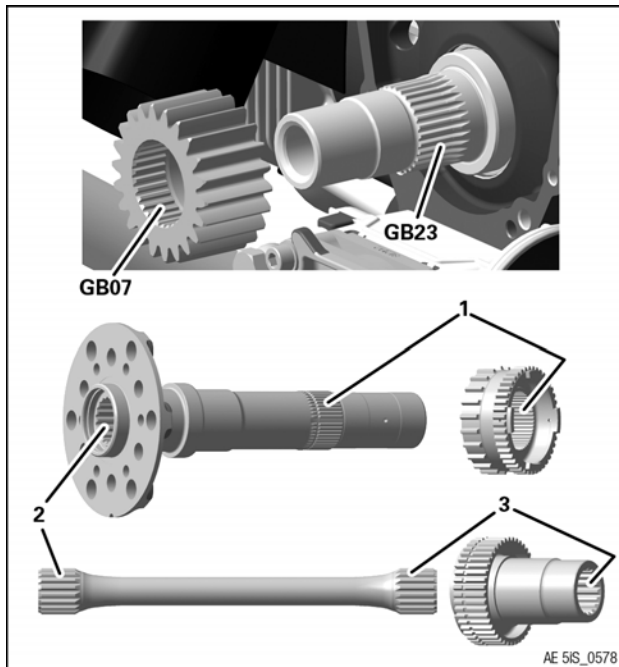


Figure 6.39

### NOTE

*If tolerance of splines in overload clutch are on minimum tolerance and splines of torsion bar on maximum tolerances it can happen that overload clutch cannot be pushed by hand on torsion bar. In such case use a mallet and hit slightly on the overload clutch.*

Step	Procedure
1	Check crankshaft to drive gear, see <a href="#">Chapter 72-10-00 section wear limits</a> .
2	Check the splines of propeller shaft, torsion bar, overload clutch and damper clutch visually for damage and wear. If the tooth flank is worn, replace the part. The spline pair propeller shaft and damper clutch has clearance from new.

### NOTE

*The torsion bar must have tight fit into propeller shaft and overload clutch.*

## CHECKING THE GEAR SET

The gear set is checked to identify any damage to the gear-tooth system.

### NOTICE

**Check all the tooth flanks for any damage or pitting.**

### NOTE

*If the gearbox is installed, it is also possible to check the gear set using an endoscope. This must be done in such a manner that an **exact assessment** of the tooth flanks is possible and requires experience.*

### Pitting

Pitting is damage which is attributable to fatigue of the material. As far as is known today, this is caused when the Hertzian stress permissible for the material in question is exceeded, the tangential stress on the surface (friction stress) and temperature stress. As well as the material and the heat treatment of it, the surface quality and structure, surface treatment and lubricant (viscosity at operating temperature and additives) are also important.

### NOTE

*The likely location of pitting formation is the dedendum flank of the driving gear. Therefore, begin by checking the drive gear.*

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### Pitting in the gearbox

Pitting in the gearbox can cause high-frequency vibrations. This vibration can cause several problems as it is transferred via the engine to the connected parts:

- Wear on the gearbox (gear profile and contact faces)
- External accessories
- Wear on the exhaust system
- Leaking of the sealing surface of the crankcase

### NOTE

*Vibration can be detected with a dynamic engine analysis; these are units which are also used to balance propellers. **If the propeller cannot be balanced suspect pitting of the gear.***

### PITTING, GENERAL INFORMATION

#### NOTE

*When pitting occurs it is necessary to distinguish between **tolerable initial pitting** and **flake pitting**. To make the assessment easier for you, see the following assessment tips.*

Pitting is the breaking off of more or less small, flat material particles from the active tooth flank. Whereas tooth breakage results in failure of the gearbox, this is not the case for pitting damage. There are in this case different stages of damage.

#### Rate of development

The rate of development depends on the lubricant and amount of stress. The pitting surface can become so large that the remaining undamaged flank can no longer transfer the load. During further operation the gear-tooth system is then completely destroyed.

#### NOTE

*Fine pitting or pitted areas hardly affect the running behavior of the gear-tooth system at all.*

The rule is however pitting damage which increases over time.

A distinction can be made according to the size, type and number of pitting, as follows.

- Slight pitting (initial pitting)
- Destructive pitting
- Flake pitting (large-area flank fractures)

### SLIGHT PITTING

#### Features:

Individual small pits (up to approx. 0.5% of the flank area) or pore-like areas of pitting, generally only present in the dedendum area of the flank. This pit formation can cease during the operating phase of the gearbox.

#### Causes:

Locally high stresses in gears which have not yet run in can result in isolated pits. The adjustable running-in wear which results in these areas being relieved of stress, as a result of which the formation of pits can cease. Similarly, changed operating conditions can prevent pits which have already formed from developing.

#### Conclusion:

These pits are not important for safe operation. The gear set can still be used.

#### NOTE

*The illustrations are sometimes not very informative due to fine pitting or the printing process. If in doubt, consult technical literature or contact the ROTAX® Authorized Distributor or their independent Service Centers.*

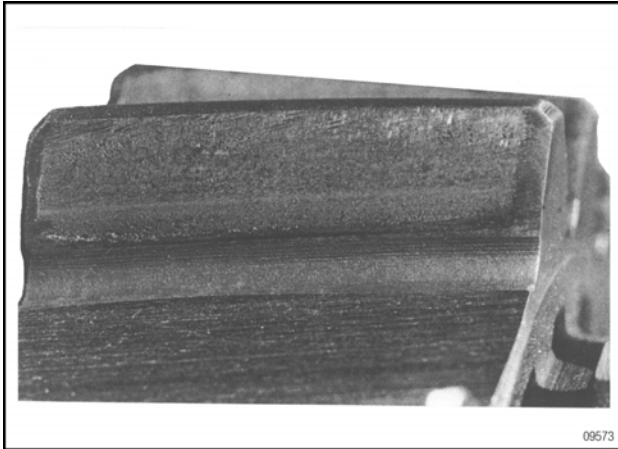


Figure 6.40: Magnification: approx. 2x

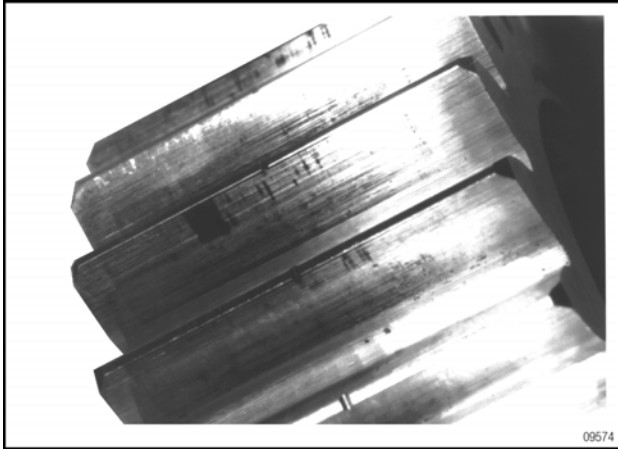


Figure 6.41: Magnification: approx. 1.5x

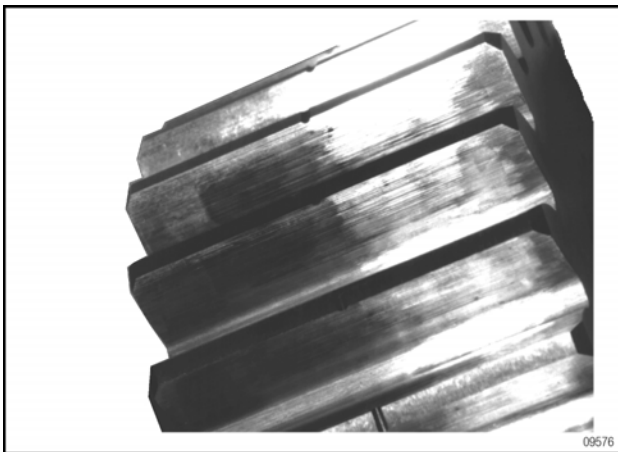


Figure 6.42: Magnification: approx. 1.5x

## DESTRUCTIVE PITTING

### Features:

Extensive flank fractures, generally occurring as zones of pitting. The bottom of the fracture generally has a mussel-shaped structure. The total pitting area can be so great that the running smoothness is noticeably affected and/or the remaining flank area which still bears the load is rapidly destroyed by wear etc.

### Causes:

Pitting is attributable to the fatigue of the material due to combined stresses from compression and sliding. They are triggered when the material strength is exceeded locally. Essential influences on pit strength are: oil viscosity and oil temperature.

### Conclusion:

Pitting of up to 5% of the flank area is permissible if the individual flank fractures do not exceed a size (greatest longitudinal extent) of 0.5 mm. Otherwise the gear set must be replaced.

### NOTICE

**The whole gear set must always be replaced. Dog hubs or drive gears must not be replaced individually.**

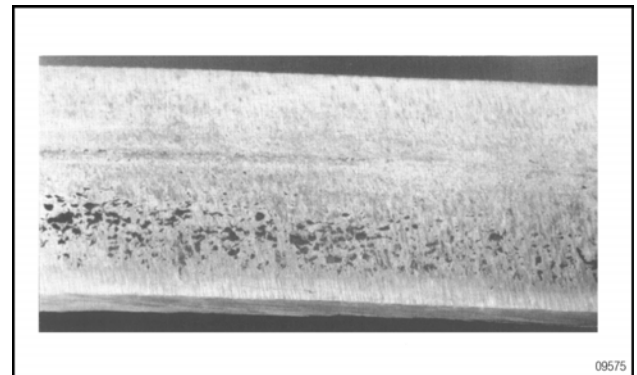


Figure 6.43: Magnification approx. 5x.

*Pitted area in the root flank region of a spur gear.*



# BRP-Rotax MAINTENANCE MANUAL HEAVY

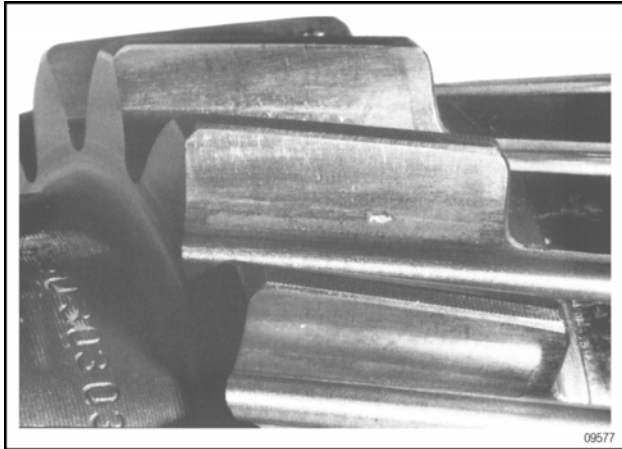


Figure 6.44: Magnification approx. 1.5x.

*Pit formation in the root region of a spur gear tooth system*

## FLAKE PITTING (LARGE-AREA FLANK FRACTURES)

See the following figures.

### Features:

A large-area, triangular flank fracture emanating from a micropitting zone or a fine line of pits in the tooth dedendum. The fracture area has a relatively constant depth. Further cracks can run obliquely over the flank from the fracture. The damage sometimes extends into the addendum region, which results in breakage of the tooth tip.

### NOTICE

**If flake pitting is found, the gear set must be replaced.**

Max. permissible pitting or flake pitting. See [Destructive pitting](#).

### NOTICE

**The whole gear set must always be replaced.  
Gears must not be replaced individually.**

### Causes:

This pattern of damage generally occurs at low operating oil viscosities and/or high oil temperatures. Apart from these, the same causes apply as for pitting.

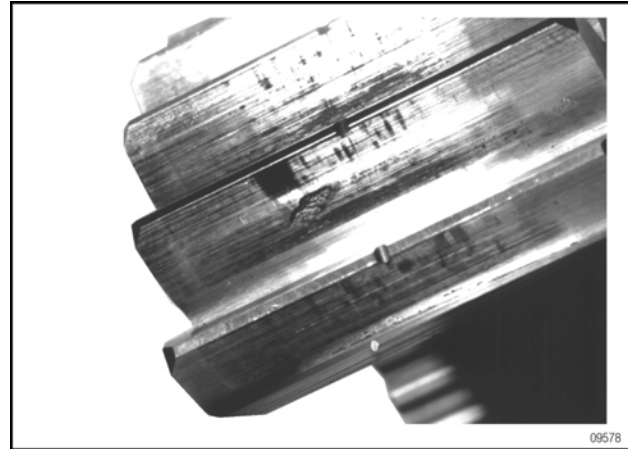


Figure 6.45: Magnification approx. 2x.

*Triangular flake pitting*

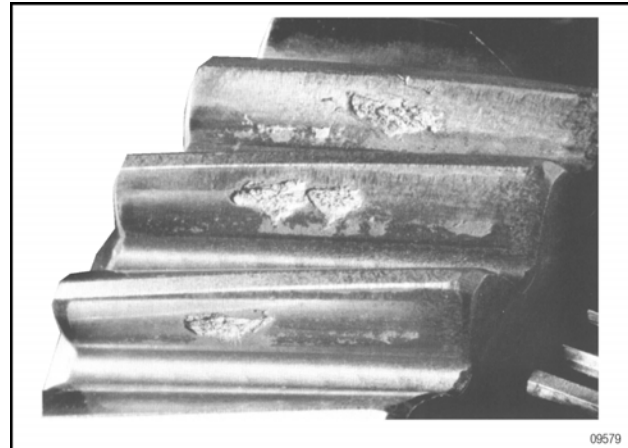


Figure 6.46: Magnification approx. 2x.

*Triangular flake pitting*



BRP-Rotax  
MAINTENANCE MANUAL HEAVY

**WEAR LIMITS**


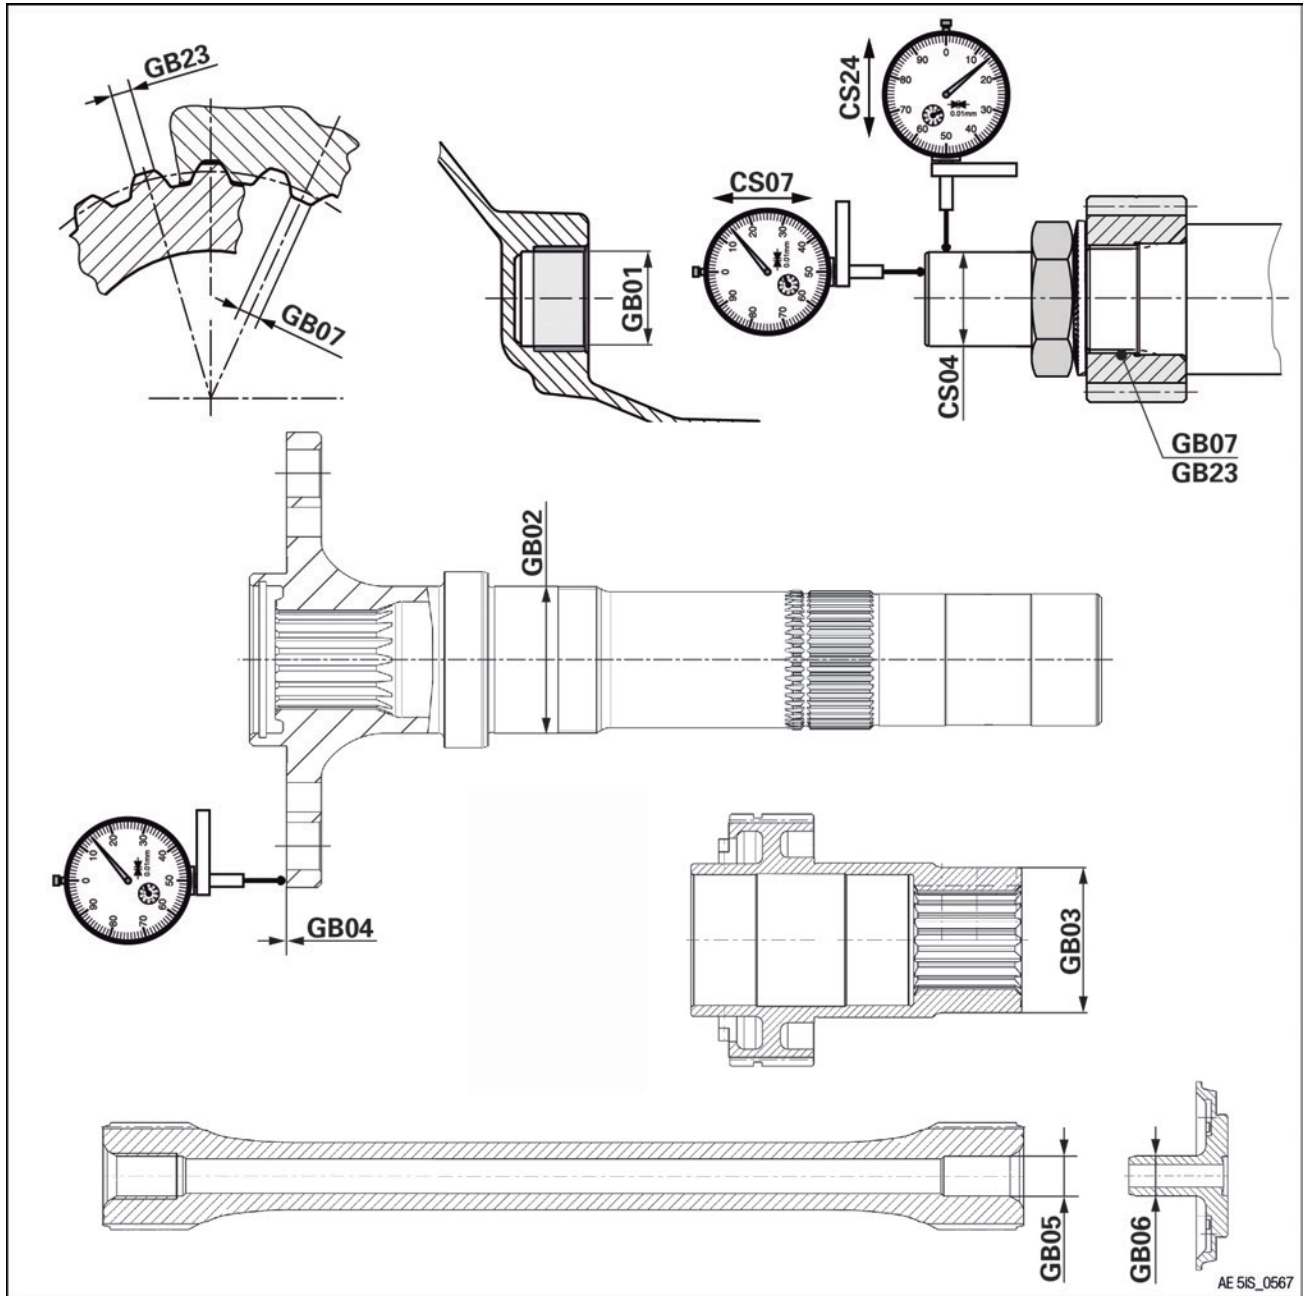


Figure 6.47: Wear limits

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

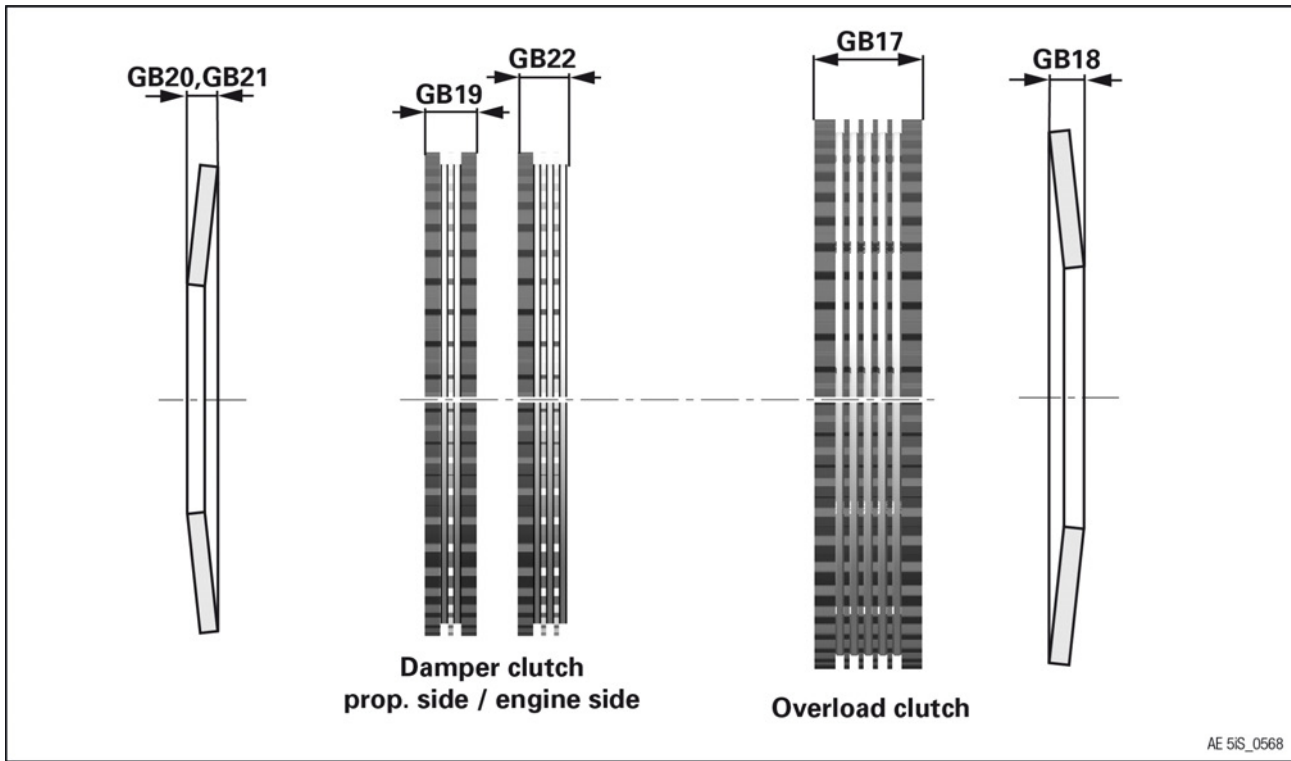

AE 5IS\_0568

Figure 6.48: Wear limits

Description	Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements
		min	max				
<b>Propeller gearbox</b>							
<b>1. Bearing bushing in gear cover</b>							
Bore crankshaft	GB01	28.04 mm 1.1039 in.	28.05 mm 1.1044 in.	28.10 mm 1.1063 in.	28.07 mm 1.1051 in.	current replaced	
Radial clearance	GB01/ CS04	0.04 mm 0.0016 in.	0.06 mm 0.0025 in.	0.12 mm 0.0047 in.	0.09 mm 0.0035 in.	current replaced	
<b>2. Propeller shaft</b>							
Shaft diameter 40 mm	GB02	40.009 mm 1.5751 in.	40.020 mm 1.5755 in.	40.001 mm 1.5748 in.	40.005 mm 1.5750 in.	current replaced	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description	Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements
		min	max	100 %	50 %		
Radial run-out, propeller flange at Ø 122 mm	GB04	0.000 mm 0.000 in.	0.050 mm 0.0020 in.	0.060 mm 0.0024 in.	0.055 mm 0.0022 in.	current replaced	
<b>3. Intermediate shaft</b>							
Shaft diameter 40 mm	GB03	39.989 mm 1.5744 in.	40.000 mm 1.5748 in.	39.970 mm 1.5736 in.	39.980 mm 1.5740 in.	current replaced	
<b>4. Torsion shaft</b>							
Bore at rear end of torsion shaft	GB05	11.00 mm 0.4331 in.	11.02 mm 0.4339 in.			current replaced	
Journal diameter at oil inlet flange	GB06	10.935 mm 0.4305 in.	10.960 mm 0.4315 in.			current replaced	
Radial clearance, bore/journal	GB05/ GB06	0.040 mm 0.0016 in.	0.084 mm 0.0033 in.	0.160 mm 0.0063 in.	0.122 mm 0.0048 in.	current replaced	
<b>5. Crankshaft</b>							
Crankshaft axial clearance	CS07	0.08 mm 0.0031 in.	0.32 mm 0.0126 in.	0.50 mm 0.0197 in.		current replaced	
Crankshaft out of round assembled in crankcase, drive gear mounted	CS24	0.000 mm 0.0000 in.	0.060 mm 0.0024 in.	0.080 mm 0.0031 in.		current replaced	
Shaft diameter 28 mm	CS04	27.990 mm 1.1019 in.	28.000 mm 1.1024 in.	27.950 mm 1.1004 in.		current replaced	
<b>6. Tooth profile</b>							
Crankshaft	GB23	0.95 mm 0.037 in.	1.00 mm 0.037 in.	0.80 mm 0.031 in.	0.88 mm 0.034 in.	current replaced	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description	Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements
		min	max	100 %	50 %		
Drive gear	GB07	0.95 mm 0.037 in.	1.00 mm 0.037 in.	0.80 mm 0.031 in.	0.88 mm 0.034 in.	current replaced	

**7. Gear set**

Drive gear pitting up to 5% of flank area	GB14	0.0 %	0.0 %	5.0 %	2.5 %	current replaced	
Dog gear pitting up to 5% of flank area	GB15	0.0 %	0.0 %	5.0 %	2.5 %	current replaced	

**8. Overload clutch**

Height of clutch plates (4 frict., 5 steel 1mm, 2 steel thrust washer plates 4mm)	GB17	20.49 mm 0.807 in.	21.51 mm 0.847 in.	18.50 mm 0.728 in.	19.50 mm 0.768 in.	current replaced	
Free height of disc springs	GB18	6.50 mm 0.256 in.	6.70 mm 0.264 in.	6.00 mm 0.236 in.	6.25 mm 0.246 in.	current replaced	

**9. Damper clutch**

Height of clutch plates prop-side 1 (3 frict, 2 steel, 1mm, 1 steel 3mm)	GB22	9.30 mm 0.575 in.	9.94 mm 0.613 in.	8.90 mm 0.350 in.	9.10 mm 0.358 in.	current replaced	
Free height of disc springs prop-side	GB20	3.34 mm 0.131 in.	3.55 mm 0.140 in.	3.10 mm 0.122 in.	3.22 mm 0.127 in.	current replaced	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Height of clutch plates prop-side (2 frict, 1 steel 1mm 2 steel 3mm)	GB19	9.80 mm 0.386 in.	10.36 mm 0.408 in.	9.30 mm 0.366 in.	9.55 mm 0.376 in.	current replaced	
Free height of disc springs engine-side	GB21	4.72 mm 0.186 in.	4.95 mm 0.195 in.	4.30 mm 0.169 in.	4.50 mm 0.177 in.	current replaced	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**ASSEMBLY**

**BALL BEARING - INSTALLATION**

Step	Procedure
1	Press the new oil seal AS 48x72x8 into the gearbox housing (from inside) using insertion jig part no. 877650 and press-in mushroom part no. 276964.

**NOTE**

*Lubricate sealing lips with engine oil.*

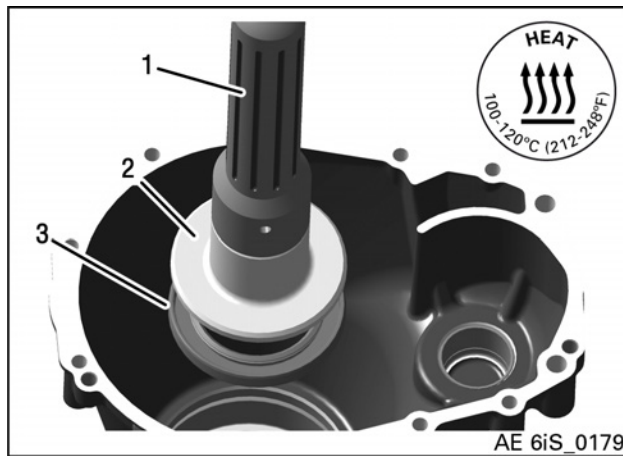


Figure 6.49

- 1 Insertion jig 877650      2 Press-in mushroom 276964
- 3 Oil seal AS 48x72x8

Step	Procedure
2	Insert the new ball bearing into the gearbox housing using insertion jig. part no. 877650 and press-in mushroom part no. 276966.  <b>NOTE</b> <i>The balls of the ball bearing must be visible - cage facing the propeller side.</i>

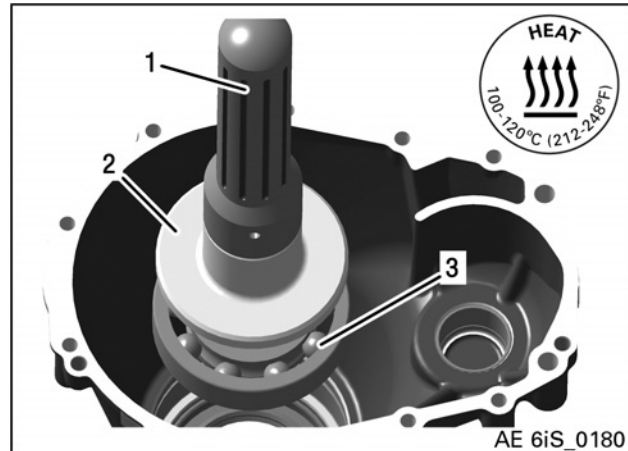


Figure 6.50

- 1 Insertion jig 877650      2 Press-in mushroom 276966
- 3 Ball bearing

Step	Procedure
3	Install the retaining ring with circlip pliers.  <b>NOTE</b> <i>Place the circlip in the groove with the sharp edge pointing to the bearing.</i>

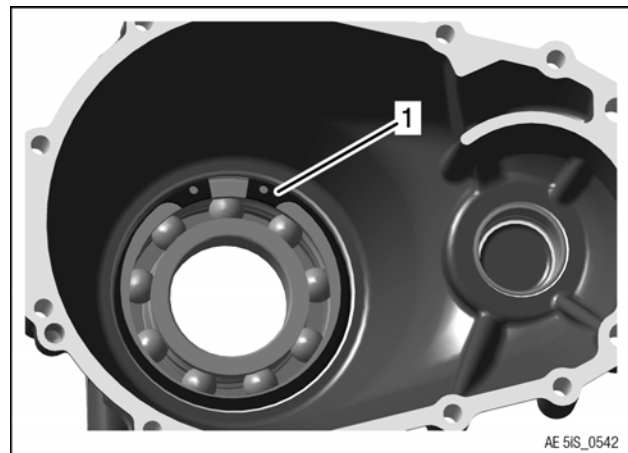


Figure 6.51

- 1 Retaining ring

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## PROPELLER SHAFT — INSTALLATION

### Preparation

- Use a hand operated hydraulic press or similar.
- Place the propeller shaft with the gearbox housing placed on it onto a suitable flat support.
- Lubricate the propeller shaft with LOCTITE ANTI SEIZE on the bearing seat.

Step	Procedure
1	Press propeller shaft into gearbox housing using the special tool part no. 276972.  <b>NOTE</b> <i>Do not use high forces for propeller shaft installation, only press-in with the special tool part no. 276972.</i>

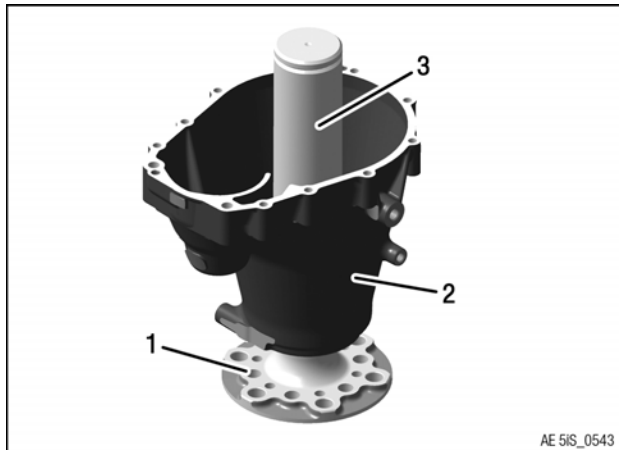


Figure 6.52

- 1 Propeller shaft      2 Propeller gearbox  
3 Special tool 276972

Step	Procedure
2	Install gearbox on support plate part. no. 276958, fix both in the bench vice.
3	Secure M40x1.5 collar nut with LOCTITE 603 and tighten it. with a special tool part no. 276006. Tightening torque 150 Nm (111 ft.lb.).

### NOTE

*Do not forget to mount the protection mushroom on propeller shaft.*

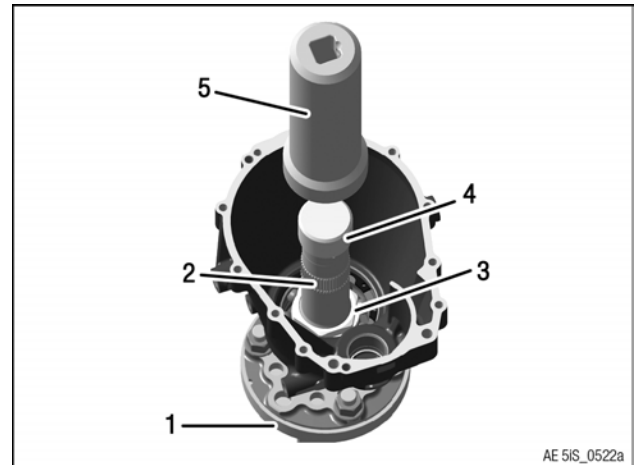


Figure 6.53

- 1 Support plate      2 Propeller shaft  
3 Collar nut M40x1.5      4 Protection mushroom  
5 Special tool 276006

Step	Procedure
4	Install the retaining ring A38 on the propeller shaft with special tool part no. 276968.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

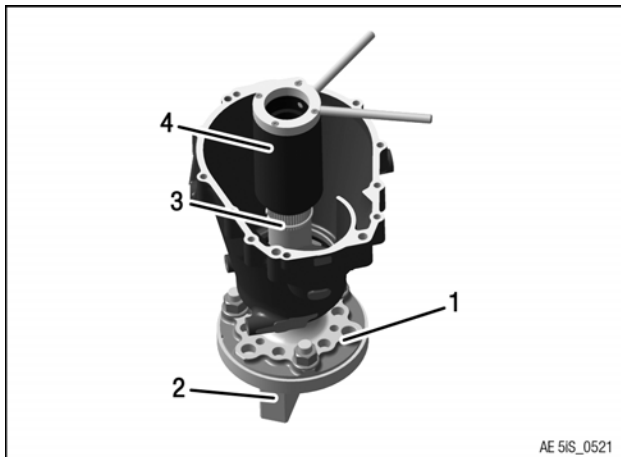


Figure 6.54

- 1 Propeller shaft                      2 Support plate
- 3 Retaining ring                      4 Special tool 276968

**TORSION SHAFT — INSTALLATION**

**NOTE**

*Hex. screw M12x20 is different between config. 2 and config. 3.*

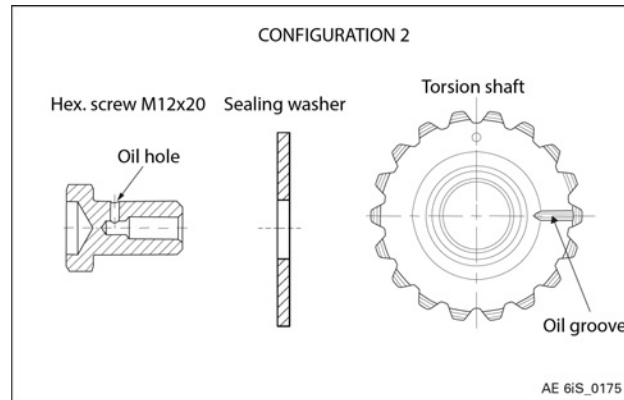


Figure 6.55

Step	Procedure
1	Lubricate the torsion shaft with LOCTITE ANTI SEIZE.
2	Position of the teeth is defined with two marks, see following figure.
3	Install the torsion shaft into the propeller gearbox (propeller shaft).



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

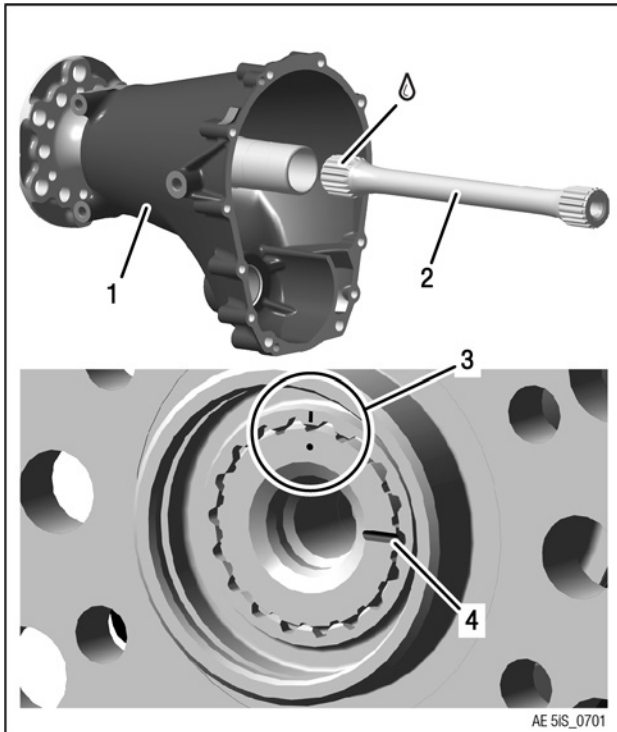


Figure 6.56

- 1 Gearbox housing
- 2 Torsion shaft
- 3 Marking
- 4 Oil groove

Step	Procedure
4	Install new O-ring 33x3, sealing washer 40x12.1x2.5 (with sharp edge showing upwards) and retaining ring 40x1.75.
5	Hand tighten the hex. screw M12x20 with sealing ring A12x16.

**NOTE**

*Hex. screw M12x20 is different between config. 2 and config. 3.*

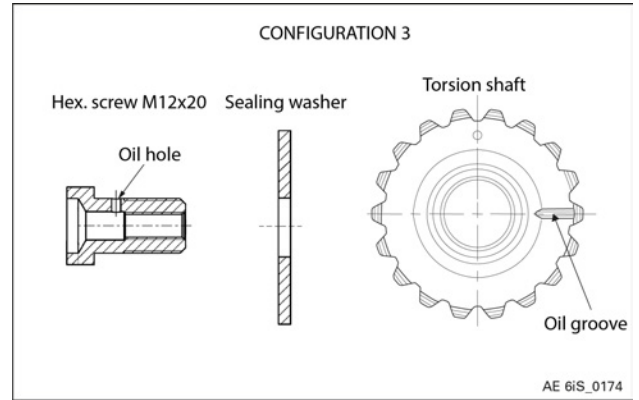


Figure 6.57

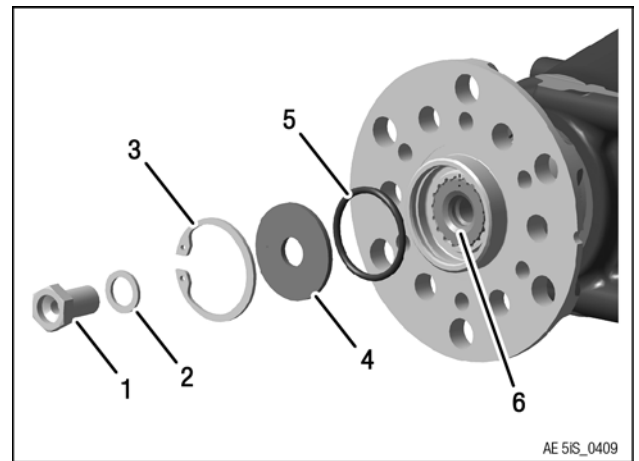


Figure 6.58: TYPICAL

- 1 Hex. screw M12x20
- 2 Sealing ring A12x16
- 3 Retaining ring 40x1.75
- 4 Sealing washer 40x12.1x2.5
- 5 O-ring 33x3
- 6 Torsion shaft

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**OVERLOAD CLUTCH ASSY. -  
 ASSEMBLY**

**NOTE**

*For assembly use a hand operated hydraulic press or similar.*

**NOTE**

*Lubricate all components with engine oil before assembly.*

Step	Procedure
1	Lay overload clutch assy. on the insertion jig part no. 276974.

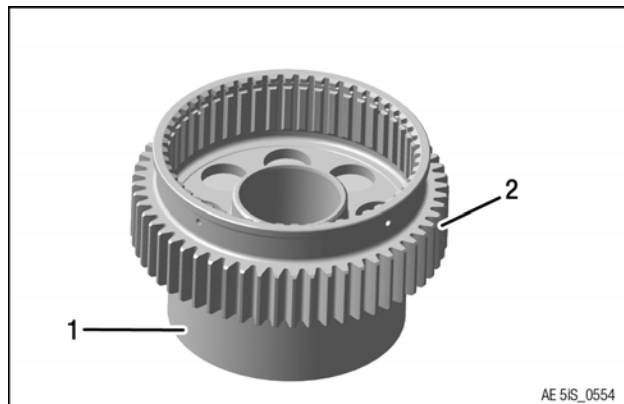


Figure 6.59

- 1 Insertion jig part no. 276974      2 Overload clutch assy.

Step	Procedure
2	Assemble clutch package as shown in following figure.  <b>NOTE</b> <i>Install disc springs contrary to each other.</i>

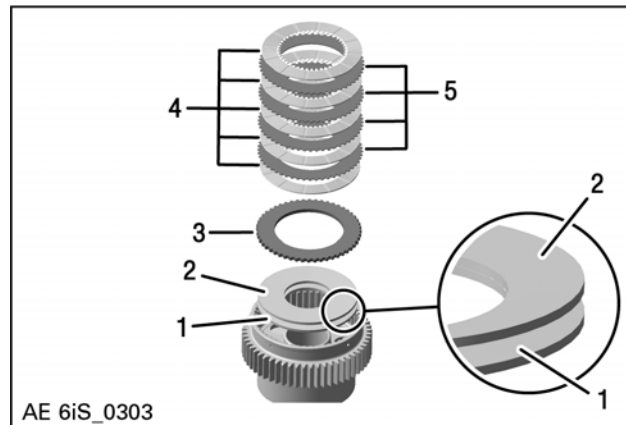


Figure 6.60

- 1 Disc spring 102x49x3.1      2 Disc spring 102x49x2.9  
 3 Steel friction plates 4 mm      4 Sinter friction plates 1.8 mm (5 pcs.)  
 5 Steel friction plates 1 mm (4 pcs.)

Step	Procedure
3	Align the friction plates with auxiliary tool (self-made pin).

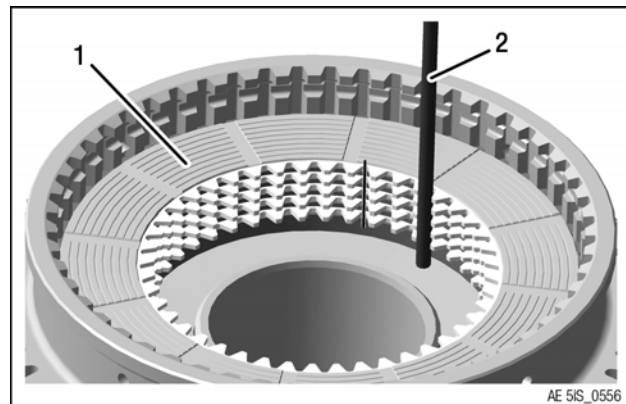


Figure 6.61

- 1 Friction plates      2 Auxiliary tool (self-made pin)

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
4	Install clutch hub. Check if circlip SW 68 is installed.
5	Install steel friction plate 4 mm with groove facing to the bottom.

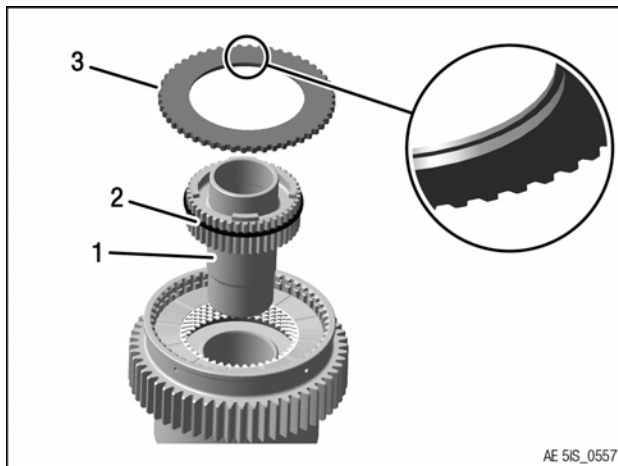


Figure 6.62

- 1 Clutch hub                      2 Circlip SW 68  
 3 Steel friction plate 4 mm

Step	Procedure
6	Insert centering ring part no. 276950.
7	Press damper clutch assy. with insertion jig part no. 276952.
8	Insert circlip SB 105 and release damper clutch assy.

**NOTE**

*Check the alignment of clutch hub once again. It must be free to move.*

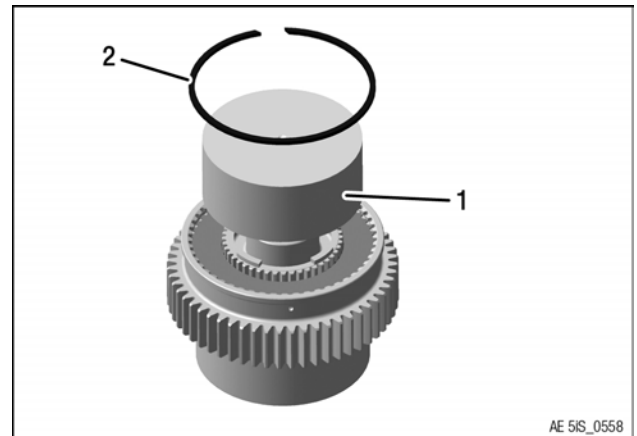


Figure 6.63

- 1 Insertion jig part no. 276952                      2 Circlip SB 105

**DAMPER CLUTCH ASSY. - ASSEMBLY**

**NOTE**

*For assembly use a hand operated hydraulic press or similar.*

**NOTE**

*Before assembly, lubricate all components with engine oil.*

Step	Procedure
1	Check if circlip SB 93 is installed and lay the clutch drum on the centering plate.  <b>NOTE</b> <i>Begin with damper clutch assy. (big chamfer) on propeller side.</i>
2	Insert the clutch hub loosely into the clutch drum (for aligning the friction plates).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

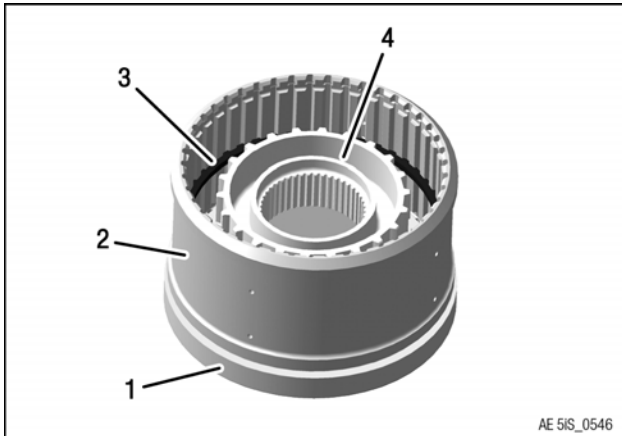


Figure 6.64

- 1 Centering plate part no. 276954
- 2 Clutch drum.
- 3 Circlip SB 93
- 4 Clutch hub

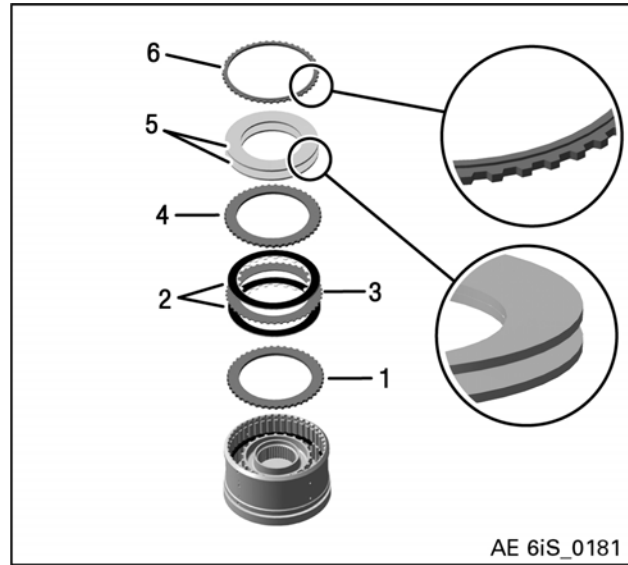


Figure 6.65

- 1 Steel friction plate 3 mm
- 2 Friction plates 1.54 mm (2 pcs.)
- 3 Steel friction plates 1 mm
- 4 Steel friction plate 3 mm
- 5 Disc springs (contrary)
- 6 Support ring

Step	Procedure
3	<p>Assemble clutch package as shown in following figure.</p> <p><b>NOTE</b></p> <p><i>Observe the correct position of the support ring (projection is facing to the top).</i></p> <p><b>NOTE</b></p> <p><i>Install disc springs contrary to each other.</i></p>

Step	Procedure
4	<p>Remove clutch hub.</p> <p><b>NOTE</b></p> <p><i>Friction plates have to be in perfect alignment with each other.</i></p>

# BRP-Rotax MAINTENANCE MANUAL HEAVY

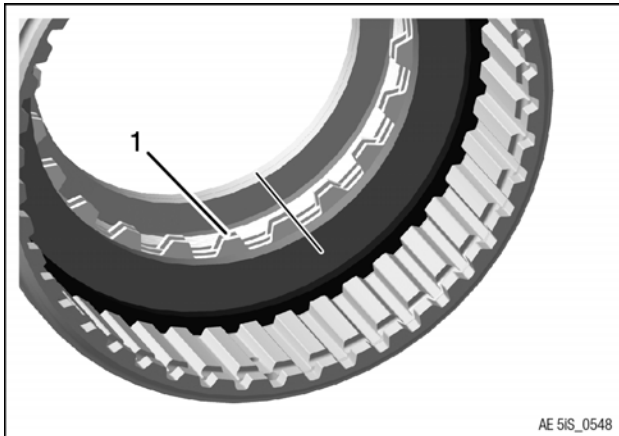


Figure 6.66: TYPICAL

1 Friction plates

Step	Procedure
5	Insert centering ring part no. 276950.
6	Press damper clutch assy. with insertion jig part no. 276952.
7	Insert circlip and release damper clutch assy.
	<b>NOTE</b> <i>Check the alignment of friction plates once again.</i>

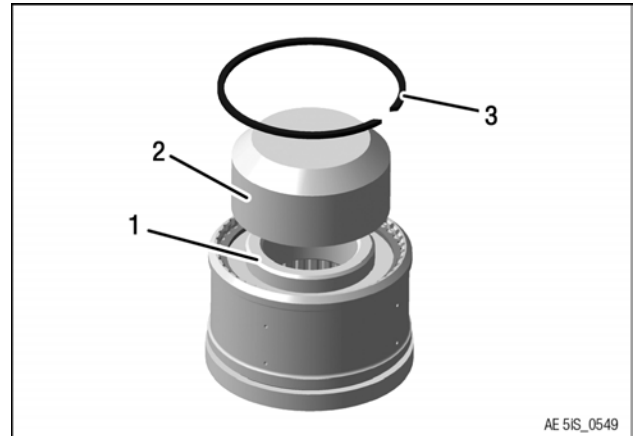


Figure 6.67: TYPICAL

- 1 Centering ring part no. 276950      2 Insertion jig part no. 276952  
3 Circlip SB 93

Step	Procedure
8	Lay clutch drum on centering plate part no. 276956 and install the clutch hub.

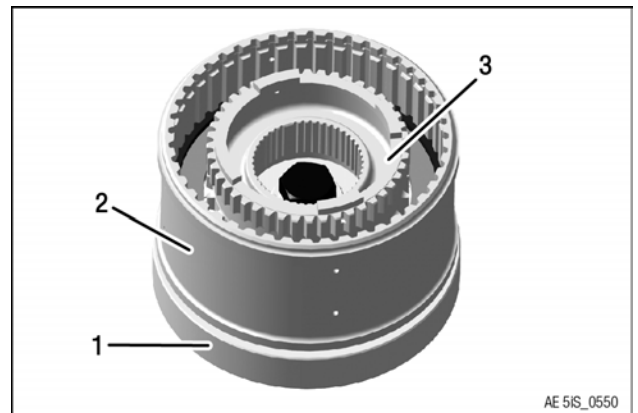


Figure 6.68: TYPICAL

- 1 Centering plate part no. 276956      2 Clutch drum  
3 Clutch hub

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
9	Assemble clutch package as shown in following figure.  <b>NOTE</b> <i>Observe the correct position of the support ring (projection is facing to the bottom).</i>  <b>NOTE</b> <i>Install disc springs contrary to each other.</i>

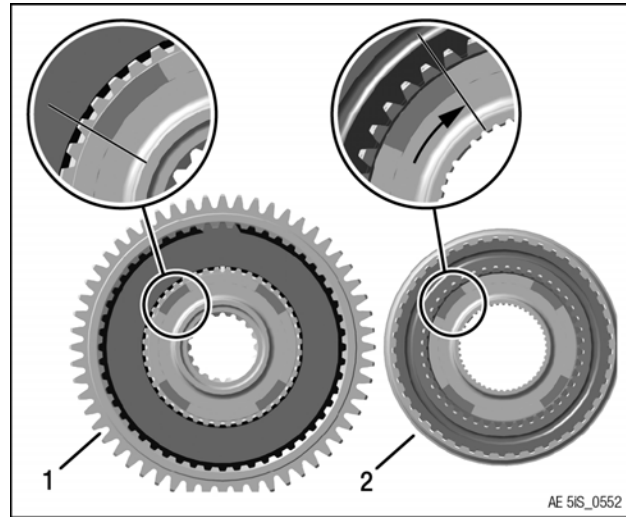


Figure 6.70

1 Overload clutch assy. 2 Damper clutch assy.

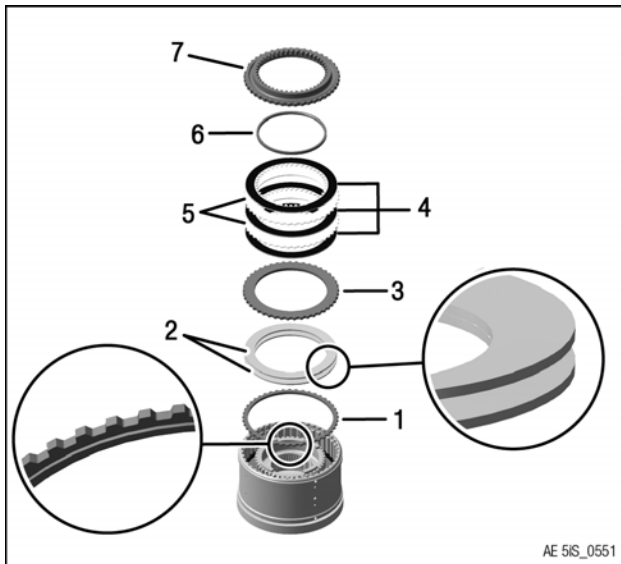


Figure 6.69: TYPICAL

- |                                       |                                    |
|---------------------------------------|------------------------------------|
| 1 Support ring                        | 2 Disc springs (contrary)          |
| 3 Steel friction plate 3 mm           | 4 Friction plates 1.54 mm (3 pcs.) |
| 5 Steel friction plates 1 mm (2 pcs.) | 6 Spacer ring                      |
| 7 Driving collar                      |                                    |


Step	Procedure
10	Check position of clutch hub and align with damper clutch assy.

Step	Procedure
11	Insert centering ring part no. 276950.
12	Press damper clutch assy. with insertion jig part no. 276952.

NOTICE	
<b>The upper disk spring must not slip into the groove of the retaining ring. Otherwise disk spring will be damaged during compression of the clutch.</b>	

Step	Procedure
13	Insert circlip SB 93 and release damper clutch assy.  <b>NOTE</b> <i>Check the alignment of clutch hub once again. It must be free to move.</i>

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

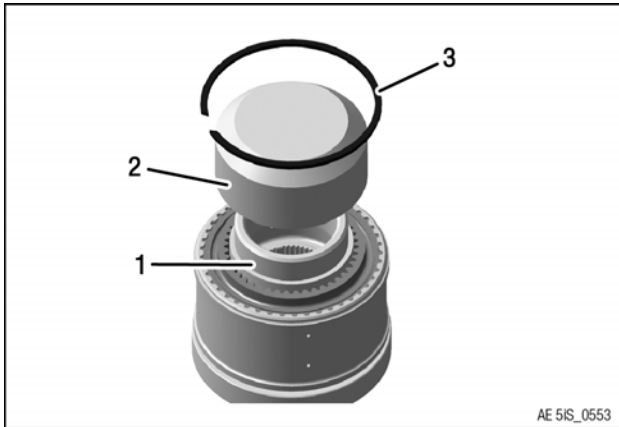

- 1 Centering ring part no. 276950      2 Insertion jig part no. 276952  
3 Circlip SB 93

Figure 6.71: TYPICAL

**PROPELLER GEARBOX ASSY. - ASSEMBLY**

**Damper clutch assy. - installation**

Step	Procedure
1	Install the whole gearbox to support plate part no. 276958 and fix both in a bench vice.
2	Lubricate the propeller shaft with LOCTITE ANTI SEIZE on the gear-tooth.
3	Install damper clutch into the housing.

**NOTE**

*There is only one position to install the damper clutch. It is indexed through the splines of the propeller shaft.*

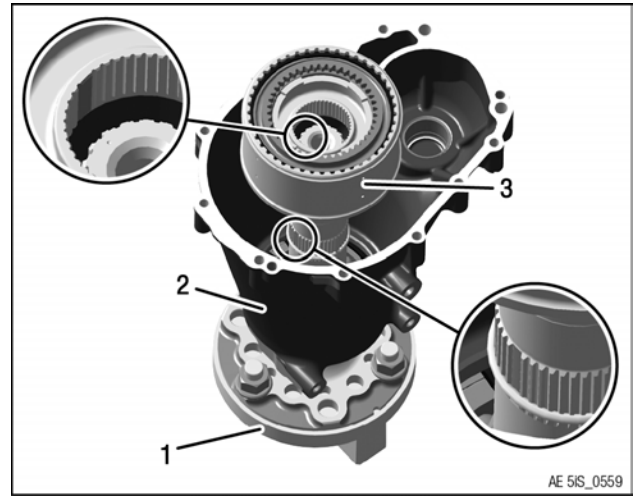


Figure 6.72

- 1 Support plate part no. 276958      2 Gearbox  
3 Damper clutch assy.

**Overload clutch assy. - installation**

Step	Procedure
1	Lubricate LOCTITE ANTI SEIZE on the gear-tooth.
2	Install overload clutch so, that the marks of torsion bar and carrier of the clutch are properly aligned.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

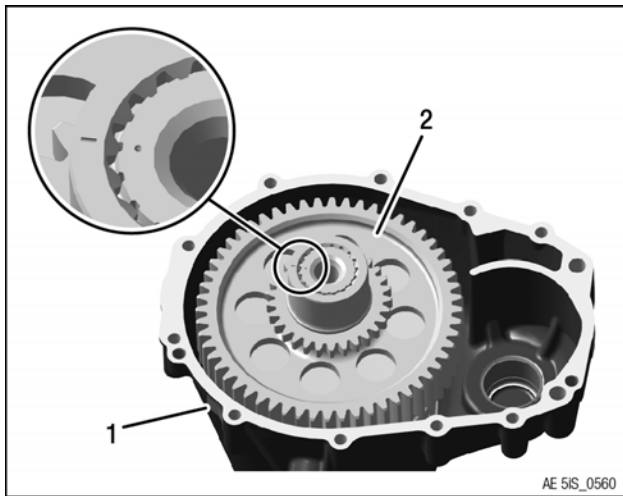



Figure 6.73

- 1 Gearbox                      2 Overload clutch assy.


Step	Procedure
3	<p>If the clutch can not be completely pushed on, turn it with the twist tool part no. 276962 and push it to the end stop.</p> <p><b>NOTE</b></p> <p><i>If the tolerance of the splines in the overload clutch are on minimum side and the splines of the torsion bar on maximum side, it will be impossible to install the overload clutch by hand. In such case use a mallet and hit slightly on the overload clutch.</i></p>

**NOTE**

*When all steps are done correctly, then the outer teeth of the overload clutch align with the sealing surface of the gear housing. If incorrect, the overload clutch will be raised over the sealing. In this case it needs to be investigated, which pairing is mounted wrong and it has to be fixed.*

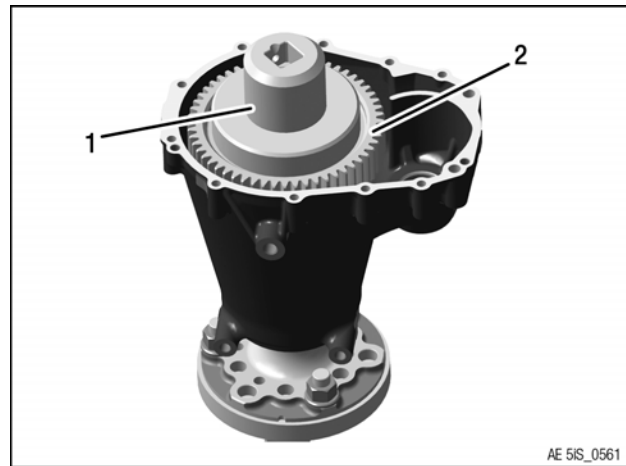

AE 5IS\_0561

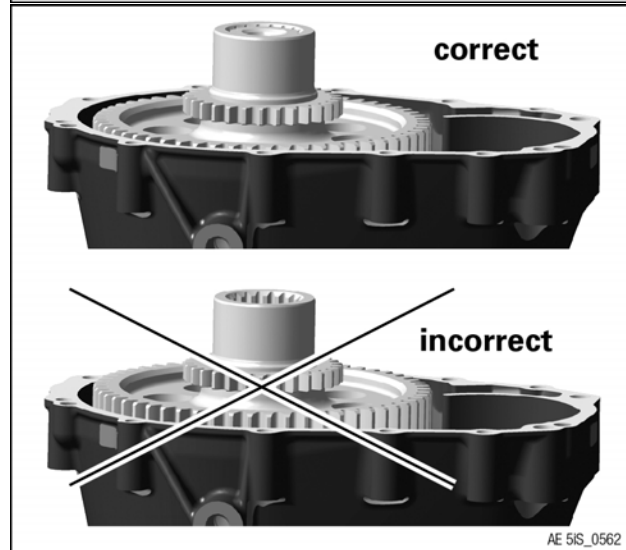

AE 5IS\_0562

Figure 6.74

- 1 Twist tool part no. 276962                      2 Overload clutch assy.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**BLINDING SHIM – INSTALLATION**

**CONFIGURATION 2**

Step	Procedure
1	Install new O-ring 26.7x1.8 onto the blinding shim.
2	Apply LOCTITE 5910 where the O-ring contacts the crankcase splitting line.
3	Install the blinding shim with the full side into the crankcase. Secure the blinding shim with countersunk screw M5x12 including the thrust washer with LOCTITE 243 and tighten it. Tightening torque 6 Nm (53 in.lb.).

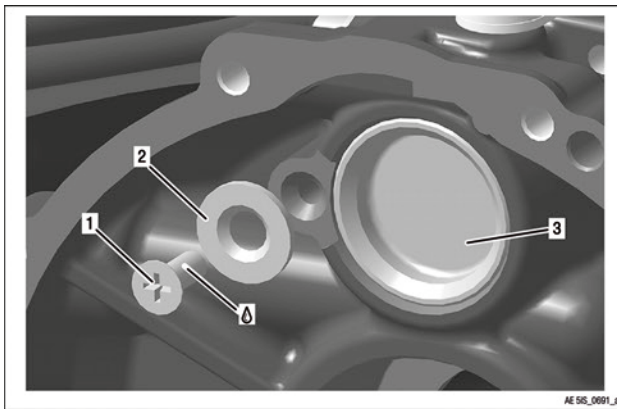


Figure 6.75

- 1 Countersunk screw M5x12
- 2 Thrust washer
- 3 Blinding shim

**NOTE**

*Ensure that the two M6 threads must be horizontal and scavenge oil hole on upper position. See following Figure.*

**NOTICE**

**The oil inlet flange must not be installed tilted and the O-ring must not be pinched.**

Step	Procedure
2	Install the governor flange with two M6x20 Allen screws and the oil inlet flange with two M6x16 Allen screws lightly at first for better positioning. See also Chapter 61–20–00.

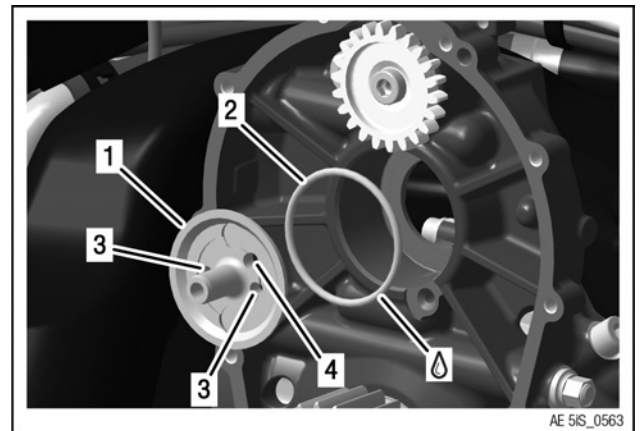


Figure 6.76

- 1 Oil inlet flange
- 2 O-ring 46x3
- 3 M6 threaded bores
- 4 Scavenge oil hole

**OIL INLET FLANGE - INSTALLATION**

**CONFIGURATION 3**

Step	Procedure
1	Lubricate a new O-ring 46x3 with engine oil and push it into the crankcase with the oil inlet flange.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

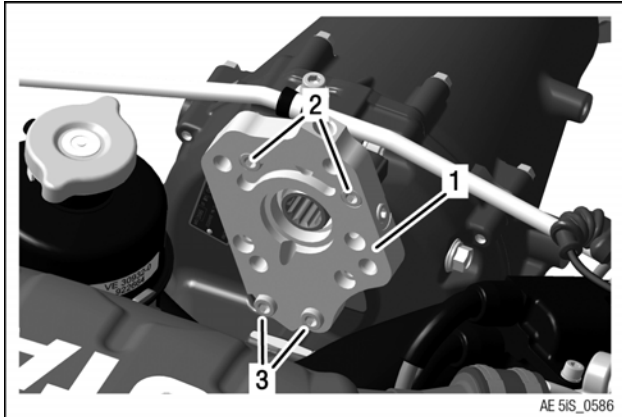


Figure 6.77

- 1 Governor flange
- 2 Allen screws M6x20
- 3 Allen screws M6x16

**CONFIGURATION 2**

Step	Procedure
1	Lubricate a new O-ring 46x3 with engine oil and push it into the crankcase with the oil inlet flange.

**NOTE**

*Ensure that the two M6 threads must be horizontal and scavenge oil hole on upper position. See following Figure.*

**NOTICE**

**The oil inlet flange must not be installed tilted and the O-ring must not be pinched.**

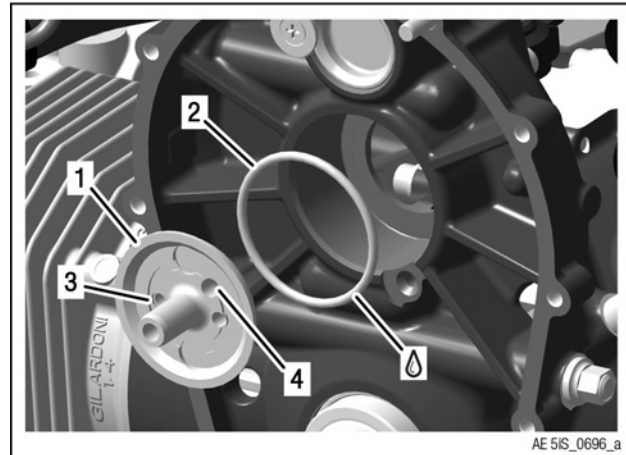


Figure 6.78

- 1 Oil inlet flange
- 2 O-ring 46x3
- 3 M6 threaded bores
- 4 Scavenge oil hole

Step	Procedure
2	Place one new O-ring 7x2 each in the oil inlet flange and the oil inlet flange adaptor and hold them in position with a little bit of grease.
3	Align the oil inlet flange. Install the oil inlet flange adaptor with two Allen screws M6x16 and secure with LOCTITE 243 into the crankcase. Tightening torque 10 Nm (89 in.lb).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

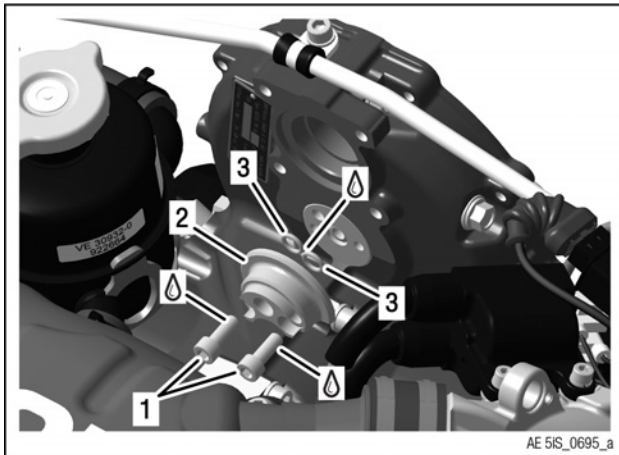


Figure 6.79

- 1 Allen screws M6x16
- 2 Oil inlet flange adaptor
- 3 O-rings 7x2

## NEEDLE BEARING – INSTALLATION

Step	Procedure
1	Install the extractor part no. 877615 onto the crankcase, place the press-in mushroom part no. 276000 in the needle bearing, put it on the centring and press it with the spindle into the crankcase as far as it will go.
	<b>NOTE</b> <i>Lubricate needle bearing on outer diameter.</i>

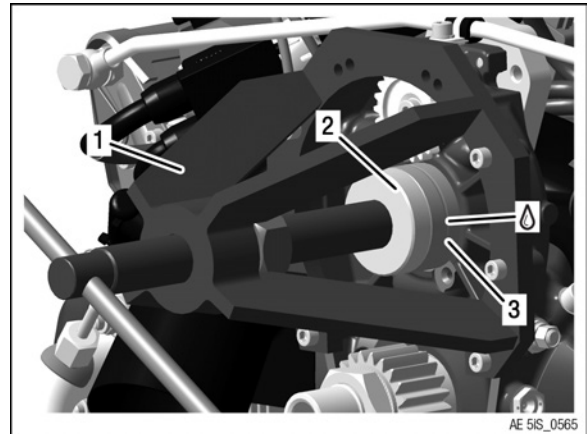


Figure 6.80: TYPICAL

- 1 Extractor part no. 877615
- 2 Press-in mushroom part no. 276000
- 3 Needle bearing

Step	Procedure
2	Secure M5x12 countersunk screw including the thrust washer with LOCTITE 243 and tighten it. Tightening torque 6 Nm (53 in.lb.).

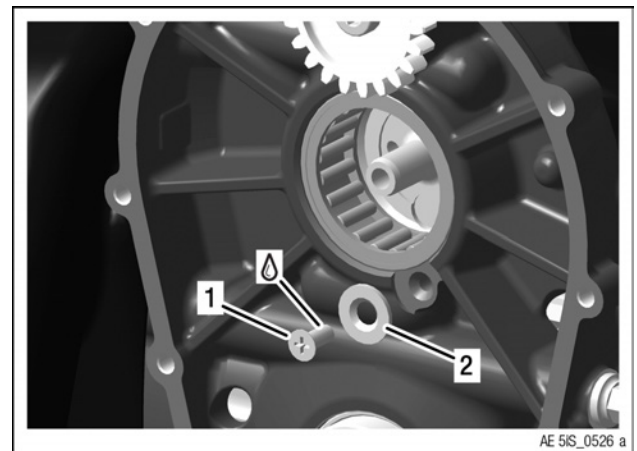


Figure 6.81: TYPICAL

- 1 Countersunk screw M5x12
- 2 Thrust washer

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### FINISHING WORK



Install propeller gearbox assy.  
See current Maintenance Manual Line (MML) for the respective engine type.



Install gearbox oil line assy. (configuration 2) or pressure oil line (configuration 3), see Chapter 61-20-00, section [Governor flange — installation](#).



Fill with operating fluids or check filling levels.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system.  
See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 72-10-10**  
**GEARBOX RE-CONFIGURE**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>2</b>
<b>Service Products</b> .....	<b>3</b>
<b>Removal - Configuration 2</b> .....	<b>7</b>
Gearbox oil line assy. and oil inlet flange adaptor - removal.....	7
Hex. screw — removal.....	7
Gearbox assy. - removal .....	7
Blinding shim — removal.....	7
<b>Removal — Configuration 3</b> .....	<b>8</b>
Governor - removal.....	8
Governor flange and pressure oil line assy. - removal .....	8
Hex. screw - removal .....	8
Gearbox assy. - removal .....	8
Governor drive — removal .....	8
<b>Installation - Configuration 2</b> .....	<b>9</b>
Blinding shim — installation.....	9
Hex. screw - installation .....	9
Propeller gearbox assy. - installation .....	9
Oil inlet flange adaptor and gearbox oil line assy. - installation.....	9
Finishing work .....	9
<b>Installation - Configuration 3</b> .....	<b>10</b>
Needle sleeve — installation .....	10
Ball bearing — installation .....	10
Governor drive — installation .....	10
Hex. screw — installation .....	10
Propeller gearbox assy. - installation .....	10
Governor flange and pressure oil line assy. - installation .....	10
Finishing work .....	10

**Introduction**

This section describes the maintenance process required to re-configure a ROTAX 916 iS2 engine into 916 iS3 and vice versa. The description is divided into sub-sections.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SPECIAL TOOLS**

Description	Part number
Puller	876489
Insertion jig assy.	276332
Retaining device	242661
Ring spanner a/f 10/13	876470
Press-in mushroom	877595
Press-in mushroom	877597
Press-in mushroom	877590

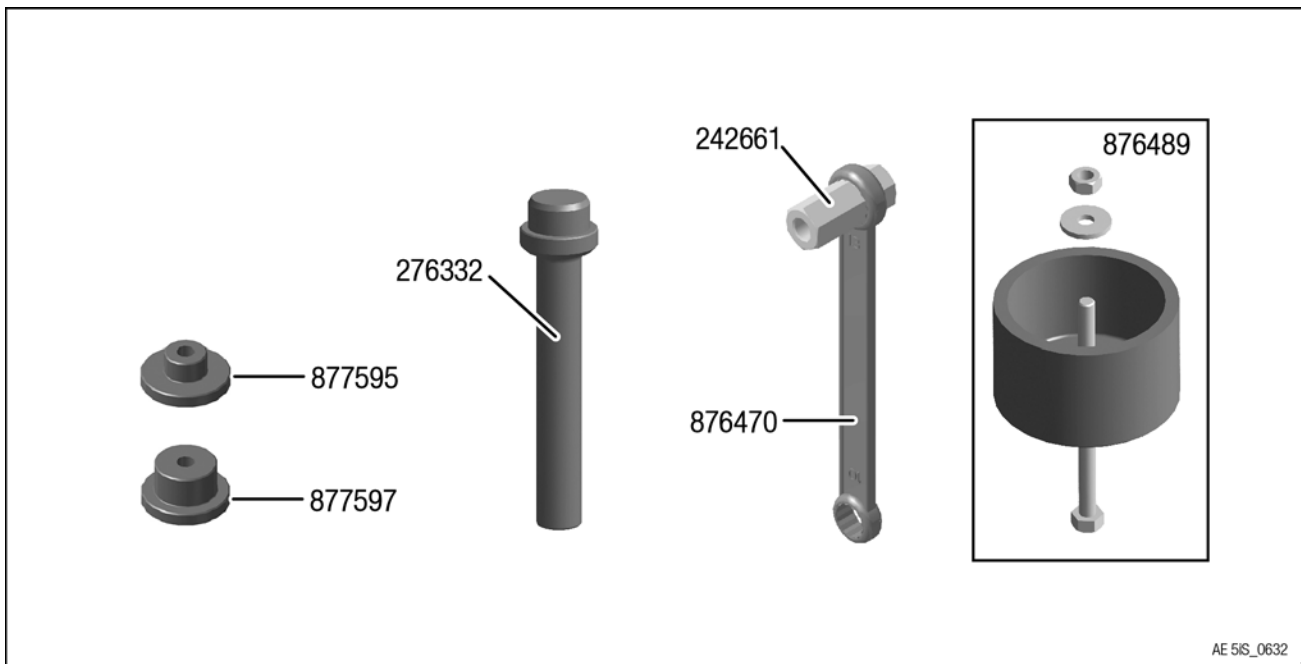


Figure 7.1: Special tools

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE 243	897651
LOCTITE 648	899788
Engine oil	n.a.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

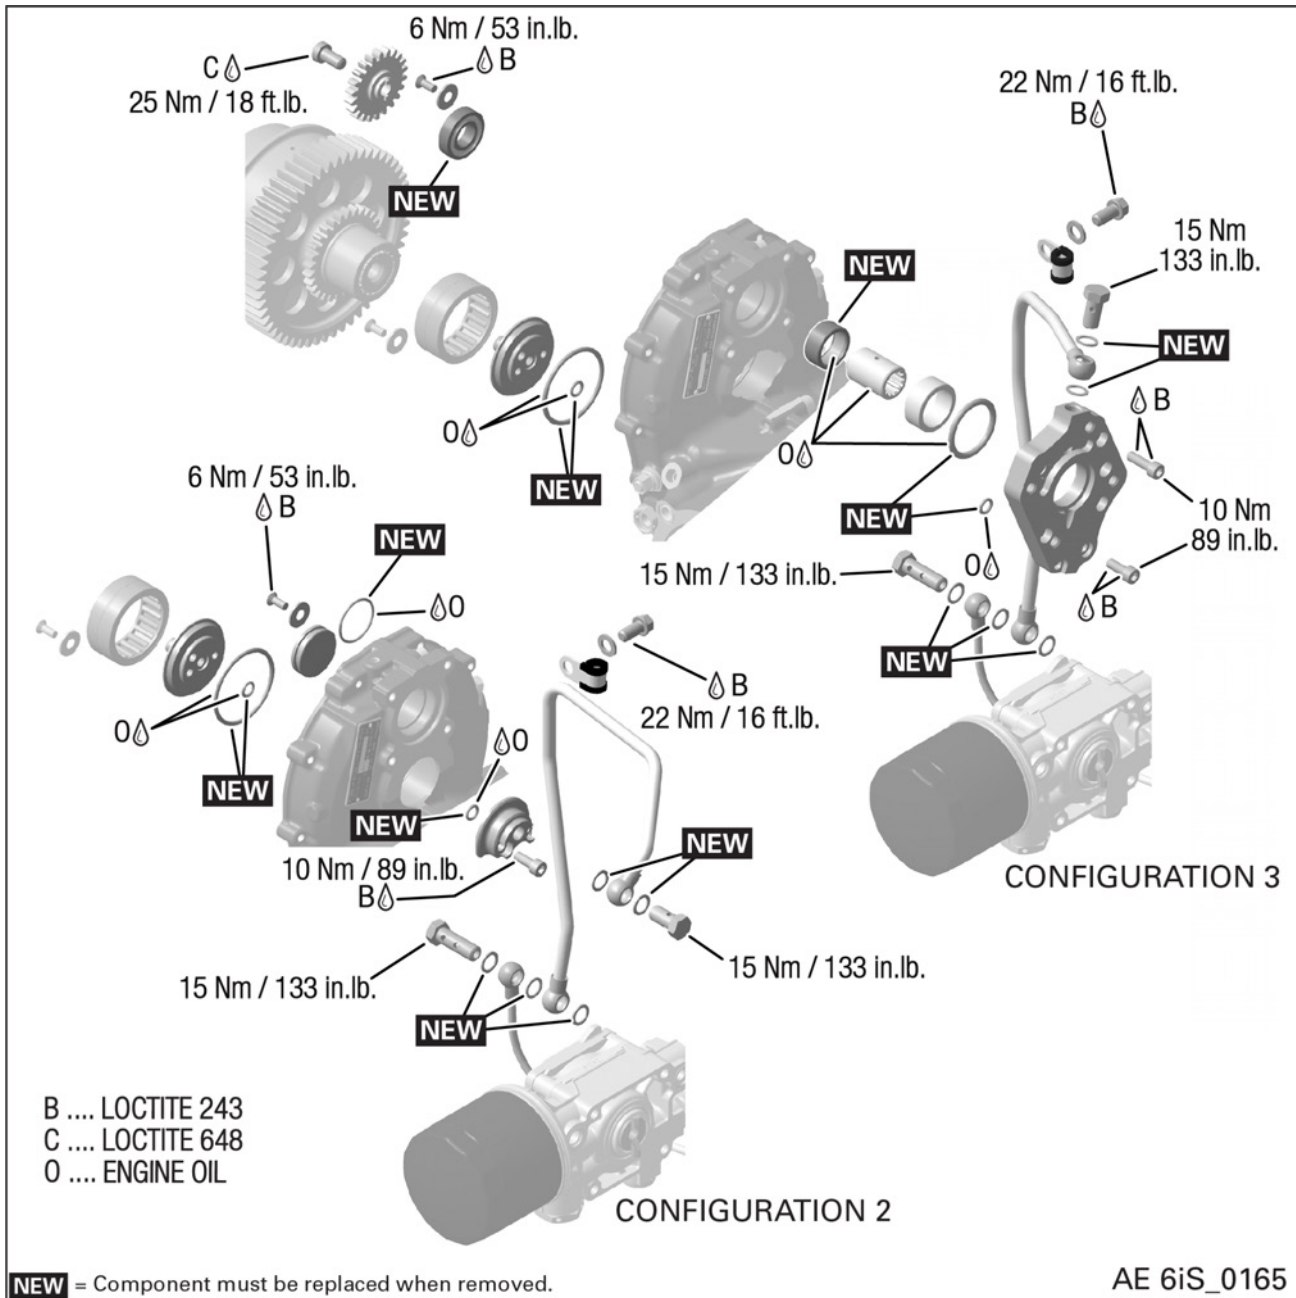


Figure 7.2



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**PARTS REQUIRED**

<b>Configuration 2 to Configuration 3</b>		
<b>Part number</b>	<b>Qty</b>	<b>Description</b>
see current IPC of the respective engine type	1	HEX. SCREW– M12x20 (config. 3)
see current IPC of the respective engine type	1	SEALING RING A12x18
see current IPC of the respective engine type	1	ALLEN SCREW M8x16
see current IPC of the respective engine type	1	VACUUM PUMP GEAR 22 T
see current IPC of the respective engine type	1	BALL BEARING 16002 15-32-8
see current IPC of the respective engine type	1	GOVERNOR FLANGE
see current IPC of the respective engine type	2	PLUG SCREW M8x1
see current IPC of the respective engine type	1	NEEDLE SLEEVE 22x28x12
see current IPC of the respective engine type	1	DRIVE SLEEVE
see current IPC of the respective engine type	1	SPACER 25/31.95/13
see current IPC of the respective engine type	1	O-RING 32x4–N FPM 75
see current IPC of the respective engine type	2	O-RING 7x2–N FPM 75
see current IPC of the respective engine type	1	PRESSURE OIL LINE ASSY.
see current IPC of the respective engine type	5	SEALING RING A10x14
see current IPC of the respective engine type	1	BANJO BOLT M10x1x23
see current IPC of the respective engine type	4	ALLEN SCREW M6x20

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

<b>Configuration 3 to Configuration 2</b>		
<b>Part number</b>	<b>Qty</b>	<b>Description</b>
see current IPC of the respective engine type	1	HEX. SCREW– M12x20 (config. 2)
see current IPC of the respective engine type	1	SEALING RING A12x18
see current IPC of the respective engine type	1	BLINDING SHIM
see current IPC of the respective engine type	1	O-RING 26x7x1.8
see current IPC of the respective engine type	1	GEARBOX OIL LINE ASSY.
see current IPC of the respective engine type	1	OIL INLET FLANGE ADAPTER
see current IPC of the respective engine type	5	SEALING RING A 10x14 DIN 7603
see current IPC of the respective engine type	1	BANJO BOLT M10x1x19
see current IPC of the respective engine type	2	O-RING 7x2–N

## **REMOVAL - CONFIGURATION 2**

### **GEARBOX OIL LINE ASSY. AND OIL INLET FLANGE ADAPTOR - REMOVAL**

CONFIGURATION 2



For removal see [Chapter 61-20-00 Oil inlet flange adaptor - removal.](#)

### **HEX. SCREW — REMOVAL**

CONFIGURATION 2

Step	Procedure
1	Remove configuration 2 Hex. screw with sealing ring from the torsion shaft.

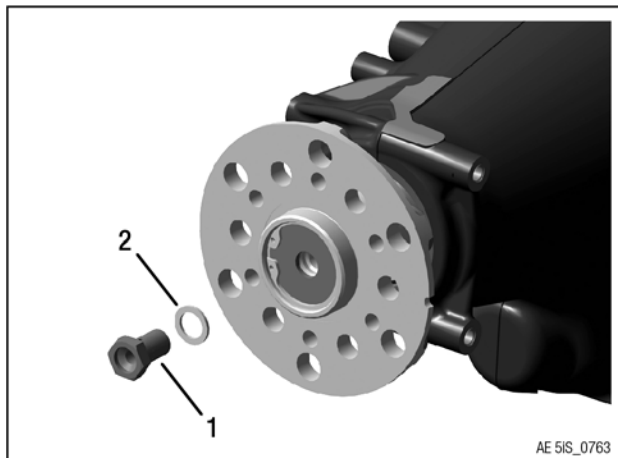


Figure 7.3

1 Hex. screw

2 Sealing ring

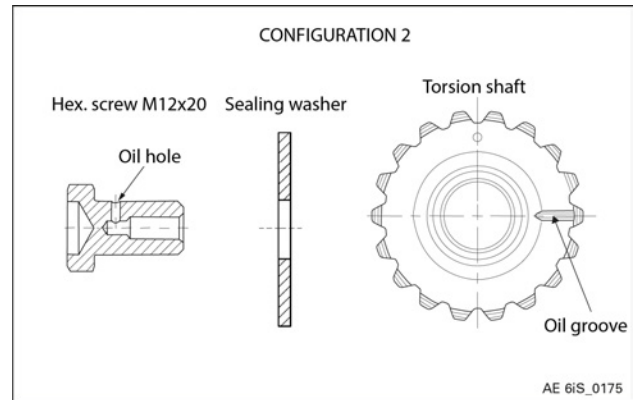


Figure 7.4

### **GEARBOX ASSY. - REMOVAL**



For removal of the propeller gearbox, see current Maintenance Manual Line (MML) for the respective engine type.

### **BLINDING SHIM — REMOVAL**

CONFIGURATION 2



For removal see [Chapter 72-10-00, section Blinding shim – removal.](#)

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**REMOVAL — CONFIGURATION 3**

**GOVERNOR - REMOVAL**

CONFIGURATION 3



Remove the governor according to the instructions in the aircraft manufacturer's manual.

**GOVERNOR FLANGE AND PRESSURE OIL LINE ASSY. - REMOVAL**

CONFIGURATION 3



For removal, see [Chapter 61-20-00, section Governor flange - removal.](#)

**HEX. SCREW - REMOVAL**

CONFIGURATION 3

Step	Procedure
1	Remove configuration 3 Hex. screw with sealing ring from the torsion shaft.

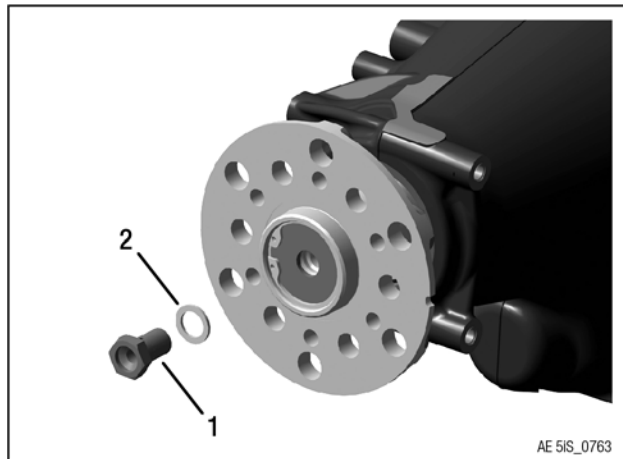


Figure 7.5

1 Hex. screw

2 Sealing ring

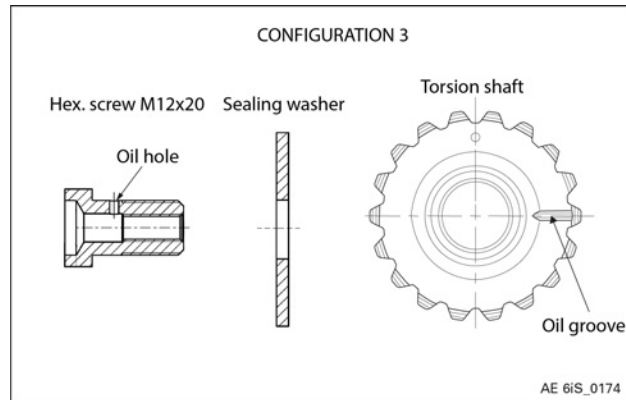


Figure 7.6

**GEARBOX ASSY. - REMOVAL**



For removal of the propeller gearbox, see current Maintenance Manual Line (MML) for the respective engine type.

**GOVERNOR DRIVE — REMOVAL**

CONFIGURATION 3



For removal see [Chapter 61-20-00, section Governor drive – removal.](#)

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### **INSTALLATION - CONFIGURATION 2**

#### **BLINDING SHIM — INSTALLATION**

CONFIGURATION 2



For installation of the blinding shim, see Chapter 72–10–00 section [Blinding shim – installation](#).



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.

#### **HEX. SCREW - INSTALLATION**

CONFIGURATION 2



For installation, see Chapter 72–10–00 section [Torsion shaft — installation](#).

#### **PROPELLER GEARBOX ASSY. - INSTALLATION**



Install propeller gearbox assy. See current Maintenance Manual Line (MML) for the respective engine type.

#### **OIL INLET FLANGE ADAPTOR AND GEARBOX OIL LINE ASSY. - INSTALLATION**

CONFIGURATION 2



For installation, see [Chapter 61–20–00, section Oil inlet flange adaptor – installation](#).

#### **FINISHING WORK**



Fill with operating fluids or check filling levels. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system. See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### **INSTALLATION - CONFIGURATION 3**

#### **NEEDLE SLEEVE — INSTALLATION**

CONFIGURATION 3



For installation, see Chapter 61–20–00 section [Needle sleeve — installation](#).

#### **BALL BEARING — INSTALLATION**

CONFIGURATION 3



For installation, see Chapter 61–20–00, section [Ball bearing — installation](#).

#### **GOVERNOR DRIVE — INSTALLATION**

CONFIGURATION 3



For installation, see Chapter 61–20–00 section [Governor drive — installation](#).

#### **HEX. SCREW — INSTALLATION**

CONFIGURATION 3



For installation, see Chapter 72–10–00 section [Torsion shaft — installation](#).

#### **PROPELLER GEARBOX ASSY. - INSTALLATION**



Install propeller gearbox assy. See current Maintenance Manual Line (MML) for the respective engine type.

#### **GOVERNOR FLANGE AND PRESSURE OIL LINE ASSY. - INSTALLATION**

CONFIGURATION 3



For installation, see [Chapter 61-20-00, section Governor flange - installation](#).

### **FINISHING WORK**



Fill with operating fluids or check filling levels.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system.  
See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 72-20-00**  
**ENGINE BLOCK**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>2</b>
<b>Service products</b> .....	<b>3</b>
<b>General note</b> .....	<b>5</b>
Safety instructions .....	5
Maintenance .....	5
<b>Removal</b> .....	<b>6</b>
Sprag clutch — removal .....	6
Sprag clutch housing – removal .....	6
<b>Disassembly</b> .....	<b>8</b>
Sprag clutch housing – disassembly .....	8
<b>Inspection</b> .....	<b>9</b>
Sprag clutch housing single parts — inspection .....	9
Sprag clutch housing — inspection .....	9
Sprag clutch — inspection.....	10
Free wheel gear — inspection .....	10
Starter idle gear — inspection.....	10
<b>Wear limits</b> .....	<b>11</b>
<b>Assembly</b> .....	<b>12</b>
Sprag clutch housing – assembly.....	12
<b>Installation</b> .....	<b>13</b>
Sprag clutch housing – installation .....	13
Measuring the axial clearance of the free wheel gear .....	14
<b>Finishing work</b> .....	<b>15</b>

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SPECIAL TOOLS**

Description	Part number
Hot air gun	n.a.
Puller	877375
Free wheel gear axial clearance measuring fixture	n.a.
38x20 insert for SW32 hex. nut, magneto side crankshaft	876070
A 20x12.5 reducing socket	877460
Protection mushroom	877419
Thread bolt M8x50	240880

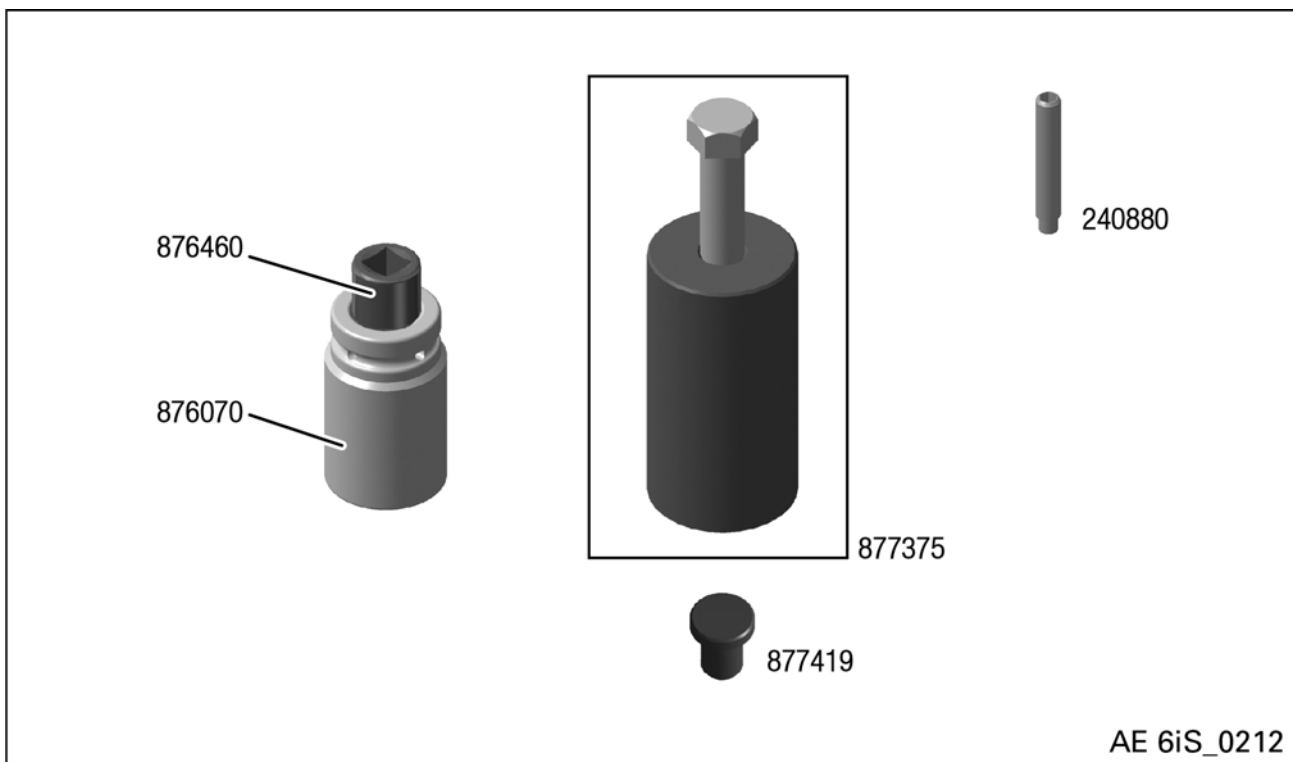


Figure 8.1: Special Tools



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE ANTI SEIZE 8151	297434
LOCTITE 7063	898450
LOCTITE 603	899789

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

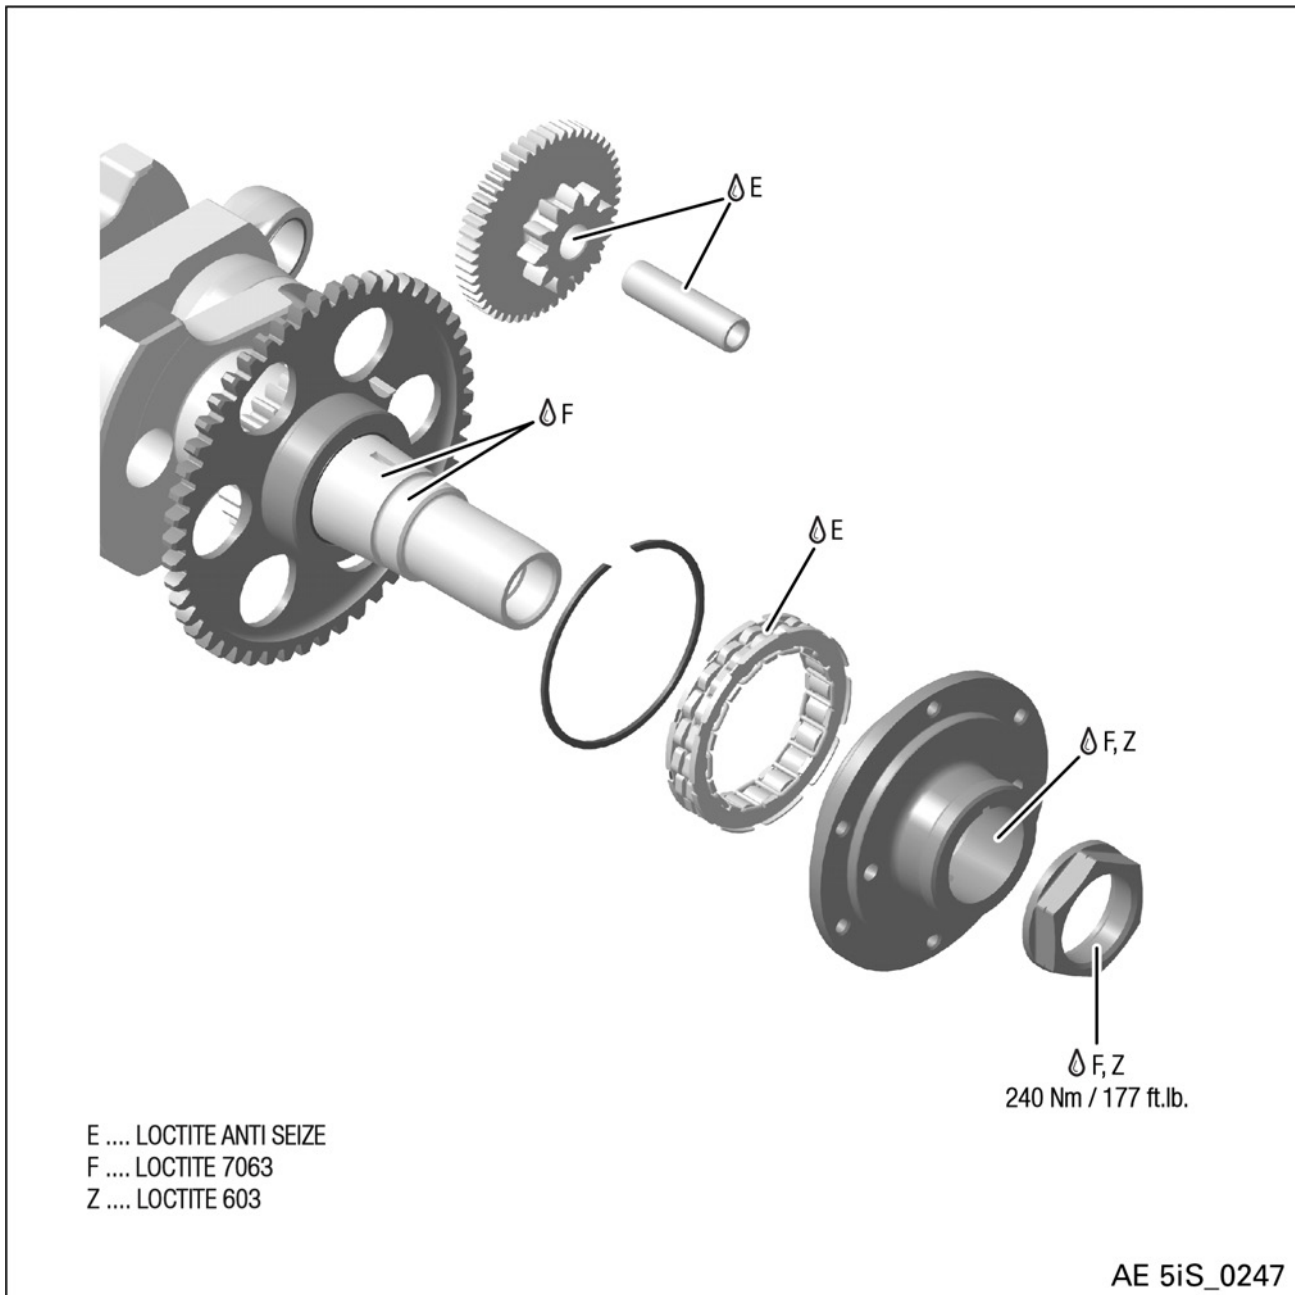


Figure 8.2

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## **GENERAL NOTE**

This section only describes work relating directly to repairing the engine block and its assemblies. Note the cross-references to maintenance work and work on other assemblies which is necessary when working on the engine block.

## **SAFETY INSTRUCTIONS**

### **⚠ WARNING**

#### **Danger of severe burns and scalds!**

Always allow the engine to cool down to ambient temperature before starting any work.

## **MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

Before the sprag clutch is removed, the work described below must be carried out to identify any further faults in the engine block and rectify them as part of repair work.

### NOTICE

**If these checks are omitted, it may be necessary to dismantle the ignition housing again to rectify any faults after it has been repaired.**



Engine cleaning.  
See current Maintenance Manual Line (MML) for the respective engine type.



General visual inspection.  
See current Maintenance Manual Line (MML) for the respective engine type.

## SPRAG CLUTCH — REMOVAL

### Preparation

### NOTICE

**Prevent the ingress of debris particles into all disconnected lines and connections.**  
Use appropriate protective coverings.

- Remove the ignition housing and fly wheel. See [Chapter 24-20-00 section Internal generator - removal](#).

### NOTE

*The assemblies and lines are only to be removed if necessary and only as far as is necessary!*

### NOTE

*Remove the plug screw from the crankshaft only if it is absolutely necessary.*

## SPRAG CLUTCH HOUSING – REMOVAL

### NOTE

*The fly wheel assy. does not have to be disassembled for changing the sprag clutch.*

Step	Procedure
1	Pull out the idle gear shaft.
2	Remove the starter idle gear.

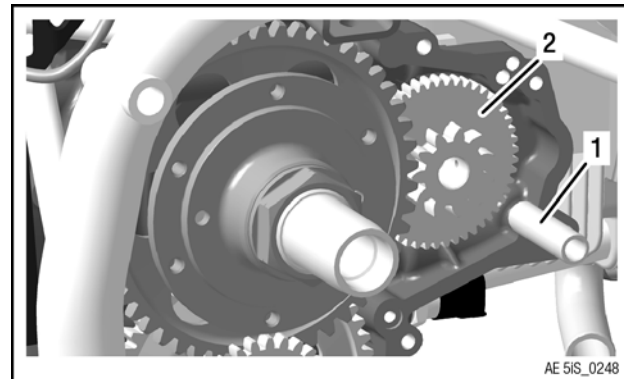


Figure 8.3

- 1 Idle gear shaft      2 Idle gear

### NOTICE

**The M32x1.5 hex. collar nut (secured with LOC-TITE 603) must be heated correspondingly. The nut has a left handed thread!**



Lock the crankshaft.  
See current Maintenance Manual Line (MML) for the respective engine type.

Step	Procedure
3	Heat the hex. collar nut about 100 °C to 120 °C (212 °F to 248 °F) using a hot air gun.
4	Loosen the hex. collar M32x1.5 nut from the crankshaft with the socket wrench 38x20 part no. 876070.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

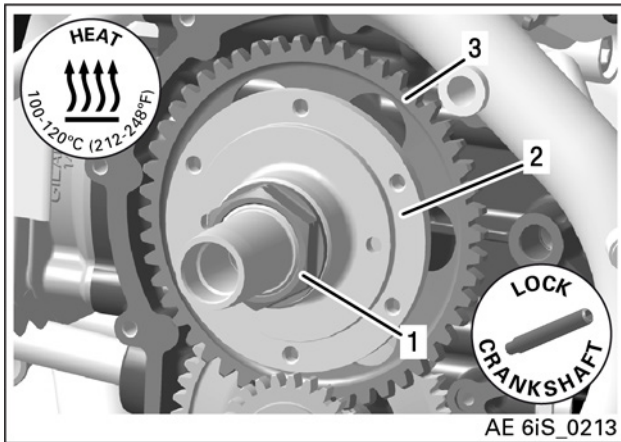


Figure 8.4

- 1 Hex. collar nut M32x1.5
- 2 Sprag clutch housing
- 3 Free wheel gear

Step	Procedure
5	Lubricate the surface of the crankshaft with lithium-base grease and push the protection mushroom part no. 877419 into the crankshaft.

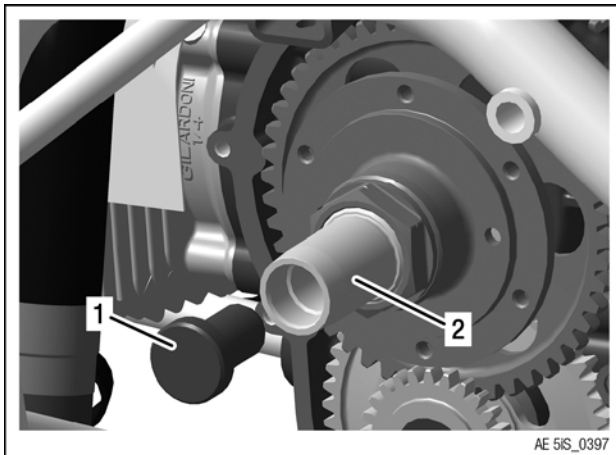


Figure 8.5

- 1 Protection mushroom part no. 877419
- 2 Crankshaft

Step	Procedure
6	Pull off the sprag clutch housing using the puller part no. 877375.

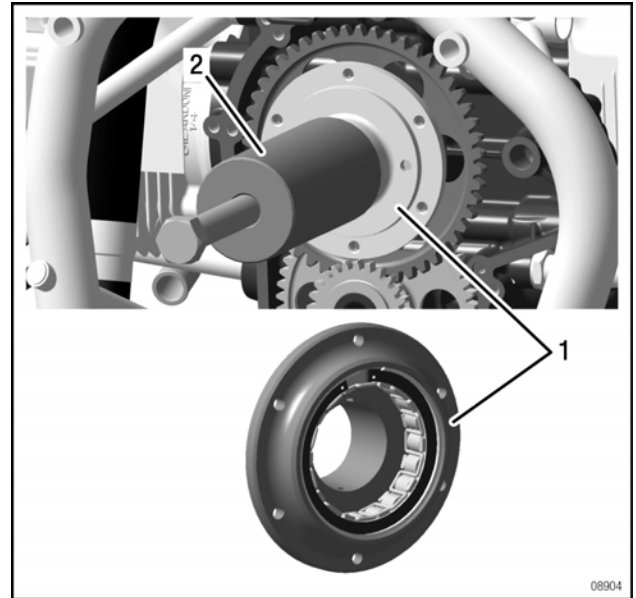


Figure 8.6

- 1 Sprag clutch housing
- 2 Puller part no. 877375

Step	Procedure
7	Remove the woodruff key from the crankshaft.

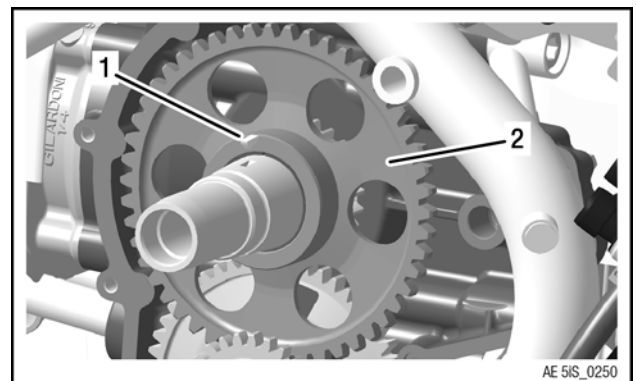


Figure 8.7

- 1 Woodruff key
- 2 Free wheel gear

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**DISASSEMBLY**

**SPRAG CLUTCH HOUSING –  
DISASSEMBLY**

The sprag clutch housing should be disassembled on a clean surface. There must be enough space to lay out the removed parts to ensure that all the parts can be laid out and allocated according to their installation position.

Step	Procedure
1	Remove the circlip from the sprag clutch housing.
2	Compress the Seeger ring slightly using Seeger ring pliers and take the sprag clutch out of the sprag clutch housing while turning it.

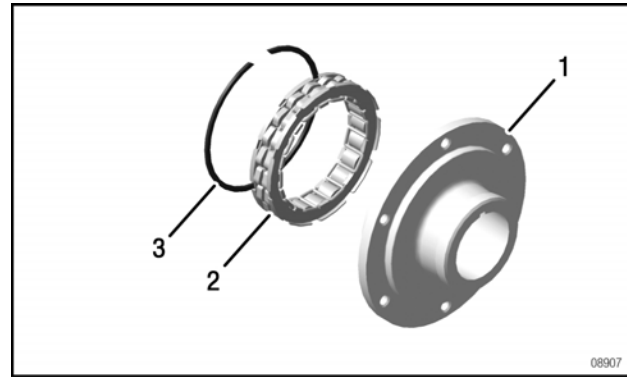


Figure 8.9

- 1 *Sprag clutch housing*
- 2 *Sprag clutch*
- 3 *Circlip*

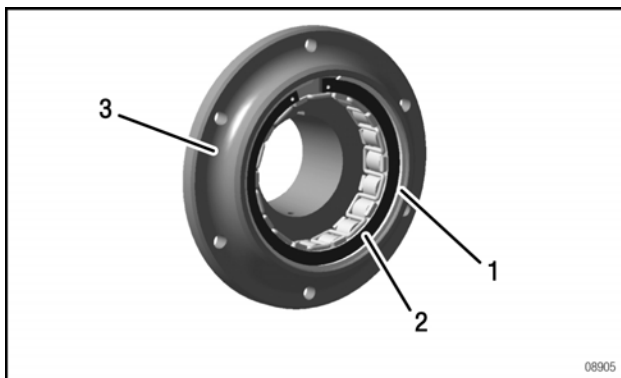


Figure 8.8

- 1 *Circlip*
- 2 *Seeger ring*
- 3 *Sprag clutch housing*

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**INSPECTION**

**SPRAG CLUTCH HOUSING SINGLE PARTS — INSPECTION**

**Preparation**



Clean all parts carefully.  
See current Maintenance Manual Line (MML) for the respective engine type.

**SPRAG CLUTCH HOUSING — INSPECTION**

Step	Procedure
1	Check whether oil sludge has accumulated in the sprag clutch housing.
2	Check that the oil nozzle for the generator is clear.  <b>NOTE</b> <i>The nozzle is 0.8 mm (0.030 in.) in diameter. Check using a 0.5 mm (0.020 in.) wire.</i>
3	Check crankshaft bore.
4	Check the cone surface.
5	Check the sprag clutch engagement faces in the sprag clutch housing.

**NOTICE**

If the oil passage is clogged, the generator coils are no longer cooled sufficiently.

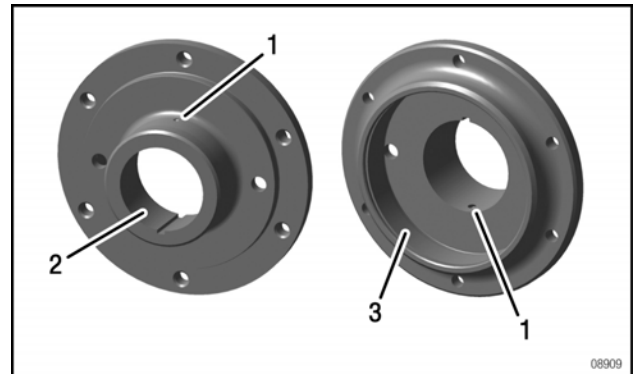


Figure 8.10

- 1 Oil nozzle
- 2 Cone surface
- 3 Sprag clutch engagement face

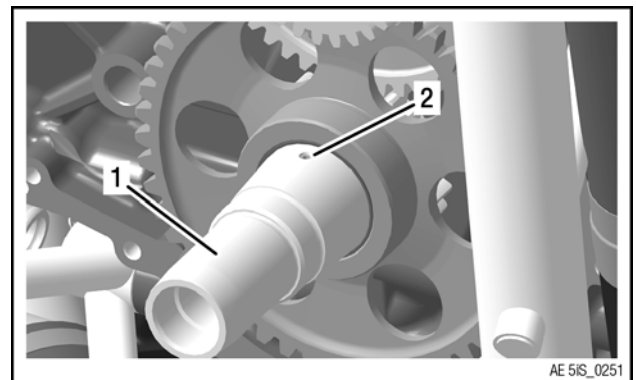


Figure 8.11

- 1 Crankshaft
- 2 Crankshaft bore (oil duct)

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SPRAG CLUTCH — INSPECTION

Step	Procedure
1	Check whether oil sludge has accumulated in the sprag clutch and in the spear body.
2	The spear body of the sprag clutch must be freely movable and may not be damaged.
3	The surrounding helical spring must not be loose or bent in a serpentine manner; replace the sprag clutch if necessary.

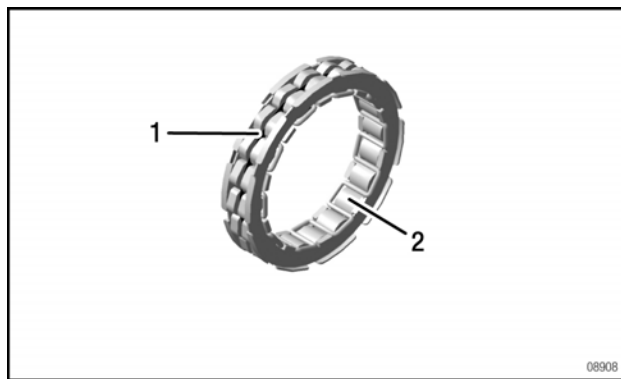


Figure 8.12

- 1 Helical spring      2 Spear body

## FREE WHEEL GEAR — INSPECTION

Step	Procedure
1	Check the gear-tooth system of the free wheel gear.
2	Check the sprag clutch engagement face on the free wheel gear.
3	Check the cone surface.

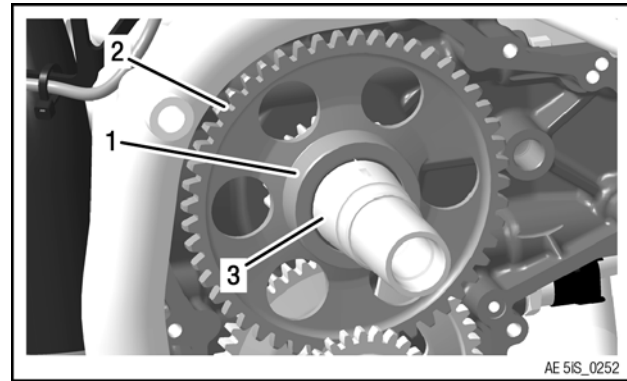


Figure 8.13

- 1 Sprag clutch engagement face      2 Gear-tooth system  
3 Cone surface

## STARTER IDLE GEAR — INSPECTION

Step	Procedure
1	Check the gear-tooth system of the starter idle gear.
2	Check the idle gear shaft for damage.

**NOTICE**

**If the gear-tooth system is deformed, the starter idle gear must be replaced.**

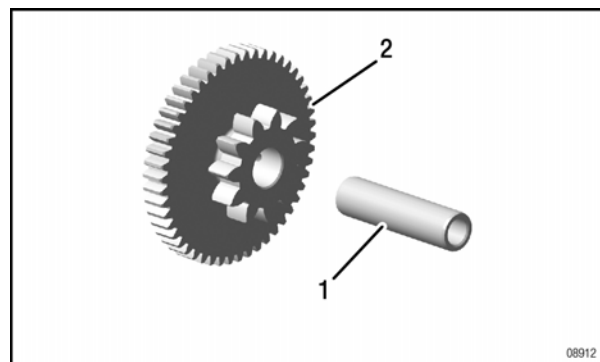


Figure 8.14

- 1 Idle gear shaft      2 Starter idle gear



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**WEAR LIMITS**

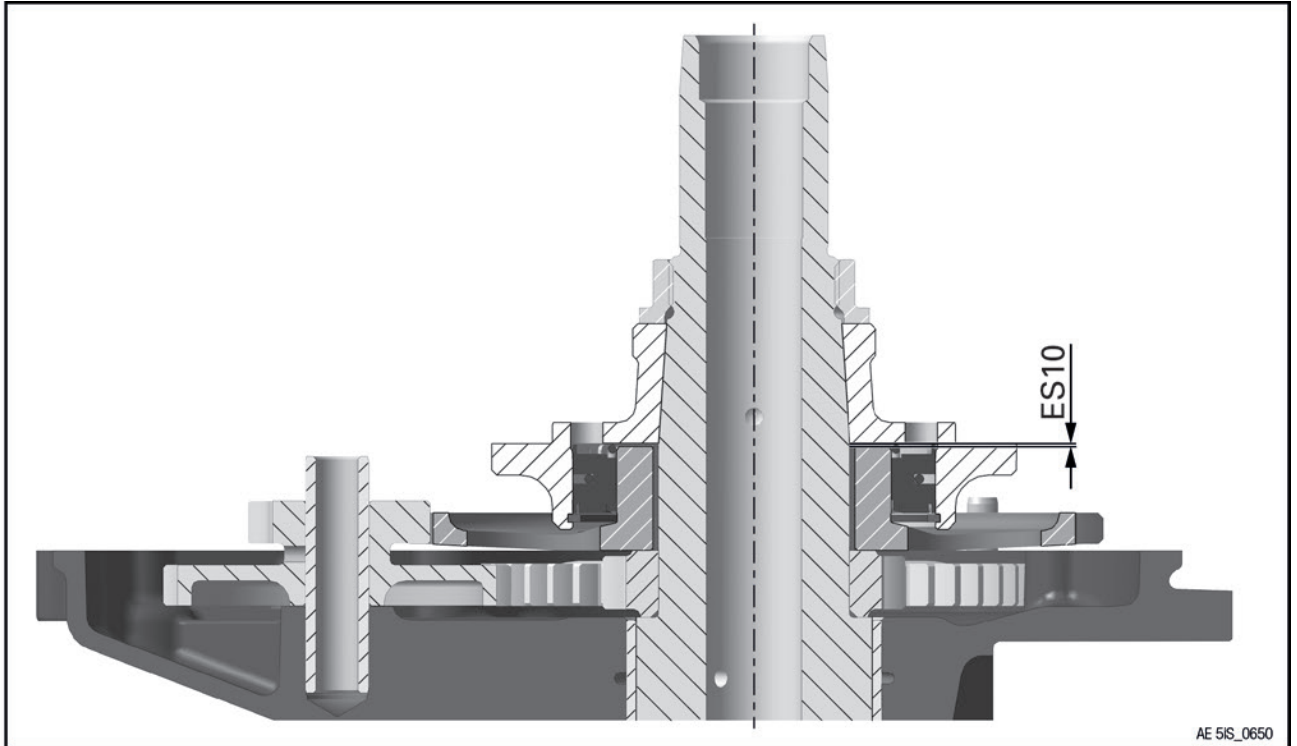


Figure 8.15: Free wheel gear, TYPICAL

Description	Code	Reading new		Wear limit		Readings
		min.	max.	100 %	50 %	
Axial clearance	ES10	0.5 mm 0.02 in	1.1 mm 0.04 in	0.2 mm 0.01 in	0.4 mm 0.014 in	actual
						renewed

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**ASSEMBLY**

**SPRAG CLUTCH HOUSING – ASSEMBLY**

Step	Procedure
1	Clean the cone of the sprag clutch housing with a cloth.
2	Apply LOCTITE ANTI SEIZE to the spear body.

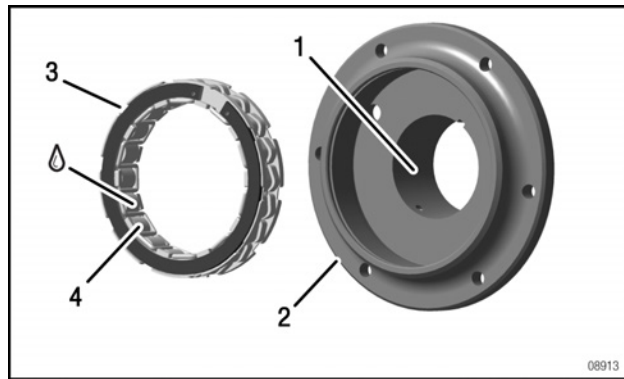


Figure 8.16

- 1 Cone
- 2 Sprag clutch housing
- 3 Sprag clutch
- 4 Spear body

Step	Procedure
3	Place the sprag clutch in the sprag clutch housing; the Seeger ring must be visible.
4	Install the circlip so that its chamfer faces the sprag clutch.  <b>NOTE</b> <i>To assemble it, compress it slightly with Seeger ring pliers and ensure that the Seeger ring remains in position and latches completely with the noses in the sprag clutch body.</i>

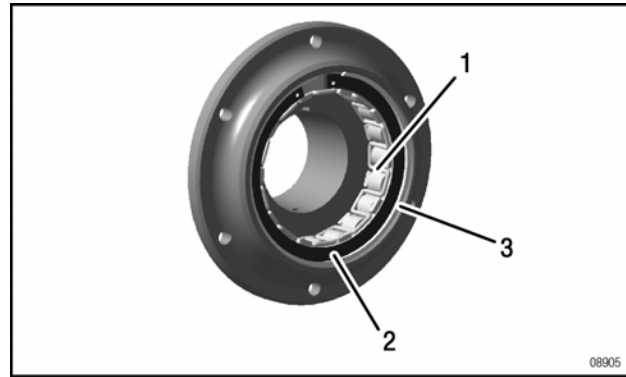


Figure 8.17

- 1 Sprag clutch
- 2 Seeger ring
- 3 Circlip

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**SPRAG CLUTCH HOUSING –  
 INSTALLATION**

Step	Procedure
1	Degrease the thread and cone of the crankshaft with LOCTITE 7063 and place the woodruff key in the crankshaft.

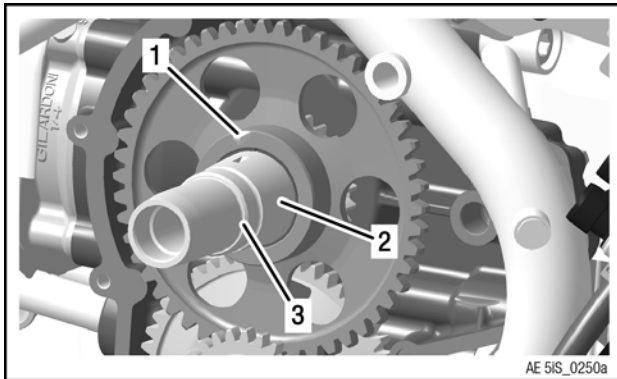


Figure 8.18

- 1 Woodruff key
- 2 Cone
- 3 Thread

Step	Procedure
2	Degrease the cone in the sprag clutch housing with LOCTITE 7063 and lubricate thinly with LOCTITE 603.

**NOTICE**

**Bearing bushing and the free wheel gear may stick to the crankshaft and the sprag clutch may be abraded.**

Approx. 2 to 3 mm on the underside of the sprag clutch housing must not be in contact with LOCTITE 603.

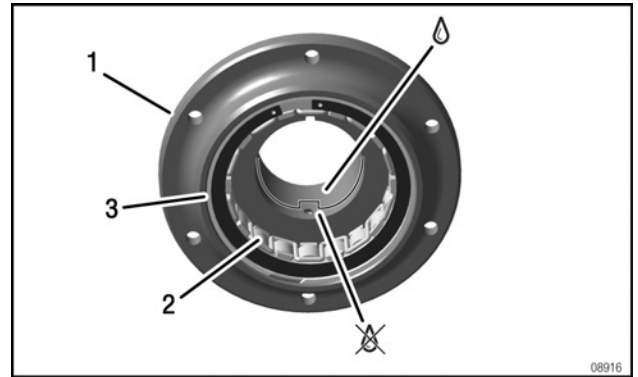


Figure 8.19

- 1 Sprag clutch housing
- 2 Spear body
- 3 Circlip

Step	Procedure
3	Place the sprag clutch housing on the crankshaft. Turn the free wheel gear in the process to align the spear body.



Lock crankshaft.  
 See current Maintenance Manual Line (MML) for the respective engine type.

Step	Procedure
4	Degrease hex. collar nut M32x1.5 with LOCTITE 7063, then secure it with LOCTITE 603 and tighten it. Tightening torque 240 Nm (177 ft. lb.).

**NOTE**

*The free wheel gear must drive the crankshaft when turned counterclockwise and must be freely rotatable when turned clockwise, viewed towards the magneto side of the engine.*

**NOTICE**

**Check that the passage and oil duct of the crankcase are not blocked.**

If the oil passage is blocked, the generator coils are no longer cooled sufficiently.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

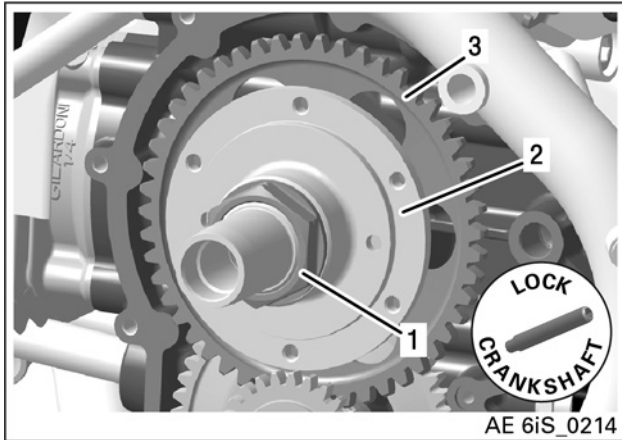


Figure 8.20

- 1 *Hex. collar nut M32x1.5*
- 2 *Sprag clutch housing*
- 3 *Free wheel gear*



Unlock the crankshaft. See current Maintenance Manual Line (MML) for the respective type.

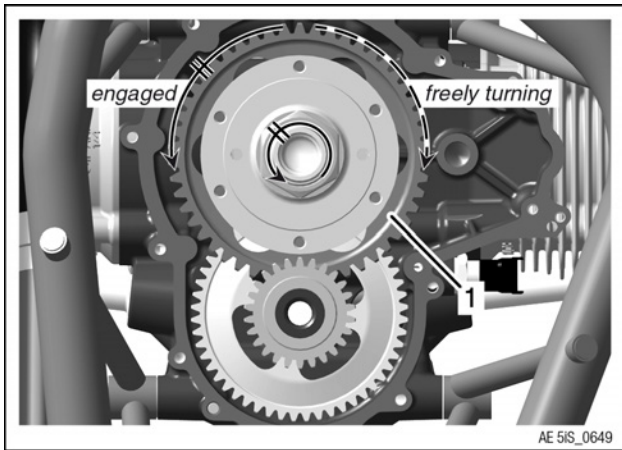


Figure 8.21

- 1 *Free wheel gear*

Step	Procedure
5	Lubricate the idle gear shaft and bore of the starter idle gear with LOCTITE ANTI SEIZE.
6	Install the idle gear.
7	Install the idle gear shaft.

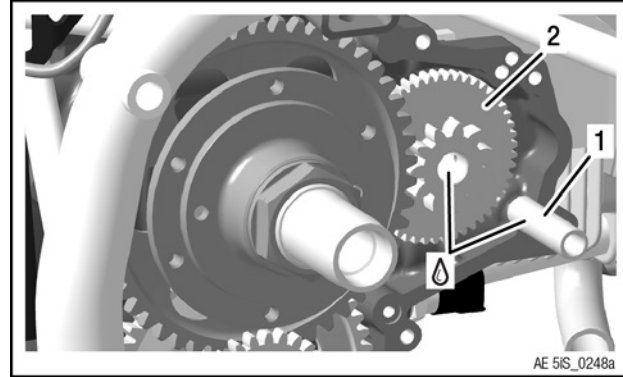


Figure 8.22

- 1 *Idle gear shaft*
- 2 *Idle gear*

**MEASURING THE AXIAL CLEARANCE OF THE FREE WHEEL GEAR**

<b>NOTICE</b>
<p><b>Electric starter may be damaged.</b>          If there is no or too little axial clearance, the sprag clutch may not release.</p>

**NOTE**

*For measurement of the axial clearance ES10 of the free wheel gear, see section Wear Limits.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

## **FINISHING WORK**

- Install the ignition housing and fly wheel. See [Chapter 24-20-00 Internal generator](#).
- Install coolant hoses from cylinder head, water inlet elbow and water pump housing. See Chapter 75-00-00 section [Water pump housing with lower form hoses — installation](#).
- Install the electric starter. See Chapter 80-00-00 section [Electric starter — installation](#).



Fill with operating fluids or check filling levels. See current Maintenance Manual Line (MML) for the respective engine type.



Flush the engine cooling system. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system.



Purge the oil system. See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 72-30-00**  
**CYLINDER HEAD**

**TOPICS IN THIS CHAPTER**


<b>Special tools</b> .....	<b>4</b>
<b>Service products</b> .....	<b>5</b>
<b>System description</b> .....	<b>6</b>
Safety instruction.....	6
Maintenance .....	6
<b>Rocker Arm Bushing repair (TSN 1000h)</b> .....	<b>7</b>
Rocker arm bushing — removal.....	7
Inspection .....	8
Rocker arm bushing — installation.....	8
Finishing work .....	9
<b>Removal</b> .....	<b>10</b>
Surrounding assemblies – removal .....	10
Cylinder head — removal.....	12
<b>Disassembly</b> .....	<b>14</b>
Cylinder head.....	14
Rocker arm — removal .....	14
Valve — removal .....	14
Coolant elbow inlet — removal .....	15
Oil return tubes — removal.....	15
Coolant elbow outlet — removal .....	16
<b>Inspection</b> .....	<b>17</b>
Cylinder head single parts - inspection .....	17
Cylinder head studs — inspection.....	17
Cylinder head assy. — inspection .....	17
Hardness test method.....	18
Valve guide — inspection .....	18
Valve — inspection .....	19
Valve seats — inspection .....	20
Valve spring — inspection .....	21
Spring force measurement .....	21
Washer - inspection .....	21
Rocker arm check and rocker arm shaft – inspection.....	22
Rocker arm bushing – inspection .....	23
Push rod – inspection .....	24
<b>Wear limits</b> .....	<b>25</b>
<b>Assembly</b> .....	<b>30</b>
Cylinder head — assembly.....	30
Oil return tube – installation .....	30
Coolant elbow inlet – installation .....	30
Coolant elbow outlet — assembly .....	31
Coolant elbow — installation .....	31
Valve installation .....	32

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Rocker arm — installation .....	33
<b>Installation.....</b>	<b>34</b>
Cylinder head – installation .....	34
Cylinder head (single) repaired per engine side .....	35
Cylinder heads (both) repaired per engine side .....	36
Cylinder head — tightening torque procedure .....	36
Valve cover – installation .....	38
Finishing work .....	38



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

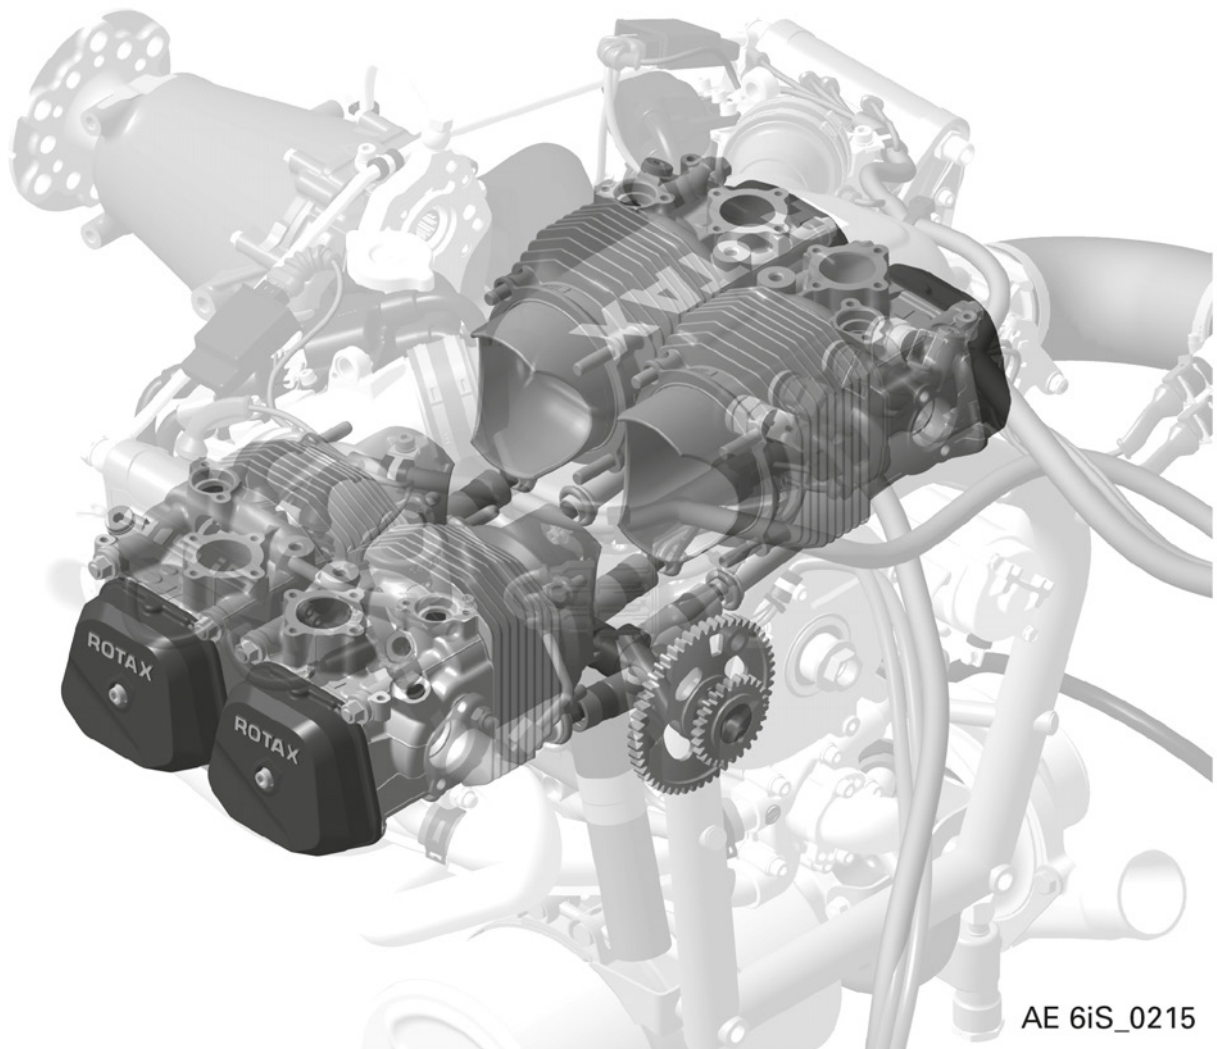

AE 6iS\_0215

Figure 9.1: Location on the engine

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SPECIAL TOOLS**

Description	Part number
Cylinder aligning tool	877263
Measuring fixture (valve spring inspection)	n.a.
Spring clamp pliers	877840
Valve spring mounting device	877380
Torx T30 ball-head insert	876180
Collet	n.a.
Socket 19 x 12.5	876130

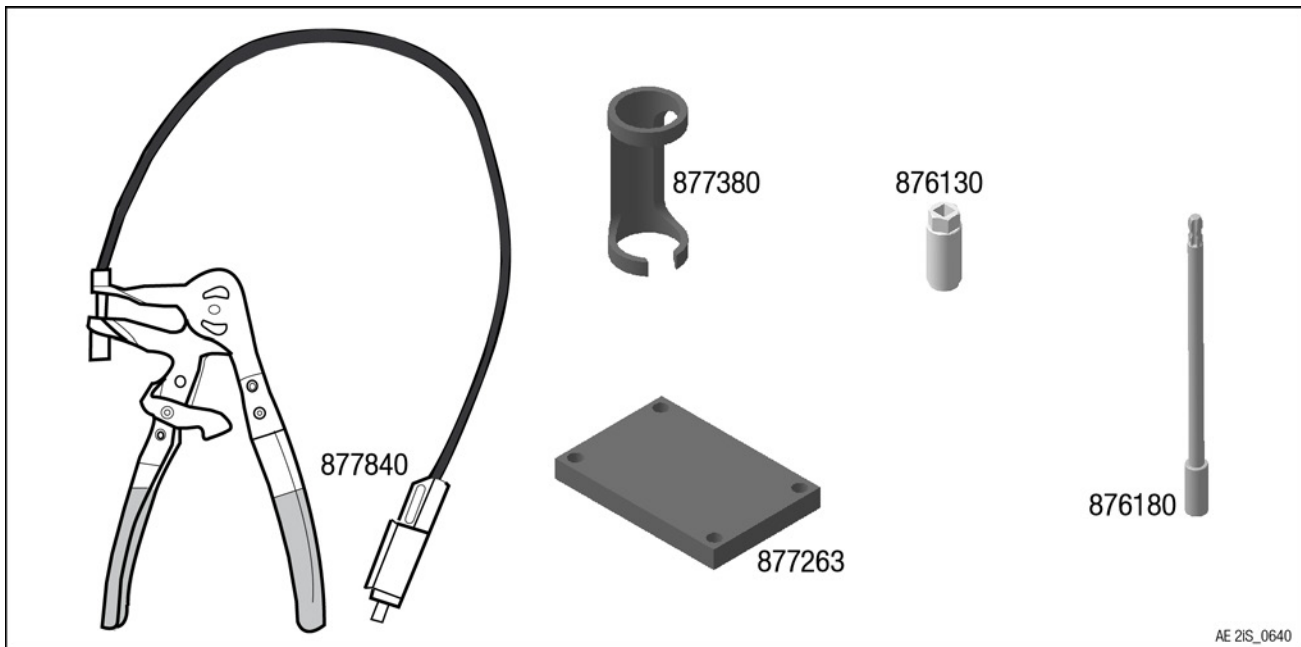


Figure 9.2: Special Tools

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SERVICE PRODUCTS**

Description	Part number
LOCTITE 648	899788
LOCTITE 243	897651
Engine oil	n.a.
LOCTITE 577	899796
LOCTITE ANTI SEIZE 8151	297434

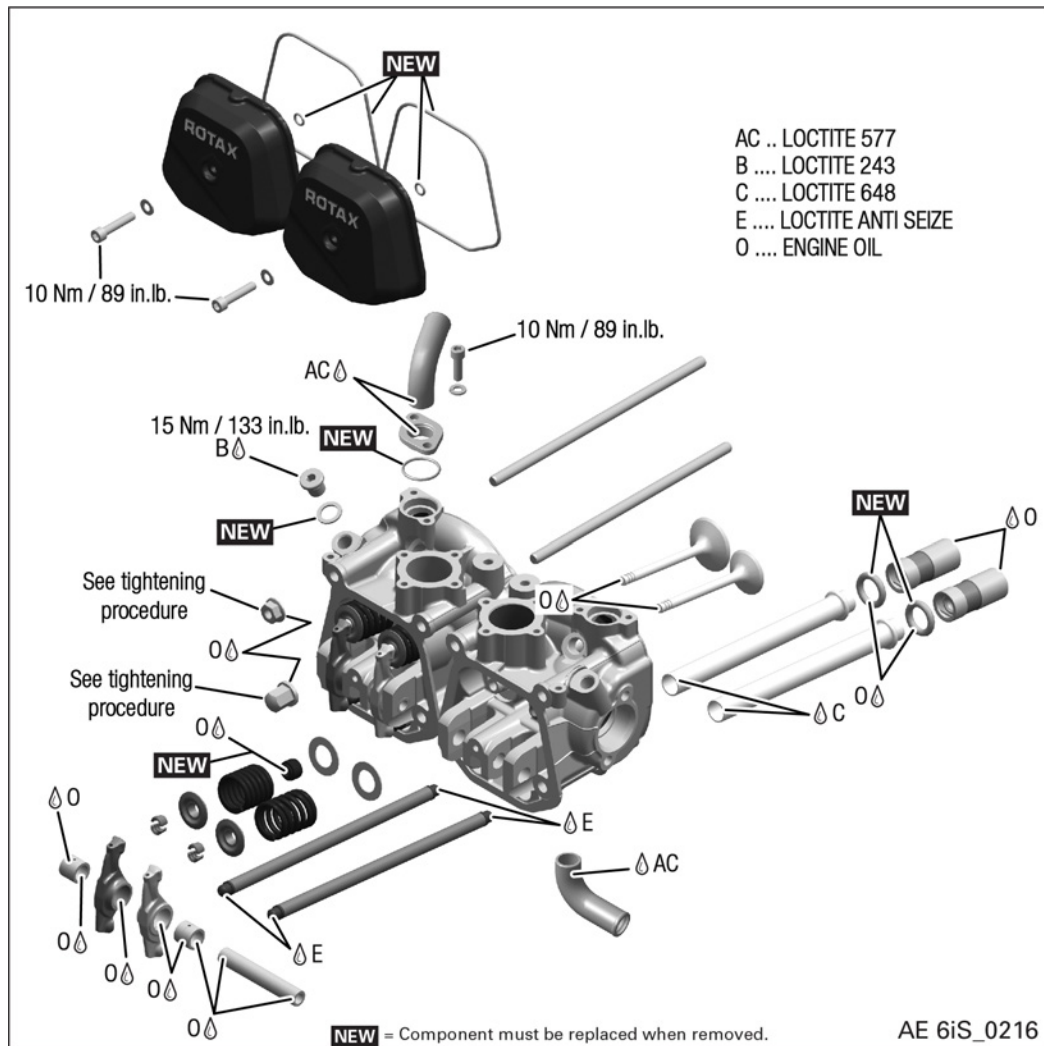


Figure 9.3: Service Products

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SYSTEM DESCRIPTION

The 916 I A Series engine has 4 liquid-cooled cylinder heads.

## SAFETY INSTRUCTION

### **WARNING**

#### **Danger of severe burns and scalds!**

Always allow the engine to cool down to ambient temperature before starting any work.

## MAINTENANCE



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

## **ROCKER ARM BUSHING REPAIR** **(TSN 1000H)**

**⚠ WARNING**

**Danger of severe burns and scalds! Always allow the engine to cool down to ambient temperature before starting any work.**



Clean all parts carefully.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.

**ENVIRONMENTAL NOTE**

**Ensure that no oil gets into the waste water system or the ground – risk of contaminating drinking water!**

### **ROCKER ARM BUSHING — REMOVAL**

**NOTE**

*Be prepared!*

*When removing the valve cover, oil may leak from the cylinder head.*

Step	Procedure
1	Loosen the Allen screw and washer.
2	Remove the valve cover with the large and small O-rings.

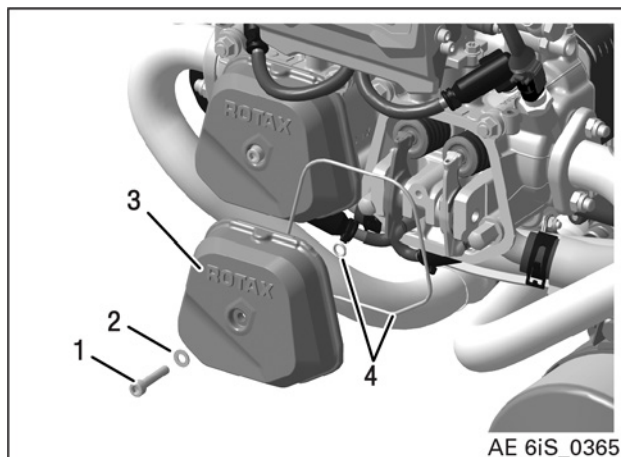


Figure 9.4

- |               |           |
|---------------|-----------|
| 1 Allen screw | 2 Washer  |
| 3 Valve cover | 4 O-rings |

**NOTICE**

**Do not lose the O-rings!**

Step	Procedure
3	For easier rotation of engine remove one spark plug connector with spark plug from each cylinder.



See current Maintenance Manual Line (MML) for the respective engine type., Chapter 12-20-00 section Removal of spark plug.

**NOTICE**

**Prevent any foreign objects entering the spark plug hole.**

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
4	Turn the crankshaft carefully in direction of engine rotation until the intake and exhaust valves are on overlap position.  <b>NOTE</b> <i>Both rocker arm have to be without tension to the push rods.</i>

### NOTICE

**The rocker arm shaft should never be forced out.**

Step	Procedure
5	Pull out the rocker arm shaft and take out the two rocker arms.

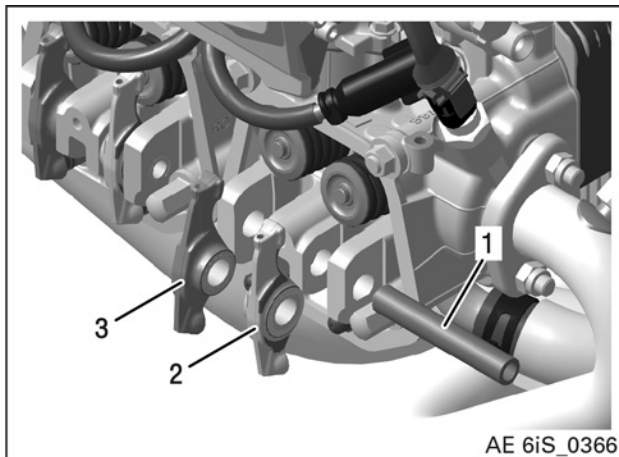


Figure 9.5

- 1 Rocker arm shaft      2 Right rocker arm  
3 Left rocker arm

Step	Procedure
6	Remove rocker arm bushing from the rocker arm.
7	Repeat same procedure on the other cylinders.

## INSPECTION

For rocker arm, rocker arm bushing and rocker arm shaft inspection, see Chapter [Rocker arm check and rocker arm shaft – inspection](#).

## ROCKER ARM BUSHING — INSTALLATION

Step	Procedure
1	Lubricate new rocker arm bushing with engine oil on the inner and outer diameter and install into the rocker arm.

### NOTICE

**Do not use force! The rocker arm bearing is slide fit.**

Step	Procedure
2	Lubricate the rocker arm shaft (on both sides), rocker arm bore and valve spring support with engine oil.
3	Bring the intake rocker arm and the exhaust rocker arm with the rocker arm bushing into position depending on the state of construction.
4	Position the rocker arm shaft.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

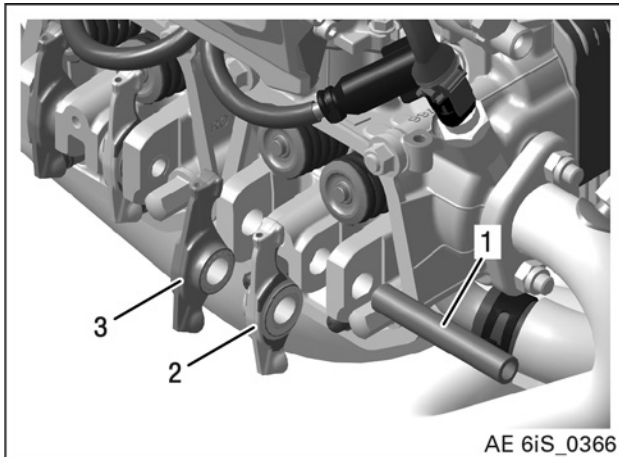


Figure 9.6

- 1 *Rocker arm shaft*      2 *Right rocker arm*  
3 *Left rocker arm*



Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.

## NOTICE

**The rocker arm shaft should never be forced in.**

Step	Procedure
5	Install valve cover, see Chapter 72-30-00 <a href="#">Valve cover – installation</a> .
6	Install the spark plugs and connect the spark plug connectors. See Chapter 74-20-00 <a href="#">Spark plug – installation</a> and <a href="#">Spark plug connector and ignition cable assy. – installation</a> .

## FINISHING WORK



Fill with operating fluids or check filling levels.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system.  
See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

### Preparation

Before the cylinder head is removed, the work described below must be carried out to identify any further faults in the cylinder head and rectify them as part of repair work.

#### NOTICE

**If these checks are omitted, it may be necessary to dismantle the cylinder head again to rectify any faults after it has been repaired.**



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type..



Engine cleaning. See current Maintenance Manual Line (MML) for the respective engine type.



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type..

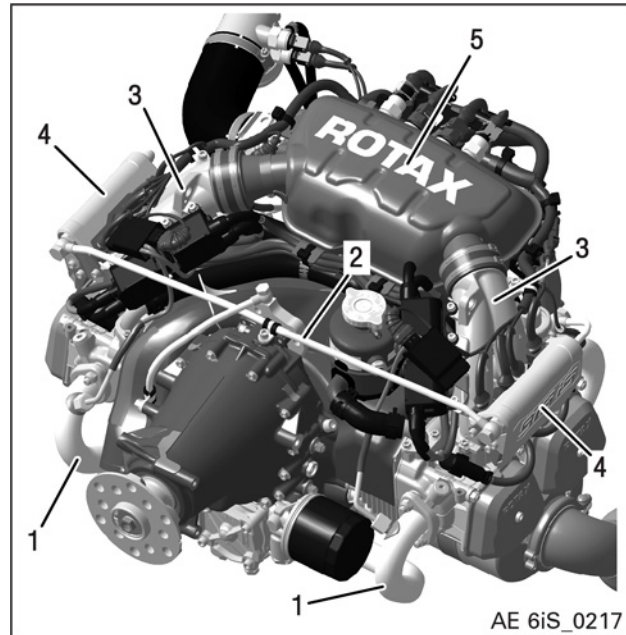


Figure 9.7

- |                   |                   |
|-------------------|-------------------|
| 1 Exhaust pipes   | 2 Fuel line assy. |
| 3 Intake manifold | 4 Fuel rail       |
| 5 Airbox          |                   |

## SURROUNDING ASSEMBLIES – REMOVAL

#### NOTICE

**Prevent the ingress of foreign bodies into all disconnected lines and connections.**  
Use appropriate protective coverings.

### NOTE

*The assemblies and lines are only to be removed if necessary and only as far as is necessary!*

Step	Procedure
1	Remove the exhaust pipes. See Chapter 78-10-00 <a href="#">Exhaust pipe — removal</a> .
2	Remove the fuel line assy. and outlet if necessary. See Chapter 73-10-00 <a href="#">Fuel line assy. — removal</a> .

Step	Procedure
3	Disconnect the wiring harness from the coolant temperature sensor (CTS). See <a href="#">Chapter 76-50-00 Wiring Harness..</a>
4	Loosen 4 hex./torx collar screws from the intake manifold.
5	Remove the isolating flanges between the intake manifold and the cylinder head.
6	Disconnect the spark plug connector and remove the spark plugs. See <a href="#">Chapter 74-20-00 Distribution</a> .



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

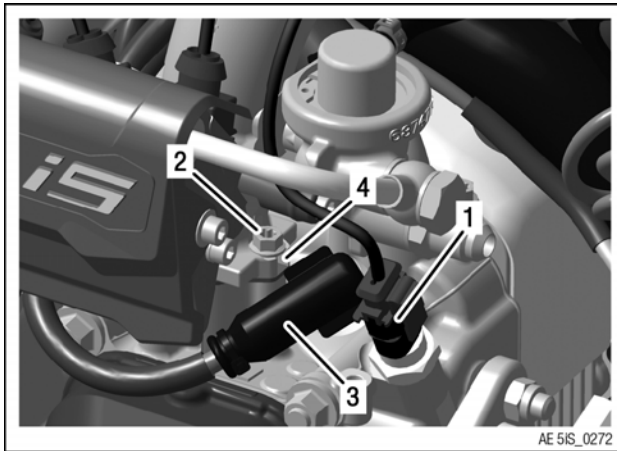


Figure 9.8

- |   |                                  |   |                        |
|---|----------------------------------|---|------------------------|
| 1 | Coolant Temperature Sensor (CTS) | 2 | Hex./torx collar screw |
| 3 | Spark plug connector             | 4 | Isolating flange       |

Step	Procedure
7	Release the attachment of the airbox to the ignition housing.

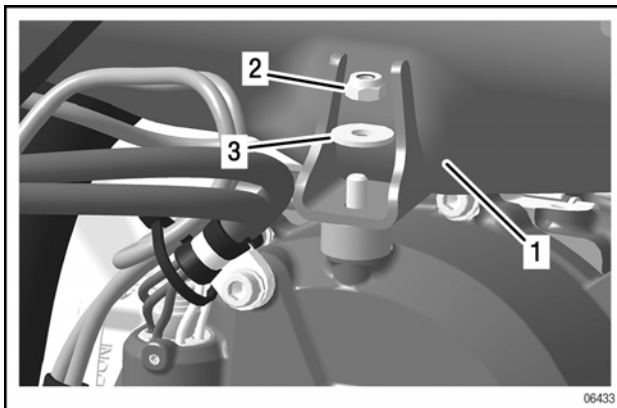


Figure 9.9

- |   |        |   |          |
|---|--------|---|----------|
| 1 | Airbox | 2 | Lock nut |
| 3 | Washer |   |          |

Step	Procedure
8	Disconnect coolant hoses, see Chapter 75-00-00 section coolant hose – removal.

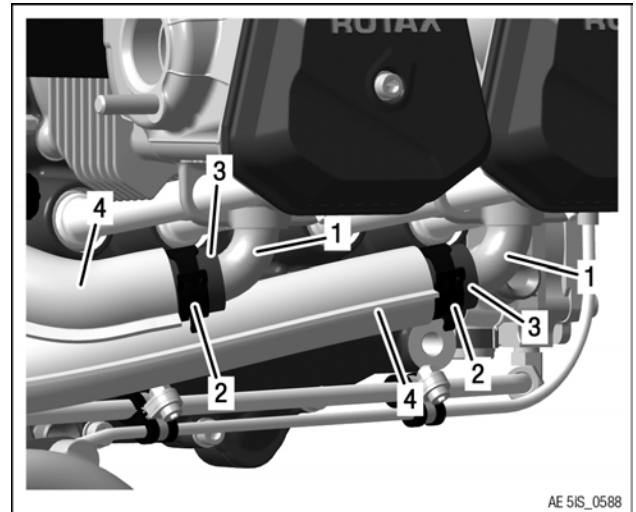


Figure 9.10

- |   |               |   |                 |
|---|---------------|---|-----------------|
| 1 | Coolant elbow | 2 | Clamp           |
| 3 | Coolant hose  | 4 | Protection tube |

Step	Procedure
9	Loosen 2 Hex/Torx flange screws along and remove the elbow flange.

**NOTE**

*There is an O-ring under the elbow flange.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

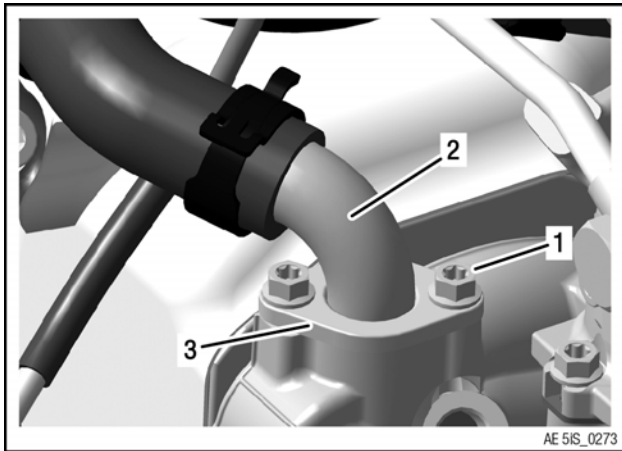


Figure 9.11

- 1 *Hex/Torx flange screw*
- 2 *Coolant elbow*
- 3 *Elbow flange*

**CYLINDER HEAD — REMOVAL**

Step	Procedure
1	Loosen the Allen screw and washer.
2	Remove the valve cover with the large and small O-rings.

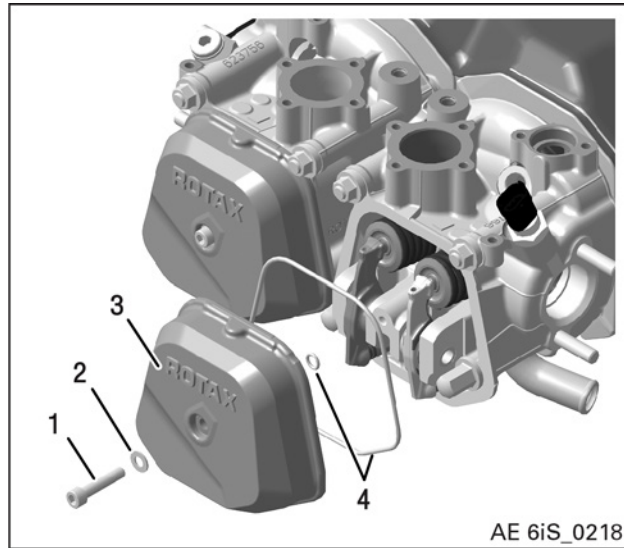


Figure 9.12

- 1 *Allen screw*
- 2 *Washer*
- 3 *Valve cover*
- 4 *O-rings*

**NOTICE**  
**Do not lose the O-rings!**

Step	Procedure
3	Loosen 2 collar nuts and 2 collar cap nuts (diagonally).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

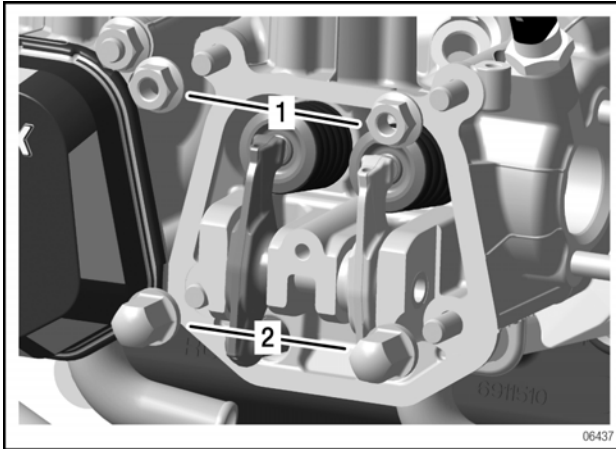


Figure 9.13

- 1 Collar nuts                      2 Collar cap nuts

Step	Procedure
4	Lift the intake manifold with the fuel rail slightly and carefully pull the entire cylinder head off the cylinder with both hands.
5	Hold both push-rods in position in the oil return tubes. Hold the oil bore closed with a finger and remove the cylinder head.
6	Remove O-rings from the oil return tubes and the crankcase.

<b>NOTICE</b>
<p><b>Damage to the sealing surfaces and the oil return tubes may occur.</b></p> <p>Put down the cylinder head in such a manner that the sealing surfaces and the oil return tubes are not damaged.</p>

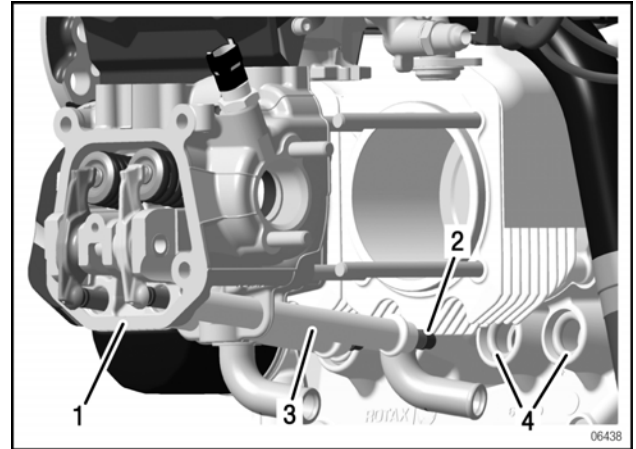


Figure 9.14

- 1 Cylinder head ass.      2 Push-rod  
 3 Oil return tube        4 O-ring

Step	Procedure
7	Hold the oil-filled push-rods closed with a finger, remove them and put them down with the corresponding cylinder heads to prevent confusion.

**NOTE**

*Mark the installation position of the push-rod with an appropriate marker.*

**NOTE**

*If the parts are installed again with the same position and allocation as before they were removed, the push-rods can be reused. The reason for this is the break-in which takes place on the parts prior to removal.*

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### DISASSEMBLY

#### CYLINDER HEAD

The cylinder head should be disassembled on a clean surface. There must be enough space to lay out the removed parts to ensure that all the parts can be laid out and allocated according to their installation position.

#### NOTICE

**Danger of consequent damage to engine! During assembly, the valves and all the associated components must be re-installed in their original position.**

Mark the valves and the associated components correspondingly before removing them.

#### ROCKER ARM — REMOVAL

#### NOTICE

**The rocker arm shaft should never be forced out.**

Step	Procedure
1	Pull out the rocker arm shaft and take out the two rocker arms.

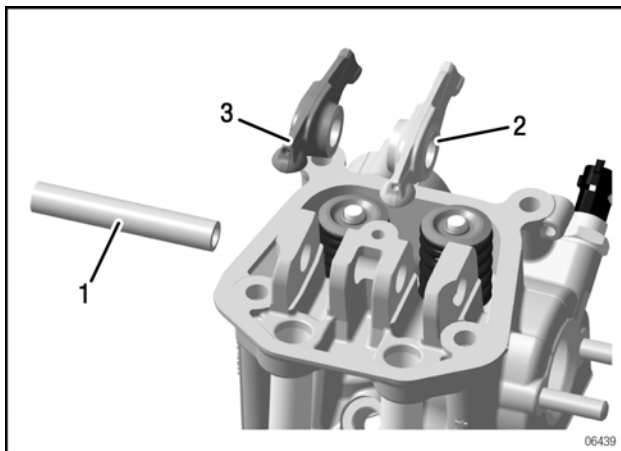


Figure 9.15

- 1 Rocker arm shaft
- 2 Right rocker arm
- 3 Left rocker arm

#### VALVE — REMOVAL

#### NOTICE

**Avoid damage to the stem seal or guide.**  
Before taking out the valves, remove any burrs on the valve stem. Mark the valves accordingly.

Step	Procedure
1	Compress the valve springs using the valve spring mounting device part no. 877380 and valve spring collet.
2	Removal of the valve cotters.
3	Release the valve spring tension.
4	Remove the valve spring retainer and valve springs with the washer and pull out the valve.
5	Repeat this process for the second valve and clean the cylinder head.

#### NOTE

*There is a valve stem seal only on the intake valve.*

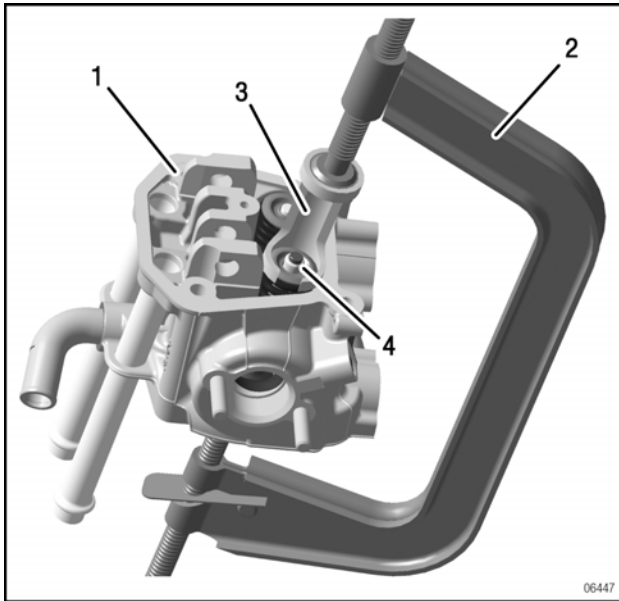


Figure 9.16

- 1 Cylinder head assy.    2 Valve spring collet  
Valve spring mounting  
3 device part no.    4 Valve cotter  
877380

### COOLANT ELBOW INLET — REMOVAL

Step	Procedure
1	Heat the coolant elbow with a hot air gun to approx. 100 °C to 120 °C (212 °F to 248 °F).
2	Remove the coolant elbow. <b>NOTE</b> <i>Mark the position of the coolant elbow.</i>
3	Remove adhesive residues in the bore and check the thread.

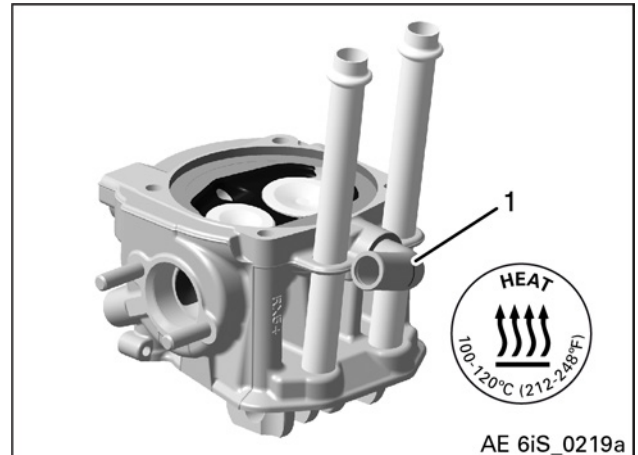


Figure 9.17

- 1 Coolant elbow

### OIL RETURN TUBES — REMOVAL

#### Preparation



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.

#### NOTICE

**If there are leaks, the corresponding oil return tubes must be replaced.**

Step	Procedure
1	Heat the oil return tubes with a hot air gun to approx. 100 °C to 120 °C (212 °F to 248 °F).
2	Pull out the oil return tube.
3	Remove adhesive residues in the bore.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

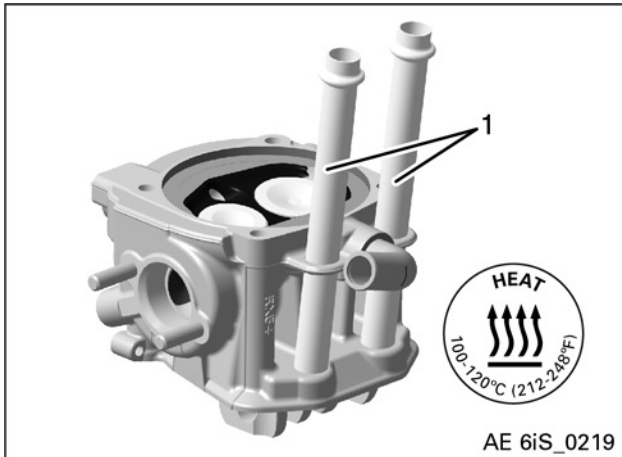


Figure 9.18

- 1 Oil return tubes

**COOLANT ELBOW OUTLET —  
REMOVAL**

Step	Procedure
1	Take off the clamp using spring clamp pliers part no. 877840.
2	Mark the coolant hoses and the coolant elbows and pull them off.
3	Loosen 2 Allen screws with washer.  <b>NOTE</b> <i>Remove the connector brackets on cylinder 3/4.</i>
4	Remove the elbow flange and O-ring.

**NOTE**

*If more than one coolant elbow outlet are removed, they must be numbered.*

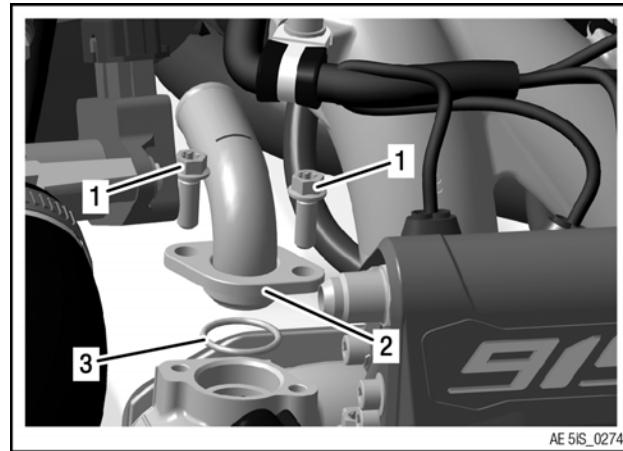


Figure 9.19: TYPICAL

- 1 Hex/Torx flange screw
- 2 Elbow flange
- 3 O-ring

Step	Procedure
5	Heat the coolant elbow and elbow flange with a hot air gun to approx. 100 °C to 120 °C (212 °F to 248 °F).
6	Remove the coolant elbow.  <b>NOTE</b> <i>Mark the position of the coolant elbow.</i>
7	Remove adhesive residues in the bore and check the thread.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSPECTION**

**CYLINDER HEAD  
 SINGLE PARTS - INSPECTION**

**Preparation**



Clean all parts carefully.  
 See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedure.

**CYLINDER HEAD STUDS —  
 INSPECTION**

Step	Procedure
1	Studs M8x20/23 are used to attach the exhaust manifold.
2	Check that they are securely fitted and undamaged.
3	If replacement is necessary, the stud is installed in such a manner that the longer thread (23 mm (0.91 in.)) is screwed into the cylinder head.
4	Secure studs with LOCTITE 648. Tightening torque 6 Nm (53 in. lb.).

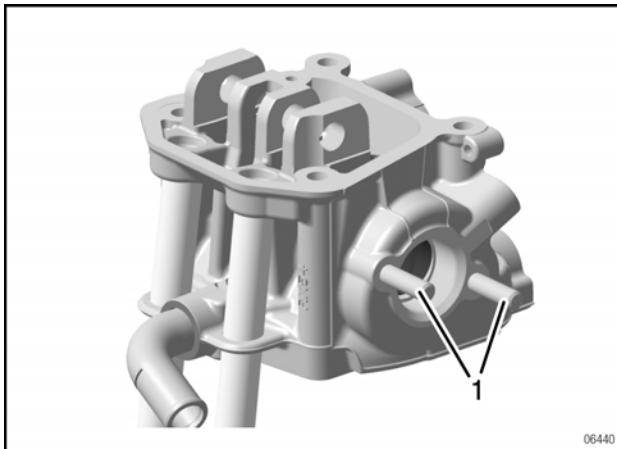


Figure 9.20

1 Stud M8x20/23

**CYLINDER HEAD ASSY. — INSPECTION**

Step	Procedure
1	Inspect the cone of the exhaust manifold. Indentations and scratches no greater than 0.2 mm (0.0079 in.) are permissible. Bumps no greater than 0.1 mm (0.0039 in.) are permissible.

**NOTE**

*If the sealing cone of the exhaust manifold leaks, post-machining is permissible. In this case the sealing cone has to be overhauled according to the current Overhaul Manual (OHM) for the respective engine type. Overhaul Manual (OHM) and its appendix is available for any appropriately rated person or entity on request and by following the standards of the original manufacturer.*

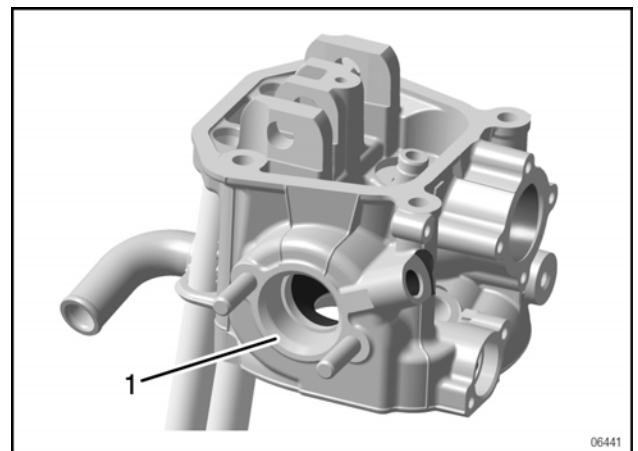


Figure 9.21

1 Cone (exhaust manifold)

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTICE

**Cracks in the cylinder head are not permissible! If in doubt, inspect the affected parts for cracks.**

Step	Procedure
2	Check the spark plug bore. Check the thread for damage.
3	Check the sealing surface of the cylinder block.

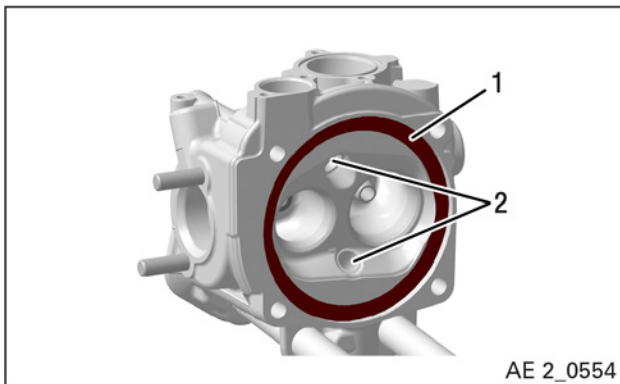


Figure 9.22

- 1 Sealing surface      2 Spark plug bore

## HARDNESS TEST METHOD

### NOTICE

**If the engine has been overheated, a hardness test of the cylinder head is necessary.**



See current Maintenance Manual Line (MML) for the respective engine type.

**The hardness test takes place at measurement point CH08.**

CH08: HB2,5/62,5 DIN EN ISO 6506-2

## NOTICE

**The results of the hardness test must be noted in Chapter 72-30-00, subsection: Wear limits.**

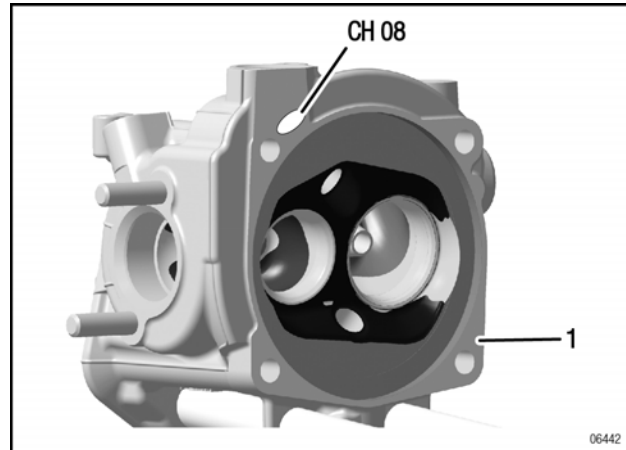


Figure 9.23

- 1 Cylinder head

## VALVE GUIDE — INSPECTION

### NOTICE

**If the wear limit has been reached, the valve guide must be replaced.**

Step	Procedure
1	Check the valve guide visually for damage and wear.
2	Inspect the inner diameter of the valve guide (CH01), see section Wear limits.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

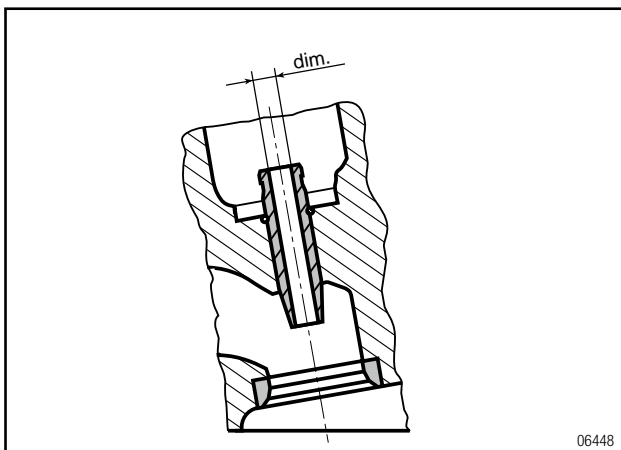


Figure 9.24

**VALVE — INSPECTION**

**NOTICE**

**Replace the valve if the valve stem is out of specification, is damaged or shows traces of wear.**

Step	Procedure
1	Check the valve visually for damage and wear.
2	Determine the valve stem diameter and check the valve disc for wear (VT01). See Chapter 72–30–00 section <a href="#">Wear limits</a> .
3	Check the valve end face for pitting.
4	Check the valve stem for any deposits.

**NOTE**

*The valve stem diameter VT01 is measured in the edge region of the running surface of the valve stem.*

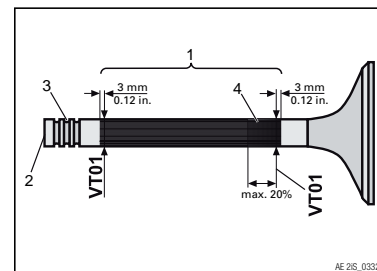


Figure 9.25

- 1 Valve stem
- 2 Valve end face
- 3 Retaining grooves
- 4 Max. oil residues

**NOTE**

*The end of the valve stem must not be ground.*

**NOTICE**

**Risk of valve fracture at the weld point.**  
 Oil residues up to **max. 20 %** of the running surface are permissible. At greater values, the valve may have already been overheated and must be replaced.

Step	Procedure
5	The 3 retaining grooves on the valve stem must be visually inspected for damage and wear.

**NOTE**

*A new valve cotter must be inserted for the wear check. This must have no perceptible axial clearance.*

Step	Procedure
6	Place the valve on roller blocks, roll it and measure the max. permissible out of true value VT02 on the valve disk using a dial gauge. See Chapter 72–30–00 section <a href="#">Wear limits</a> .

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTE

The out of true valve can also be measured with the dial gauge adapter assembly part no. 976140.

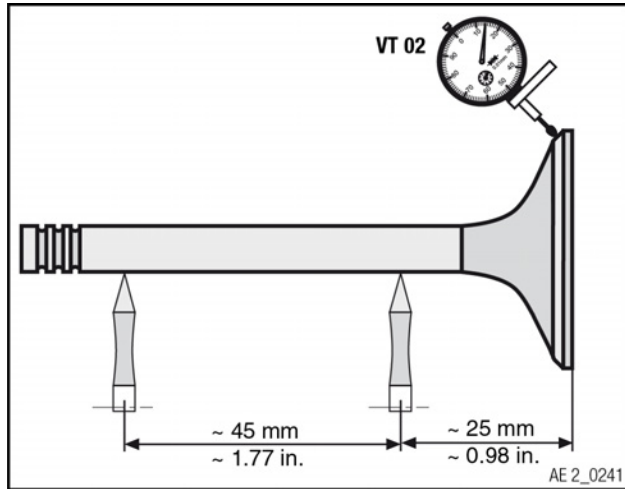


Figure 9.26

Step	Procedure
7	Check the valve face for wear caused by pounding VT03. See Chapter 72–30–00 section <a href="#">Wear limits</a> .

## NOTE

The end of the valve stem must not be ground.

## VALVE SEATS — INSPECTION

Step	Procedure
1	Check the valve seat faces visually for damage and wear.
2	Lubricate the valve seat faces evenly with touch up paste and install the valves in the corresponding valve guides.
3	Turn the valves with moderate pressure so that a clear print of the sealing surface is produced on the valve seat ring.
4	Check that the seal fits properly, if necessary touch up small variances with valve lapping paste.

**NOTICE**

The ring-shaped print on the valve seat faces of the valve seat rings must be continuous and have no breaks. The width of the print corresponds to the valve seat width CH02.

**NOTICE**

If there are burn marks or distortion, the cylinder head has to be overhauled according to the current Overhaul Manual (OHM) for the respective engine type. Overhaul Manual (OHM) and its appendix is available for any appropriately rated person or entity on request and by following the standards of the original manufacturer.

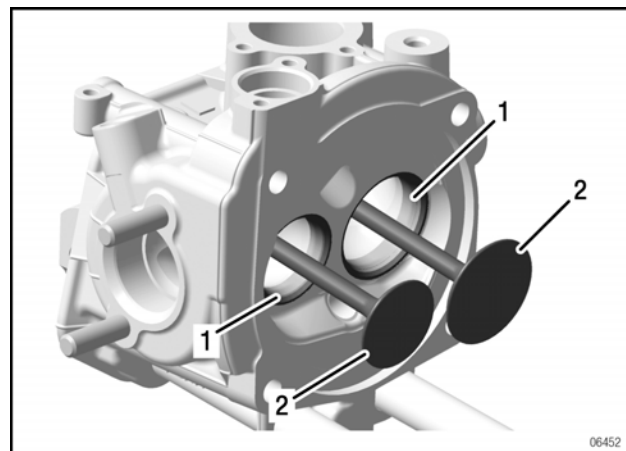


Figure 9.27: Typical

- 1 Valve seat ring      2 Valve

Step	Procedure
5	Check the valve seat width CH02

# BRP-Rotax MAINTENANCE MANUAL HEAVY

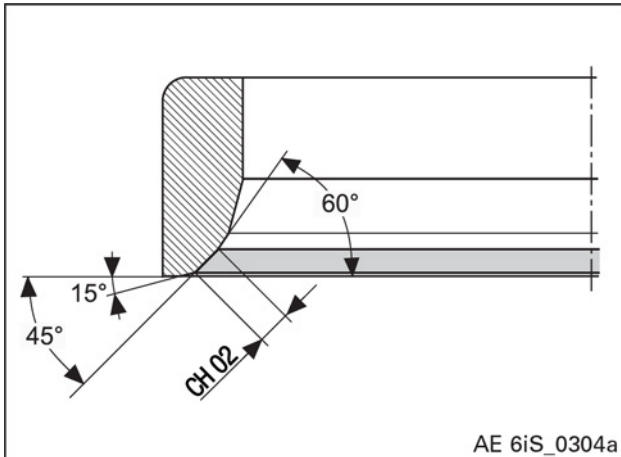


Figure 9.28: : Valve seat ring

## VALVE SPRING — INSPECTION

Step	Procedure
1	Check the valve springs visually for damage such as fracture, deformation.

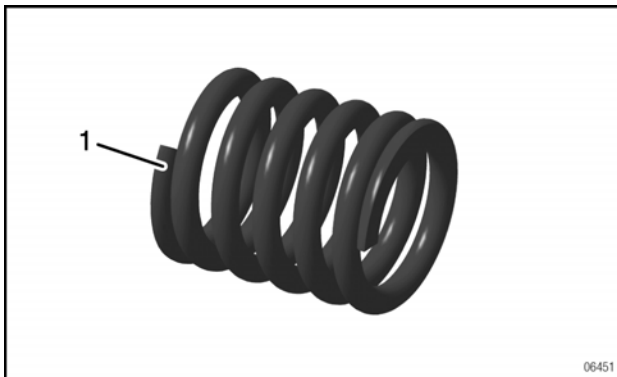


Figure 9.29

1 Valve spring

## SPRING FORCE MEASUREMENT

For the measurement necessary tools are available on the free market.

Step	Procedure
1	Apply a test load (F) and measure the remaining spring length VT04.
2	Replace valves shorter than the minimum length.

### Test load for single valve spring configuration

Single valve spring	200 N (45 lbf)
---------------------	----------------

### NOTE

*The spring length should be as equal as possible on the inlet and outlet sides (max. 0.4 mm (0.016 in) in difference), otherwise replace the springs.*

## WASHER - INSPECTION

Step	Procedure
1	Check the washers visually for damage and wear.

The wear must be measured starting from the reference face (on the inner part of the valve spring support) radially outwards in the measurement region, using a dial gauge. **Dimension t = max. 0.04 mm (0.0016 in).**

Wear of more than 0.04 mm is not permissible. If this value is exceeded, the valve, the valve spring support, the valve spring retainer, the valve cotter and the hydraulic valve tappet or other damaged components in the affected valve drive must always be replaced.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

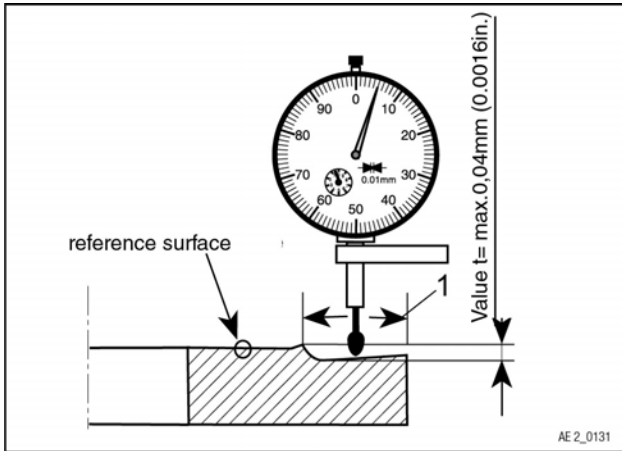


Figure 9.30: Typical

1 Measurement region

### NOTE

*The valve spring support can be used as an indicator of a malfunction of the valve drive relating to poorly or insufficiently purged hydraulic valve tappets. In normal conditions, no measurable wear can be seen even after a relatively long operating time.*

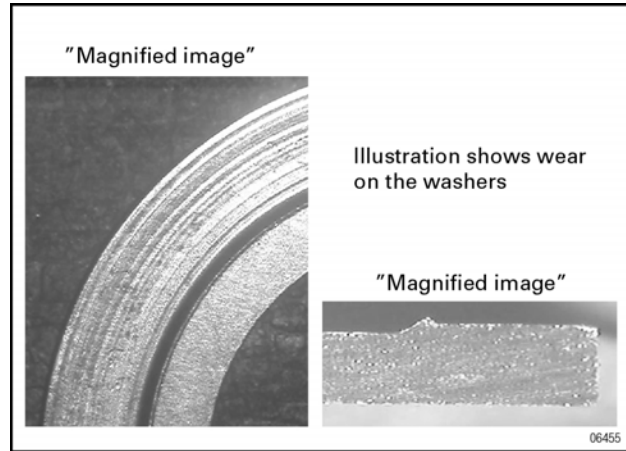


Figure 9.31

## ROCKER ARM CHECK AND ROCKER ARM SHAFT – INSPECTION

### System description

The rocker arm bearing is lubricated by the hollow drilled push-rod of the ball joint socket. The rocker arm bearing is supplied with oil via the oil ducts in the rocker arm. The oil exits and thus lubricates the rest of the valve mechanism via the bore. The rocker arms for the inlet and outlet are different.

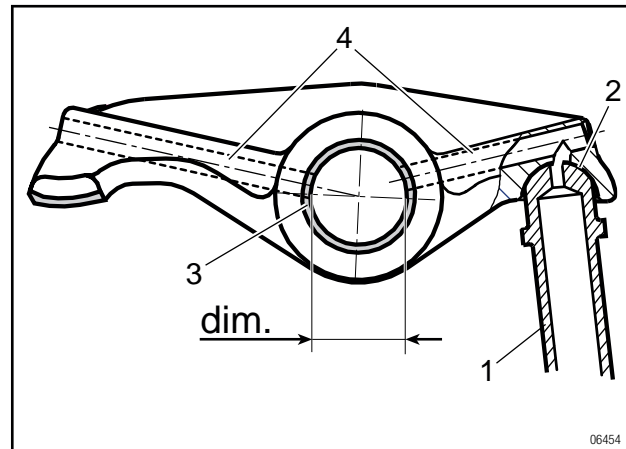


Figure 9.32

- |                      |              |
|----------------------|--------------|
| 1 Push-rod           | 2 Ball joint |
| 3 Rocker arm bushing | 4 Oil ducts  |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
1	Check the surface of the rocker arm shaft and the inner diameter of the rocker arm bushing for traces of wear.
2	Check the valve support surface and ball joint of the rocker arm.
3	Check oil bores in the rocker arm for free passage.

**NOTICE**

**If excessive wear is visible in the rocker arm bearing, this indicates a lack of oil. The support surface for the valve stem can be re-machined a little bit.**

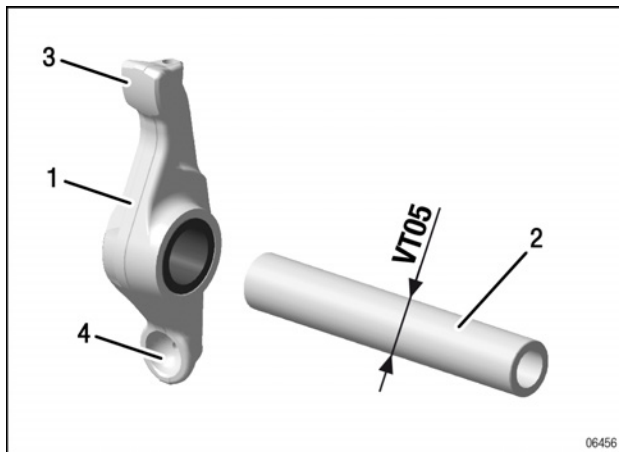


Figure 9.33

- |               |                    |
|---------------|--------------------|
| 1 Rocker arm  | 2 Rocker arm shaft |
| 3 Valve guide | 4 Ball joint       |

Step	Procedure
4	Measure the rocker arm shaft bearing (CH05) if it is worn.

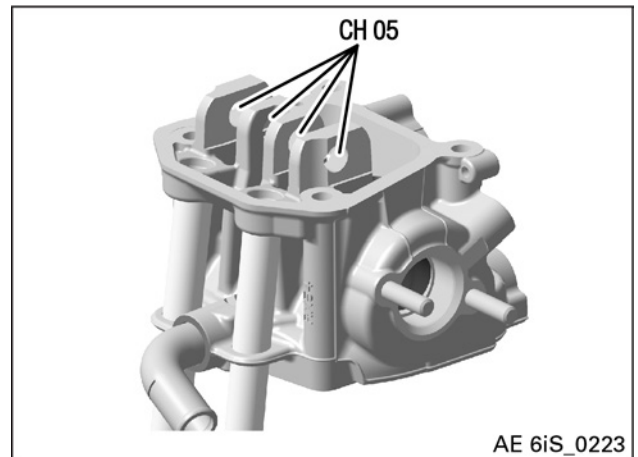


Figure 9.34

## ROCKER ARM BUSHING – INSPECTION

With the rocker arm bushings (plastic bushing), ensure that the plastic bushing is a sliding seat. This can rotate relative to the rocker arm bore after installation too. The rocker arm bushing is therefore provided with an outer circular groove to allow oil supply. The rocker arm bushing can be installed independently of position.

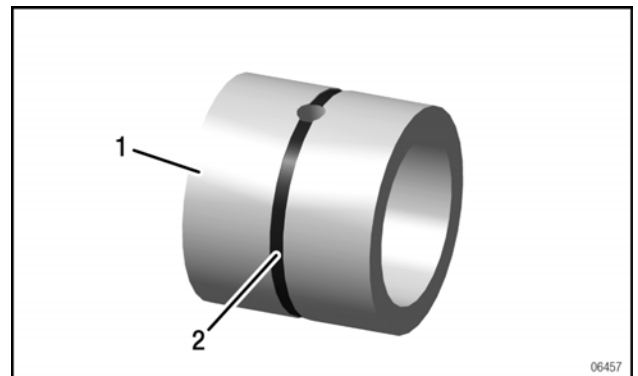


Figure 9.35

- |                      |          |
|----------------------|----------|
| 1 Rocker arm bushing | 2 Groove |
|----------------------|----------|

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**PUSH ROD – INSPECTION**

<b>NOTICE</b>	
<b>Excessive engine speed can cause bending of the push rods.</b>	

Step	Procedure
1	Clean push rods and carry out a visual inspection.

**NOTE**

*Make sure that the two ball heads pressed into the rod fit tightly.*

**NOTE**

*Lube oil from the hydraulic valve tappet passes the rocker arm through the bore.*

Step	Procedure
2	Roll push rods and check for run out, see section Wear limits (VT09).

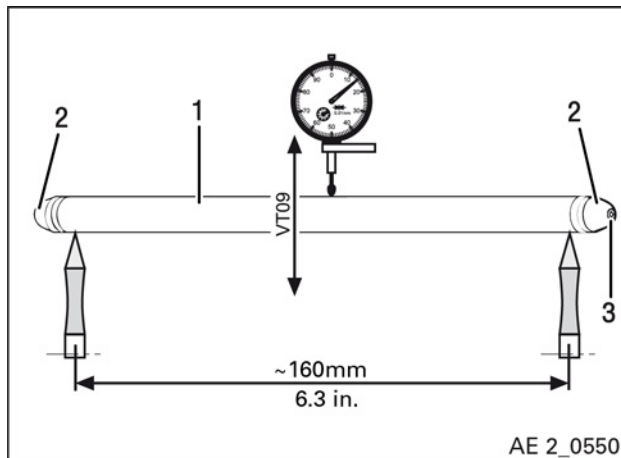


Figure 9.36

- 1 Push rod
- 2 Ball heads
- 3 Bore

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

**WEAR LIMITS**

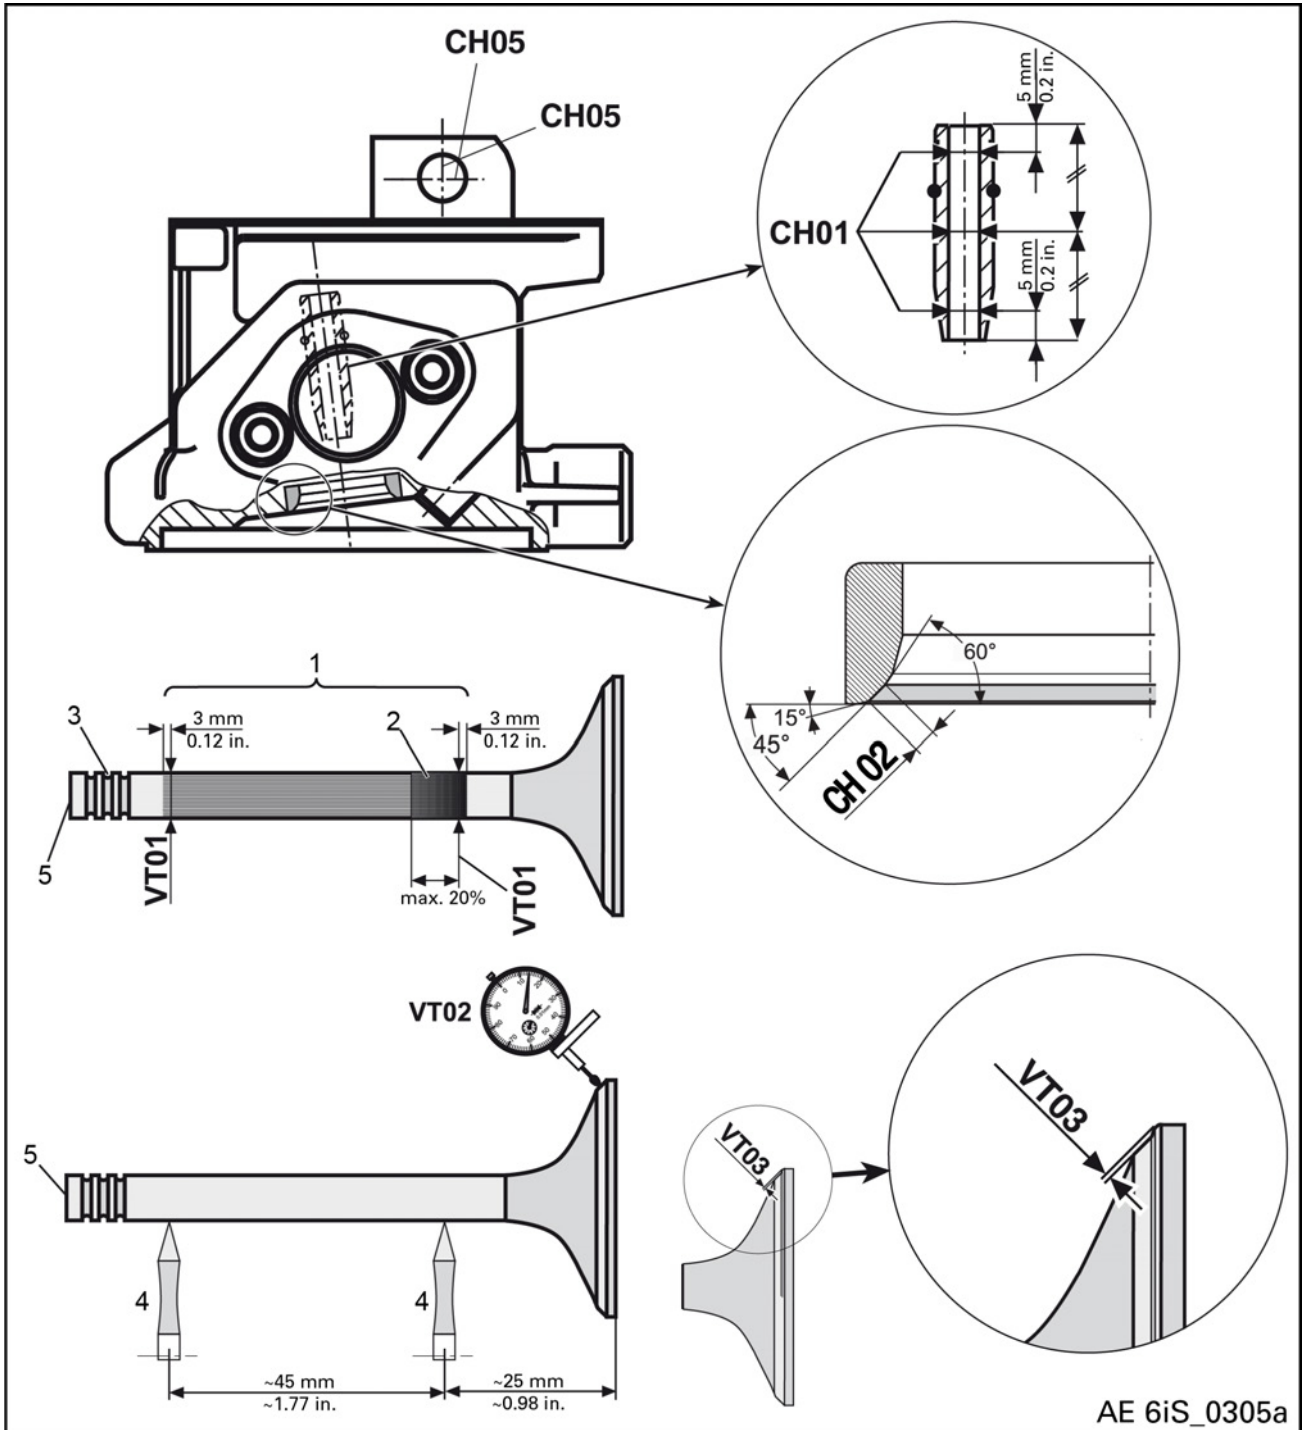


Figure 9.37: Wear Limits

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

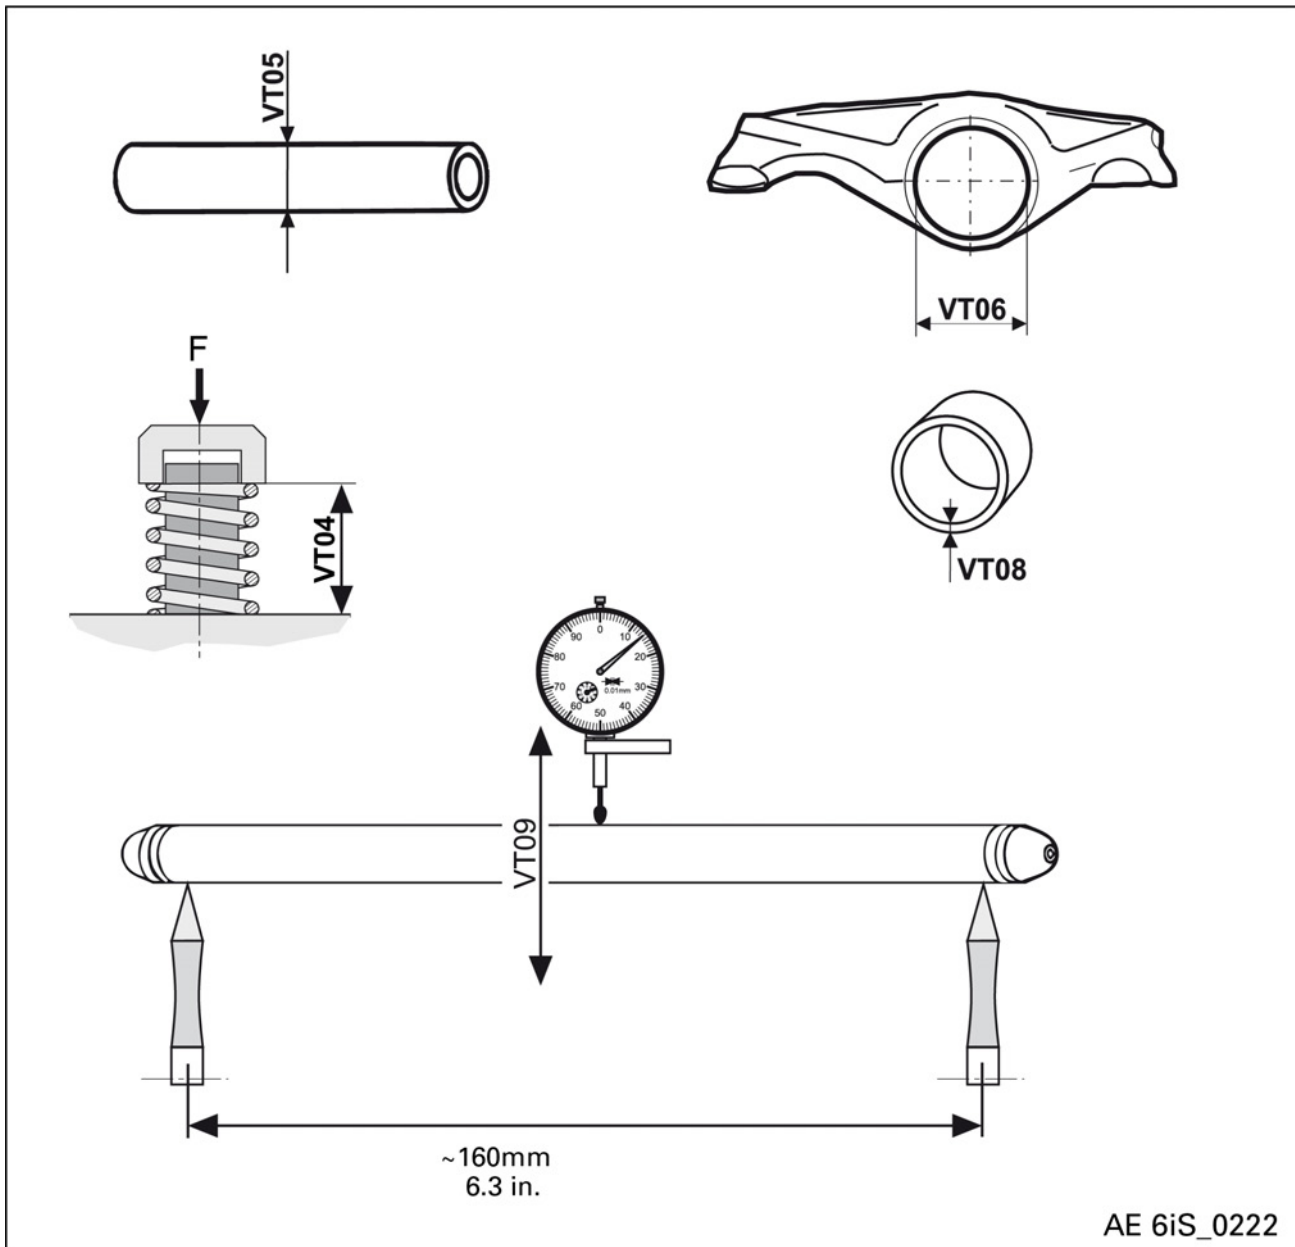


Figure 9.38: Wear Limits



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description		Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements				
			min	max	100 %	50 %		Cy. 1	Cy. 2	Cy. 3	Cy. 4	
<b>Cylinder head</b>												
Valve guide bore inner diam.	Intake valve	CH01	7.01 mm 0.2758 in.	7.018 mm 0.2763 in.	7.150 mm 0.2815 in.	7.084 mm 0.2789 in.	current replaced					
	Exhaust valve	CH01	7.006 mm 0.2758 in.	7.018 mm 0.2763 in.	7.150 mm 0.2815 in.	7.084 mm 0.2789 in.	current replaced					
Width of valve seat	Intake valve	CH02	1.4 mm 0.0551 in.	1.9 mm 0.0748 in.	2.4 mm 0.0945 in.	2.150 mm 0.0846 in.	current replaced					
	Exhaust valve	CH02	2.5 mm 0.0984 in.	3.0 mm 0.1181 in.	3.5 mm 0.1378 in.	3.25 mm 0.1280 in.	current replaced					
Hardness test		CH08	85 HB				current replaced					
<b>Valves</b>												
Diameter of valve stem	Intake valve	VT01	6.965 mm 0.2742 in.	6.980 mm 0.2748 in.	6.940 mm 0.2732 in.	6.953 mm 0.2737 in.	current replaced					
	Exhaust valve	VT01	6.965 mm 0.2742 in.	6.980 mm 0.2748 in.	6.940 mm 0.2732 in.	6.953 mm 0.2737 in.	current replaced					
Backlash Valve guide/ valve stem	Intake valve	C-H01/ VT01	0.026 mm 0.0010 in.	0.053 mm 0.0021 in.	0.150 mm 0.0059 in.	0.102 mm 0.0040 in.	current replaced					
	Exhaust valve	C-H01/ VT01	0.026 mm 0.0010 in.	0.053 mm 0.0021 in.	0.150 mm 0.0059 in.	0.102 mm 0.0040 in.	current replaced					
Out of round	Intake valve	VT02	0.00 mm 0.0000 in.	0.03 mm 0.0012 in.	0.04 mm 0.0016 in.	0.035 mm 0.0014 in.	current replaced					
	Exhaust valve	VT02	0.00 mm 0.0000 in.	0.03 mm 0.0012 in.	0.04 mm 0.0016 in.	0.035 mm 0.0014 in.	current replaced					

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description		Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements			
			min	max	100 %	50 %					
Wear on Valve disc	Intake valve	VT03	0.00 mm 0.0000 in.	0.00 mm 0.0000 in.	0.2 mm 0.0080 in.	0.1 mm 0.0040 in.	current re-placed				
	Exhaust valve	VT03	0.00 mm 0.0000 in.	0.00 mm 0.0000 in.	0.2 mm 0.0080 in.	0.1 mm 0.0040 in.	current re-placed				
Length of valve spring at test, load each	Intake valve	VT04	32.4 mm 1.276 in.	33.6 mm 1.323 in.	32.0 mm 1.260 in.	32.2 mm 1.2680 in.	current re-placed				
	Exhaust valve	VT04	32.4 mm 1.276 in.	33.6 mm 1.323 in.	32.0 mm 1.260 in.	32.2 mm 1.2680 in.	current re-placed				
<b>Rocker arm</b>											
Bore for rocker arm shaft	Intake valve	CH05	12.000 mm 0.4724 in.	12.018 mm 0.4731 in.	12.090 mm 0.4760 in.	12.054 mm 0.4746 in.	current re-placed				
	Exhaust valve	CH05	12.000 mm 0.4724 in.	12.018 mm 0.4731 in.	12.090 mm 0.4760 in.	12.054 mm 0.4746 in.					

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description		Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements			
			min	max	100 %	50 %					
<b>Rocker arm</b>											
Diameter of Rocker arm shaft	Intake valve	VT05	11.983 mm 0.4718 in.	11.994 mm 0.4722 in.	11.950 mm 0.4705 in.	11.967 mm 0.4711 in.	current re-placed				
	Exhaust valve	VT05	11.983 mm 0.4718 in.	11.994 mm 0.4722 in.	11.950 mm 0.4705 in.	11.967 mm 0.4711 in.	current re-placed				
Radial clearance Bore/rocker arm shaft	Intake valve	CH05 /VT05	0.006 mm 0.0002 in.	0.035 mm 0.0014 in.	0.150 mm 0.0059 in.	0.093 mm 0.0036 in.	current re-placed				
	Exhaust valve	CH05 /VT05	0.006 mm 0.0002 in.	0.035 mm 0.0014 in.	0.150 mm 0.0059 in.	0.093 mm 0.0036 in.	current re-placed				
Rocker arm bushing (plastic)	Intake valve	VT06	16.000 mm 0.6299 in.	16.018 mm 0.6306 in.	16.038 mm 0.6314 in.	16.028 mm 0.6310 in.	current re-placed				
	Exhaust valve	VT06	16.000 mm 0.6299 in.	16.018 mm 0.6306 in.	16.038 mm 0.6314 in.	16.028 mm 0.6310 in.	current re-placed				
Wall thickness of rocker arm shaft (plastic)	Intake valve	VT08	1.95 mm 0.0768 in.	1.98 mm 0.0780 in.	1.90 mm 0.0748 in.	1.93 mm 0.0758 in.	current re-placed				
	Exhaust valve	VT08	1.95 mm 0.0768 in.	1.98 mm 0.0780 in.	1.90 mm 0.0748 in.	1.93 mm 0.0758 in.	current re-placed				
<b>Push-rod assy.</b>											
Deflection of Push-rod	Intake valve	VT09	0.000 mm 0.0000 in.	0.100 mm 0.0039 in.	0.200 mm 0.0079 in.	0.150 mm 0.0059 in.	current re-placed				
	Exhaust valve	VT09	0.000 mm 0.0000 in.	0.100 mm 0.0039 in.	0.200 mm 0.0079 in.	0.150 mm 0.0059 in.	current re-placed				

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**ASSEMBLY**

**CYLINDER HEAD — ASSEMBLY**

**Preparation**

- Clean all parts carefully.

<b>NOTICE</b>
<b>Check sealing surface for damage! Remove carbon residues!</b>

<b>NOTICE</b>
<b>Sandblasting on valves is not allowed (as cleaning method).</b>

**OIL RETURN TUBE – INSTALLATION**

Step	Procedure
1	Secure the oil return tube with LOCTITE 648 and install it in the cylinder head.
2	Allow the cylinder head to harden for at least 12 hours at room temperature.

**NOTE**

*To prevent leakage between oil return tube and cylinder head, roughen the contact surfaces before lubrication with LOCTITE 648.*

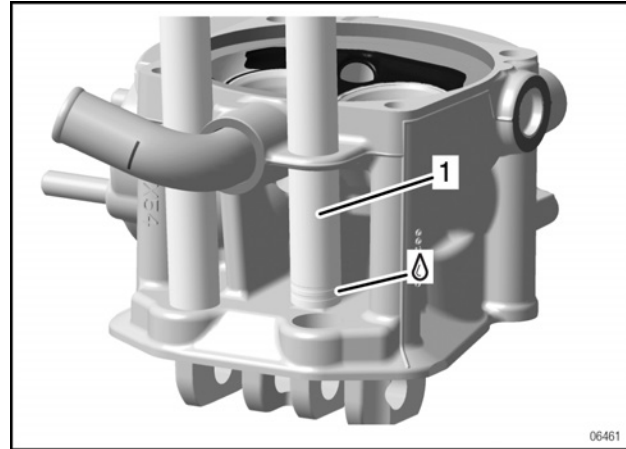


Figure 9.39

1 Oil return tube

**COOLANT ELBOW INLET – INSTALLATION**

Step	Procedure
1	Secure the coolant elbow with LOCTITE 577 and install the elbow in the cold cylinder head.  <b>NOTE</b> <i>The coolant elbow must be screwed in at least 4 turns.</i>

**NOTE**

*Also apply LOCTITE 577 to the thread in the cylinder head.*

Step	Procedure
2	Allow the cylinder head to harden for at least 12 hours at room temperature.

**NOTE**

*If the sealing surface of the cylinder has carbon residues, it must be removed carefully. Remove excess LOCTITE!*

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

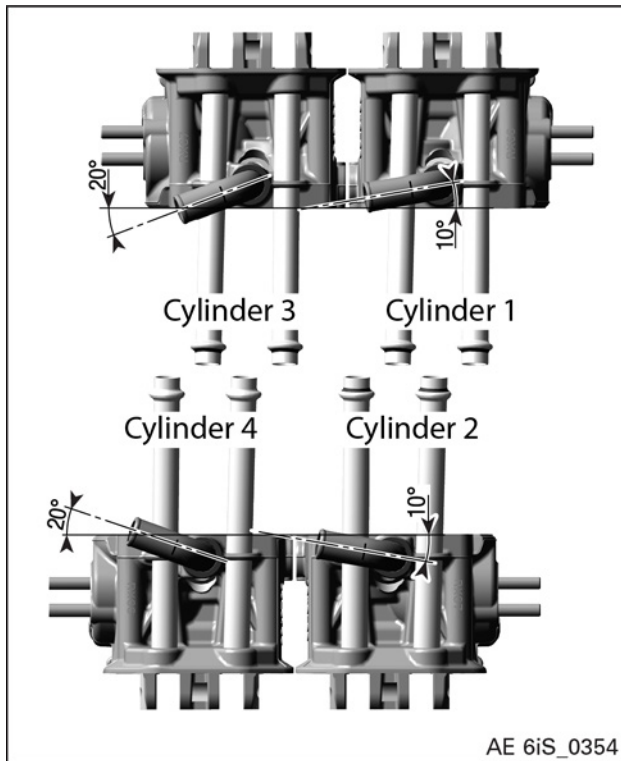


Figure 9.40

**COOLANT ELBOW OUTLET — ASSEMBLY**

Step	Procedure
1	Secure the coolant elbow with LOCTITE 577 and install the elbow in the cold elbow flange.  <b>NOTE</b> <i>The coolant elbow must be screwed in at least 4 turns.</i>

**NOTE**

*Also coat the thread in the elbow flange with LOCTITE 577.*

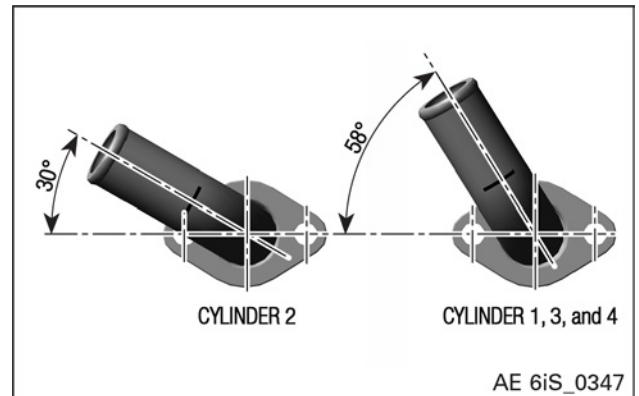


Figure 9.41

- 1 Coolant elbow      2 Elbow flange

Step	Procedure
2	Allow the elbow flange to harden for at least 12 hours at room temperature.

**NOTE**

*Remove excess LOCTITE.*

**COOLANT ELBOW — INSTALLATION**

Step	Procedure
1	Install a new O-ring 19x2 in the cylinder head.
2	Fasten the coolant elbow with 2 Hex/Torx flange screws M6x20. Tightening torque 10 Nm (89 in. lb.).

**NOTE**

*Installation position: 30° coolant elbow on cyl. 2 and 58° coolant elbow on cyl. 1, 3 and 4.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

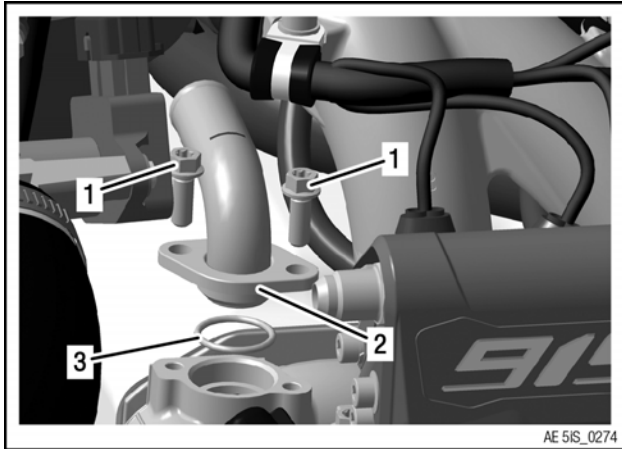


Figure 9.42: TYPICAL

- 1 Hex/Torx flange screw M6x20
- 2 Elbow flange
- 3 O-ring 19x2

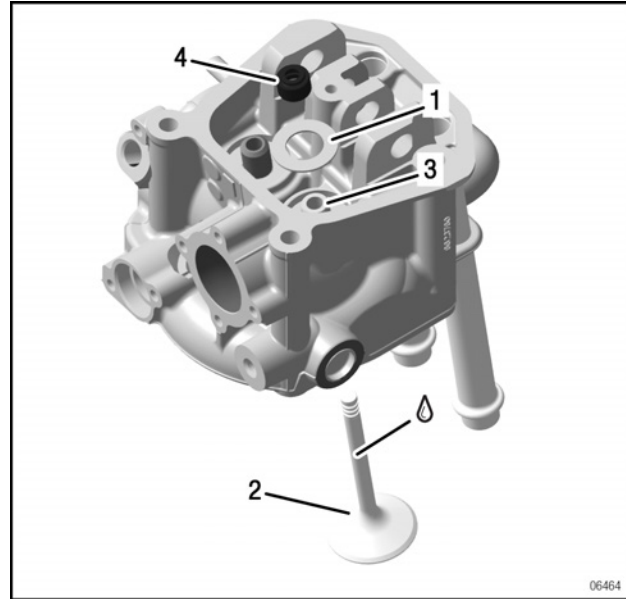


Figure 9.43

- 1 Shim 16/27.9/1
- 2 Intake valve
- 3 Valve guide
- 4 Valve stem seal

**VALVE INSTALLATION**

**NOTICE**

**Risk of engine damage if damaged parts are installed!**

All parts must be measured and assessed before installation. All moving parts must be lubricated with engine oil before installation!

**NOTICE**

**Oil residues up to max. 20% of the running surface are permissible.**

Step	Procedure
1	Push shim 16/27.9/1 onto the valve guide and install a new valve stem seal on the intake side.
2	Lubricate the valve stem and push the intake valve from outside into the valve guide.

Step	Procedure
3	Install the valve springs and the valve spring retainer

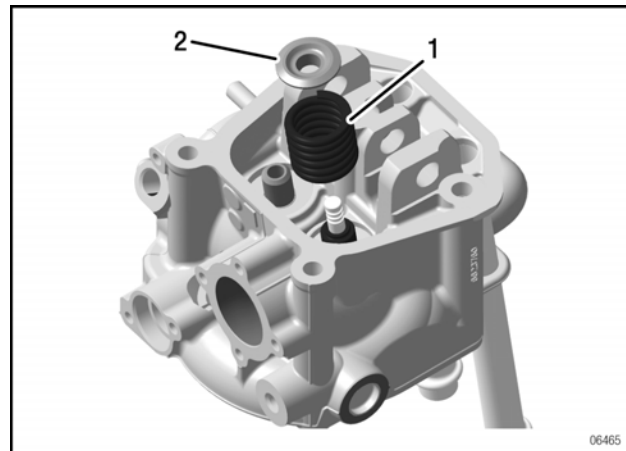


Figure 9.44

- 1 Valve spring
- 2 Valve spring retainer

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
4	Compress valve springs with the mounting device part no. 877380 and collet.
5	Insert the valve cotters and de-tension the valve springs.
6	Carry out the same procedure for the exhaust valve.

**NOTE**

*Ensure they are positioned correctly and that there is a uniform gap between the valve cotters.*

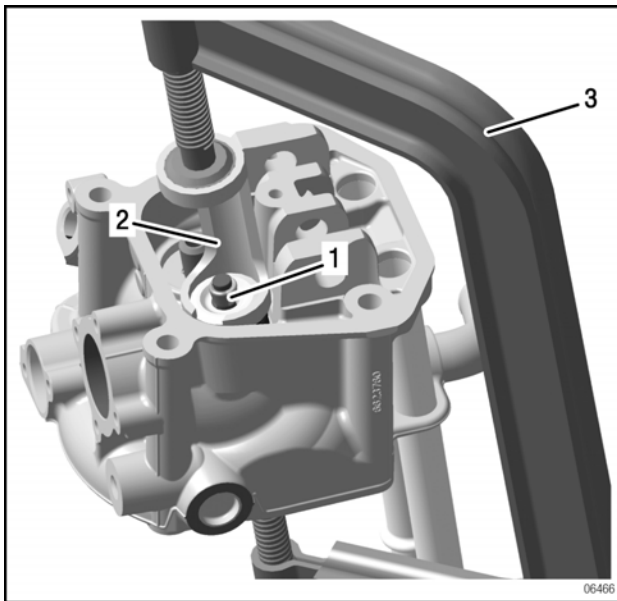


Figure 9.45: Typical

- 1 Valve cotter
- 2 Mounting device part no. 877380
- 3 Collet

**ROCKER ARM — INSTALLATION**

**NOTICE**

**Do not use force! The rocker arm bearing is slide fit.**

Step	Procedure
1	Lubricate the rocker arm shaft (on both sides), rocker arm bore and valve spring support with Engine oil.
2	Bring the intake rocker arm and the exhaust rocker arm with the rocker arm bushing into position depending on the state of construction.
3	Position the rocker arm shaft.

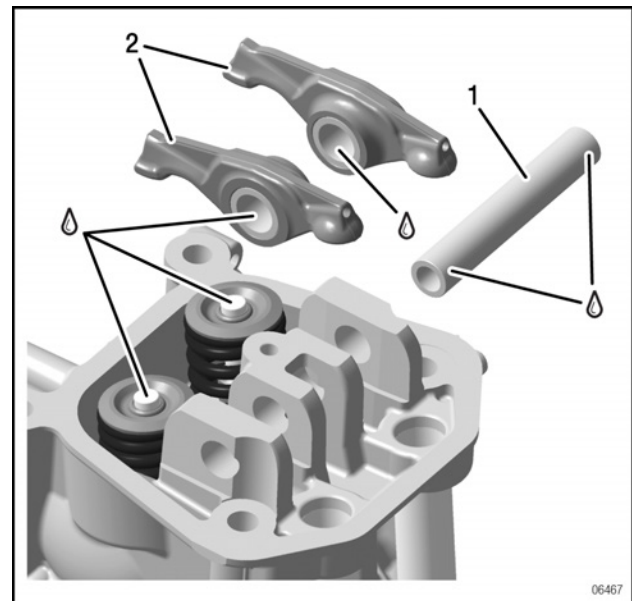


Figure 9.46

- 1 Rocker arm shaft
- 2 Rocker arm

**NOTICE**

**The rocker arm shaft should never be forced in.**

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**CYLINDER HEAD – INSTALLATION**

**Preparation**

- Clean all parts carefully.
- Lightly grease or lubricate O-rings and gaskets.
- New studs must be installed, see Chapter 72-30-10, section [Studs – installation](#)

**NOTICE**

**Studs (expansion screws) may only be used once.**

**NOTICE**

**To ensure constant tightening torque, lightly lubricate the flat surfaces of the collar cap nuts.**

**NOTICE**

**Place the cylinder at TDC. The valves are then in overlap. This prevents a situation in which a valve is open and the cylinder head lifts off again from the cylinder head gasket face. Otherwise the oil return line O-rings can be damaged.**

Step	Procedure
1	Install the corresponding push-rods in the oil return lines.
2	Lubricate the push-rod heads with LOC-TITE ANTI SEIZE.
3	Lubricate new O-ring 16x5 with engine oil and install it on the oil return tube.

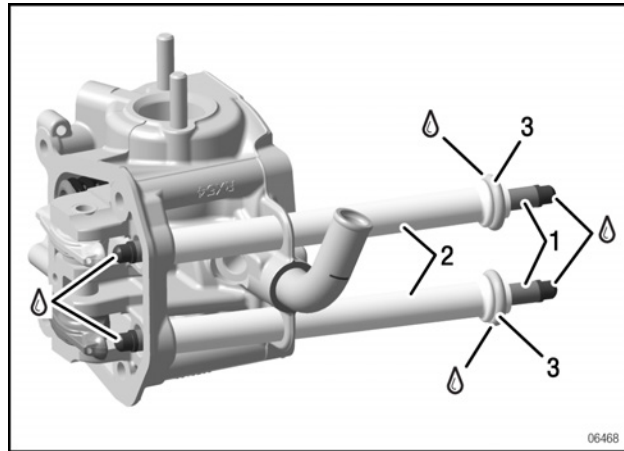


Figure 9.47

- 1 Push-rods                      2 Oil return tubes  
 3 O-ring 16x5

**NOTE**

*The intake manifold with the fuel rail must be raised slightly for part repairs.*

Step	Procedure
4	Place on the cylinder head until the O-rings of the two oil return lines rest in the crankcase.
5	Raise the cylinder until the centring collar of the cylinder engages in the cylinder head recess.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

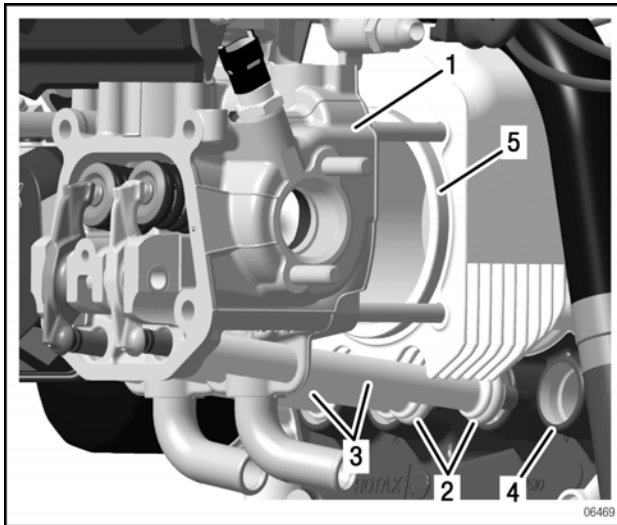


Figure 9.48

- 1 Cylinder head assy.
- 2 O-ring
- 3 Oil return tubes
- 4 Crankcase
- 5 Centring collar of cylinder

**NOTICE**

**O-rings must be seated into the crankcase at the same time as cylinder head is tightened on-to cylinder.**

Step	Procedure
6	Clean and degrease all threads of studs.  <b>NOTE</b> <i>Collar cap M8 and collar nuts M8 also must be clean and free from residues.</i>
7	Squeeze the cylinder head and the cylinder together by hand and push towards crankcase.  <b>NOTE</b> <i>A slight "click" can be heard as they align together.</i>

Step	Procedure
8	Lubricate the contact area for the collar cap nuts M8 with grease.  <b>NOTE</b> <i>No grease for collar nuts M8 contact areas!</i>
9	Hand-tighten 2 M8 collar cap nuts M8 and 2 collar nuts M8 diagonally (maximum 5 Nm/44 in.lb), until cylinder head rests on cylinder.

**NOTE**  
*If necessary, repeat the process for the other cylinder heads.*

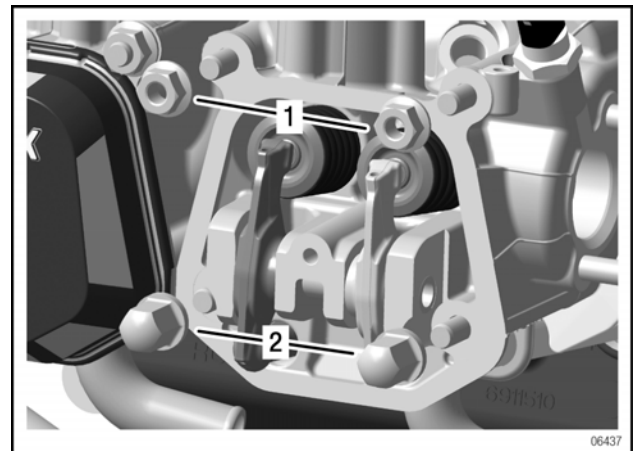


Figure 9.49

- 1 Collar nut M8
- 2 Collar cap nut M8

**CYLINDER HEAD (SINGLE) REPAIRED PER ENGINE SIDE**

Step	Procedure
1	Position the insulating flange between the intake manifold and the cylinder head.
2	Install the intake manifold on the cylinder head which has not been removed with 2 hex./torx collar screws M6x20. Tightening torque 10 Nm (89 in. lb.).



## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
1	<p>Attach the cylinder aligning tool part no. 877262 to the intake flange of the cylinder heads with 4 Allen screws M6x25 and tighten to 10 Nm (89 in. lb.).</p> <p><b>NOTE</b></p> <p><i>Only necessary to install alignment tool if 2 adjacent cylinder heads are being repaired.</i></p>

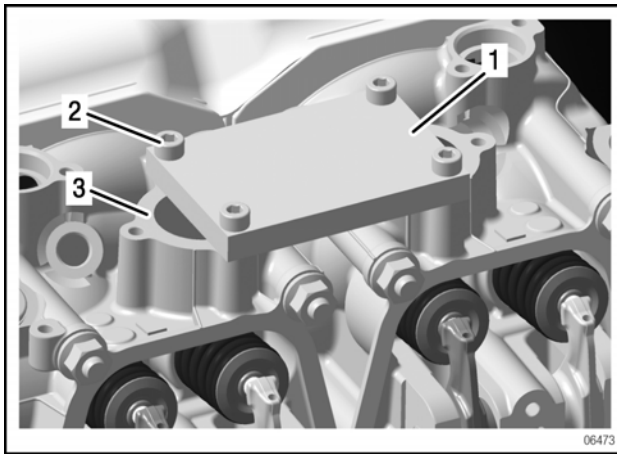


Figure 9.51: TYPICAL

- 1 *Cylinder aligning tool*  
877263      2 *Allen screw M6x25*
- 3 *Intake flange*

Step	Procedure
2	<p>See Fig. "screw diagram". Tighten the nuts in torque sequence following these steps:</p> <ul style="list-style-type: none"> <li>– Step 1: all collar cap nuts M8 and collar nuts M8 with 10 Nm (89 in. lb.).</li> <li>– Step 2: all collar cap nuts M8 and collar nuts M8 with 30 Nm (-5 Nm) / 265 in. lb. (-44 in. lb.).</li> </ul> <p><b>NOTE</b></p> <p><i>Perform step 3 sequentially for each cylinder head nut one at a time following the torque sequence in figure "screw diagram".</i></p> <ul style="list-style-type: none"> <li>– Step 3: Loosen each collar cap nut M8 or collar nut M8 360° then tighten to 10 Nm (89 in. lb.) + 150°.</li> </ul>

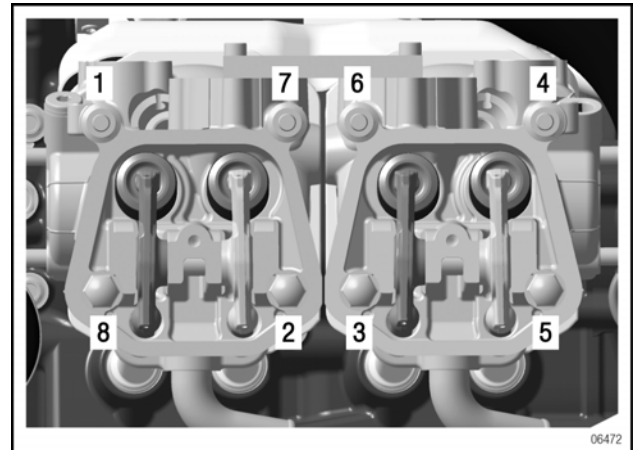


Figure 9.52: Screw diagram

Step	Procedure
3	Loosen 4 Allen screws M6x25 and remove the cylinder aligning tool.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## VALVE COVER – INSTALLATION

### NOTICE

There must be a minimum gap of 0.2 mm (0.008 in.) between the valve covers on the outer contour. The valve covers must not touch each other!

### NOTICE

Ensure the valve cover screw is the correct length! Look out for damaged threads. If the screw is loose or the valve cover leaks, the oil will not return to the oil tank.

### NOTICE

The thread of screw and head must be cleaned from oil.

Step	Procedure
1	Install new O-ring 105x2.5 and new O-ring 6.4x1.8 in the valve cover.
2	Install the valve cover and fasten it with an Allen screw M6x30 and washer 6/12/1. Tightening torque 10 Nm (89 in. lb.).

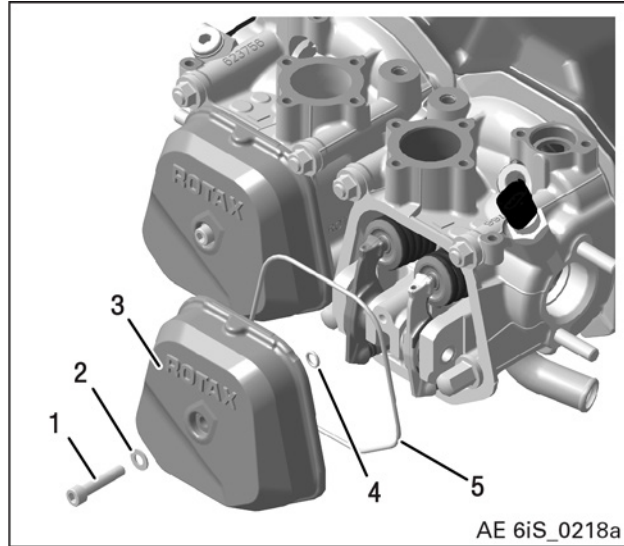


Figure 9.53: : TYPICAL

- |                       |                  |
|-----------------------|------------------|
| 1 Allen screw M6x30   | 2 Washer 6/12/1  |
| 3 Cylinder head cover | 4 O-ring 6.4x1.8 |
| 5 O-ring 105x2.5      |                  |

## FINISHING WORK

- Install the coolant hoses to the inlet and outlet elbow. See Chapter 75-00-00 section [Form hose – installation](#).
- Install the intake manifold. See Chapter 73-10-00 section [Intake manifold – installation](#).
- Install the fuel line assy. See Chapter 73-10-00 section [Fuel line assy. – installation](#).
- Install the spark plugs and connect the spark plug connectors. See Chapter 74-20-00 section [Spark plug – installation](#) and [Spark plug connector and ignition cable assy. – installation](#).
- Install the Coolant Temperature Sensor (CTS) and connect the wiring harness. See Chapter 76-70-00 [Coolant temperature sensor \(CTS\) – installation](#).
- Install the exhaust pipes. See Chapter 78-10-00 section Exhaust pipe on cylinder head – installation..
- Connect the wiring harness. See Chapter 76-50-00.

## BRP-Rotax MAINTENANCE MANUAL HEAVY



Fill with operating fluids or check filling levels.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Flush the engine cooling system.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system.



Purge the oil system. See current Installation Manual Line (IM) for the respective engine type, Chapter 79-00-00 Purging the lubrication system.



Carry out an engine test run.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 72–30–10**  
**DISPLACEMENT PARTS**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>3</b>
<b>Service Products</b> .....	<b>4</b>
<b>System description</b> .....	<b>5</b>
Safety instruction.....	5
Maintenance .....	5
<b>Removal</b> .....	<b>6</b>
Cylinder and piston — removal.....	6
Hydraulic valve tappet – removal .....	7
<b>Inspection</b> .....	<b>9</b>
Displacement parts — inspection.....	9
Piston — inspection.....	9
Piston rings — inspection.....	10
Piston pin — inspection.....	11
Cylinder — inspection.....	11
Hardness test method.....	12
Hydraulic valve tappet — inspection.....	12
<b>Wear limits</b> .....	<b>14</b>
<b>Installation</b> .....	<b>19</b>
Cylinder and piston — installation.....	19
Hydraulic valve tappet – installation .....	19
Piston — installation .....	19
Studs – installation .....	22
Cylinder – installation.....	23
Finishing work.....	23





**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SPECIAL TOOLS**

Description	Part number
Piston pin extractor assy.	877091
Piston ring spanner, 84 mm	876967
Monohook circlip remover	976380
Installation tool assy.	877802

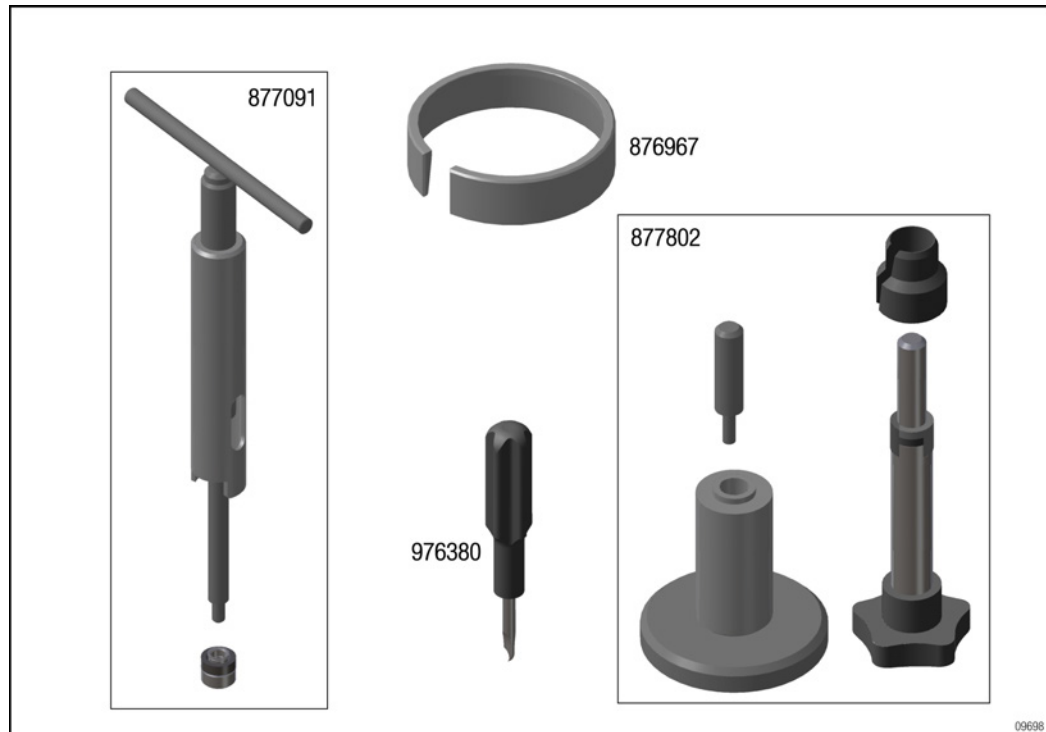


Figure 10.2: Special Tools

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE ANTI SEIZE	297434
Engine oil	n.a.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### **SYSTEM DESCRIPTION**

In the engine, 4 cylinders with "GILNISIL"- coated running surfaces are used. The pistons are light alloy full skirt pistons. The piston axle is axially offset by 1 mm (0.03937 in.) with respect to the piston skirt.

### **SAFETY INSTRUCTION**

#### **⚠ WARNING**

#### **Danger of severe burns and scalds!**

Always allow the engine to cool down to ambient temperature before starting any work.

### **MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

### Preparation

- Remove the cylinder head. See Chapter 72-30-00 of this Manual.

## CYLINDER AND PISTON — REMOVAL

### NOTE

*Before the cylinders and pistons are removed, they must be marked in pairs to prevent confusion. The cylinders are all identical. The pistons are axially offset!*

Step	Procedure
1	Put the piston in the TDC position and apply the marking arrow in the direction of the gearbox.

### NOTE

*When the piston is cleaned the marking arrow becomes visible. It points in the direction of the gearbox for all four cylinders and aids correct assembly of the axially offset piston.*

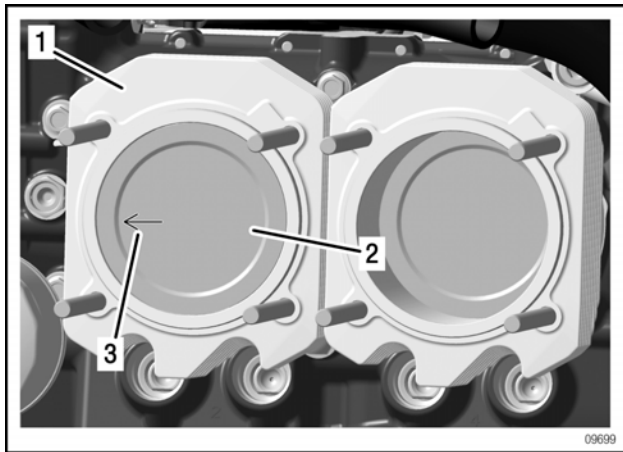


Figure 10.3

- 1 Cylinders                      2 Pistons  
3 Marking arrow

### NOTICE

**Pistons and piston rings can be damaged.**  
Support pistons by hand!

Step	Procedure
2	Support the piston by hand and carefully remove the cylinder along with the O-ring.

### NOTICE

**Don't bend the oil spray nozzle with con rod.**  
**Otherwise cooling of piston crown is not assured.**

### NOTICE

**Cover the crankcase to ensure that no foreign bodies can get inside.**

### NOTE

*2 O-rings 10.82x1.78 are placed under the cylinder on the crankcase.*

### NOTE

*Remove studs M8x200 and M8x186 for easier disassembly and protection from damage of the piston.*

### NOTICE

**Studs (expansion screws) may only be used once.**

### NOTICE

**When removing the studs, make sure the con-rod does not fall onto the crankcase as both can be damaged.**

### ⚠ WARNING

**Wear eye protection.**  
The monohook circlip is under tension!

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
3	Remove the monohook circlip with monohook circlip remover part no. 976380.

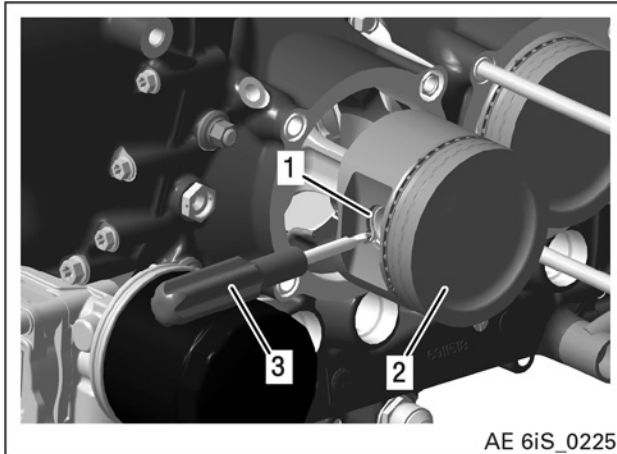


Figure 10.4: TYPICAL

- 1 Monohook circlip      2 Pistons  
 Monohook circlip re-  
 3 mover part no.  
 976380

## NOTE

*Piston pin extractor assy. part no. 877091 is used to pull out the piston pin.*

Step	Procedure
4	Install the extractor spindle in the piston pin and mount M6 extracting nut (part no. 877155).
5	Turn the extractor spindle clockwise to pull the piston pin out of the conrod into the puller sleeve until the piston can be taken off.

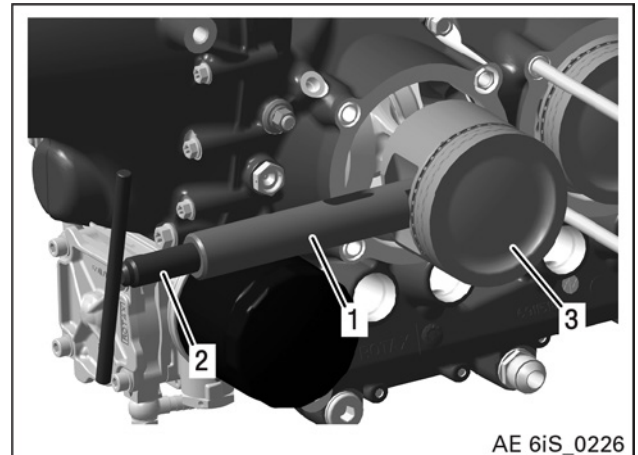


Figure 10.5: TYPICAL

- 1 Piston pin extractor  
 part no. 877091      2 Extractor spindle  
 3 Pistons

Step	Procedure
6	Loosen the nut and remove the piston pin extractor. Remove the piston and put it down with the corresponding cylinder.

## HYDRAULIC VALVE TAPPET – REMOVAL

### NOTE

*Put the hydraulic valve tappet down so that it can be installed in the same place when it is reused.*

Step	Procedure
1	Remove the hydraulic valve tappet from the housing with the monohook circlip remover part no. 976380.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

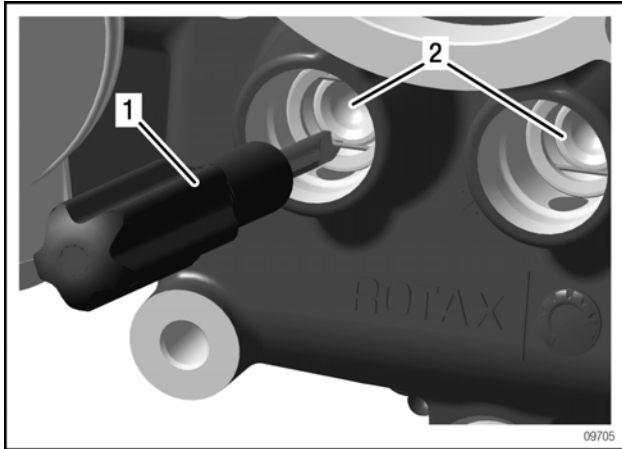


Figure 10.6

- 1 *Monohook circlip  
remover*      2 *Hydraulic valve tappet*

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION

### DISPLACEMENT PARTS — INSPECTION

#### Preparation



Clean all parts carefully. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.

### PISTON — INSPECTION

Step	Procedure
1	Remove the piston rings with the piston ring pliers.

#### NOTE

Removed rings must be re-installed in the same position and location.

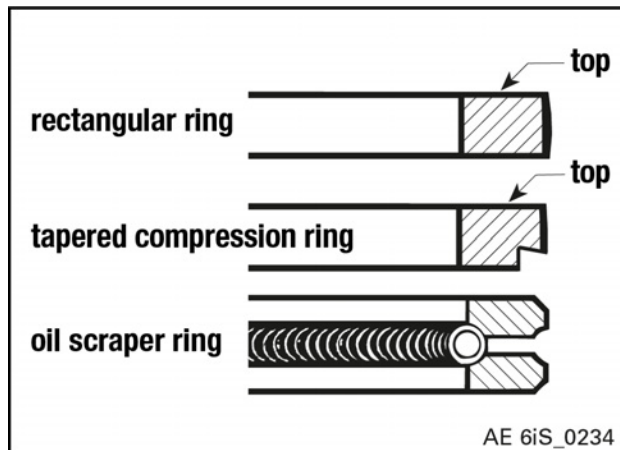


Figure 10.7

Step	Procedure
2	Remove carbon residues from piston rings and ring grooves and from the piston crown.

#### NOTE

The best way to clean the groove root is with an old, broken piston ring. Multiple deposits are likely if AVGAS 100LL is used.

Step	Procedure
3	Check the groove for the monohook cir-clip. Carefully remove any burrs.

#### NOTE

If the groove is excessively worn ( $>0.3$  mm (0.0118 in.) than the retaining ring), the piston must be replaced.

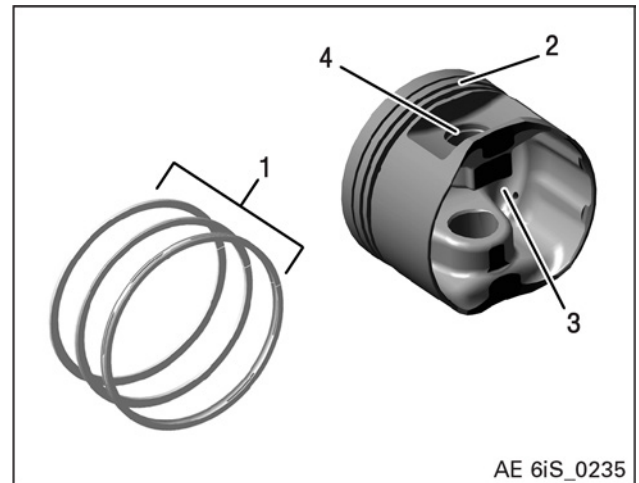


Figure 10.8

- |   |              |   |                        |
|---|--------------|---|------------------------|
| 1 | Piston rings | 2 | Ring grooves           |
| 3 | Piston crown | 4 | Piston monohook groove |

#### NOTE

Two sizes of pistons are available, A and B. The difference is 0.01 mm (0.00039 in.). The "A" piston is the smaller one. The nominal size of the piston is stamped on the piston crown. Over-sized pistons are not available. The piston is only delivered with 3 rings.

Step	Procedure
4	Visually inspect and measure the piston. Measure the cylinder and determine the permissible installation clearance. See section <a href="#">Wear limits</a> .

# BRP-Rotax MAINTENANCE MANUAL HEAVY

**NOTE**

*If the determined installation clearance is greater than the permissible installation clearance, the piston and/or cylinder must be replaced.*

Step	Procedure
5	Determine the diameter of the piston pin bore. See section <a href="#">Wear limits</a> .

**NOTE**

*The flank clearance can be measured on the installed rings using a feeler gauge. Multiple deposits in the spiral expander of the oil scraper ring suggests that AVGAS 100LL has been used.*

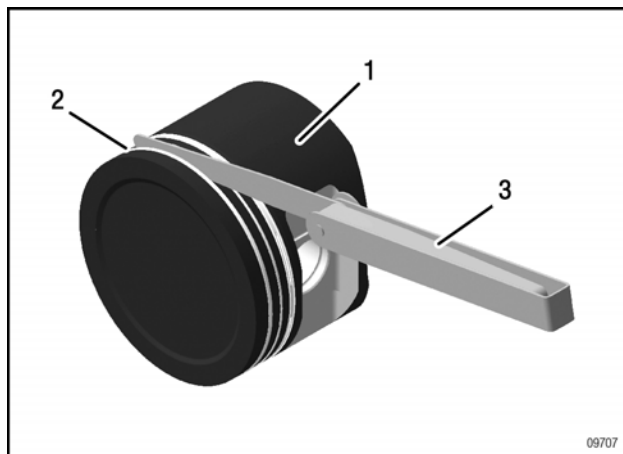


Figure 10.9: TYPICAL

- 1 Pistons
- 2 Ring grooves
- 3 Feeler gauge

**PISTON RINGS — INSPECTION**

Step	Procedure
1	Check the cleaned piston rings for piston ring joint clearance.

**NOTE**

*To determine the piston ring joint clearance, remove the piston rings with piston ring pliers, clean them and place them in the cylinder. Aligned with a piston in the cylinder and pushed approx. 10 mm (0.3937 in.) from the upper edge into the cylinder.*

Step	Procedure
2	Measure the piston ring joint clearance using a feeler gauge (PI07). See section <a href="#">Wear limits</a> .

**NOTE**

*Examine the ring surface closely to identify the supporting part and thus also the wear which has already taken place.*

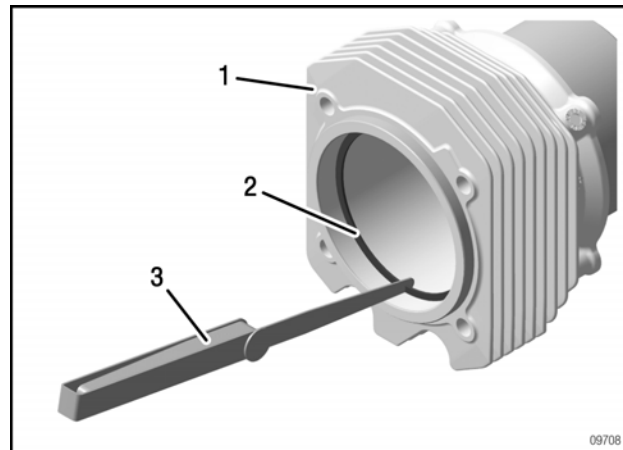


Figure 10.10

- 1 Cylinders
- 2 Piston ring
- 3 Feeler gauge



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**PISTON PIN — INSPECTION**

<b>NOTICE</b>
<p>The monohook circlips for the piston pin must only be used once and must therefore be replaced.</p>

Step	Procedure
1	Check the piston pin for traces of wear in the region of the conrod bearing and in the region of the piston bearing and measure it.

**NOTE**

*If perceptible traces of wear are found, even if the pistons are within tolerable dimensions, the piston pin must be replaced.*

Step	Procedure
2	Measure dimension PI03. See <a href="#">Wear limits</a> .

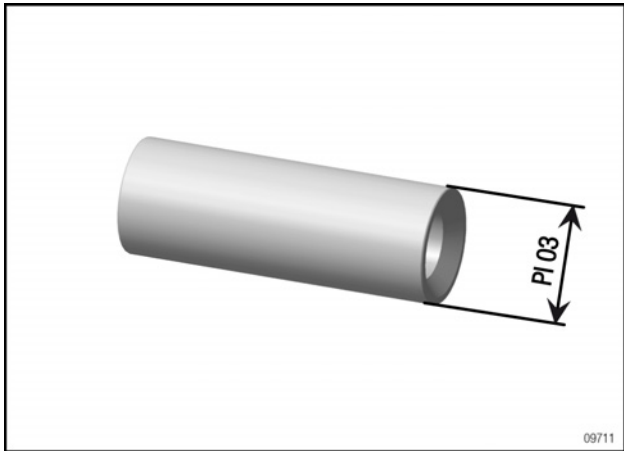


Figure 10.11

**CYLINDER — INSPECTION**

<b>NOTICE</b>
<p>If the engine has been overheated, a hardness test of the cylinder is necessary.</p>

See Chapter 72–30–00 section Hardness test method.

**NOTE**

*If the sealing surface of the cylinder has slight carbon residues. This is a sign of leaking. The cylinder must be touched up with the cylinder head until uniform contact is achieved.*

Step	Procedure
1	Clean the cooling fins of the cylinder and remove carbon residues in the upper region of the cylinder bore.
2	Clean and check the sealing surfaces on the upper side and rear side.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

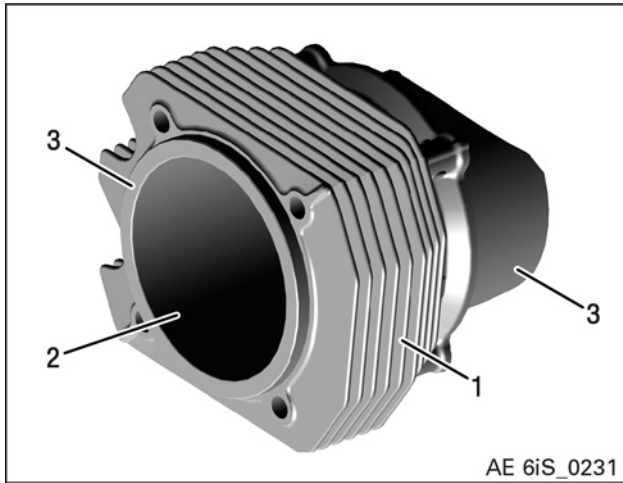


Figure 10.12

- 1 Cooling fins
- 2 Cylinder bore
- 3 Sealing surface

Step	Procedure
3	Measure the cylinder and enter the measurement data (CY01/CY02/CY03). See .
4	Determine the installation clearance. See <a href="#">section Piston inspection</a> .

**NOTE**

*As long as the min. clearance is achieved, Cylinder B with piston A and/or Cylinder A with piston B can be paired.*

**HARDNESS TEST METHOD**

NOTICE	
<b>If the engine has been overheated, a hardness test of the cylinder head is necessary.</b>	



See current Maintenance Manual Line (MML) for the respective engine type.

**The hardness test takes place at measurement point CY04.**

CY04: HB2.5/62.5 DIN EN ISO 6506-2

NOTICE	
<b>The result of the hardness test must be noted in Chapter 72-30-10, section Wear limits.</b>	

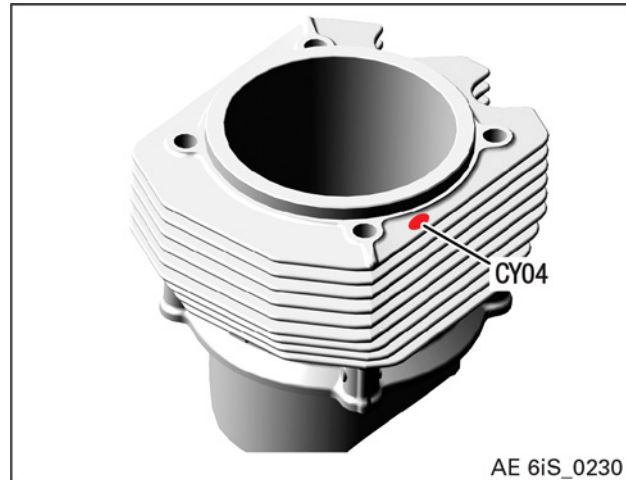


Figure 10.13

**HYDRAULIC VALVE TAPPET — INSPECTION**

Step	Procedure
1	Check visually for damage and wear.

**NOTE**

*The hydraulic valve tappet rotates during operation, so there is a uniform, rotational symmetrical support pattern on the cam contact face.*

**NOTE**

*If the tappet does not rotate, uneven wear occurs on the contact face. If there are uneven smooth areas, corroded areas/pitting, the tappet must be replaced.*

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**NOTICE**

The hydraulic valve tappet must not be re-ground on the end!

**NOTICE**

Disassembly of the hydraulic valve tappet is neither permissible nor necessary.

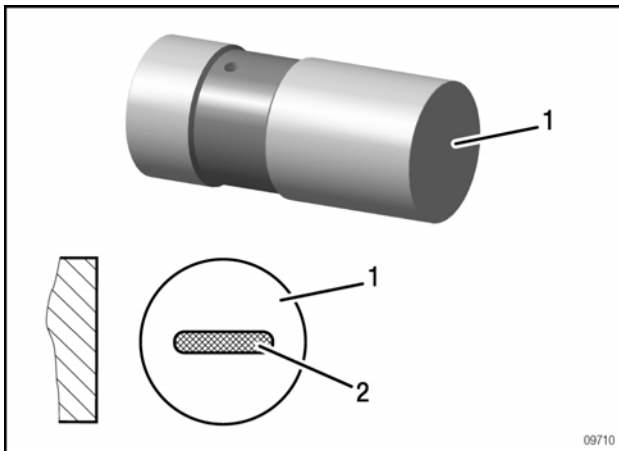


Figure 10.14

1 *Cam contact face*      2 *Uneven wear*

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**WEAR LIMITS**

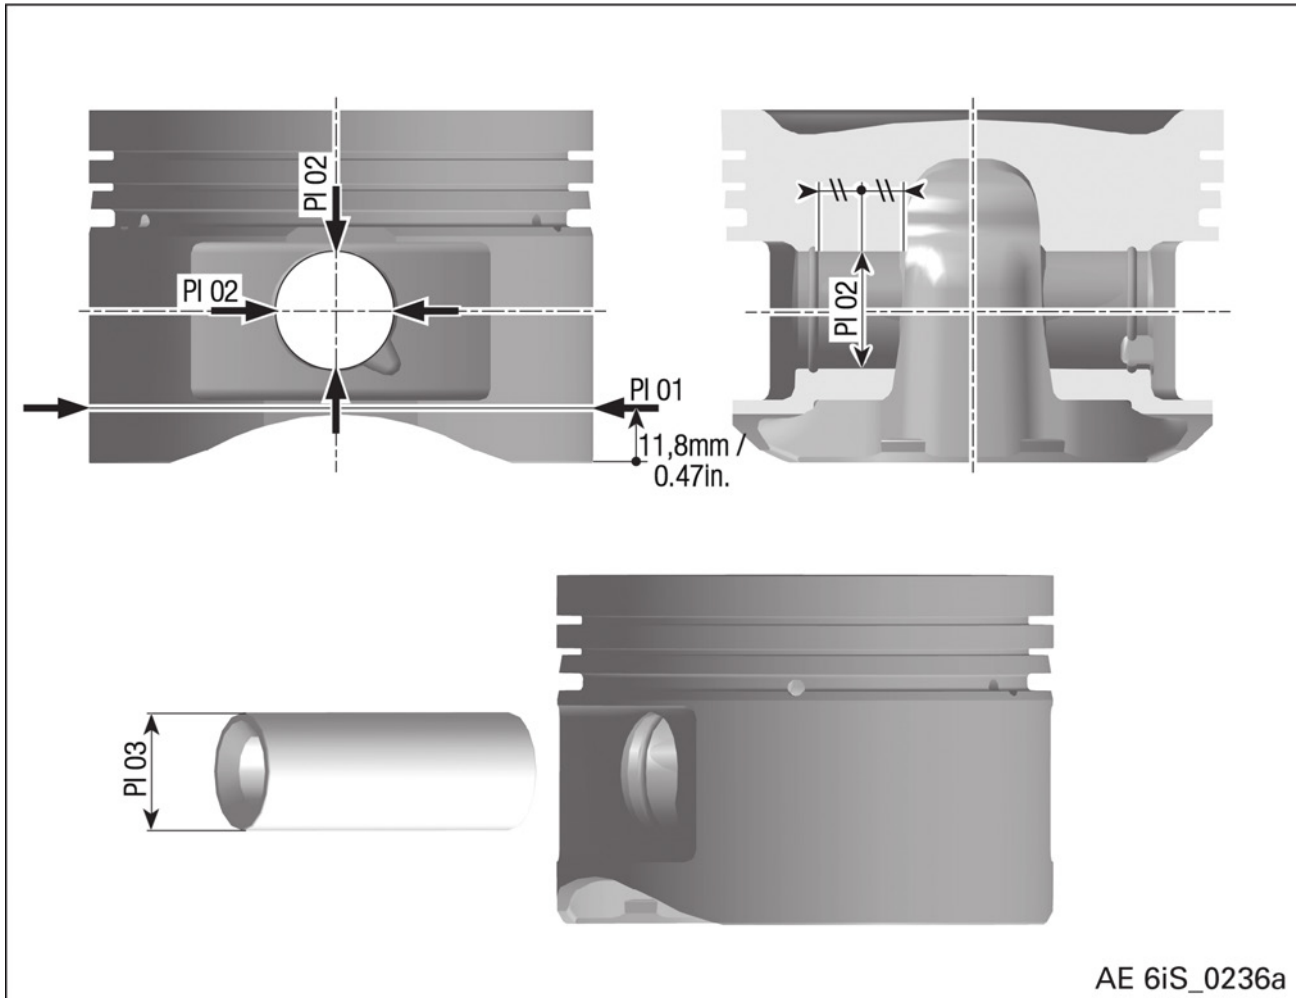


Figure 10.15: Wear Limits

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

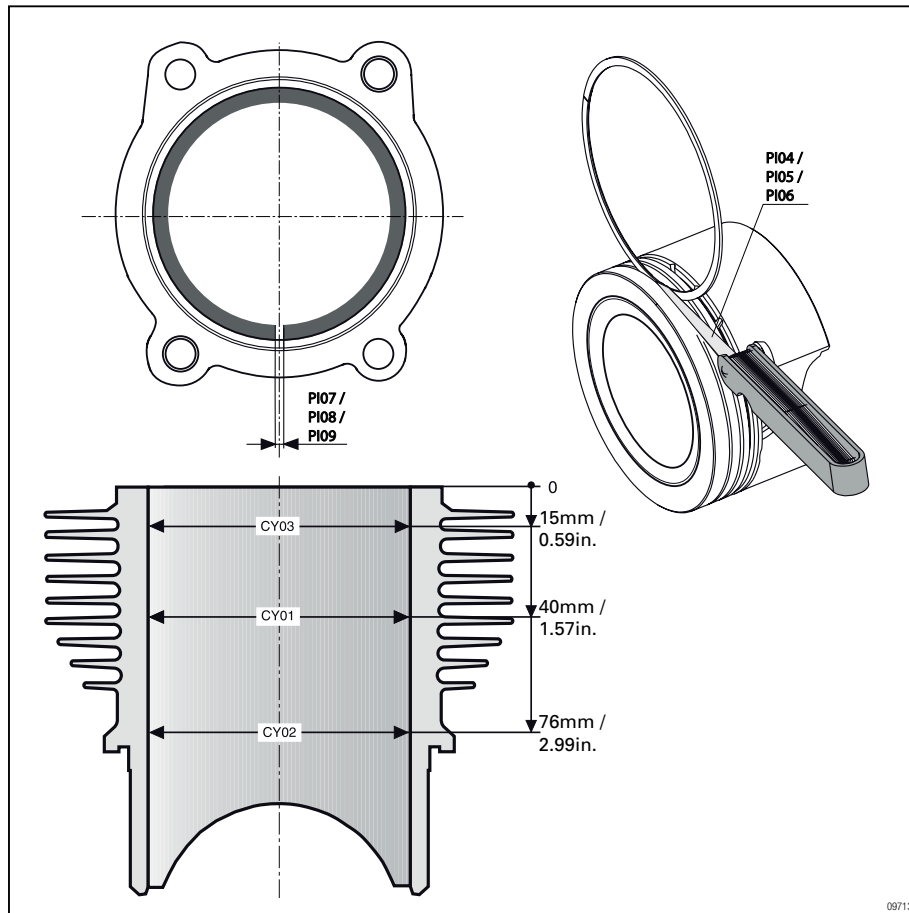


Figure 10.16: Wear Limits

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description	Code	Reading new		Wear limit	Wear limit		Readings			
		min	max	100 %	50 %					
<b>Piston</b>							Cyl. 1	Cyl. 2	Cyl. 3	Cyl. 4
Piston A 84 mm / 3.3 in.	PI01	83.990 mm	84.000 mm	83.890 mm	83.940 mm	actual				
		3.3067 in.	3.3071 in.	3.3027 in.	3.3047 in.	re- newed				
Piston B 84 mm / 3.3 in.	PI01	84.000 mm	84.010 mm	83.900 mm	83.950 mm	actual				
		3.3071 in.	3.3075 in.	3.3031 in.	3.3051 in.	re- newed				
Installation clearance cyl. "A" with pis- ton "A"	CY01 /PI01	0.002 mm	0.022 mm	0.130 mm	0.076 mm	actual				
		0.000- 079 in.	0.0009 in.	0.0051 in.	0.0030 in.	re- newed				
Installation clearance cyl. "B" with pis- ton "B"	CY01 /PI01	0.002 mm	0.024 mm	0.130 mm	0.077 mm	actual				
		0.000- 079 in.	0.0009 in.	0.0051 in.	0.0030 in.	re- newed				
Piston pin bore	PI02	20.001 mm	20.005 mm	20.040 mm	20.023 mm	actual				
		0.7874 in.	0.7876 in.	0.7890 in.	0.7883 in.	re- newed				
Piston pin	PI03	19.992 mm	19.995 mm	19.970 mm	19.981 mm	actual				
		0.7871 in.	0.7872 in.	0.7862 in.	0.7867 in.	re- newed				
Piston pin clearance in piston pin bore	PI01 / PI02	0.006 mm	0.013 mm	0.050 mm	0.032 mm	actual				
		0.0002 in.	0.0005 in.	0.0020 in.	0.0012 in.	re- newed				
Piston pin clearance in conrod	CS06 /PI03	0.015 mm	0.035 mm	0.050 mm	0.043 mm	actual				
		0.0006 in.	0.0014 in.	0.0020 in.	0.0017 in.	re- newed				
Piston ring clearance, groove clearance rectangular ring 1	PI04	0.03 mm	0.07 mm	0.10 mm	0.085 mm	actual				
		0.001 in.	0.0028 in.	0.0039 in.	0.0033 in.	re- newed				

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description	Code	Reading new		Wear limit	Wear limit		Readings			
		min	max	100 %	50 %					
Piston ring groove clearance compression ring 2	PI05	0.03 mm	0.07 mm	0.10 mm	0.085 mm	actual				
		0.001 in.	0.0028 in.	0.004 in.	0.0033 in.	re-newed				
Piston ring groove clearance oil scraper ring 3	PI06	0.02 mm	0.06 mm	0.09 mm	0.075 mm	actual				
		0.001 in.	0.002 in.	0.0035 in.	0.003 in.	re-newed				
Piston ring end gap, rectangular piston ring 1	PI07	0.25 mm	0.50 mm	1.15 mm	0.83 mm	actual				
		0.0098 in.	0.0197 in.	0.0453 in.	0.0325 in.	re-newed				
Piston ring end gap, conical compression ring 2	PI08	0.25 mm	0.50 mm	1.15 mm	0.83 mm	actual				
		0.0098 in.	0.0197 in.	0.0453 in.	0.0325 in.	re-newed				
Piston ring end gap, oil scraper ring 3	PI09	0.15 mm	0.40 mm	1.00 mm	0.70 mm	actual				
		0.0059 in.	0.0157 in.	0.0394 in.	0.0276 in.	re-newed				

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description	Code	Reading new		Wear limit	Wear limit		Readings				
		min	max	100 %	50 %						
<b>Cylinder</b>							Cyl. 1	Cyl. 2	Cyl. 3	Cyl. 4	
Cylinder bore A 84 mm / 3.3 in.	D1	CY01	84.000 mm	84.012 mm	84.080 mm	84.046 mm	actual				
			3.3071 in.	3.3075 in.	3.3102 in.	3.3089 in.	re-newed				
	D2	CY02	CY01 +0.000 mm		CY01 +0.020 mm		actual				
			CY01 +0.000 in.		CY01 +0.0008 in.		re-newed				
	D3	CY03	CY01 +/- 0.008 mm		CY01 +0.008 mm		actual				
			CY01 +/- 0.0003 in.		CY01 +0.0008 in.		re-newed				
Cylinder bore B 84 mm / 3.3 in.	D1	CY01	84.012 mm	84.024 mm	84.090 mm	84.057 mm	actual				
			3.3075 in.	3.308 in.	3.3106 in.	3.3093 in.	re-newed				
	D2	CY02	CY01 +0.000 mm		CY01 +0.020 mm		actual				
			CY01 +0.000 in.		CY01 +0.0008 in.		re-newed				
	D3	CY03	CY01 +/- 0.008 mm		CY01 +0.008 mm		actual				
			CY01 +/- 0.0003 in.		CY01 +0.0008 in.		re-newed				
Cylinder ovality			0.0000 mm	0.0075 mm	0.050 mm	0.029 mm	actual				
			0.0000 in.	0.000-03 in.	0.0020 in.	0.0011 in.	re-newed				
Cylinder-taper			0.0000 mm	0.040 mm	0.070 mm	0.055 mm	actual				
			0.0000 in.	0.0016 in.	0.0028 in.	0.0022 in.	re-newed				
Rework of sealing surface cylinder / cylinder head			0.0000 mm	0.0000 mm	0.03 mm		actual				
			0.0000 in.	0.0000 in.	0.0012 in.		re-newed				
Hardness	CY04		90 HB								





# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
1	Install the piston in accordance with the following figures.

### NOTE

*The eccentricity of the piston pin bore is 1 mm (0.039 in).*

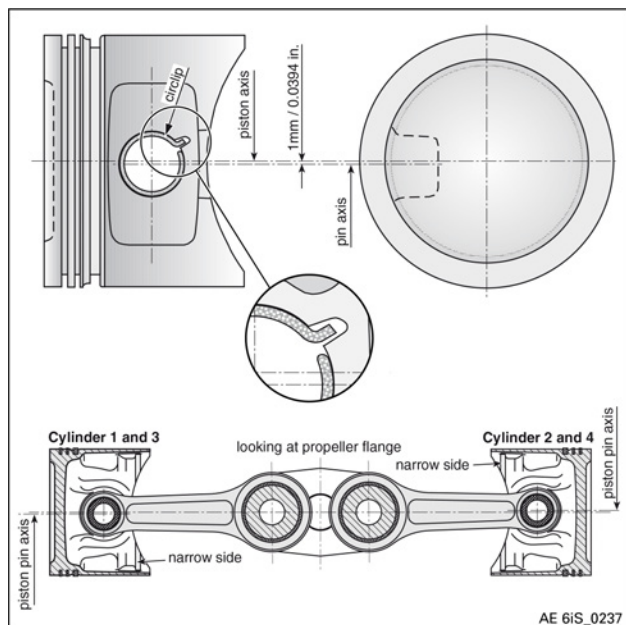


Figure 10.19

Step	Procedure
2	Lubricate the piston pin along with the conrod eye and the piston pin bore with LOCTITE ANTI SEIZE.

### NOTE

*Pull in the piston pin with the piston pin extractor part no. 877091. The following steps must be followed.*

Step	Procedure
3	Push the piston pin to one side in the piston, insert the extractor spindle and mount the extracting nut part no. 877155.
4	Turn the spindle clockwise to pull in the piston pin entirely as far as the retaining ring.

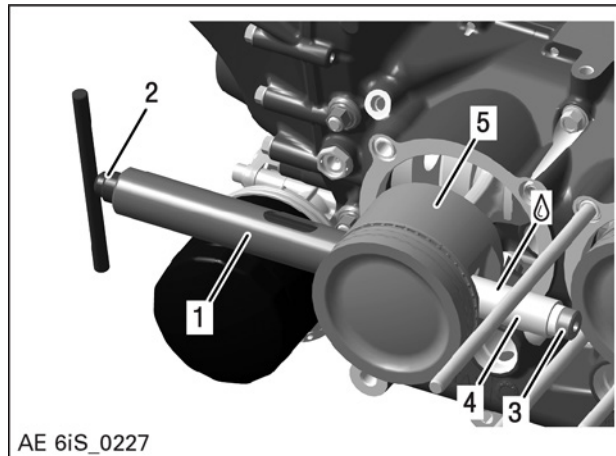


Figure 10.20: : TYPICAL

- 1 Piston pin extractor part no. 877091
- 2 Extractor spindle
- 3 Extracting nut part no. 877155
- 4 Piston pin
- 5 Pistons

**NOTICE**

**Damage to parts may occur.**

When removing the piston pin extractor, make sure that the conrod and piston do not fall onto the crankcase.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**NOTICE**

Always use new monohook circlips. Circlips which are used or have already been installed have insufficient tangential tension, can twist and consequently abrade the groove in the piston.

**NOTICE**

The position of the monohook circlip is defined by the recess in the piston. The open side of the monohook circlip must be opposite the piston crown when installed.

Step	Procedure
5	Install the monohook circlip with installation tool part no. 877802. Press the monohook circlip into the groove of the installation sleeve and push the guide tool into the installation sleeve.
6	Push the installation sleeve onto the installation tool.
7	Push the installation tool into the position gauge and press the ring forwards as far as it will go.

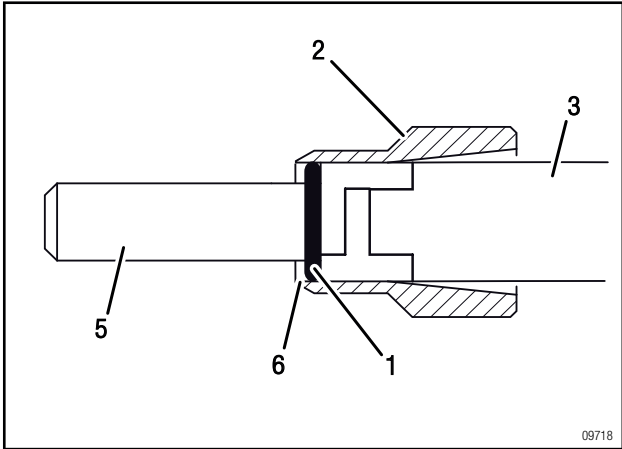


Figure 10.21

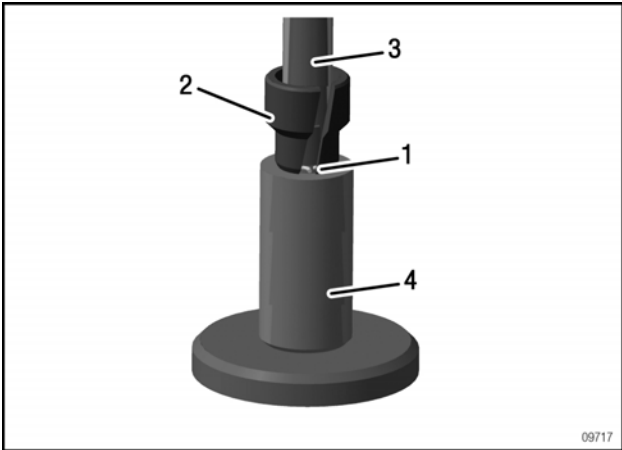


Figure 10.22

- 1 Monohook circlip
- 2 Installation sleeve
- 3 Installation tool
- 4 Punch tool assy.
- 5 Guide tool
- 6 Groove

Step	Procedure
8	Place the whole installation tool on the piston. Support the piston with your hand and push the monohook circlip into the retaining groove of the piston with a strong pressure on the installation tool.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**⚠ WARNING**

**Wear eye protection. The monohook circlip is under tension!**

**NOTICE**

**When installing the monohook circlip, hold the piston firmly with your hand to avoid damaging the conrod while applying pressure on the installation tool.**

**NOTICE**

**When removing the installation tool, make sure the conrod and piston do not fall onto the crankcase as both can be damaged.**

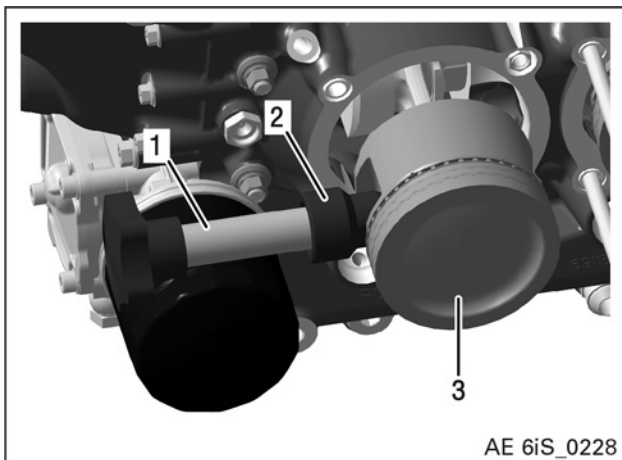


Figure 10.23: : TYPICAL

- 1 *Installation tool part no. 877802*
- 2 *Installation sleeve*
- 3 *Pistons*

**NOTE**

*Repeat this process on the other piston side.*

**STUDS – INSTALLATION**

**NOTICE**

**Studs (expansion screws) may only be used once.**

Step	Procedure
1	Install 2 new studs M8x200 and 2 new studs M8x186. Tightening torque 3 Nm (27 in. lb.).

**NOTICE**

**The studs must be screwed in as far as it will go. Check for correct position since the studs have two different lengths.**

Step	Procedure
2	Install 2 new O-rings 10.82x1.78.

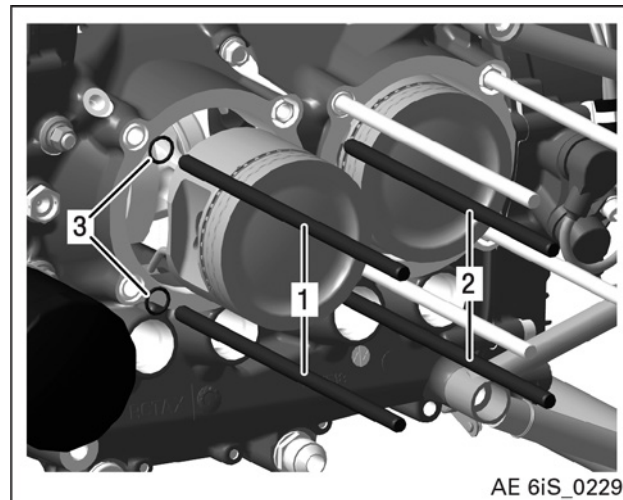


Figure 10.24

- 1 *Studs M8x200*
- 2 *Studs M8x186*
- 3 *O-rings 10.82x1.78*

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## CYLINDER – INSTALLATION

**NOTICE**

The suitable piston ring spanner part no. 876967 must be used to avoid ring breakages. Ensure that the piston ring joints are in the specified angle range.

Step	Procedure
1	Install the piston ring in the centre of the lower piston skirt.
2	Install the compression and oil scraper rings on the upper piston skirt, inclined away between 25° and max. 30°.

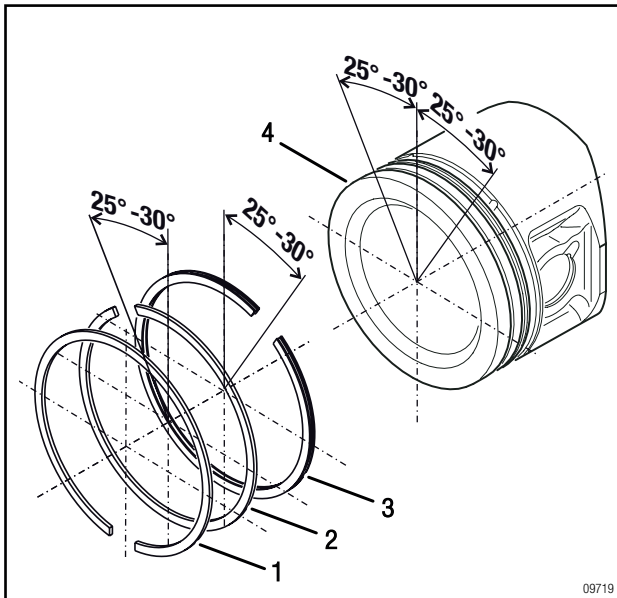


Figure 10.25: TYPICAL

- 1 Piston ring
- 2 Compression ring
- 3 Oil scraper ring
- 4 Pistons

**NOTICE**

The ring gap should never come to lie in the region of the piston pin eye.

**NOTICE**

Double-check that monohook circlips are installed properly.

Step	Procedure
3	Install the 87x2 O-ring on the cylinder neck and lubricate the cylinder running surface.
4	Lubricate the piston, compress the piston rings with piston ring spanner part no. 876967 and carefully install the corresponding cylinders.

**NOTE**

*Repeat this process for the other cylinders.*

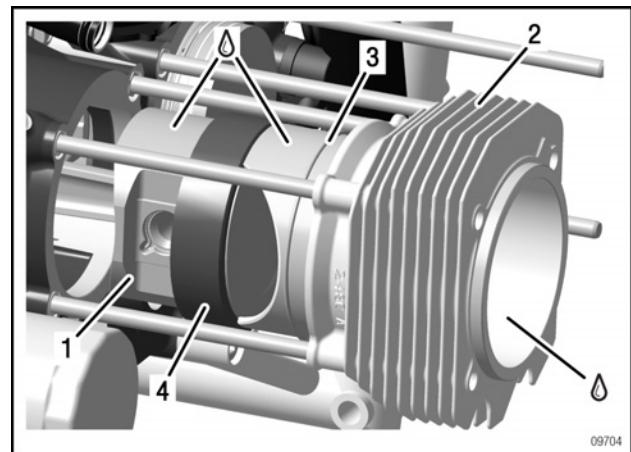


Figure 10.26

- 1 Pistons
- 2 Cylinders
- 3 O-ring 87x2
- 4 Piston ring spanner part no. 876967

### FINISHING WORK

- Install the cylinder head. See Chapter 72-30-00 section [Cylinder head – installation](#).

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK


**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 73-00-00**  
**FUEL SYSTEM**

**TOPICS IN THIS CHAPTER**

<b>System description .....</b>	<b>3</b>
ECU .....	3
Fuel filter.....	3
Safety instruction.....	3

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

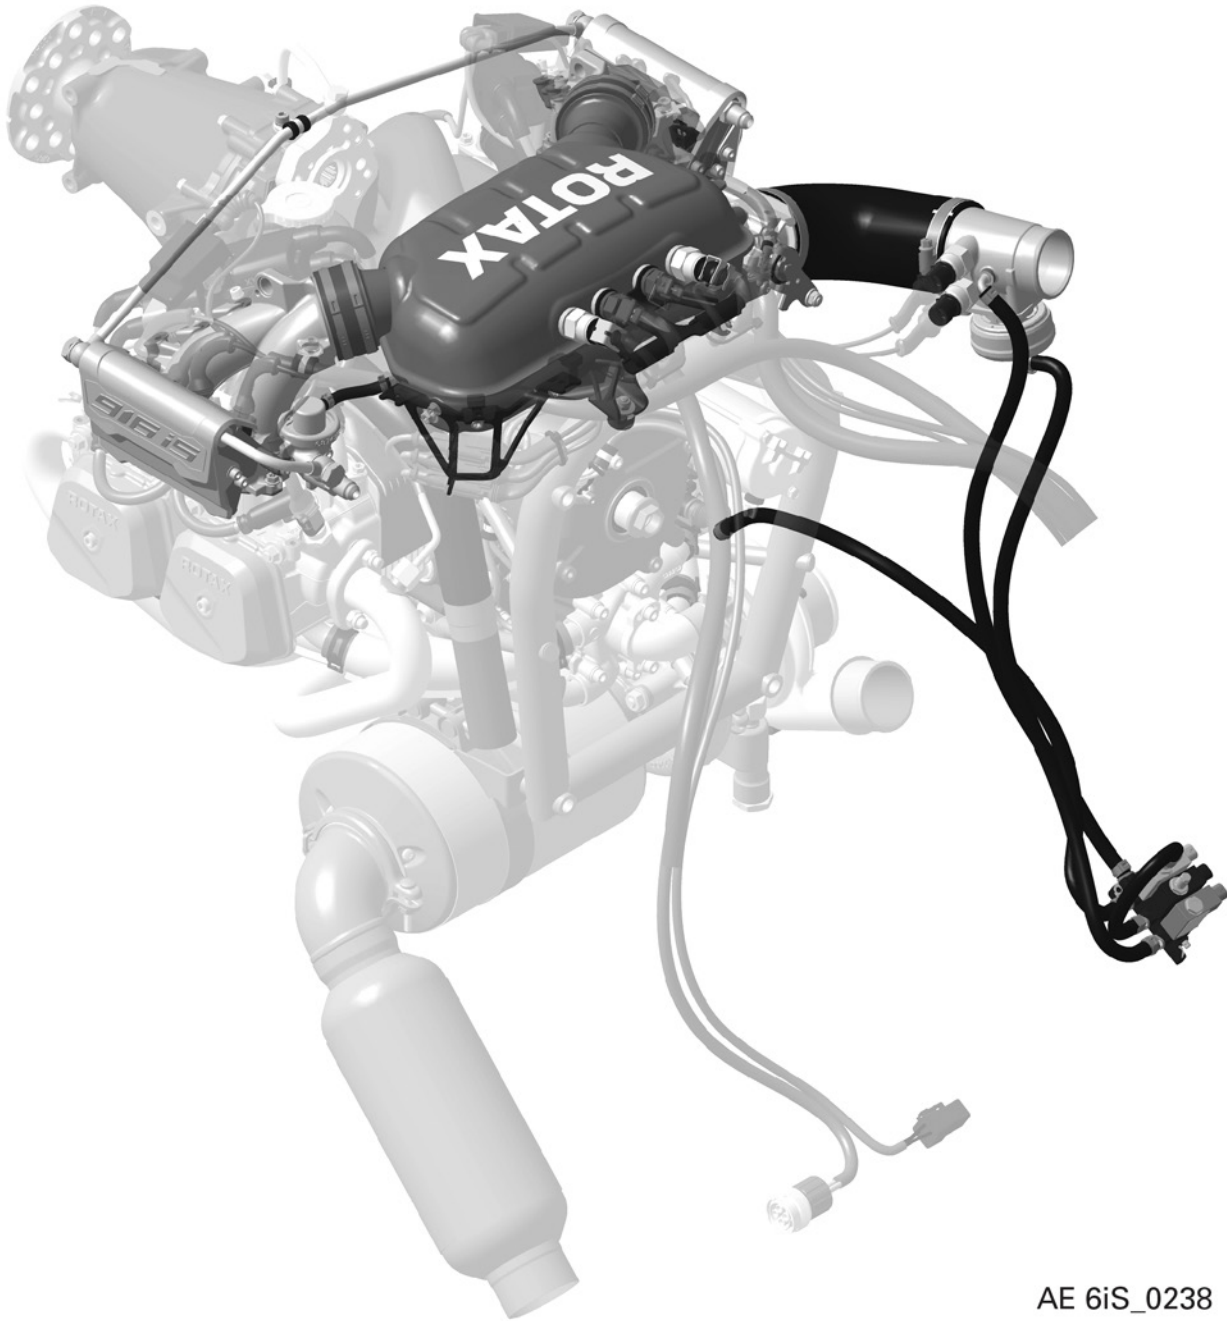

AE 6iS\_0238

Figure 11.1: Fuel system and distribution



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SYSTEM DESCRIPTION

The fuel passes from the tanks via the water trap/ fine filter to the series-connected electric fuel pumps, from there to the fuel rails, the injection valves and the fuel pressure regulator.

The fuel pressure must be measured with an absolute pressure sensor.

## ECU

The pilot can switch on the second fuel pump with an additional switch if required, if no automatic detection is present.

## FUEL FILTER



### Coarse filter

The coarse filter is installed by the aircraft manufacturer and is not included in the ROTAX® delivery.



### Fine Filter

The fine filter is installed before the fuel pumps by the aircraft manufacturer and is not included in the ROTAX® delivery.

### ENVIRONMENTAL NOTE

Please observe the disposal regulations applicable in your area.

### ENVIRONMENTAL NOTE

Observe the safety instructions of the manufacturer of hazardous substances (coolant, oil or fuel) and the applicable regional waste disposal regulations.

### ENVIRONMENTAL NOTE

Work with the utmost care to ensure that no water pollutants can penetrate into the soil, water or the sewerage system.

## SAFETY INSTRUCTION

### ⚠ WARNING

**During work on the fuel system there is a risk of injury due to pressure and fuel!**

Always wear safety goggles and gloves when working on the fuel system! Before starting repair work on the fuel system, ensure that it is no longer pressurised! Ensure that pressure cannot build up again by disconnecting the electric supply. At the workplace, ensure that drained fuel is handled according to the safety information.

### ⚠ WARNING

Flammable material must be placed at a sufficient distance from all sources of ignition, direct and strong sunlight, spotlights and heating devices, so that it cannot be ignited by such items.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


**Chapter: 73–10–00**  
**FUEL SYSTEM AND DISTRIBUTION**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>3</b>
<b>Service products</b> .....	<b>4</b>
<b>System description</b> .....	<b>7</b>
Fuel distribution.....	7
Safety instruction.....	8
Maintenance .....	8
<b>Disassembly</b> .....	<b>9</b>
Fuel pressure regulator – disassembly .....	9
Fuel pressure regulator assy. — removal.....	10
Fuel line assy. — removal .....	11
Fuel rail — removal.....	12
Fuel rail — disassembly .....	14
Pressure control valve (PCV) - removal.....	14
Pop off valve assy. — removal.....	15
Throttle body assy. — removal.....	16
Intake manifold — removal.....	18
Airbox — removal.....	19
<b>Inspection</b> .....	<b>21</b>
Pressure control valve hoses - inspection.....	21
Air intake hose- inspection .....	21
Pop off valve — inspection .....	21
Fuel line assy. — inspection .....	22
Fuel pressure regulator assy. — inspection .....	22
Pressure regulator housing — inspection .....	23
Fuel rail — inspection .....	23
Fuel injector— inspection .....	23
Intake manifold — inspection.....	24
Connecting socket — inspection.....	24
Airbox — inspection.....	24
Throttle body — inspection.....	25
AIR FILTER — INSPECTION .....	26
FUEL FILTER — INSPECTION .....	26
<b>Assembly</b> .....	<b>27</b>
Fuel pressure regulator — assembly.....	27
Airbox — assembly.....	28
Airbox — installation .....	28
Intake manifold — installation.....	29
Fuel rail – installation .....	30
Fuel pressure regulator assy. — installation.....	33
Fuel line assy. — installation.....	34
Throttle body assy. — installation.....	35
Pop off valve — installation .....	36
Pressure control valve hoses - installation .....	37

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Finishing work ..... 38

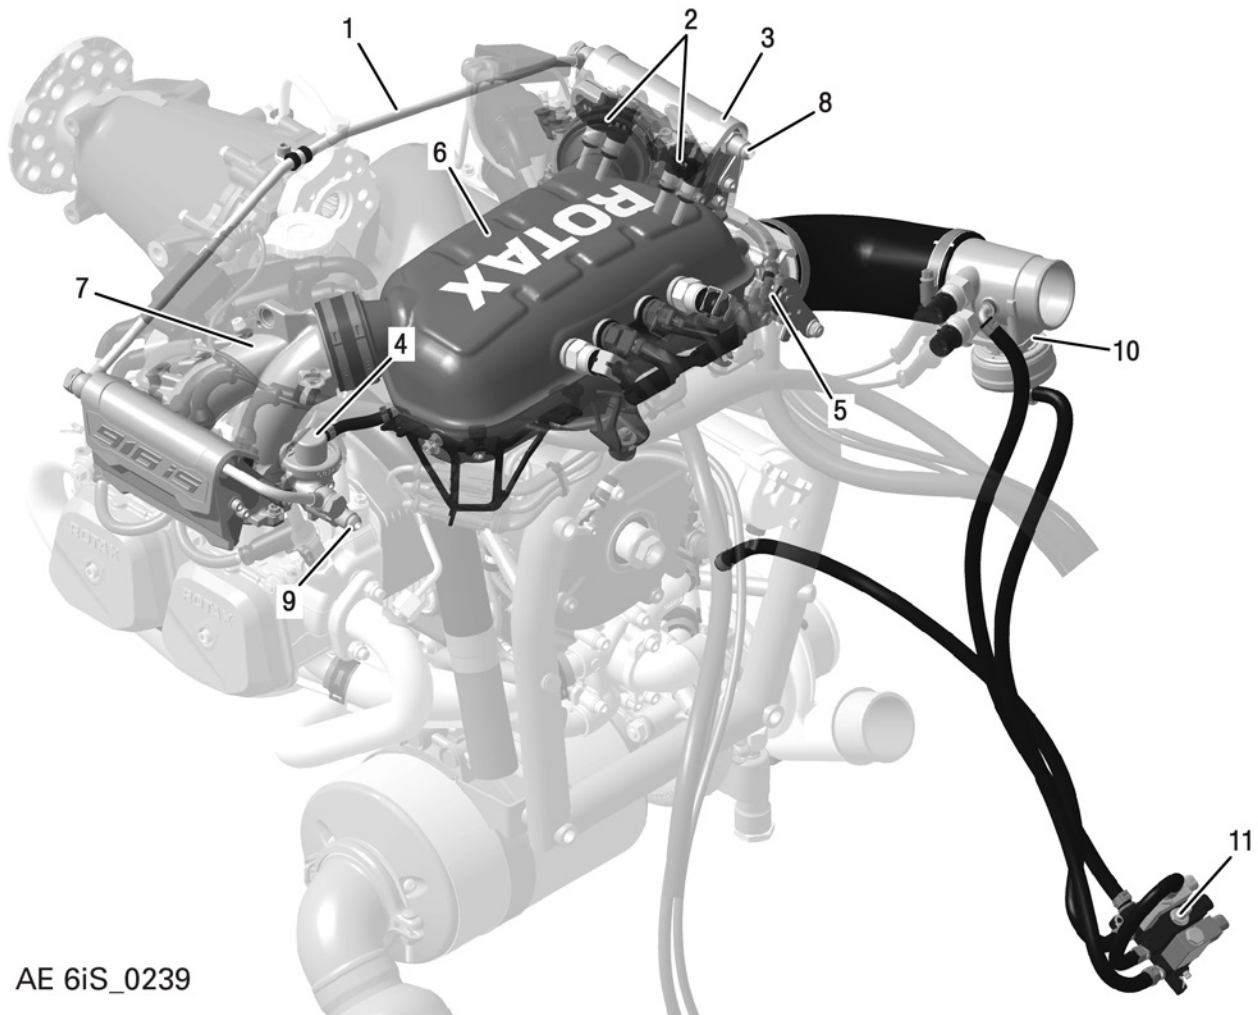

AE 6iS\_0239

Figure 12.1: Fuel distribution

- |                                 |                                 |                             |
|---------------------------------|---------------------------------|-----------------------------|
| 1 Fuel line assy.               | 2 Fuel injector                 | 3 Fuel rail                 |
| 4 Fuel pressure regulator assy. | 5 Throttle body                 | 6 Airbox                    |
| 7 Intake manifold               | 8 Fuel rail 1/3 feed line       | 9 Fuel rail 2/4 outlet line |
| 10 Pop-off valve                | 11 Pressure Control Valve (PCV) |                             |

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SPECIAL TOOLS**

Description	Part number
Seeger ring pliers	n.a.
KNIPEX 1099 pliers (or similar OETIKER pliers)	889537
Socket driver T30	876180
Socket wrench 21	876075

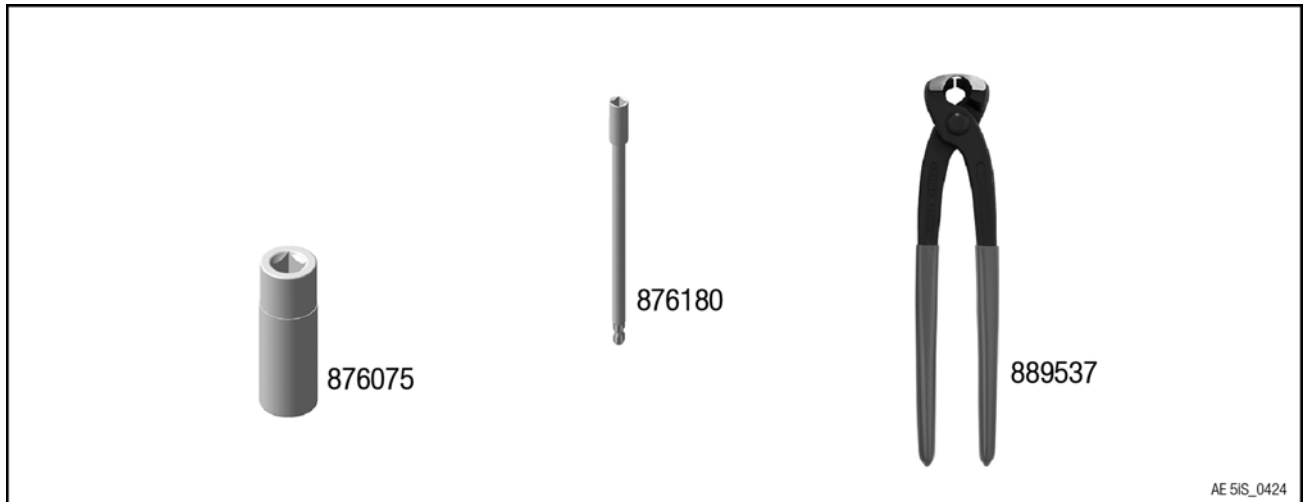


Figure 12.2: Special Tools

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LITHIUM BASE GREASE	897330
LOCTITE 243	897651
LOCTITE 648	899788

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

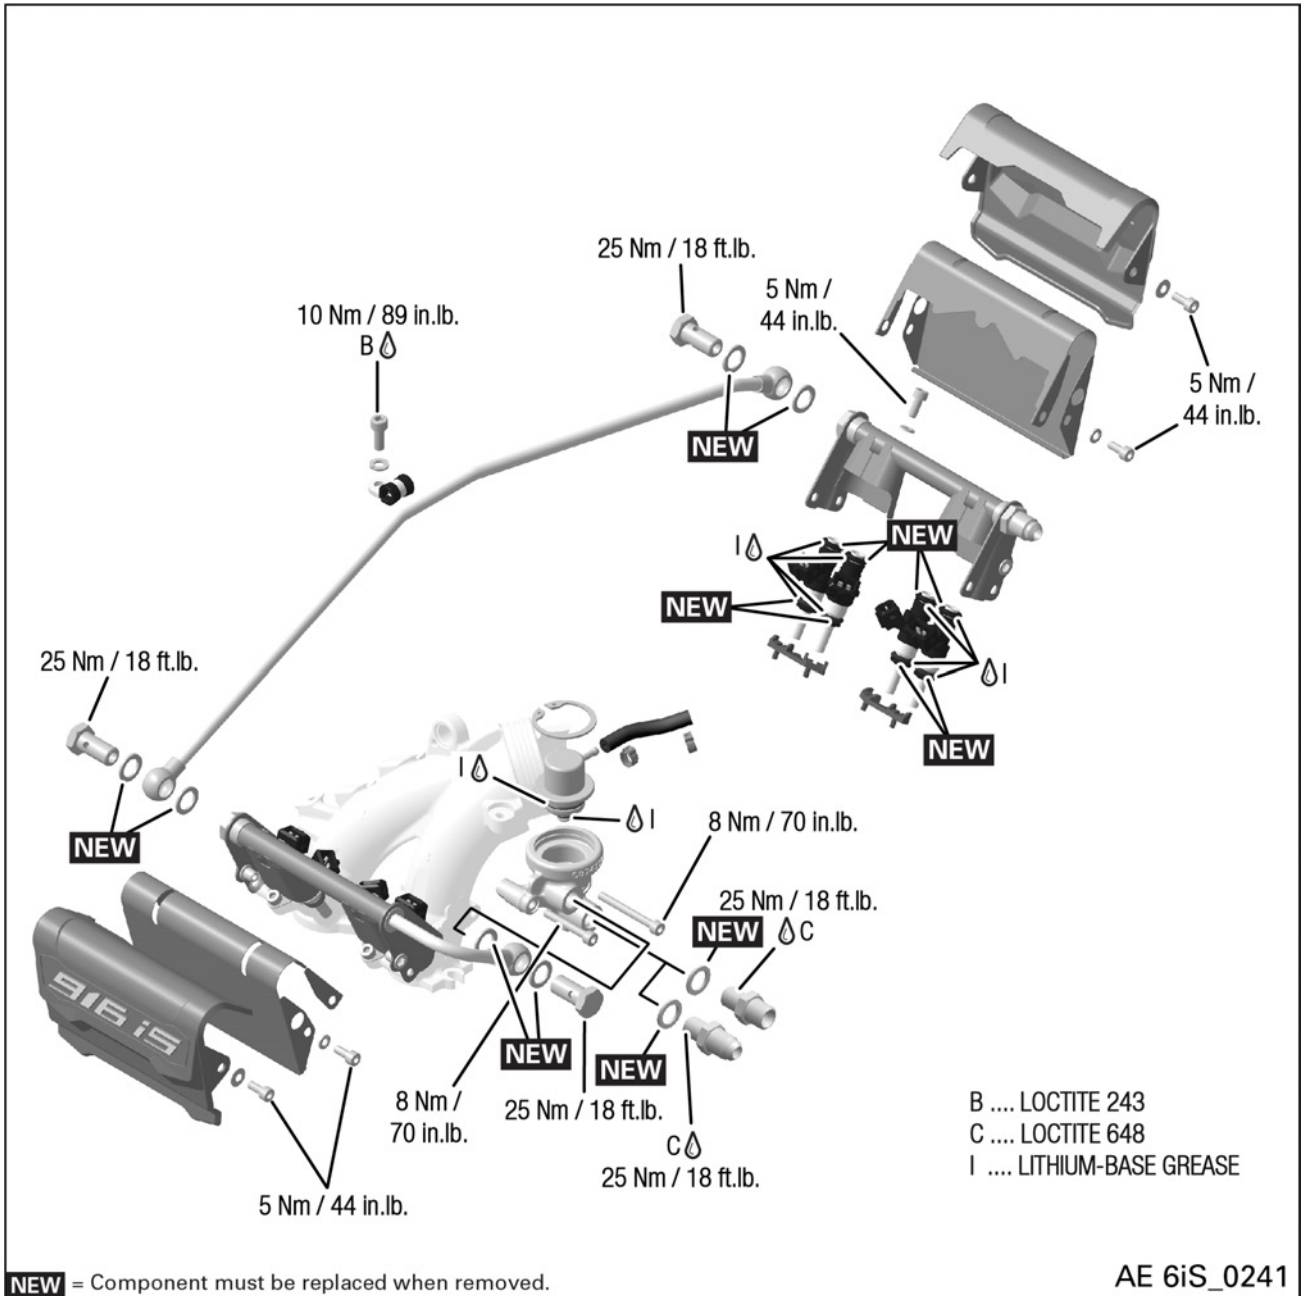


Figure 12.3: Fuel distribution

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

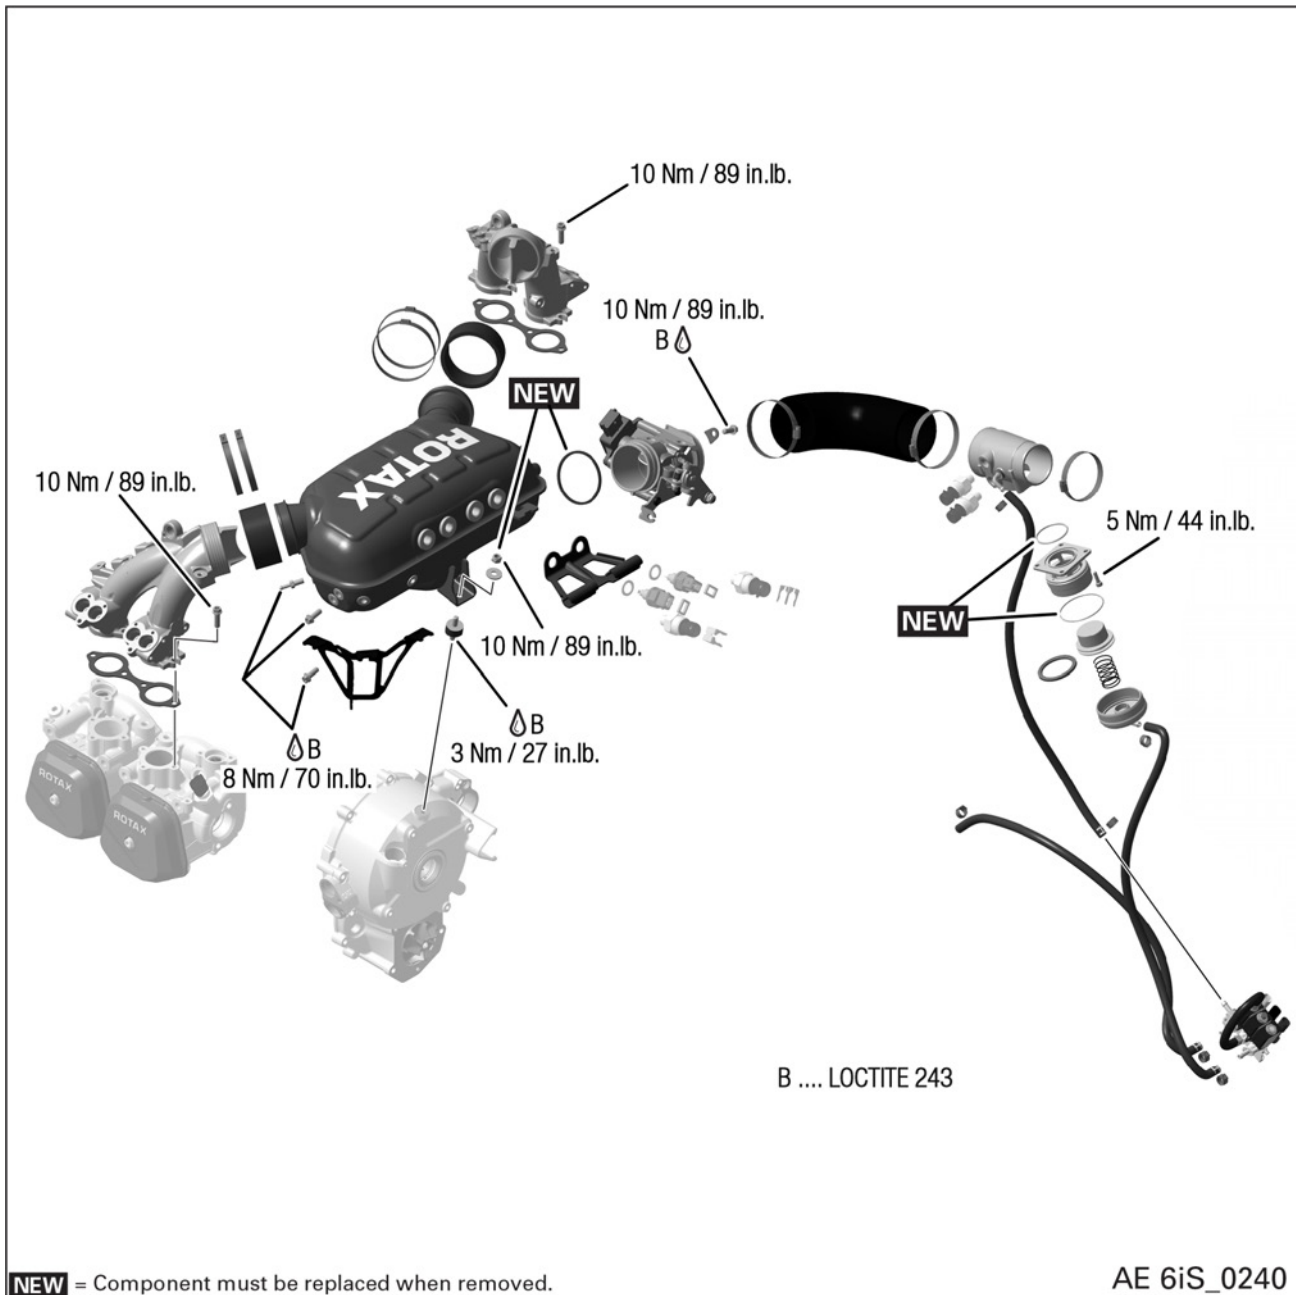


Figure 12.4: Fuel distribution



## SYSTEM DESCRIPTION

### FUEL DISTRIBUTION

The main elements of the fuel distribution assembly are:

- Air filter
- Throttle body
- Airbox
- Injection system with fuel pressure regulator assy.

#### Throttle body

The throttle valve is actuated by using the throttle lever. The position of the throttle valve is detected by the throttle position sensor and the signal is sent to the ECU. The ECU uses the sensors to determine the amount of fuel and the fuel is injected directly into the intake manifold through the injection valves.

#### NOTICE

**The throttle valve is spring loaded to WOT, if no throttle cable is attached. Never start the engine without connecting a throttle cable.**

#### Fuel pressure regulator

The fuel pressure regulator keeps the fuel system pressure upstream of the injection valves constant relative to the intake manifold pressure (differential fuel pressure). The injection quantity is therefore only dependent on the activation time of the injection valves and can be reproduced using the activation time in all operating conditions. Therefore, the same amount of fuel is injected per unit time at all pressure ratios. It is essentially a bypass valve, which opens a return duct to the tank for the fuel by means of a spring-loaded diaphragm when the set pressure is exceeded. The regulator has a vacuum line to the airbox (reference line) so that the absolute fuel pressure can be changed proportionally to the airbox pressure.

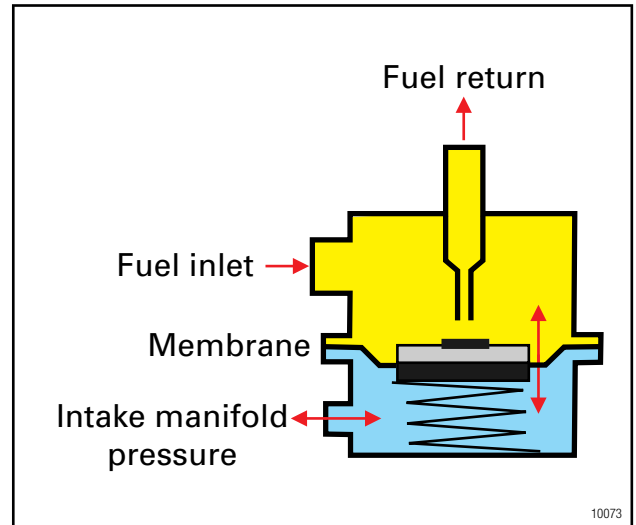


Figure 12.5

1 Function principle

#### NOTE

*The fuel pressure is 3.00 bar (43.5 psi) +/-0.2 bar (+/- 2.9 psi).*

#### Injection valve

The injection valves are laid out in a redundant manner and are activated by the control unit so that they inject alternately.

1-4-2-3 and in the next cycle 5-8-6-7.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY



### Fuel lines

Follow the instructions of the aircraft manufacturer.



### Bubble trap

Follow the instructions of the aircraft manufacturer.



### Water trap

Follow the instructions of the aircraft manufacturer.



### Fuel cock

Follow the instructions of the aircraft manufacturer.

## SAFETY INSTRUCTION

### WARNING

#### **Danger of severe burns and scalds!**

Always allow the engine to cool down to ambient temperature before starting any work.

### WARNING

#### **During work on the fuel distribution system/ fuel pump there is a risk of injury due to pres- sure and fuel!**

Before starting repair work on the fuel system, ensure that it is no longer pressurised!

## MAINTENANCE



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## DISASSEMBLY

### Preparation

Before the fuel distribution system/fuel pump is removed, the work described below must be carried out to identify any further faults in the fuel distribution system and rectify them as part of the repair work.

#### ENVIRONMENTAL NOTE

**All the operating fluids and cleaning agents can damage the environment if not disposed of properly.**

Dispose of operating fluids in an eco-friendly manner!

#### NOTICE

**If these checks are omitted, it may be necessary to dismantle the fuel distribution system again to rectify any faults after it has been repaired.**



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type.

- Functional check of the fuel distribution system assy.
- Check that the system has no leaks.
- Check the injection valves. Check the "spray pattern" using the map.
- Measure the resistance of the injection valves. See [Chapter 76-70-00 Sensors and actuators](#).



Check that the fuel filter in the feed line is clean. Follow the instructions of the aircraft manufacturer.



Drain the fuel. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.



Remove the feed line to fuel rail 1/3 and the return line to fuel rail 2/4 and fuel pressure regulator. Follow the instructions of the aircraft manufacturer.



To remove intercooler assy. and intercooler hoses. Follow the instructions of the aircraft manufacturer.

## FUEL PRESSURE REGULATOR – DISASSEMBLY

Step	Procedure
1	Remove the 1-ear clamps and pull out the hose.

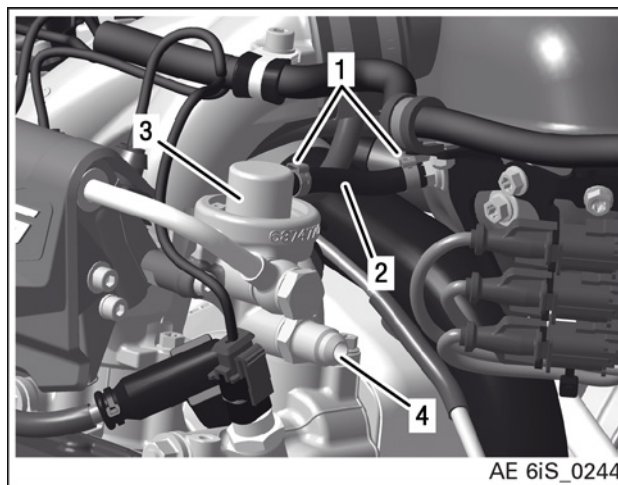


Figure 12.6

- |                           |                             |
|---------------------------|-----------------------------|
| 1 1-ear clamp             | 2 Hose                      |
| 3 Fuel pressure regulator | 4 Fuel rail 2/4 outlet line |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
2	Remove the retaining ring using retaining ring pliers.
3	Remove the fuel pressure regulator.

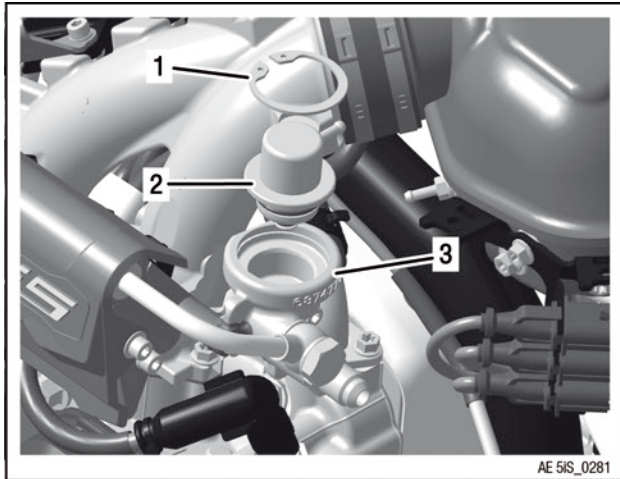


Figure 12.7

- 1 Retaining ring
- 2 Fuel pressure regulator
- 3 Pressure regulator housing

**FUEL PRESSURE REGULATOR ASSY. — REMOVAL**

**Preparation**



Carry out functional check (differential pressure to the intake manifold pressure or intake air pressure). See current Installation Manual (IM) for the respective engine type, Chapter 73–00–00 section hydraulic interfaces.

Step	Procedure
1	Remove the 1-ear clamps and pull out the hose.

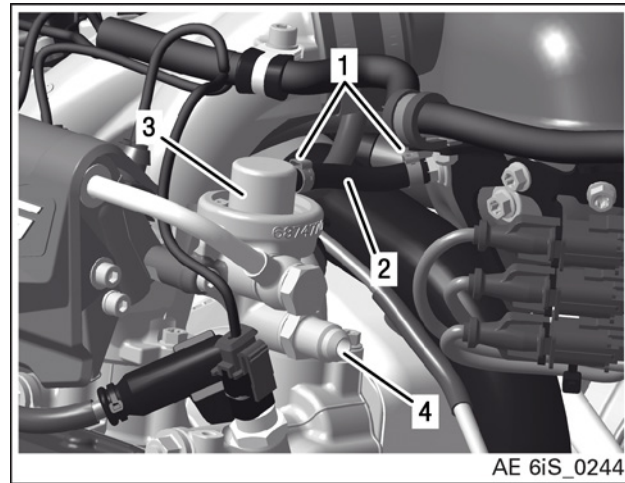


Figure 12.8

- 1 1-ear clamp
- 2 Hose
- 3 Fuel pressure regulator
- 4 Fuel rail 2/4 outlet line

Step	Procedure
2	Loosen the banjo bolt with sealing rings.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**NOTICE**

**Do not damage the Exhaust Gas Temperature sensor (EGT) on cylinder 4.**

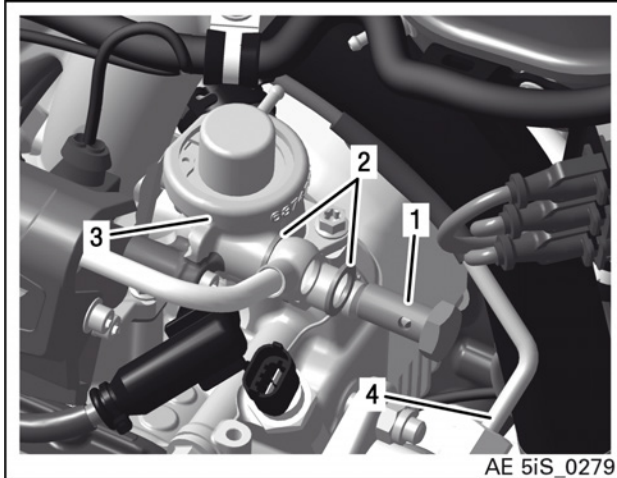


Figure 12.9: : TYPICAL

- |                              |                                 |
|------------------------------|---------------------------------|
| 1 Banjo bolt                 | 2 Sealing ring                  |
| 3 Pressure regulator housing | 4 Exhaust Gas Temperature (EGT) |

Step	Procedure
3	Loosen the Allen screws.  <b>NOTE</b> 1 M5x35 Allen screw. 1 M5x45 Allen screw.
4	Remove the fuel pressure regulator and housing.

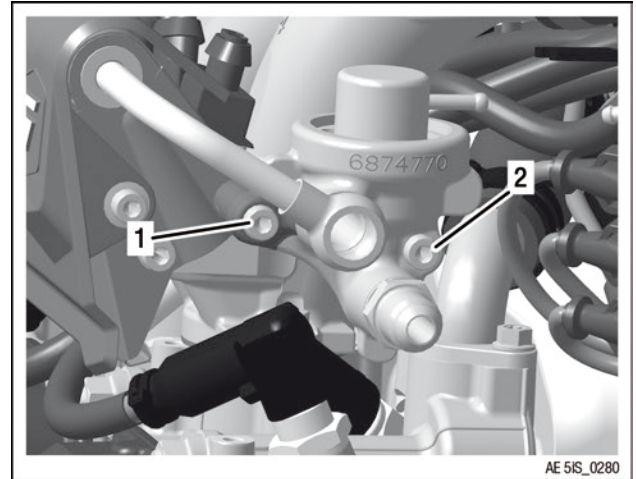


Figure 12.10

- |                     |                     |
|---------------------|---------------------|
| 1 Allen screw M5x35 | 2 Allen screw M5x45 |
|---------------------|---------------------|

**FUEL LINE ASSY. — REMOVAL**

Step	Procedure
1	Loosen the Allen screw with lock washer of the fuel line assy.

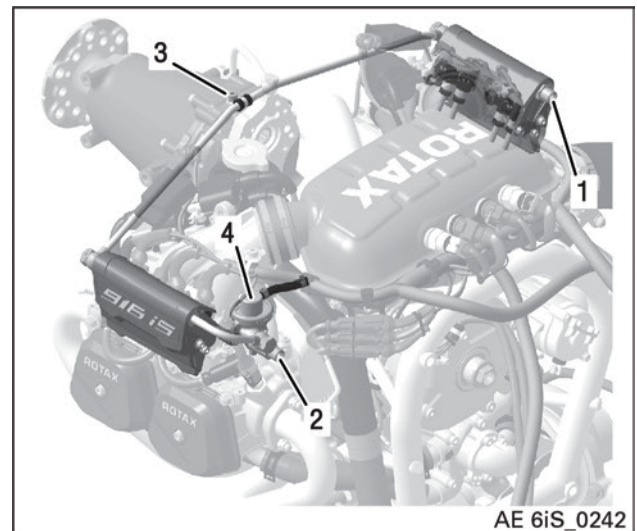


Figure 12.11

- |                                |                             |
|--------------------------------|-----------------------------|
| 1 Fuel rail 1/3 feed line      | 2 Fuel rail 2/4 outlet line |
| 3 Allen screw with lock washer | 4 Fuel pressure regulator   |



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
2	Loosen 2 banjo bolts with sealing rings.
3	Remove the fuel line assy.

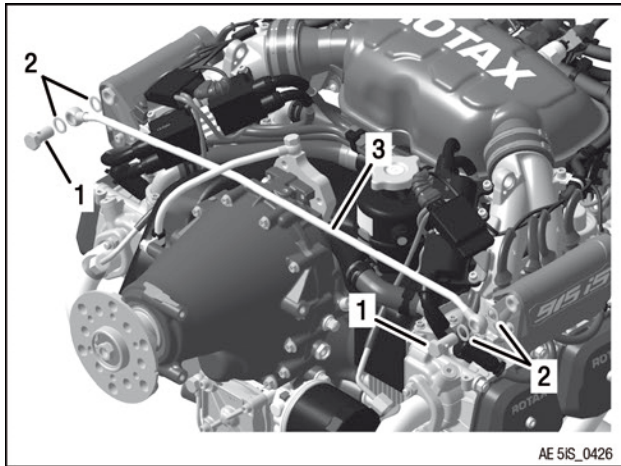


Figure 12.12: TYPICAL

- 1 Banjo bolt
- 2 Sealing ring
- 3 Fuel line assy.

**FUEL RAIL — REMOVAL**

**Preparation**

- Remove the fuel line assy.

<b>NOTICE</b>	
<b>Do not damage the Exhaust Gas Temperature (EGT) sensor.</b>	

Step	Procedure
1	Remove 2 Allen screws with lock washers from the fuel rail cover.
2	Lift off the fuel rail cover from the heat shield.

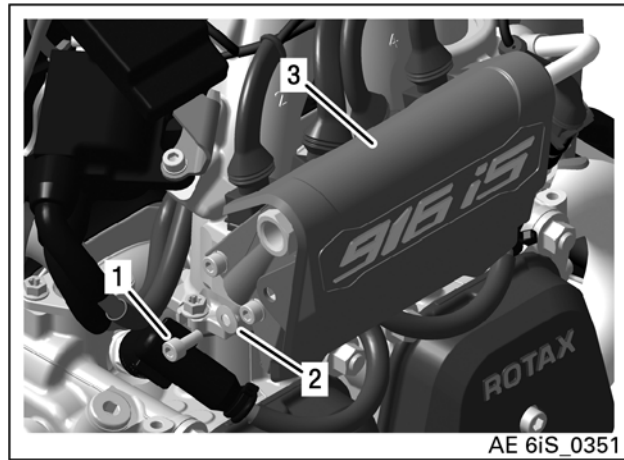


Figure 12.13

- 1 Allen screw
- 2 Spring washer
- 3 Fuel rail cover

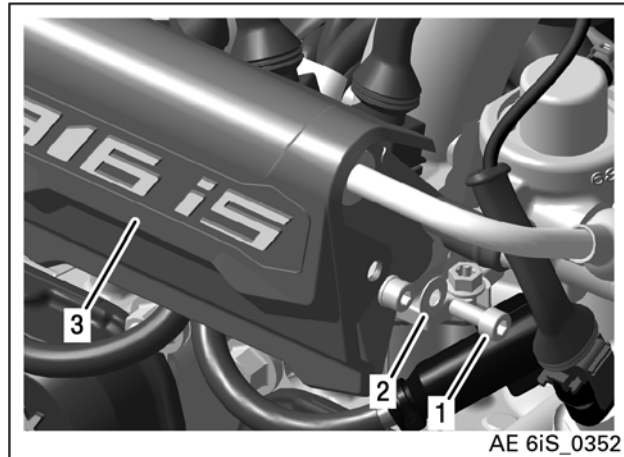


Figure 12.14

- 1 Allen screw
- 2 Spring washer
- 3 Fuel rail cover

Step	Procedure
3	Loosen 4 Allen screws with lock washers and remove from the heat shield.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

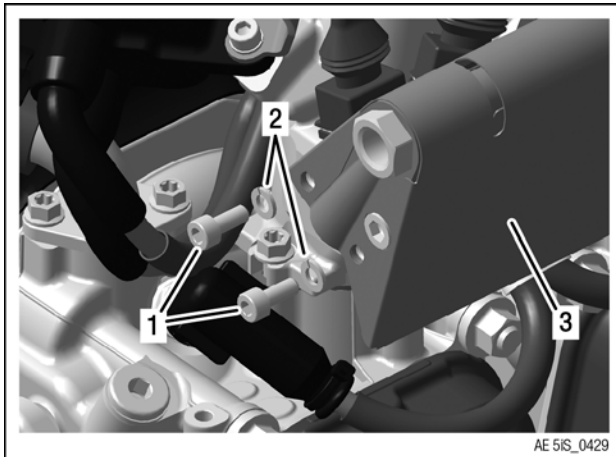


Figure 12.15

- 1 Allen screw
- 2 Lock washer
- 3 Heat shield

Step	Procedure
4	Remove Allen screw M5x35 from the fuel pressure regulator (only on cylinder 4).
5	Lift off the heat shield on both sides in the region of the rivet nut.

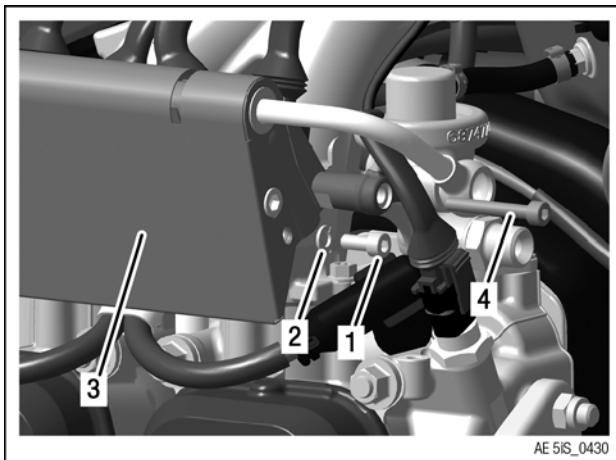


Figure 12.16

- 1 Allen screw M5x12
- 2 Lock washer 5.3
- 3 Heat shield
- 4 Allen screw M5x35

Step	Procedure
6	Press the metal spring and pull off the connector from the fuel injector.

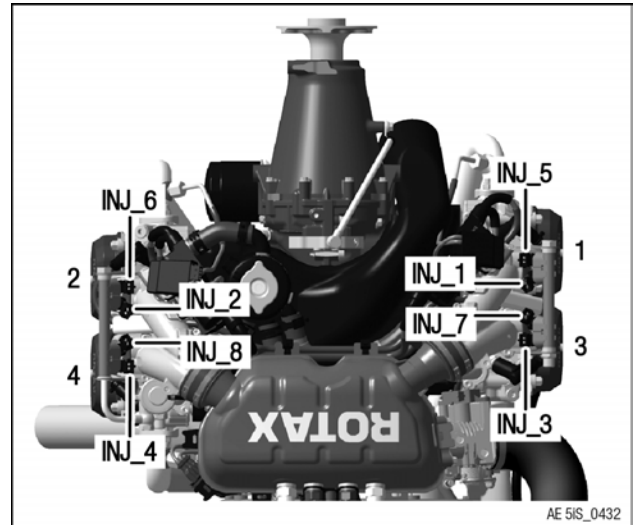


Figure 12.17: Labeling diagram

Step	Procedure
7	Loosen the Allen screws of the fuel rail attachment with the lock washers on both sides.
8	Remove both fuel rails from the intake manifold.
9	Remove left and right damper from the intake manifold.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

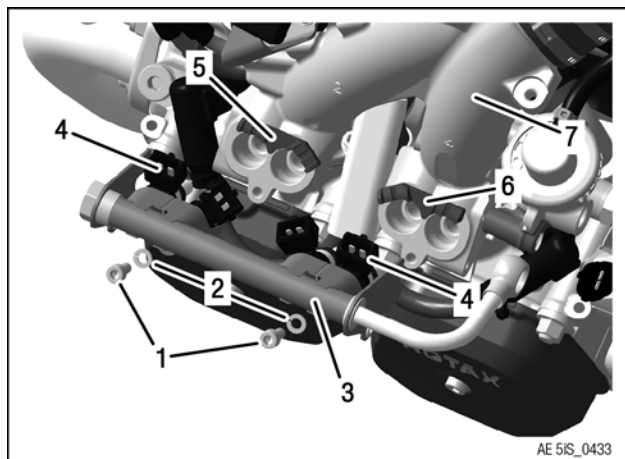


Figure 12.18: Cylinder 2/4

- |                   |                |
|-------------------|----------------|
| 1 Allen screw     | 2 Lock washer  |
| 3 Fuel rail (2/4) | 4 Injectors    |
| 5 Left damper     | 6 Right damper |
| 7 Intake manifold |                |

**FUEL RAIL — DISASSEMBLY**

Step	Procedure
1	Remove the fuel injectors individually from the fuel rail.

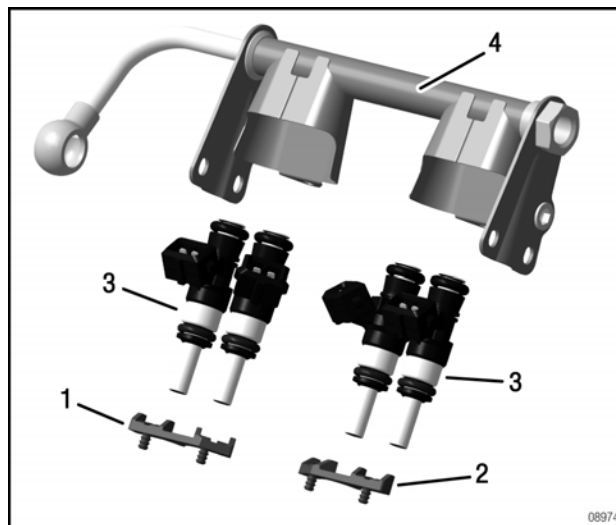


Figure 12.19

- |                  |                      |
|------------------|----------------------|
| 1 Left damper    | 2 Right damper       |
| 3 Fuel injectors | 4 Fuel rail cyl. 2/4 |

**PRESSURE CONTROL VALVE (PCV) - REMOVAL**

**Preparation**

- Disconnect Pressure Control Valve (PCV), see Chapter 76-70-00 section Sensors and actuators



Remove Pressure Control Valve (PCV). Follow the instructions of the aircraft manufacturer.

Step	Procedure
1	Loosen clamps and remove the control hoses.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

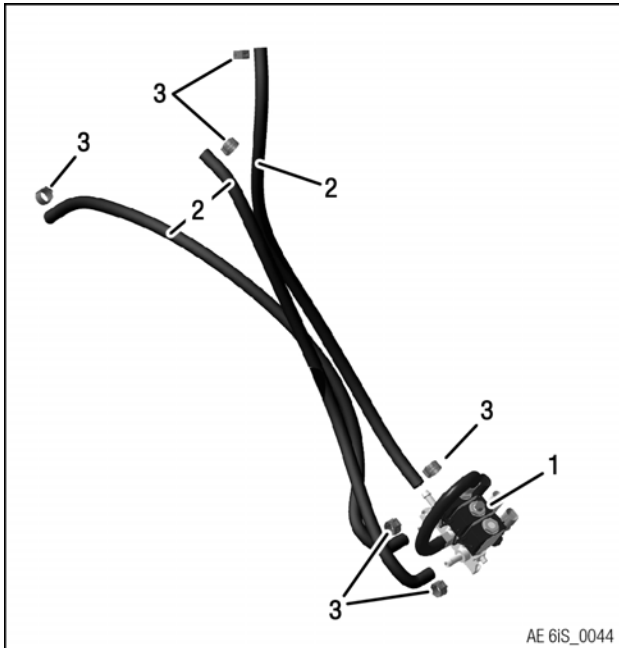


Figure 12.20

- 1 Pressure Control Valve (PCV)
- 2 Control hoses
- 3 Clamp

**POP OFF VALVE ASSY. — REMOVAL**

**⚠ WARNING**

**Danger of severe burns and scalds! Allow the engine and exhaust system to cool to ambient temperature before starting work.**

**Preparation**



Before removal, check for function and perform a leakage test, see current Maintenance Manual Line (MML) for the respective engine type.

- Disconnect Boost Pressure Sensors (BPS), see Chapter 76-50-00, section [Boost pressure sensor \(BPS\) – disconnection](#)

Step	Procedure
1	Loosen the clamp and remove the control hose.

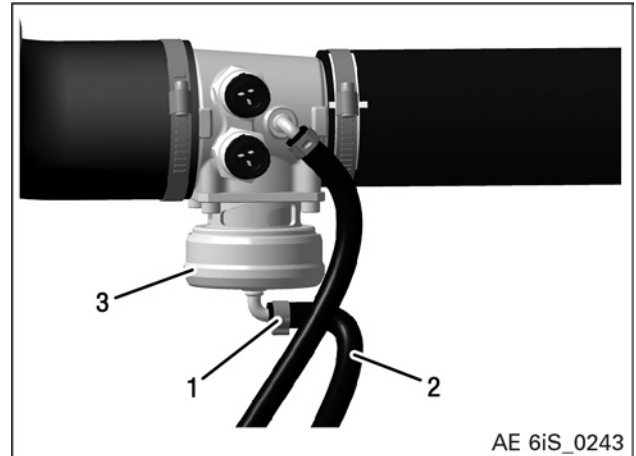


Figure 12.21

- 1 Clamp
- 2 Control hose
- 3 Valve cover assy.

Step	Procedure
2	Remove valve cover assy. with O-ring, compression spring and valve piston.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

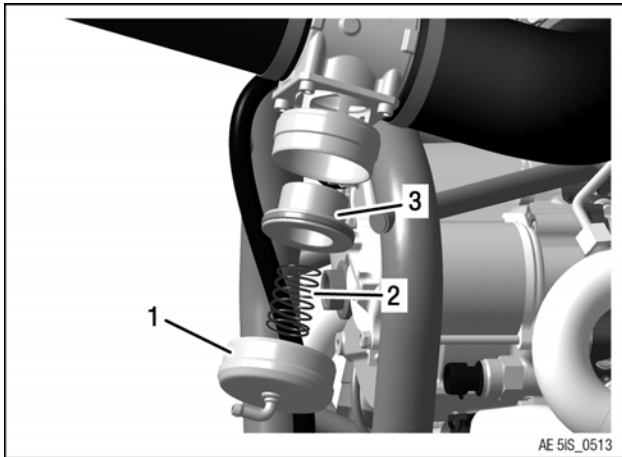


Figure 12.22

- 1 Valve cover assy. with O-ring
- 2 Compression spring
- 3 Valve piston with lip seal

Step	Procedure
3	Loosen the 4 Allen screws and remove the valve housing with O-ring.

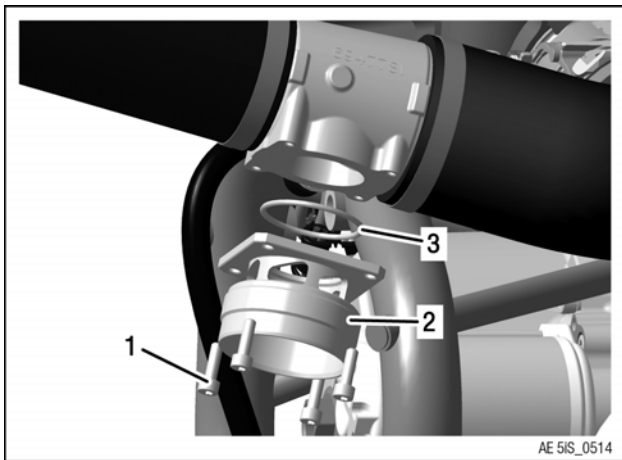


Figure 12.23

- 1 Allen screw
- 2 Valve housing
- 3 O-ring

Step	Procedure
4	Loosen the clamp and remove the control hose.
5	Loosen the clamps and remove the hose to intercooler and air intake hose.

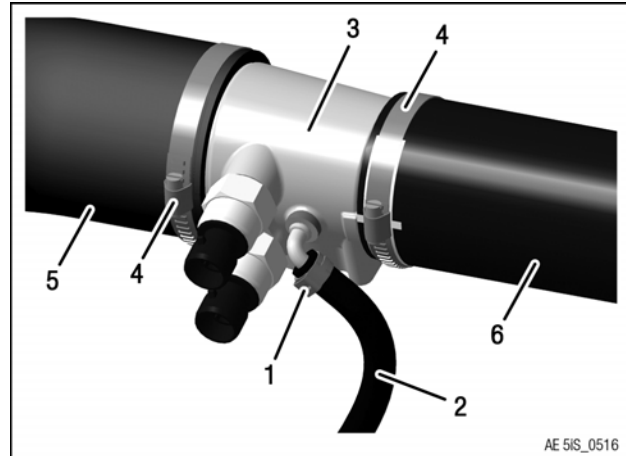


Figure 12.24

- 1 Clamp
- 2 Control hose
- 3 reduction sleeve
- 4 Clamps
- 5 Air intake hose
- 6 Hose to intercooler

Step	Procedure
6	If necessary, remove the Boost Pressure Sensor (BPS), see Chapter 76–70–00 section <a href="#">Boost pressure sensor (BPS) — removal</a> .

**THROTTLE BODY ASSY. — REMOVAL**

**Preparation**



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.



Remove the Bowden cable from the throttle body assy. Follow the instructions of the aircraft manufacturer.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
1	Remove the clamp and the air intake hose from the throttle body assy.

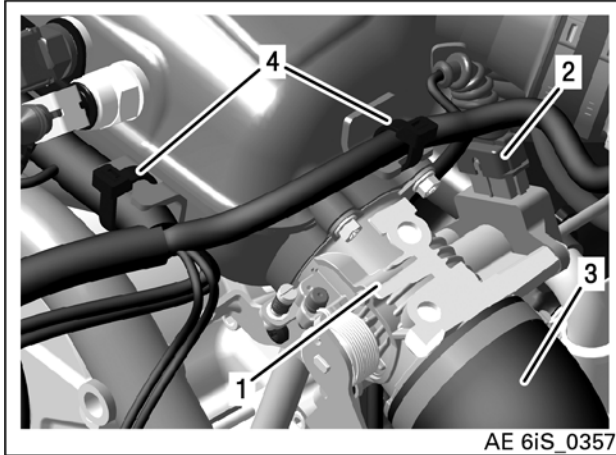


Figure 12.25

- 1 Throttle body assy.      2 Connector (TPS)  
3 Air intake hose          4 Cable tie

Step	Procedure
2	Unplug the connector from the Throttle Position Sensor (TPS). See Chapter 76-50-00 section <a href="#">Throttle position sensor (TPS) — disconnection</a> .
3	Loosen hex./torx collar screw with the separating plate.

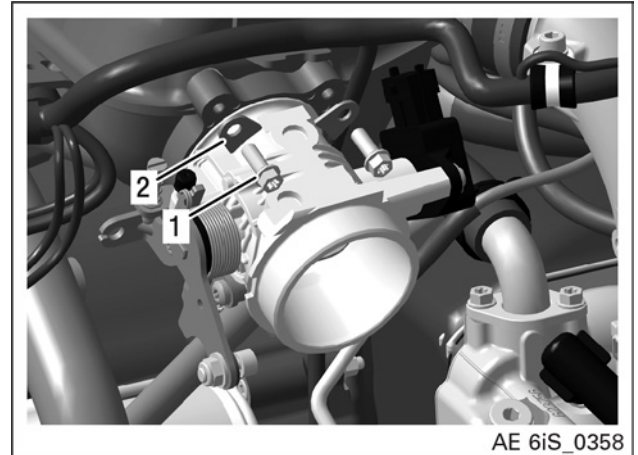


Figure 12.26

- 1 Hex./torx collar screw    2 Separating plate

<b>NOTICE</b>
<b>Do not lose the rubber ring and ensure that it does not remain in the airbox.</b>

Step	Procedure
4	Remove the throttle body and the rubber ring.

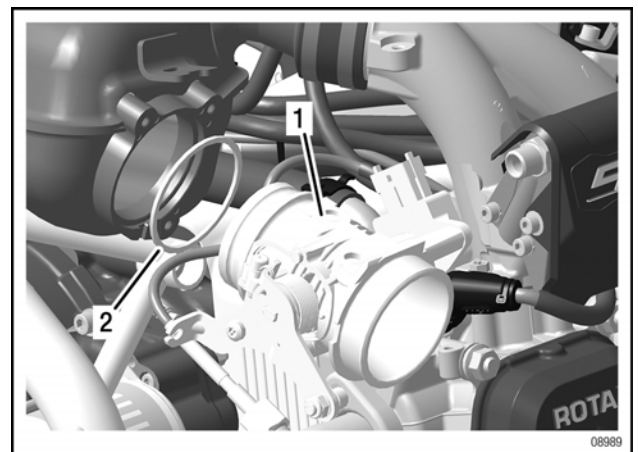


Figure 12.27: : TYPICAL

- 1 Throttle body              2 Rubber ring

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INTAKE MANIFOLD — REMOVAL

### Preparation

- Remove fuel line assy. and fuel rails.
- Remove the fuel pressure regulator assy.
- Loosen and detach the wiring harness. See Chapter 76–50–00 [Wiring harness — removal](#) .
- Remove double ignition coils. See Chapter 74-20-00 section Double ignition coil – removal.

Step	Procedure
1	Remove the 1-ear clamps.

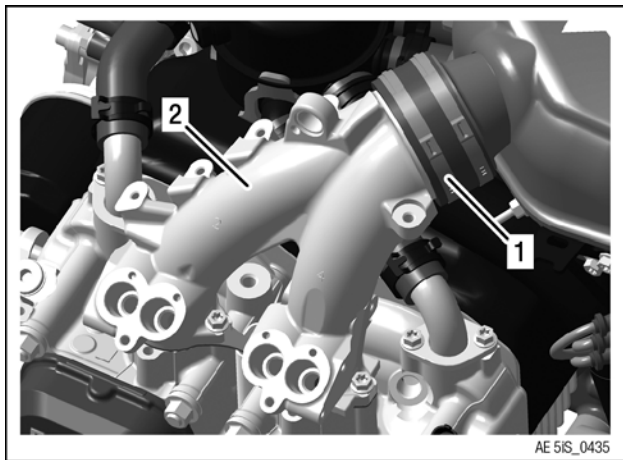


Figure 12.28

1 1-ear clamps      2 Intake manifold

Step	Procedure
2	Loosen 4 hex./torx collar screws for attachment to the cylinder heads 2/4. Use the special tool part no. 876180.
3	Remove the intake manifold 2/4.

### NOTICE

**Screws cannot be completely unscrewed. To remove the screws, the intake manifold must be lifted after loosening all 4 hex./torx collar screws.**

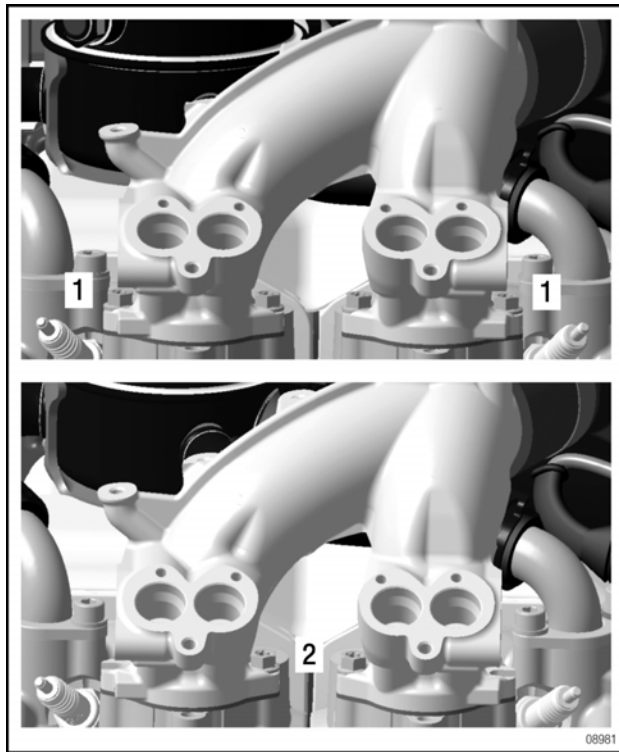


Figure 12.29: Cylinder 2/4

1 Outer screw-fastening    2 Inner screw-fastening

Step	Procedure
4	Remove the isolating flange from the cylinders 2/4.
5	Close the intake duct using a plug (part no. 860397).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

**NOTICE**

**Close the intake duct immediately so that no debris particles can get into the combustion chamber!**

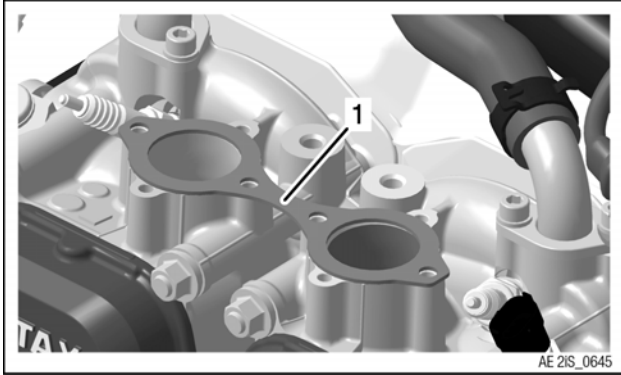


Figure 12.30

1 Isolating flange

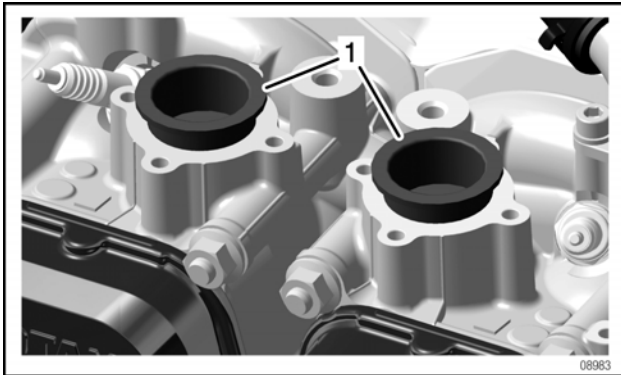


Figure 12.31

1 Plug part no. 860397

**NOTE**

*Remove the intake manifold 1/3 in the same way as the intake manifold 2/4.*

## AIRBOX — REMOVAL

### Preparation

- Unplug Manifold Air Pressure Sensors (MAPS) and Manifold Air Temperature Sensors (MATs). See [Chapter 76-50-00 Wiring harness](#).
- Remove Knock Sensor (KNOCK) and Crankshaft Position Sensors (CPS\_1/2) from the connector bracket, see [Chapter 76-70-00 Sensors and actuators](#).
- Loosen and detach the wiring harness from all fastenings (cable ties, retaining fixtures) on the engine. See [Chapter 76-50-00 Wiring harness](#).
- Remove intake manifolds.

Step	Procedure
1	Loosen the lock nut attaching the airbox to the ignition housing along with the washer.

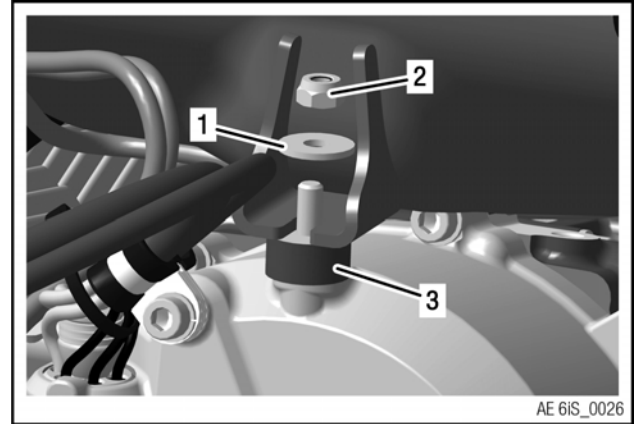


Figure 12.32

- 1 Washer
- 2 Lock nut
- 3 Rubber buffer  
20x10xM6

Step	Procedure
2	Remove the airbox.
3	Remove the two 1-ear clamps and connecting sockets.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**NOTE**

*The Manifold Air Pressure Sensors (MAPS) and Manifold Air Temperature Sensors (MATS) must only be removed, if absolutely necessary!  
For removal and installation, see [Chapter 76-70-00 Sensors and actuators](#).*

**NOTE**

*Remove the nipple, hex./torx-flange screw M6x16 and connector bracket only if absolutely necessary!*

Step	Procedure
4	Loosen the nipple and hex./torx-flange screw M6x16.
5	Loosen 3 hex./torx-flange screws and remove connector bracket.

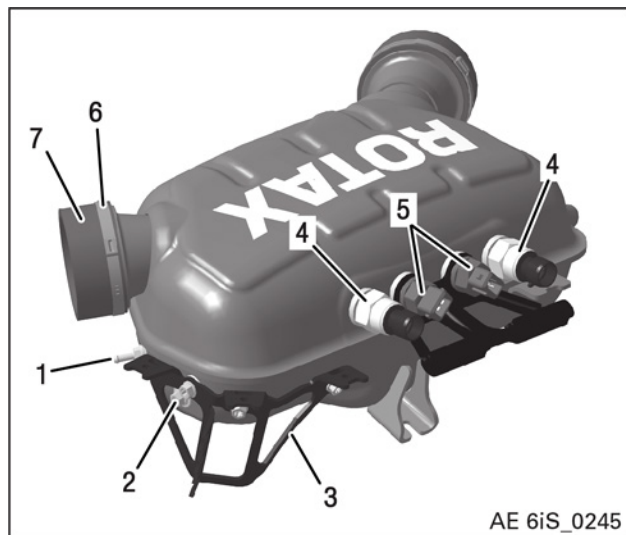


Figure 12.33

- |   |  |
|---|--|
| 1 Nipple                                  | 2 Hex./Torx-flange screw               |
| 3 Connector bracket                       | 4 Manifold Air Pressure Sensors (MAPS) |
| 5 Manifold Air Temperature Sensors (MATS) | 6 1-ear clamps                         |
| 7 Connecting socket                       |  |



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION



For intercooler assy. and intercooler hoses inspection. Follow the instructions of the aircraft manufacturer.

## PRESSURE CONTROL VALVE HOSES - INSPECTION

Step	Procedure
1	Check PCV hoses for damage (kinks, cuts and abrasion).

## AIR INTAKE HOSE- INSPECTION

Step	Procedure
1	Inspect air intake hose and clamps for damage and wear.

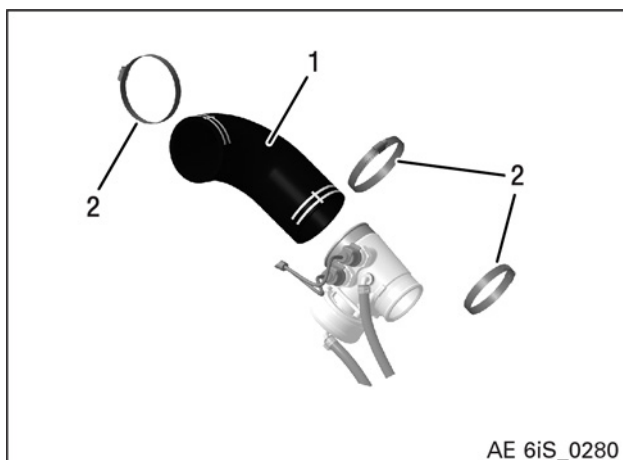


Figure 12.34

1 Air intake hose      2 Clamps

## POP OFF VALVE — INSPECTION

### Preparation

- Clean all parts carefully



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.

Check — assembled state:

Step	Procedure
1	Check free movement of valve piston.
2	Actuate piston manually several times till end stop and it must move back to initial position with spring tension.

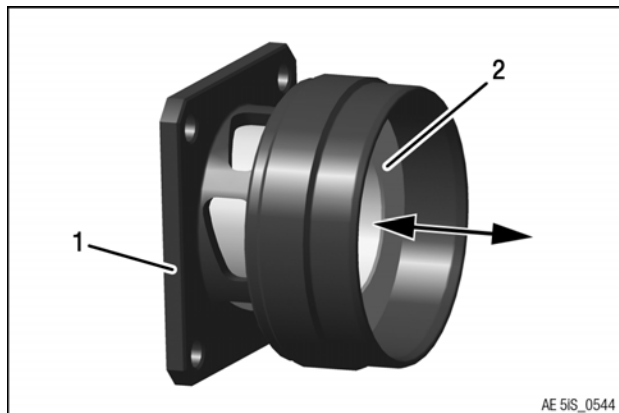


Figure 12.35

1 Valve housing      2 Valve piston

Check — disassembled state:

Step	Procedure
3	Check bore of the valve piston for dirt and foreign particles.
4	Check sealing ring of valve piston.
5	Assemble pop off valve and check with vacuum.



Checking the pop-off valve. See current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## FUEL LINE ASSY. — INSPECTION

### Preparation



Clean all parts carefully.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.

Step	Procedure
1	Check the fuel line assy. for cracks, scuffing marks and kinks.

### NOTICE

**Cracks in the fuel distribution system, its components and hoses are not permissible!**  
Check the affected parts for cracks with a fluorescent penetrant method.

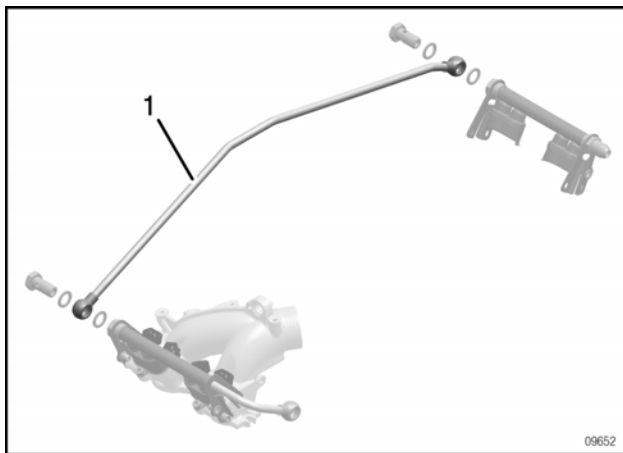


Figure 12.36

1 Fuel line assy.

## FUEL PRESSURE REGULATOR ASSY. — INSPECTION

Step	Procedure
1	Check all the O-rings.

### NOTE

*If an O-ring is damaged, the entire fuel pressure regulator must be replaced. O-rings are not available as spare parts.*

Step	Procedure
2	Check the screen for dirt.

### NOTE

*If the screen is dirty, all the prefilter must be checked for function and dirt.*

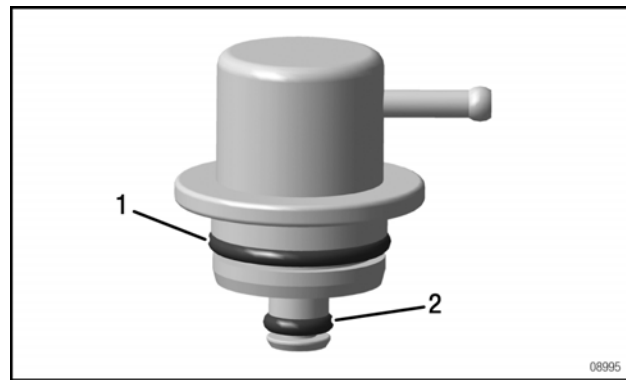


Figure 12.37

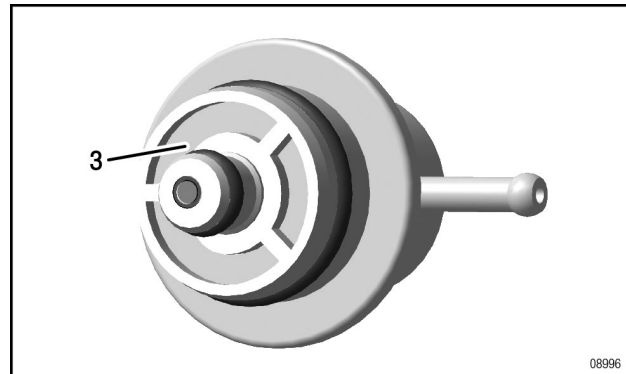


Figure 12.38

- 1 O-ring 20x2.5                      2 O-ring 5x2.5
- 3 Screen



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**PRESSURE REGULATOR HOUSING — INSPECTION**

Step	Procedure
1	Check the sealing surfaces of the O-rings for striations.
2	Check the recess of the retaining ring for sharp edges and burrs.

**NOTE**

*The depressions must not have sharp edges! Sharp edges can be carefully reworked with a sharpening stone. The roughness depth of the flat surfaces must not be changed!*

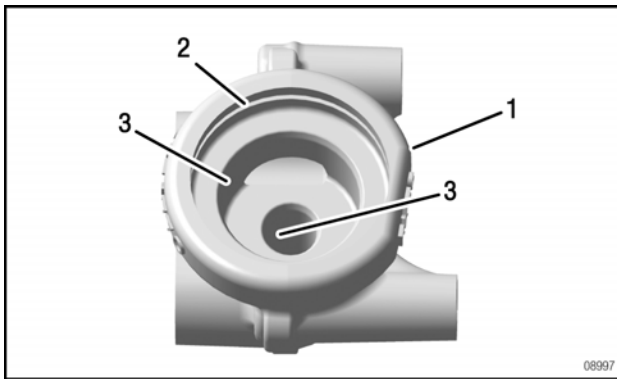


Figure 12.39

- 1 Pressure regulator housing      2 Recess for retaining ring  
 3 Sealing surface for O-rings

**FUEL RAIL — INSPECTION**

Step	Procedure
1	Check the sealing surfaces for the O-rings of the injection valves for scratches and burrs.
2	Visual inspection for dents, kinks and cracks.

**NOTICE**

**The fuel rail must be replaced if damaged!**

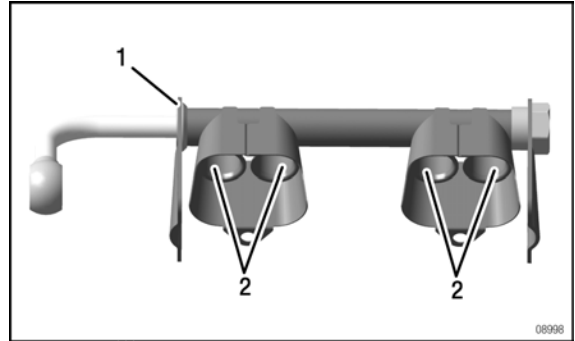


Figure 12.40

- 1 Fuel rail      2 Sealing surface for O-rings

**FUEL INJECTOR— INSPECTION**

**NOTE**

*All O-rings must be replaced when the fuel injectors are repaired.*

Step	Procedure
1	Check the fuel injectors for damage. <ul style="list-style-type: none"> <li>• Scuffing marks (including scratches) on the injectors are permissible up to a maximum depth of 0.2 mm (0.0079 in.).</li> </ul>

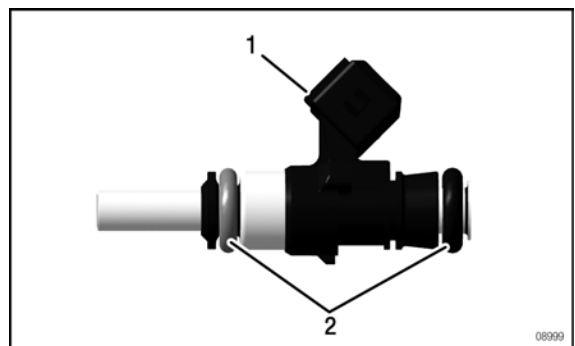


Figure 12.41

- 1 Fuel injectors      2 O-rings

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INTAKE MANIFOLD — INSPECTION

### NOTE

For intake manifold inspection, dye penetrant or similar method must be used.

Step	Procedure
1	Check the intake manifold for cracks and scuffing marks.
2	Check threaded bores for damage.
3	Check bores for injectors for scuffing marks. Scuffing marks (including scratches) on the valves are permissible up to a maximum depth of 0.2 mm (0.0079 in.).
4	Check contact faces for double ignition coil. Indentations up to a max. of 0.5 mm (0.0197 in.). Bumps up to a max. of 0.5 mm (0.0197 in.).

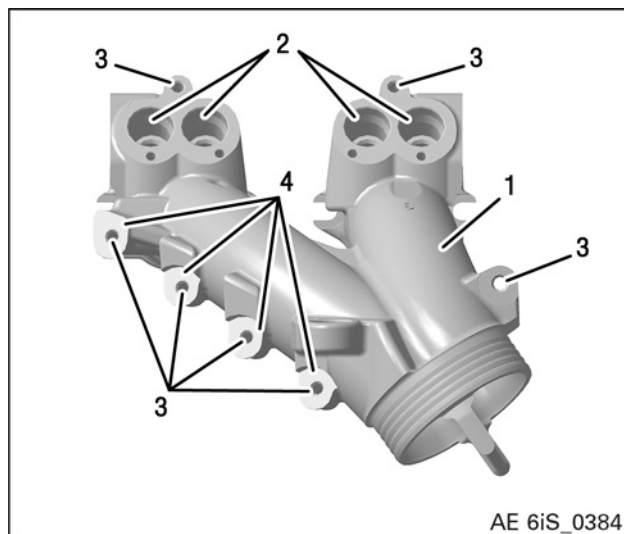


Figure 12.42

- |                   |  |
|-------------------|--|
| 1 Intake manifold | 2 Injection valve bore                 |
| 3 Threaded bores  | 4 Contact faces (double ignition coil) |

Step	Procedure
5	Check contact and flat surfaces for Allen/hex. screws, nuts and sensors. <ul style="list-style-type: none"> <li>• Indentations up to a maximum of 0.1 mm (0.0039 in.) are permissible.</li> <li>• Bumps up to a maximum of 0.1 mm (0.0039 in.) are permissible.</li> </ul>

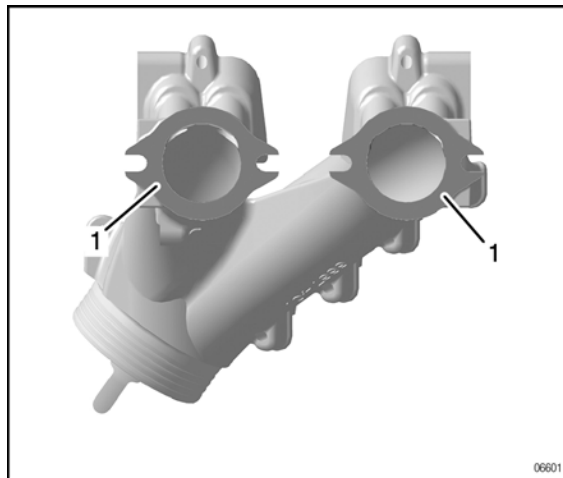


Figure 12.43

- 1 Contact face

## CONNECTING SOCKET — INSPECTION

Step	Procedure
1	Inspect connecting socket for damage and wear.

## AIRBOX — INSPECTION

Step	Procedure
1	Check the airbox for damage and wear.
2	Check the support plates for damage.
3	Check the connecting pieces for brittleness.
4	Check threaded bores for damage.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

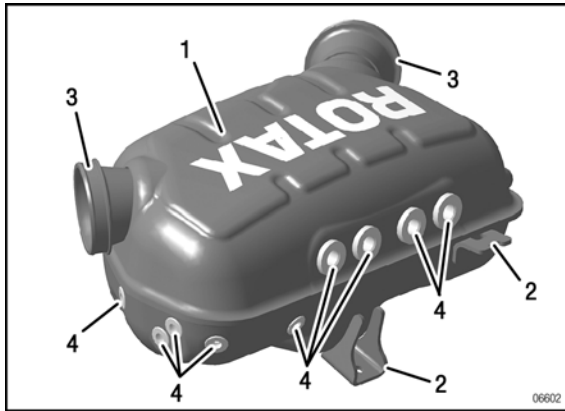


Figure 12.44

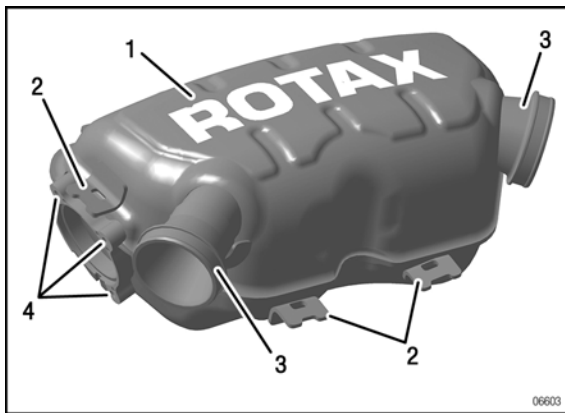


Figure 12.45

- 1 Airbox
- 2 Support plate
- 3 Connecting piece
- 4 Threaded bores

## THROTTLE BODY — INSPECTION

### NOTICE

**Danger of consequent damage to engine!**  
The throttle body must not be re-machined! If the throttle body is damaged or worn, it must be replaced with a new part.

Step	Procedure
1	Check the throttle body for damage and wear.
2	Check the bearing of the throttle shaft for damage.

### NOTE

*Wear of more than 0.1 mm (0.0039 in.) is not permissible.*

Step	Procedure
3	Check the throttle flap for damage.

### NOTE

*Traces of wear up to a maximum of 0.05 mm (0.0020 in.) in depth are permissible.*

Step	Procedure
4	Check the evenness of the flat and contact surfaces of the throttle body and bent socket with respect to each other.

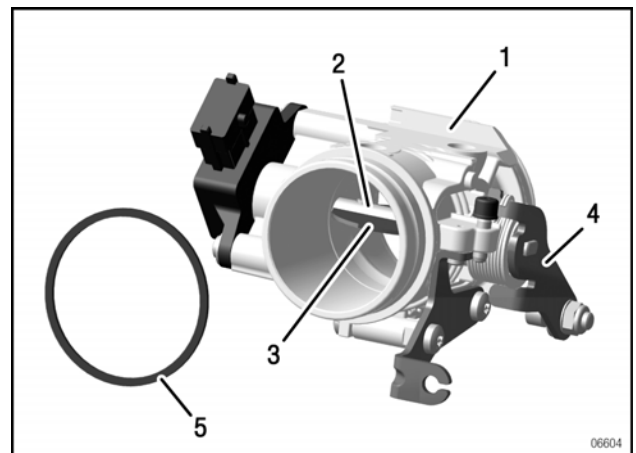


Figure 12.46

- 1 Throttle valve assy.
- 2 Throttle shaft
- 3 Throttle flap
- 4 Throttle cable
- 5 Rubber gasket ring

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
5	Ensure that the throttle flap and the Bowden cable can move freely.
6	Check that the fastening and securing elements are secure.

## AIR FILTER — INSPECTION



Check the air filter according to the aircraft manufacturer's instruction.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00.

## FUEL FILTER — INSPECTION



Check the fuel filter according to the aircraft manufacturer's instructions.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00.

**ASSEMBLY**

**FUEL PRESSURE REGULATOR —  
 ASSEMBLY**

Step	Procedure
1	Lubricate the O-rings lightly with Lithium-base grease.

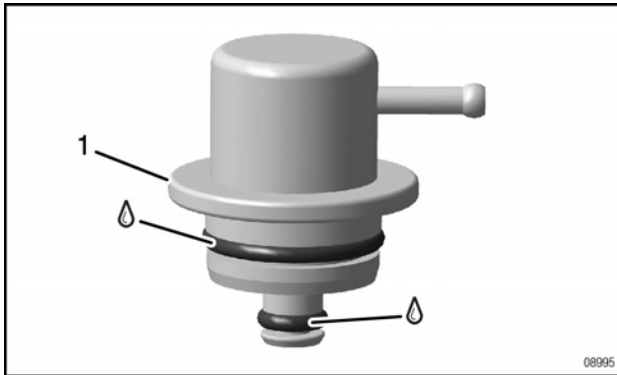


Figure 12.47

- 1 Fuel pressure regulator

Step	Procedure
2	Install the fuel pressure regulator in the pressure regulator housing until it stops.
3	Install the retaining ring 36x1.5 with the sharp edge to the top.

**NOTE**

*When the retaining ring is mounted, it must be possible to rotate the fuel pressure regulator manually.*

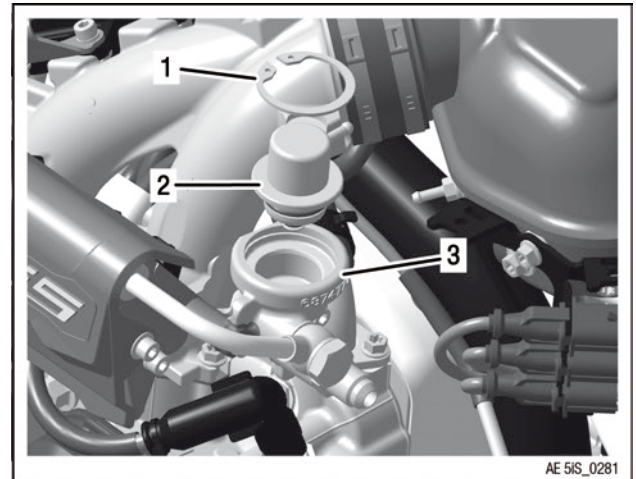


Figure 12.48

- 1 Retaining ring 36x1.5
- 2 Fuel pressure regulator
- 3 Pressure regulator housing

**NOTICE**

**1-ear clamps may only be used once!**

Step	Procedure
4	Install the 2 new 1- ear clamps on the hose 60 mm (2.36) in..
5	Slide the hose onto the nipples and fasten the 1- ear clamps with the pliers.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

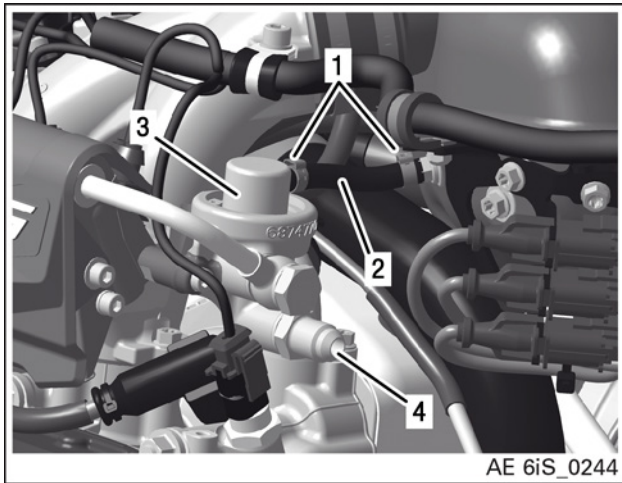


Figure 12.49

- |   |                         |   |                           |
|---|-------------------------|---|---------------------------|
| 1 | 1- ear clamps           | 2 | Hose 60 mm (2.36 in.)     |
| 3 | Fuel pressure regulator | 4 | Fuel rail 2/4 outlet line |

**NOTICE**  
**1-ear clamps may only be used once!**

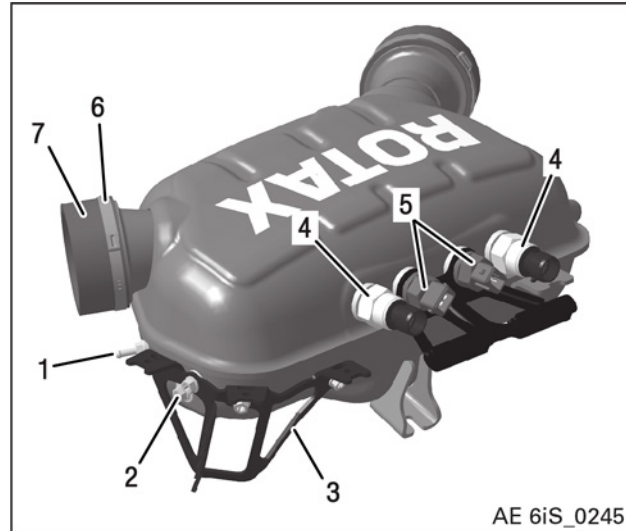


Figure 12.50

- |   |   |   |                                      |
|---|---|---|--------------------------------------|
| 1 | Nipple                                  | 2 | Hex./ torx-flange screw M6x12        |
| 3 | Connector bracket                       | 4 | Manifold Air Pressure Sensors (MAPS) |
| 5 | Manifold Air Temperature Sensors (MATS) | 6 | 1- ear clamps                        |
| 7 | Connecting socket                       |   |                                      |

**AIRBOX — ASSEMBLY**

Step	Procedure
1	Secure the nipple with LOCTITE 243. Tightening torque 8 Nm (70 in. lb.)
2	Secure the hex./torx.-flange screw M6x12 and with LOCTITE 243. Tightening torque 8 Nm (70 in. lb.)
3	Install connector bracket with 3 hex./torx.-flange screws M6x16 secured with LOCTITE 243. Tightening torque 8 Nm (70 in. lb.).
4	Install 2 connecting sockets with new 1-ear clamps on the airbox.

Step	Procedure
5	For Manifold Air Pressure Sensors (MAPS) and Manifold Air Temperature Sensors (MATS), see <a href="#">Chapter 76-70-00</a> Sensors and actuators.

**AIRBOX — INSTALLATION**

**NOTE**

*Check the rubber buffer on the ignition housing for damage.*

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
1	If necessary, install the lubricated rubber buffer 20x10xM6 on the ignition housing with LOCTITE 243. Tightening torque 4 Nm (27 in. lb.).
2	Fix the airbox with a new lock nut M6 and washer 6.4 on the ignition housing. Tightening torque 10 Nm (89 in. lb.).

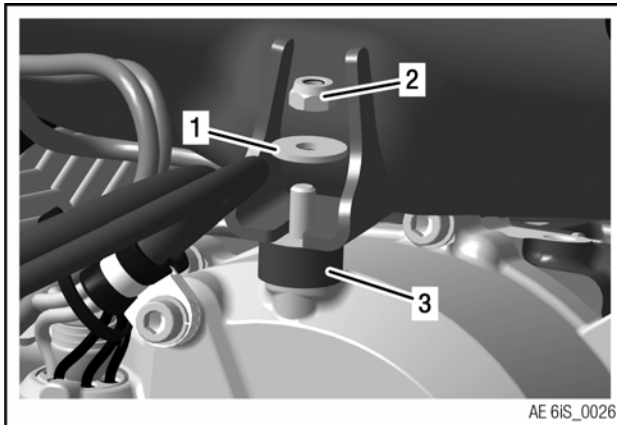


Figure 12.51

- 1 Lock nut M6                      2 Washer 6.4  
3 Rubber buffer  
20x10xM6

### INTAKE MANIFOLD — INSTALLATION

#### Preparation

- Open the intake duct remove plug (part no. 860397)

#### NOTE

*Airbox must be installed.*

Step	Procedure
1	Place the isolating flange on the cylinder heads.

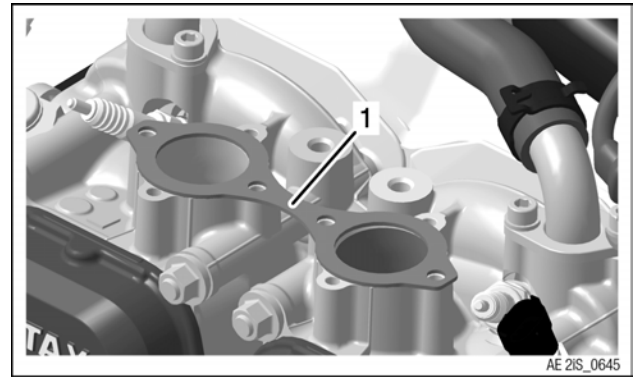


Figure 12.52

- 1 Isolating flange

#### NOTICE

**1-ear clamps may only be used once!**

Step	Procedure
2	Place intake manifolds on the cylinders and install it into the connecting socket.  <b>NOTE</b> <i>Before install the new 1-ear clamps on the connecting socket.</i>
3	Fix the 2/4, 1/3 intake manifolds with 8 hex./torx collar screws M6x20 from the inside outwards, using special tool part no. 876180. Tightening torque 10 Nm (89 in. lb.).  <b>NOTE</b> <i>Check tightening torque after engine test run once more.</i>
4	Install new 1-ear clamps with the pliers.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

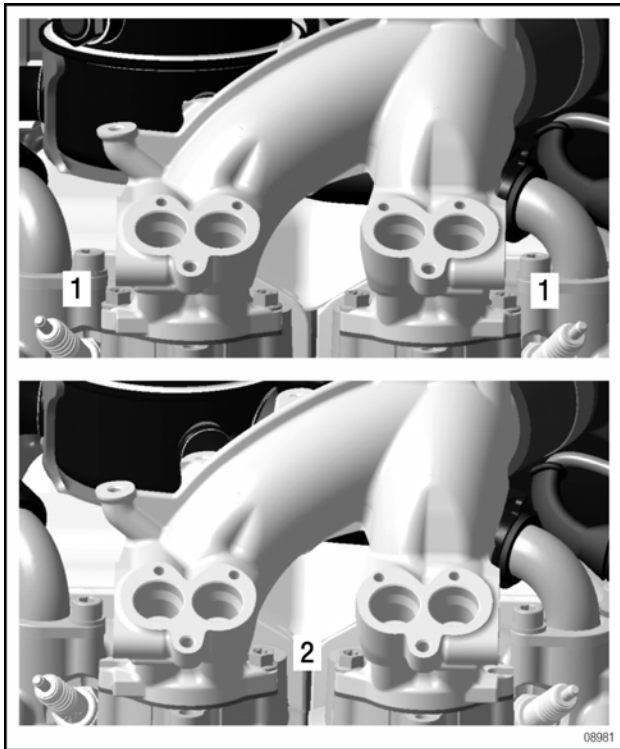


Figure 12.53

- 1 Outer screw-fastening    2 Inner screw-fastening

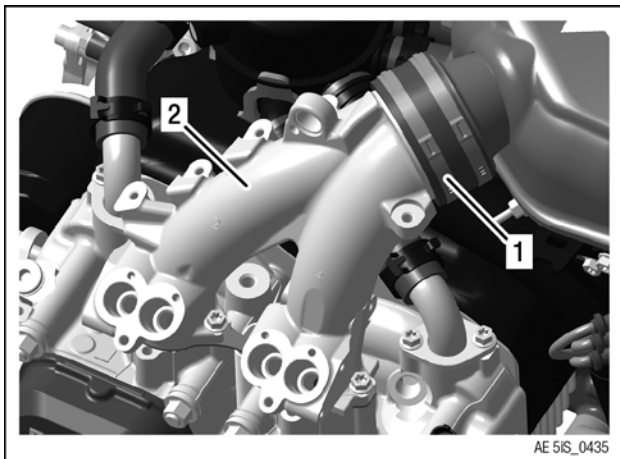


Figure 12.54

- 1 1-ear clamp                      2 Intake manifold

**FUEL RAIL – INSTALLATION**

Step	Procedure
1	Lubricate the O-rings of the fuel injectors lightly with Lithium-base grease.

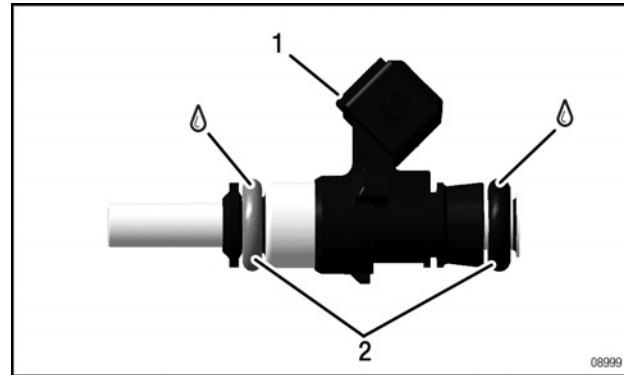


Figure 12.55

- 1 Fuel injector                      2 O-rings

**NOTE**

*When a used fuel injector is reinstalled, new O-rings must be installed.*

Step	Procedure
2	Install dampers and position fuel injectors.

**NOTE**

*The left and right damper are different and used to position and fix the fuel injectors.*



# BRP-Rotax MAINTENANCE MANUAL HEAVY

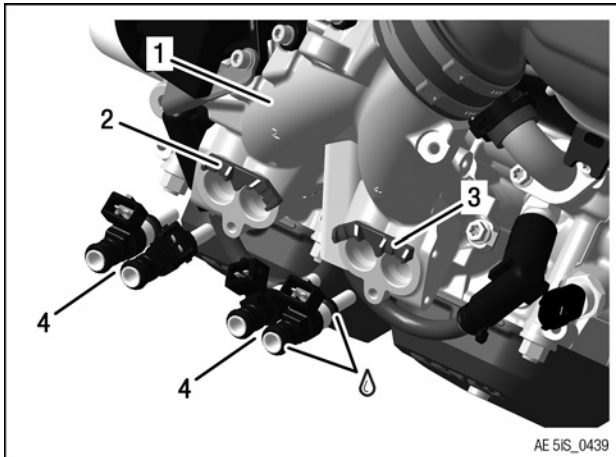


Figure 12.56

- 1 Intake manifold                      2 Left damper
- 3 Right damper                         4 Fuel injector

Step	Procedure
3	Fix the fuel rail on the left and right of the intake manifold with Allen screws M5x12 and lock washers A5. Tightening torque 5 Nm (44 in. lb.)

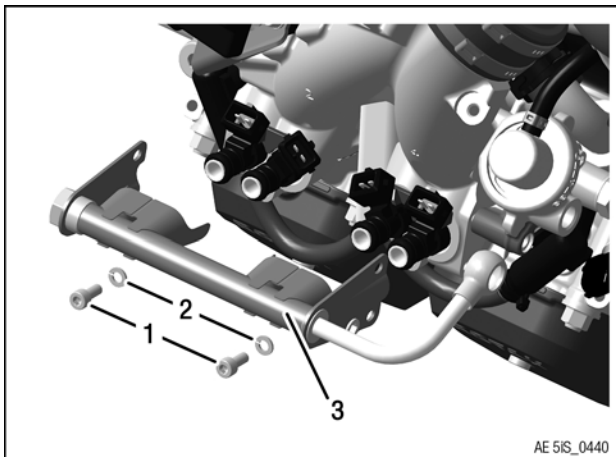


Figure 12.57

- 1 Allen screws M5x12    2 Lock washers A5
- 3 Fuel rail

Step	Procedure
4	Plug the connectors (labeled INJ_1 to INJ_8) into the correct fuel injector. Positioning of the connectors must be as shown in following figure "Connection overview".

**NOTE**

*The cables are labelled INJ\_1 to INJ\_8.*

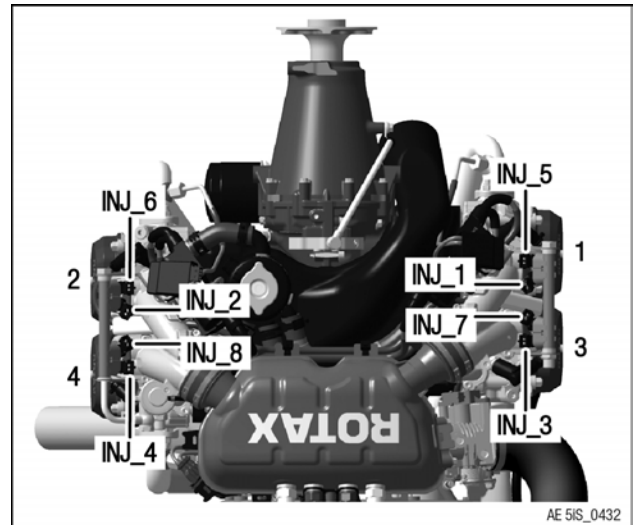


Figure 12.58: Connection overview

<b>NOTICE</b>
<b>Do not damage the Exhaust Gas Temperature Sensor (EGT).</b>

Step	Procedure
5	Fasten the heat shield with 4 Allen screws M5x12 and lock washers A5. Tightening torque 5 Nm (44 in. lb.)

# BRP-Rotax MAINTENANCE MANUAL HEAVY

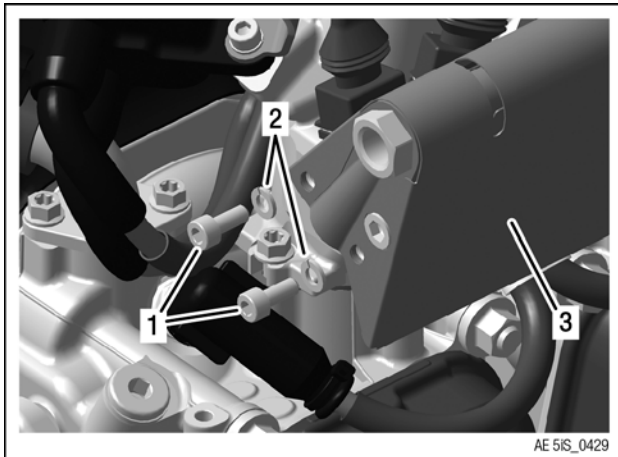


Figure 12.59

- 1 Allen screw M5x12      2 Lock washer A5
- 3 Heat shield

Step	Procedure
6	Fix the fuel pressure regulator with Allen screw M5x35 (only cylinder 4). Tightening torque 8 Nm (70 in. lb.).

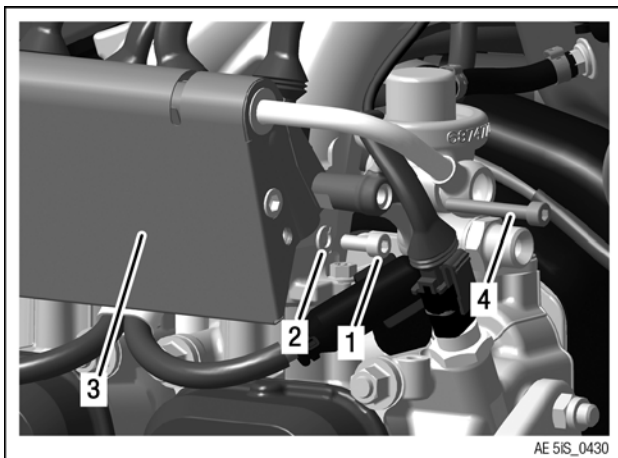


Figure 12.60: Cylinder 4

- 1 Allen screw M5x12      2 Lock washer A5
- 3 Heat shield              4 Allen screw M5x35

Step	Procedure
7	Install the fuel rail cover with Allen screws M5x12 and spring washers 12x5.2x0.5. Tightening torque 5 Nm (44 in. lb.)

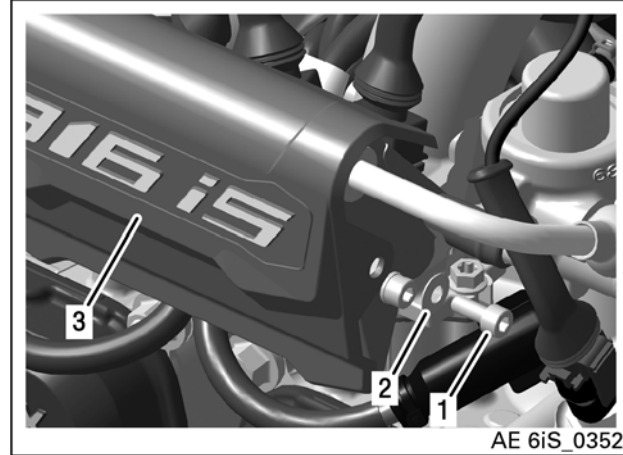
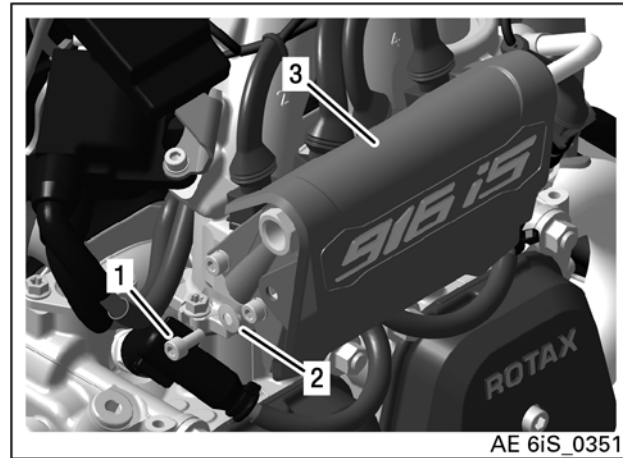


Figure 12.61

- 1 Allen screw M5x12      2 Spring washer 12x5.2x0.5
- 3 Fuel rail cover

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**FUEL PRESSURE REGULATOR ASSY. —  
 INSTALLATION**

NOTICE	
Do not damage the Exhaust Gas Temperature Sensor (EGT) on cylinder 4.	

Step	Procedure
1	Fix the fuel pressure regulator assy. with an Allen screw M5x35 and an Allen screw M5x45. Tightening torque 8 Nm (70 in. lb.).

**NOTE**

*Tighten the Allen screw M5x45 first. The heat shield is screwed on along with the front Allen screw M5x35.*

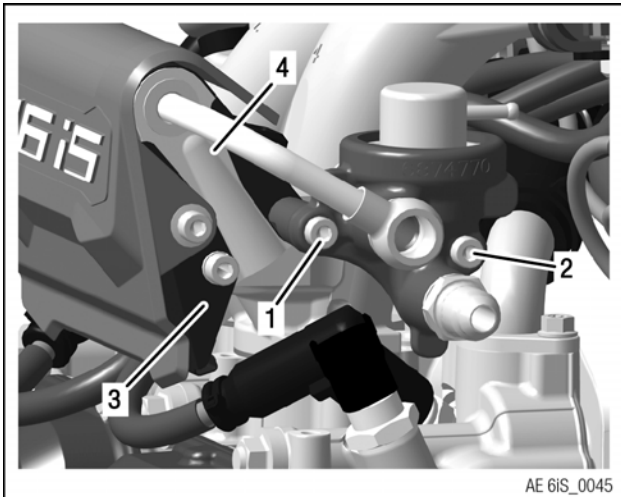


Figure 12.62

- 1 Allen screw M5x35      2 Allen screw M5x45
- 3 Heat shield            4 Fuel rail

Step	Procedure
2	Install the banjo bolt M12x1.5x24 with two new sealing rings A12x18. Tightening torque 25 Nm (18 ft. lb.).

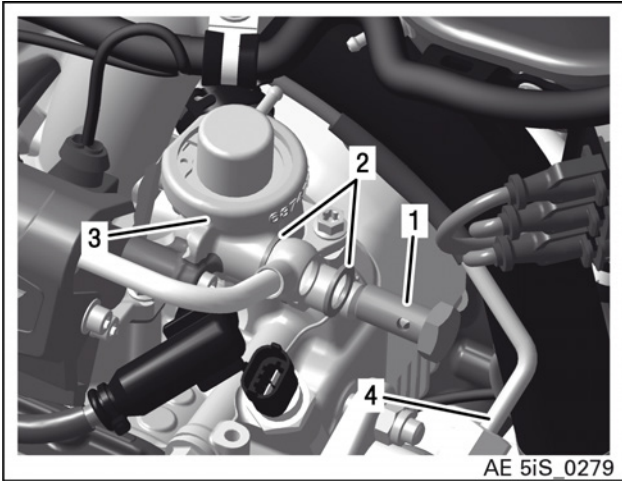


Figure 12.63

- 1 Banjo bolt M12x1.5x24      2 Sealing rings A12x18
- 3 Fuel pressure regulator assy.

NOTICE	
1-ear clamps may only be used once!	

Step	Procedure
3	Install the 2 new 1-ear clamps on the hose 60 mm (2.36 in.).
4	Slide the hose onto the nipples and fasten the 1- ear clamps with the pliers.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

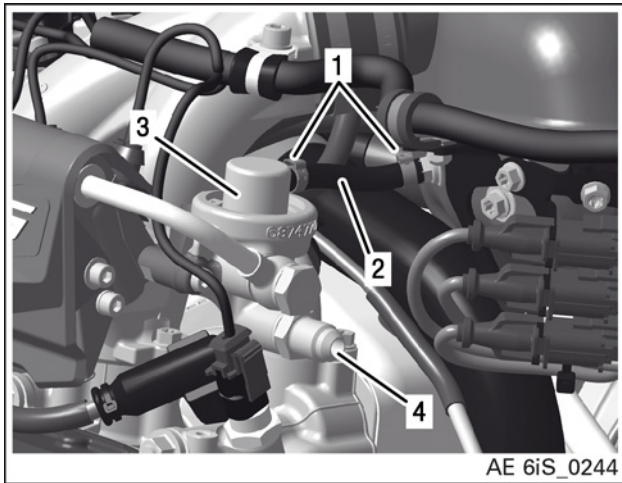


Figure 12.64

- 1 1-ear clamps
- 2 Hose 60 mm (2.36 in.)
- 3 Fuel pressure regulator
- 4 Fuel rail 2/4 outlet line

**NOTE**

*If necessary install adapter metric or UNF and a new sealing ring A12x18 lubricated with LOCTITE 648. Tightening torque 25 Nm (18 ft. lb.).*

**FUEL LINE ASSY. — INSTALLATION**

NOTICE	
<p><b>Install the fuel line assy. in a tension-free manner. If the line is too far away from the fuel rail, the fuel line must be adjusted. The sealing surfaces must be parallel. To be sure: The banjo bolts must fit without twisting (fuel line) and must be able to be hand tightened.</b></p>	

Step	Procedure
1	Fix the fuel line assy. on the left and right fuel rails with banjo bolts M12x1.5x24 with 2 new sealing rings A 12x8. Tightening torque 25 Nm (18 ft. lb.).

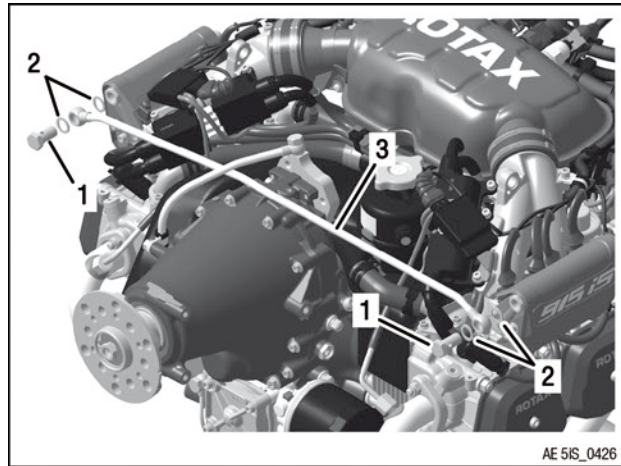


Figure 12.65: TYPICAL

- 1 Banjo bolt M12x1.5x24
- 2 Sealing ring A12x18
- 3 Fuel line assy.

Step	Procedure
2	Secure the cable clamp 8/M6 with an Allen screw M6x16 and lock washer A6 on the propeller gearbox with LOCTITE 243. Tightening torque 10 Nm (89 in. lb.).

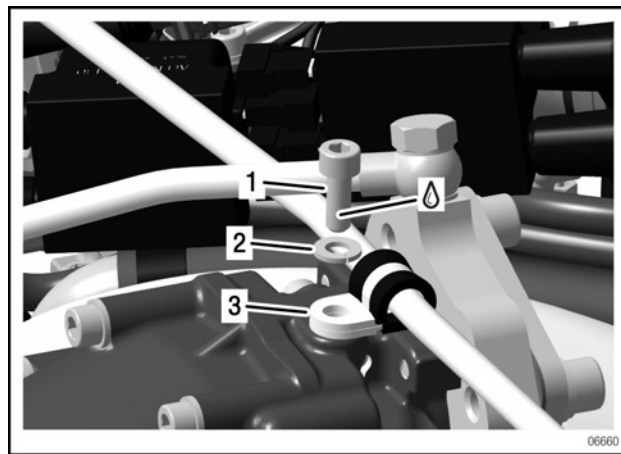


Figure 12.66

- 1 Allen screw M6x16
- 2 Lock washer A6
- 3 Cable clamp 8/M6

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**THROTTLE BODY ASSY. —  
 INSTALLATION**

Step	Procedure
1	Install the new rubber gasket ring.

**NOTE**

*The rubber gasket ring is installed dry!*

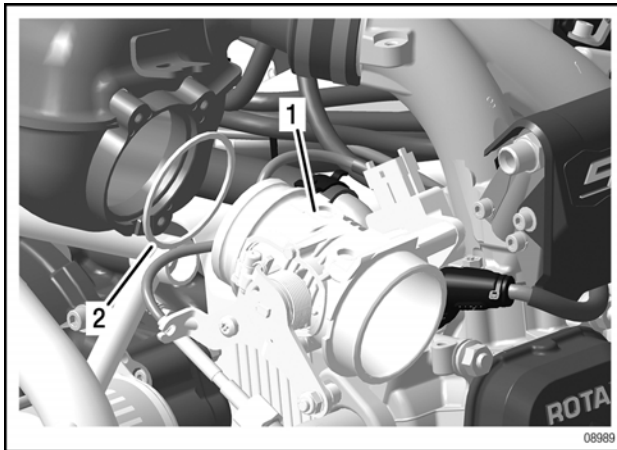


Figure 12.67

- 1 Throttle body assy.      2 Rubber gasket ring

Step	Procedure
2	Push the throttle body into the airbox. Secure 3 hex./torx – flange screw M6x16 and separating plate with LOCTITE 243. Tightening torque 10 Nm (89 in. lb.)

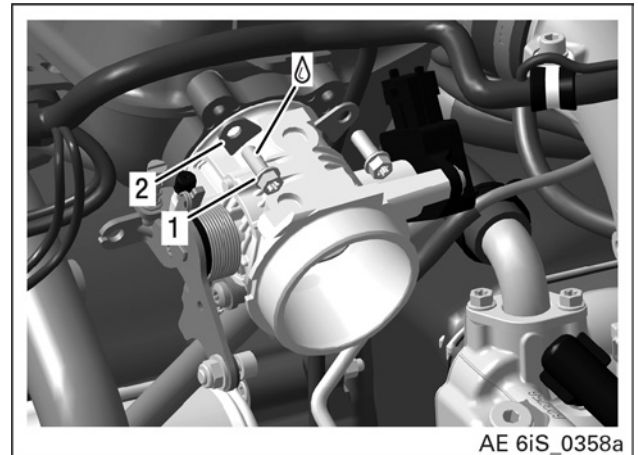


Figure 12.68

- 1 Hex./torx– flange screw M6x16      2 Separating plate

Step	Procedure
3	Install the air intake hose on the throttle body assy. with a clamp.
4	Connect the Throttle Position Sensor (TPS), see Chapter 76–50–00 <a href="#">Wiring Harness - installation</a> .

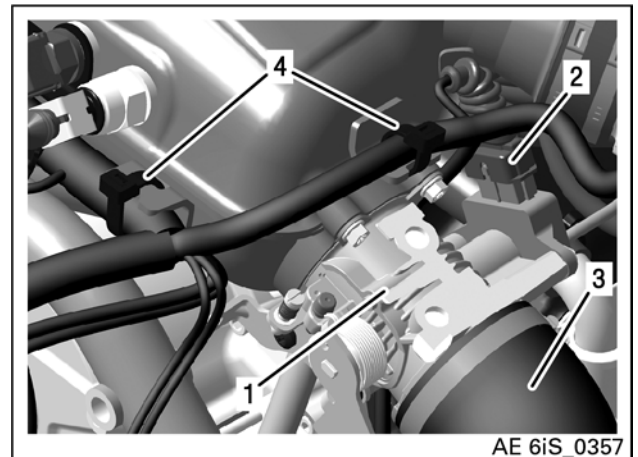


Figure 12.69

- 1 Throttle body assy.      2 Connector (TPS)  
 3 Air intake hose      4 Cable tie



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## POP OFF VALVE — INSTALLATION

### Preparation

- Install 2 Boost Pressure Sensors (BPS) into the reduction sleeve, see Chapter 76-70-00 section [Boost pressure sensor \(BPS\) — installation](#).

#### NOTICE

**1-ear clamps may only be used once!**

Step	Procedure
1	Install the reduction sleeve into the air intake hose and the hose to intercooler and fix with clamps.
2	Install control hose 600 mm (23.6 in.) and fix with clamp 10.3–12.8.


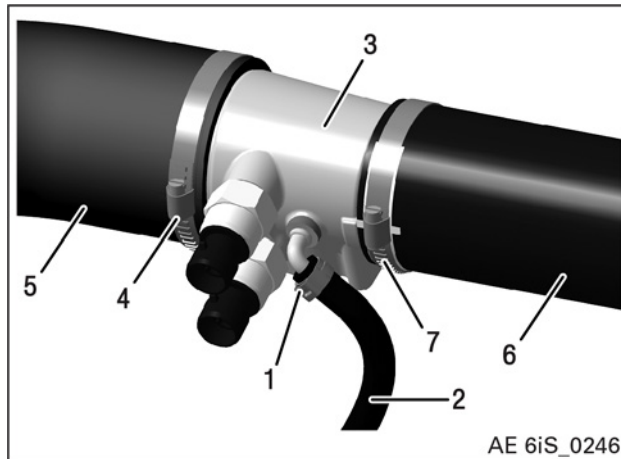


Figure 12.70

- |                    |                       |
|--------------------|-----------------------|
| 1 Clamp 10.3–12.8  | 2 Control hose        |
| 3 Reduction sleeve | 4 Clamp 50-70         |
| 5 Air intake hose  | 6 Hose to intercooler |
| 7 Clamp 40-60      |                       |

Step	Procedure
3	Install valve housing with new O-ring 38x2.4 on reduction sleeve using 4 M5x16 Allen screws. Tightening torque 5 Nm (44 in. lb).

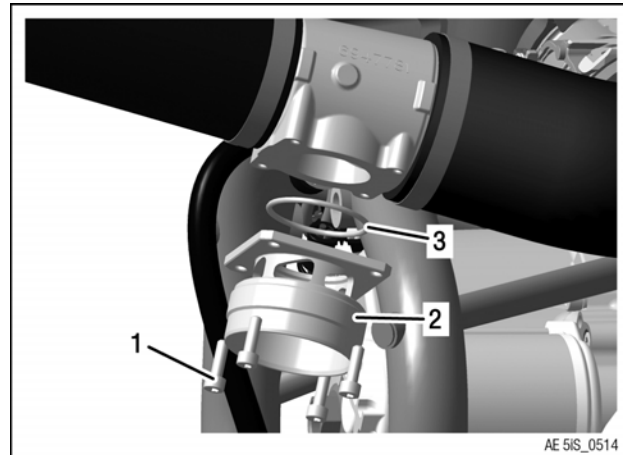

- |                     |                 |
|---------------------|-----------------|
| 1 M5x16 Allen screw | 2 Valve housing |
| 3 O-ring 38x2.4     |                 |

Figure 12.71

Step	Procedure
4	Insert new O-ring 54x2 into the O-ring groove of the valve cover assy.

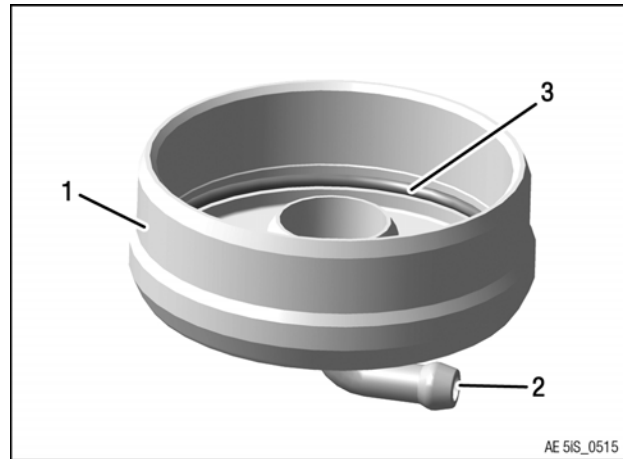


Figure 12.72

- |                     |               |
|---------------------|---------------|
| 1 Valve cover assy. | 2 Hose nipple |
| 3 O-ring 54x2       |               |

Step	Procedure
5	Insert valve piston with lip seal and compression spring. Install the valve cover.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTE

If the hose nipple of the valve cover points to the wrong direction, the valve housing can be unscrewed and displaced by 90°.

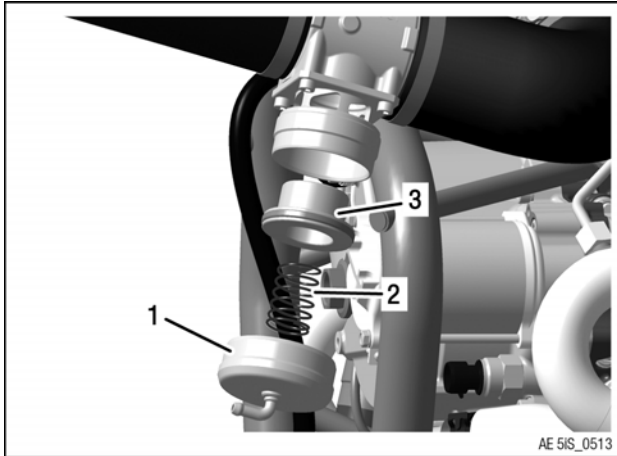


Figure 12.73

- 1 Valve cover
- 2 Compression spring
- 3 Valve piston with lip seal

Step	Procedure
6	Install control hose (600 mm / 23.6 in.) and fix with clamp 10.3–12.8.
7	Connect the Boost pressure sensor (BPS), see Chapter 76-50-00 section <a href="#">Boost pressure sensor (BPS) – connection</a> .

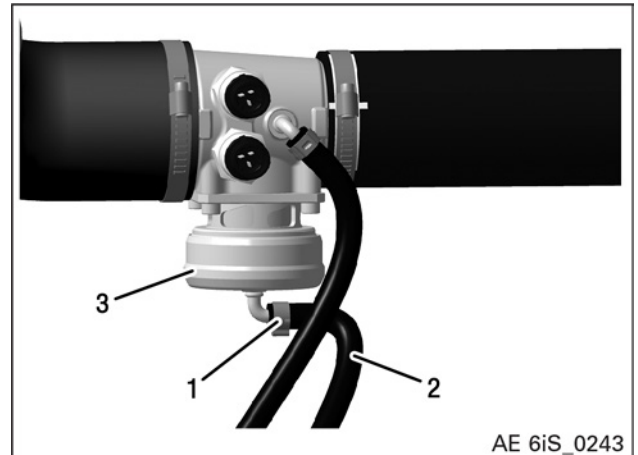


Figure 12.74

- 1 Clamp 10.3–12.8
- 2 Control hose
- 3 Valve cover assy.

## PRESSURE CONTROL VALVE HOSES - INSTALLATION

**NOTICE**  
1-ear clamps may only be used once!

Step	Procedure
1	If necessary, install control hose 600 mm (23.6 in.) with a new clamp 10.3–12.8 on the turbo charger (waste gate).
2	Install new clamps 10.3-12.8 on the control hoses 600 mm (23.6 in.).
3	Push the control hoses on the Pressure Control Valve (PCV).  <b>NOTE</b> <i>Attention to the correct connection of the hoses.</i>
4	Fix the control hoses with new clamps 10.3 - 12.8.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

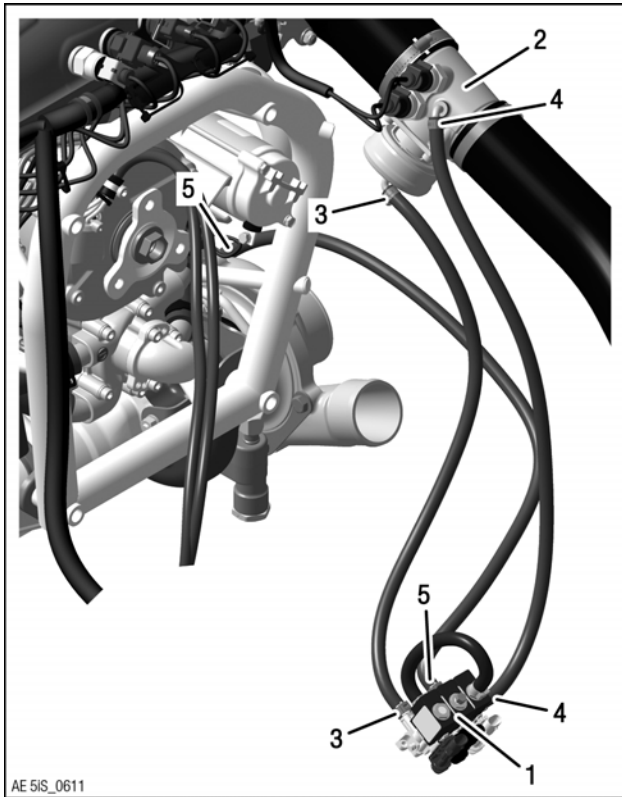


Figure 12.75

- |                                      |                                  |
|--------------------------------------|----------------------------------|
| 1 Control valve (PCV)                | 2 Pop-off valve                  |
| 3 Connection valve cover assy. – PCV | 4 Connection pop-off valve – PCV |
| 5 Connection turbo-charger – PCV     |                                  |



Install Pressure Control Valve (PCV). Follow the instructions of the aircraft manufacturer.

Step	Procedure
5	Connect the Pressure Control Valve (PCV), see Chapter 76–50-00 section <a href="#">Pressure control valve (PCV)–connection</a> .

## FINISHING WORK

- Install double ignition coil, see 74-20-00, section
- Install Knock sensor (KNOCK) and Crankshaft Position Sensor (CPS\_1/2) into the connector bracket, see [Chapter 76-70-00 section Sensors and actuators](#).
- Connect the Manifold Air Pressure Sensors (MAPS) and Manifold Air Temperature Sensors (MATS) see, [Chapter 76-50-00 Wiring harness](#)
- Tighten the wiring harness on all fastenings (cable ties, retaining fixtures) of the engine, see [Chapter 76-50-00 Wiring harness](#)



Install the Bowden cable on throttle body assy. Follow the instructions of the aircraft manufacturer.



Install the feed line to fuel rail 1/3 and the return line to fuel rail 2/4 and fuel pressure regulator. Follow the instructions of the aircraft manufacturer.



Fill with operating fluids or check filling levels. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

## NOTE

*After engine test run, check tightening torque from intake manifold attachment screws again.*



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


**Chapter: 74-00-00**  
**IGNITION UNIT**

**TOPICS IN THIS CHAPTER**

<b>System description .....</b>	<b>6</b>
Firing order .....	6
Internal generators A and B.....	6
Safety instruction.....	6
Connections for display systems.....	6
Knock sensor .....	6

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

916 i TYPE A

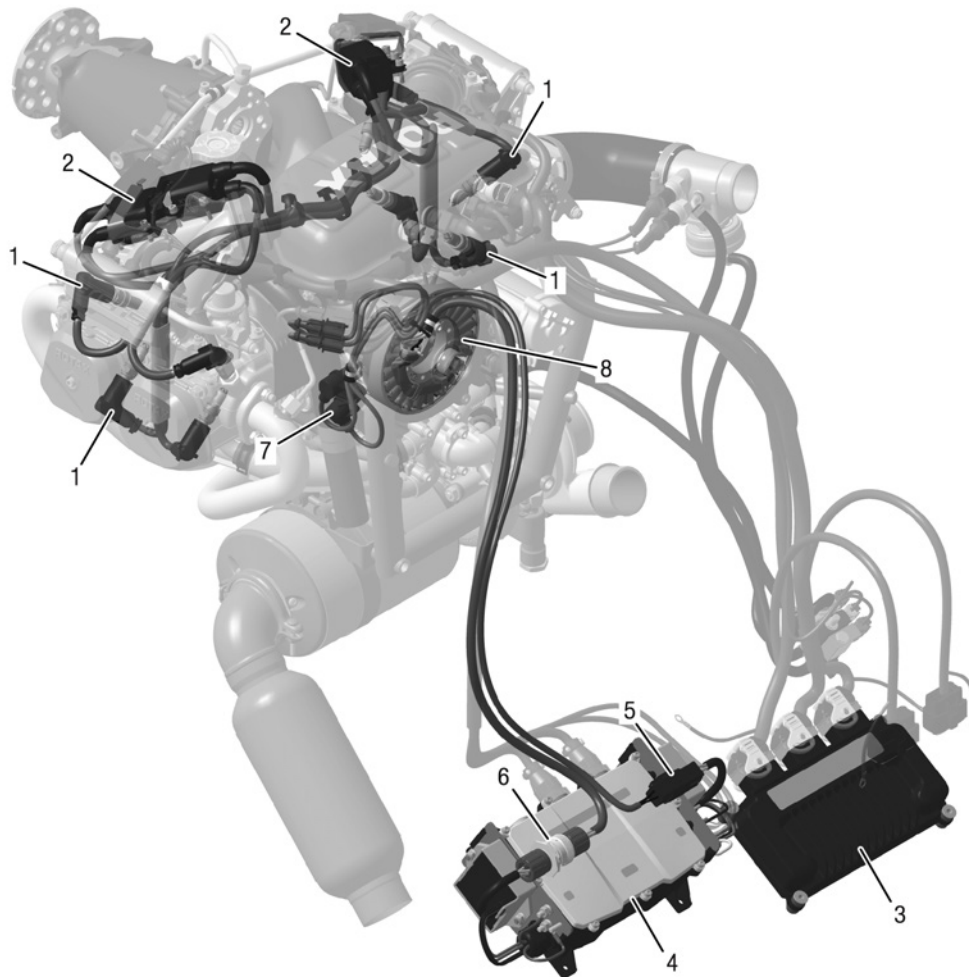


AE 6iS\_0247

Figure 13.1: Ignition unit

- |  |                         |
|--|-------------------------|
| 1 Spark plug connector                 | 2 Double ignition coil  |
| 3 Engine control unit (ECU)            | 4 Fuse box assy.        |
| 5 Connector generator A                | 6 Connector generator B |
| 7 Crankshaft Position Sensor (CPS 1/2) | 8 Generator A and B     |

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE C24

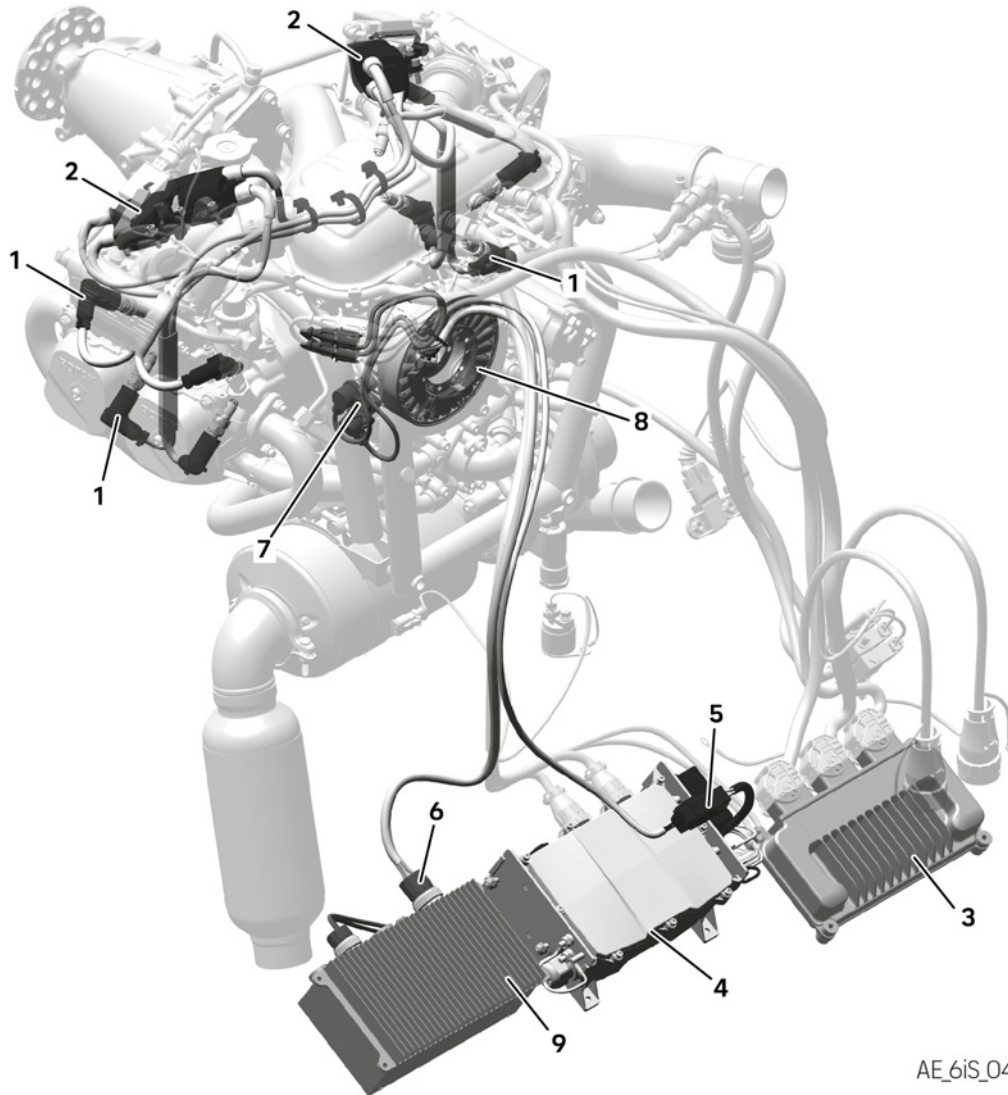

AE\_6iS\_0442

Figure 13.2: Ignition unit

- |  |                         |
|--|-------------------------|
| 1 Spark plug connector                 | 2 Double ignition coil  |
| 3 Engine control unit (ECU)            | 4 Fuse box assy.        |
| 5 Connector generator A                | 6 Connector generator B |
| 7 Crankshaft Position Sensor (CPS 1/2) | 8 Generator A and B     |
| 9 24 V AC-DC converter                 |                         |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**916 i TYPE A**

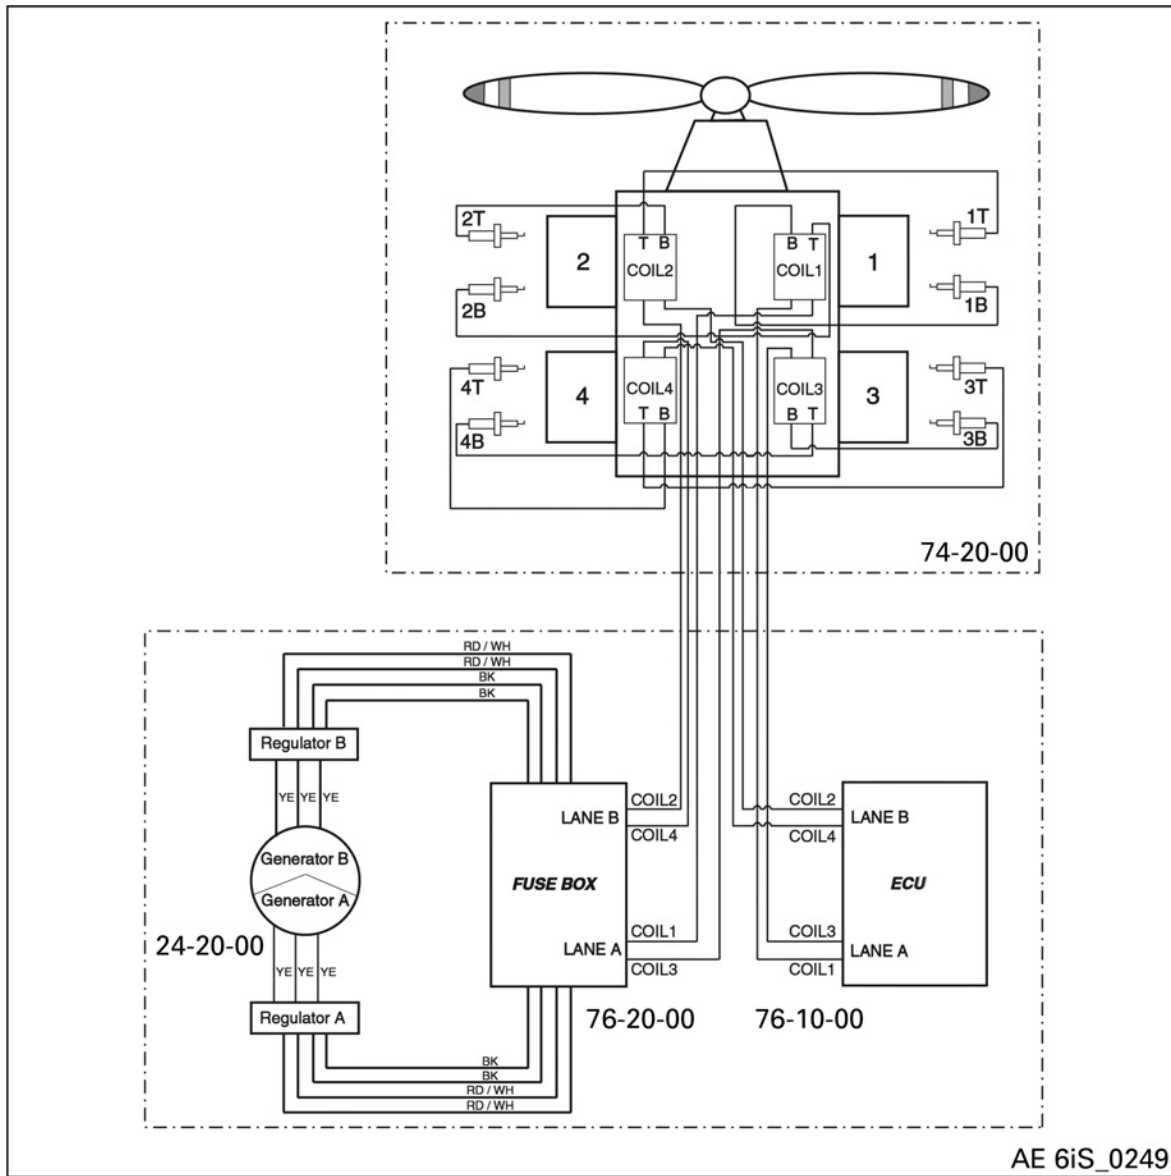


Figure 13.3: Layout plan allocation (cylinder/LANE)

# BRP-Rotax MAINTENANCE MANUAL HEAVY

916 i TYPE C24

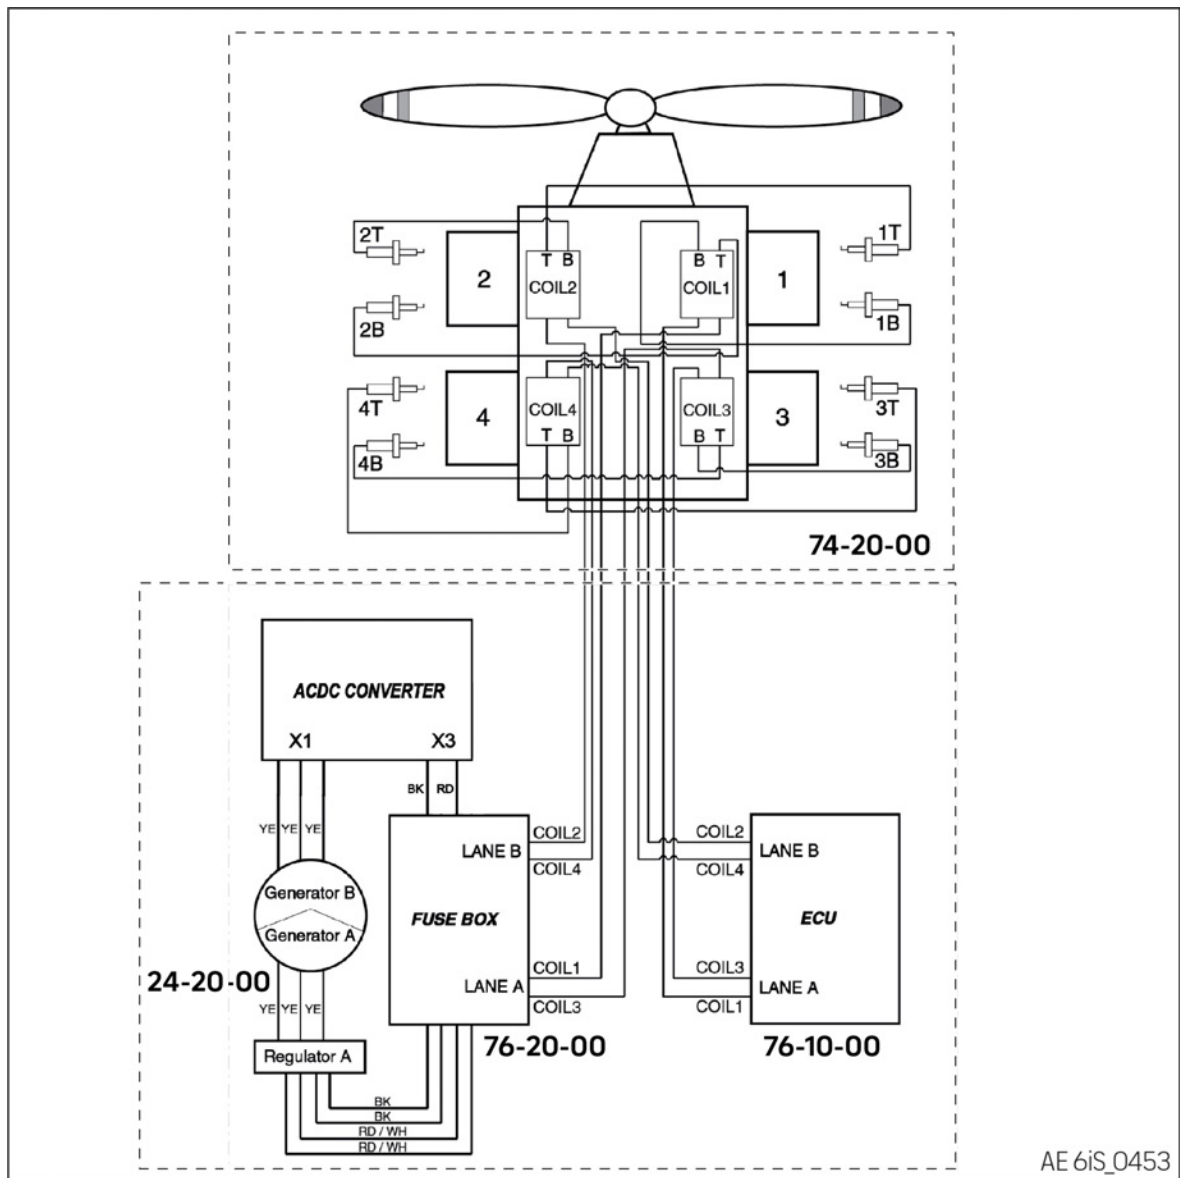


Figure 13.4: Layout plan allocation (cylinder/LANE)

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### SYSTEM DESCRIPTION

The ignition unit operates with four double ignition coils with double ignition. If the LANE selector switches are both ON, the active LANE controls all four double ignition coils which are connected to the eight spark plugs. In normal Dual LANE Mode (both ON), both spark plugs ignite each cylinder at the same time. In LANE A or LANE B Mode, only one spark plug ignites per cylinder (one LANE switched OFF).

The ignition unit does not require an external power supply.

### FIRING ORDER

1-4-2-3

### INTERNAL GENERATORS A AND B

#### 916 i TYPE A

In normal operation generator A is supplying the double ignition coils via the fuse box. Generator B charges the battery via the fuse box.

When engine is started at first generator B supplies the double ignition coils. If throttle is opened and engine revs more than 2700 rpm for a few seconds, the fuse box switches to generator A to supply the double ignition coils and generator B charges the battery. If more electric energy for the non-engine consumers of the aircraft is needed, an external generator (optional available) can be used.

#### 916 i TYPE C24

This device is designed to have two power outputs. One output provides power to the aircraft and has a voltage level of 28.9 V (nominal voltage of the system: 24 V), called 28 V DC Output Aircraft. It is the aircraft installer's decision for what he uses this output.

The other output provides power to the EMS with a voltage level of 14.4 V (nominal voltage of the system: 12 V), called 14 V DC Output EMS. The EMS of the ROTAX® 916 i-Series of engines consists of all necessary electronic parts to operate and control the engine, like ECU, ignition, injection, sensor and actuators. If the engine is not running, the generator produces no output voltage thus the EMS cannot be

supplied with power. For starting the engine, a powered EMS system is required. In such a situation the only power source that is available is a battery/accumulator with a nominal voltage of 24 V.

Therefore, the AC-DC Converter 28 V has an additionally input, called 24 V DC Input, that allows a 24 V DC to 14 V DC conversion. The EMS can be powered during the startup procedure and after a proper engine start the system is self-sustaining. This means power is provided via the 3 Phase Input by the help of a generator that is driven by the piston engine.

### SAFETY INSTRUCTION

#### ⚠ WARNING

Follow the general safety instructions during all work on the engine and the assemblies around it. See section Introduction.

### CONNECTIONS FOR DISPLAY SYSTEMS

#### NOTICE

Follow the instructions in the Installation Manual (IM) for respective engine type regarding connections for instrumentation.

### KNOCK SENSOR

The knock sensor is situated directly on the engine block and helps to prevent any uncontrolled combustion (engine knocking).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


**Chapter: 74-20-00**  
**DISTRIBUTION**

**TOPICS IN THIS CHAPTER**

<b>Service products .....</b>	<b>4</b>
<b>System description .....</b>	<b>5</b>
Internal Generators.....	6
Double ignition coils.....	6
Ignition cable assy. ....	6
Spark plugs.....	6
Wiring harness .....	6
Fuse box.....	6
Crankshaft position sensor (CPS).....	6
AC-DC Converter .....	6
Safety information .....	6
<b>Removal .....</b>	<b>7</b>
Internal generator — removal .....	7
Spark plug connector and ignition cable assy. — removal .....	7
Double ignition coil — removal .....	7
Spark plug — removal .....	10
Knock sensor — removal .....	10
<b>Inspection .....</b>	<b>11</b>
Double ignition coil assy. and ignition cable assy. — inspection .....	11
Spark plug connector — inspection .....	12
Spark plug — inspection .....	12
Knock sensor — inspection .....	12
<b>Installation.....</b>	<b>13</b>
Knock sensor — installation .....	13
Spark plug — installation.....	13
Spark plug connector and ignition cable assy. — installation .....	13
Double ignition coil — installation.....	14
Internal generator — installation .....	16
Finishing work.....	16

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE A

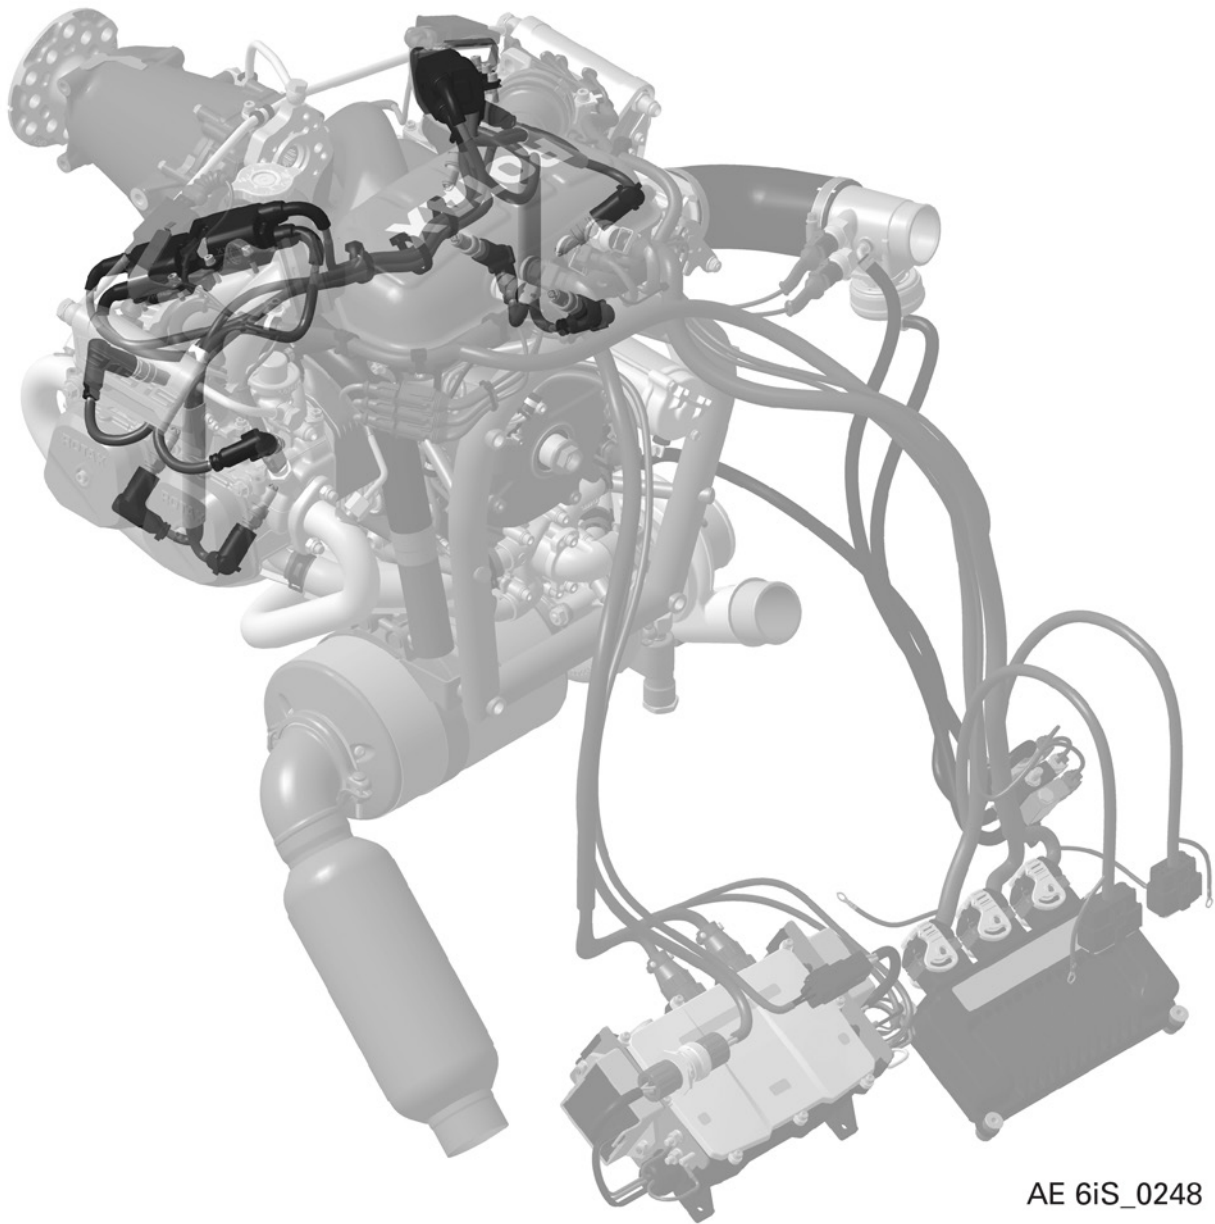


AE 6iS\_0248

Figure 14.1



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE C24

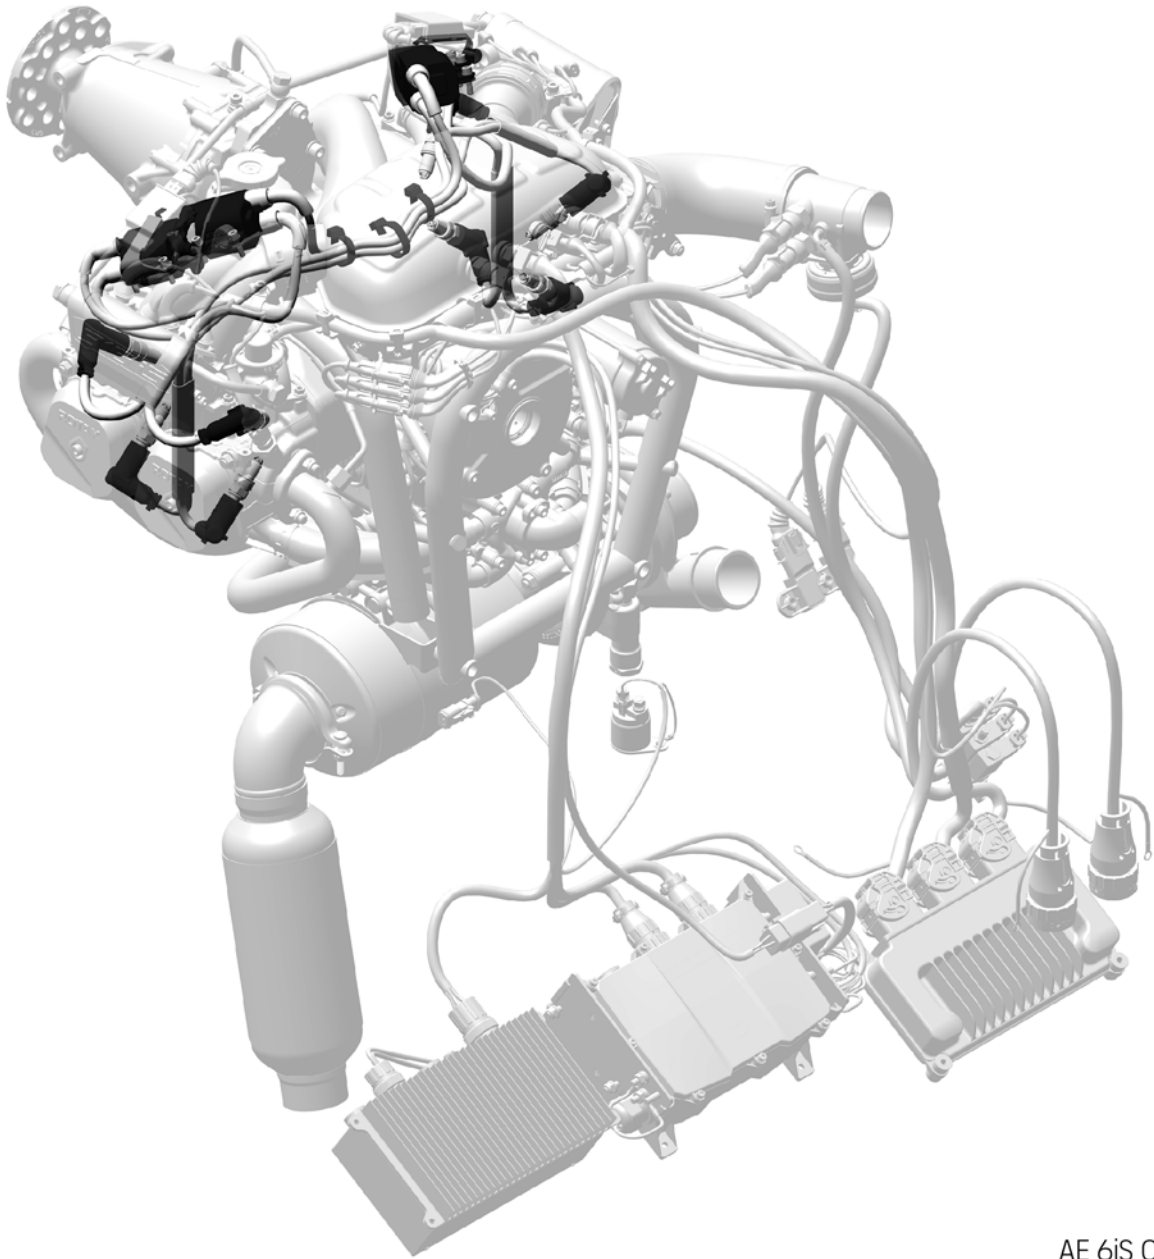

AE\_6iS\_0459

Figure 14.2

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SERVICE PRODUCTS**

Description	Part number
Silicone heat compound Wacker P12	897186

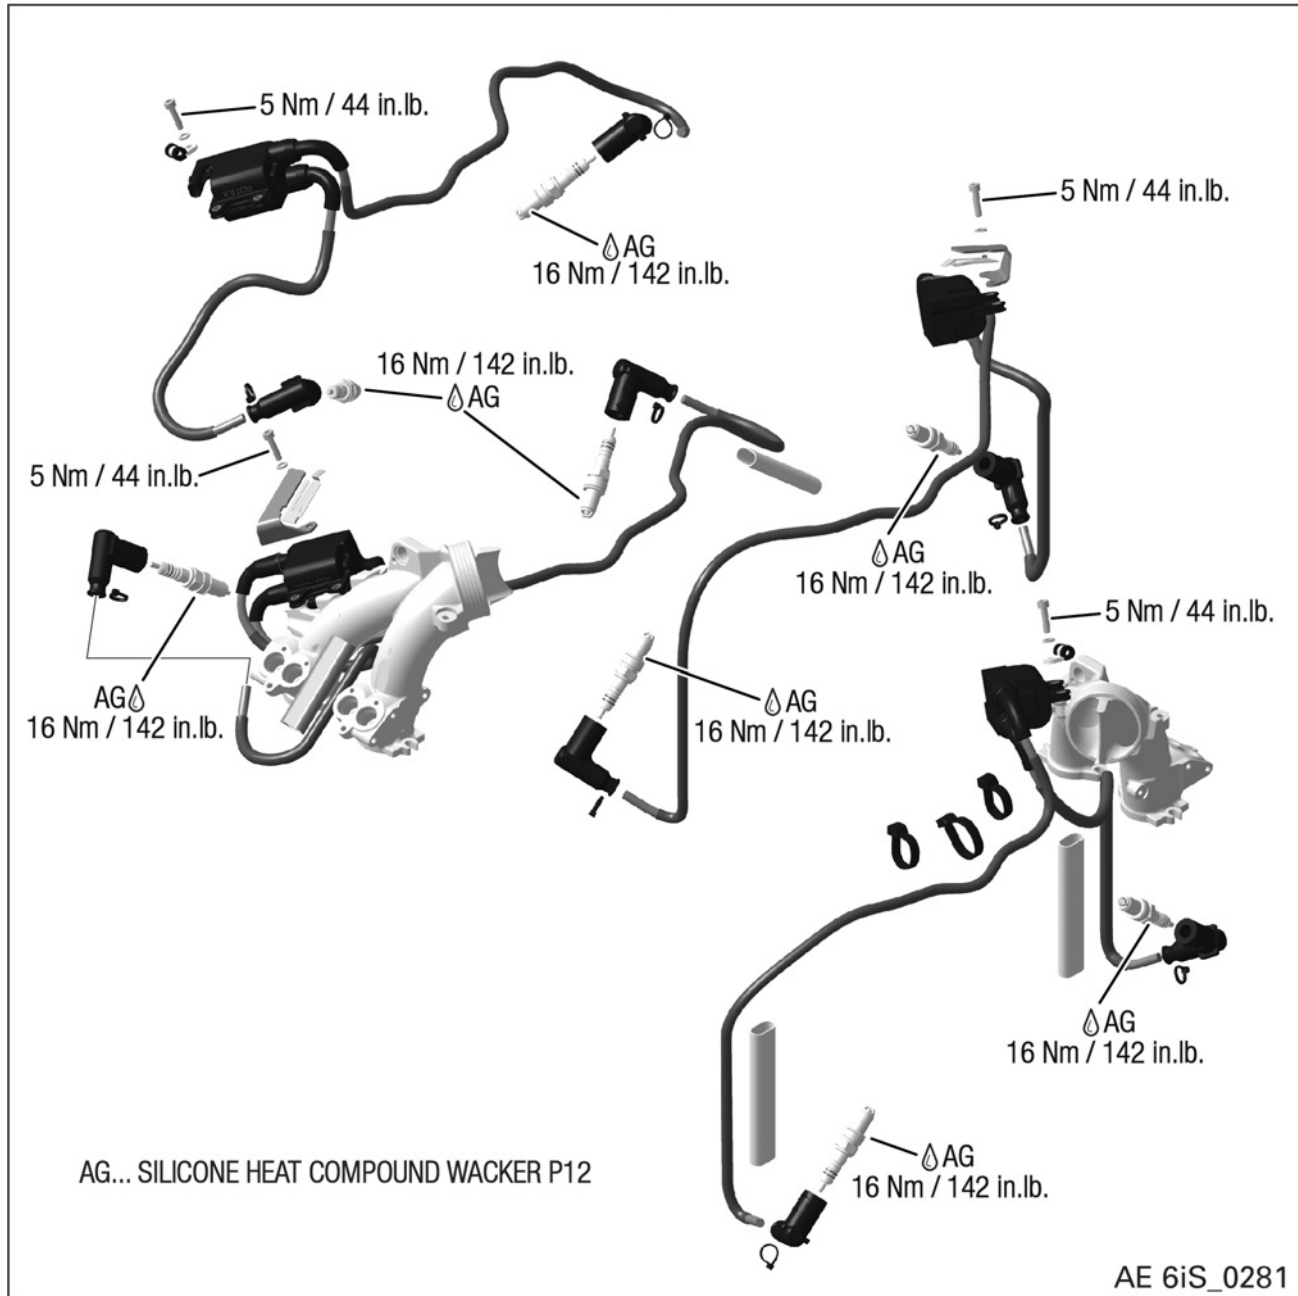


Figure 14.3: Service Products

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SYSTEM DESCRIPTION

**916 i TYPE A**

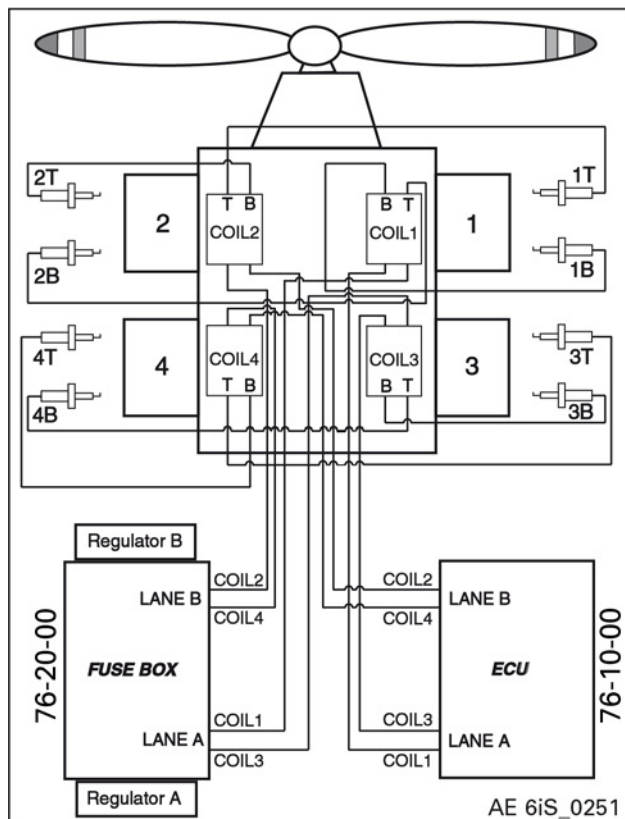


Figure 14.4: Layout plan allocation

**916 i TYPE C24**

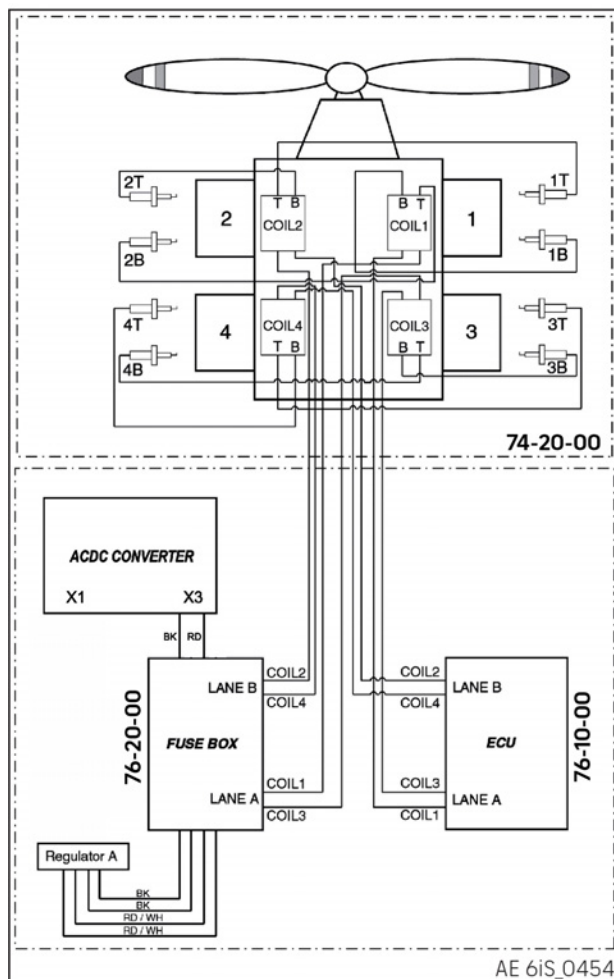


Figure 14.5: Layout plan allocation

The ignition voltage is distributed directly to the cylinders by stationary, electronically controlled components.

The ignition voltage is generated by four double ignition coils which are situated above the spark plugs. The ignition unit is synchronised by the signals of the Crankshaft Position Sensors (CPS) (see [Chapter 76-70-00 Sensors and actuators](#)), which are sent to the Engine Control Unit (ECU) (see [Chapter 76-10-00 Engine Control Unit \(ECU\)](#)). To determine the optimal ignition point, the ECU uses its saved ignition map to

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

adapt to the different operating states, taking into account the signals of the knock sensor.

### INTERNAL GENERATORS

See [Chapter 24-20-00](#) Internal generator.

### DOUBLE IGNITION COILS

The four double ignition coils are fastened to the intake manifolds.

#### NOTE

*The connections are labelled according to the closest cylinder designation.*

### IGNITION CABLE ASSY.

The high voltage ignition cable consist of copper alloys for applications at high ignition temperatures.

#### Protection hose identification

The protection hoses of the ignition cables are labelled with a number/letter combination on the spark plug connector side (1 T, 1 B, 2 T, 2 B, 3 T, 3 B, 4 T, 4B).

The label marks the position of the ignition cable on the ignition coil.

1, 2, 3 and 4 = cylinder  
T, B = Top, Bottom

e.g.: 3 T = ignition coil for cyl. 3 at the top connector.

#### NOTE

*The cables are only available as complete set (ignition cable, protection hose, ignition coil side connector).*

### SPARK PLUGS

The spark plugs are not shielded but use a resistance type suppressor to prevent interference. The connecting bolt for the high-voltage ignition cables complies with ISO/DIN standard guidelines.

### WIRING HARNESS

All the electrical components necessary for the engine are connected to the wiring harness. See [Chapter 76-50-00 Wiring harness](#).

### FUSE BOX

The fuse box contains the capacitors and all the fuses. See [Chapter 76-20-00 Fuse box](#).

### CRANKSHAFT POSITION SENSOR (CPS)

The crankshaft position sensor sends information to the control unit about the rotation speed and crankshaft position.

### AC-DC CONVERTER

The AC-DC Converter 28 V has its main purpose is to provide electrical power to the aircraft and the EMS at desired voltage levels. The advantage of this system is in the high efficiency, the possibility to have outputs at different voltage levels, reduced stress for the generator because only the demanded power is taken out of it and the full operating range of the generator can be used. At an engine speed of 3500 rpm or more the AC-DC Converter 28 V can provide the maximum power of 800 W.

### SAFETY INFORMATION

#### ⚠ WARNING

##### **Danger of electric shock!**

Switch off the ignition and pull out the starter key!

#### ⚠ WARNING

##### **Danger of death due to high voltage!**

Only carry out work on the ignition unit with the appropriate protective measures and devices!

#### ⚠ WARNING

**Follow the general safety instructions during all work on the engine and the assemblies around it. See Chapter 00-00-00, section Safety Information.**

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

### Preparation

- Switch the ignition key off



Engine cleaning.  
See current Maintenance Manual Line (MML) for the respective engine type.



General visual inspection.  
See current Maintenance Manual Line (MML) for the respective engine type.

### INTERNAL GENERATOR — REMOVAL

See [Chapter 24-20-00](#) Internal generator.

### SPARK PLUG CONNECTOR AND IGNITION CABLE ASSY. — REMOVAL

Step	Procedure
1	Remove cable ties.
2	Detach spark plug connector from the spark plug and unscrew the spark plug connector.  <b>NOTE</b> <i>To remove the ignition cables it is only necessary to remove the lower spark plug connectors.</i>
3	Remove ignition cable from double ignition coils if necessary.  <b>NOTE</b> <i>Ignition coil connectors are screwed with the ignition coil plugs.</i>

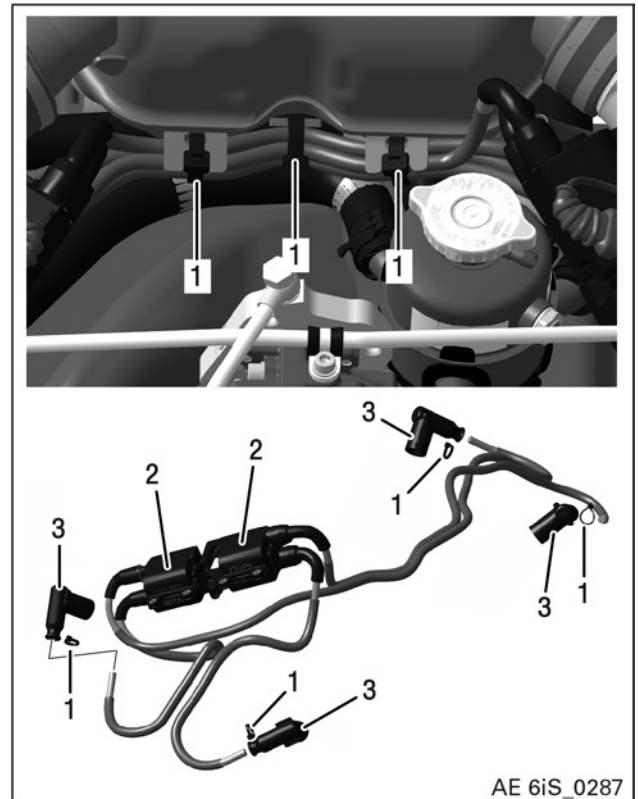


Figure 14.6

- 1 Cable ties                      2 Ignition coils with ignition cable  
3 Spark plug connector

### DOUBLE IGNITION COIL – REMOVAL

Step	Procedure
1	Remove the cable clamps with Allen screws and washers from the intake manifold, if necessary.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

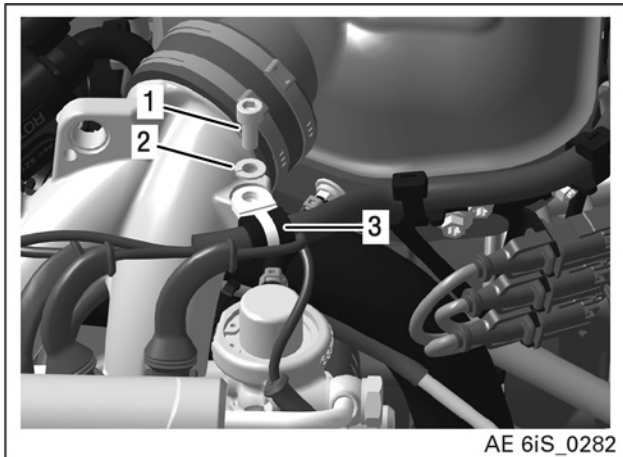


Figure 14.7

- 1 Allen screw
- 2 Washer
- 3 Cable clamp

Step	Procedure
2	Cut the cable tie from the exhaust gas temperature sensor cable (cyl. 1_3) connected with the double ignition coil cable.

**NOTICE**

Do not damage the cables. Always cut cable ties on the side of the support plate facing away from the cables.

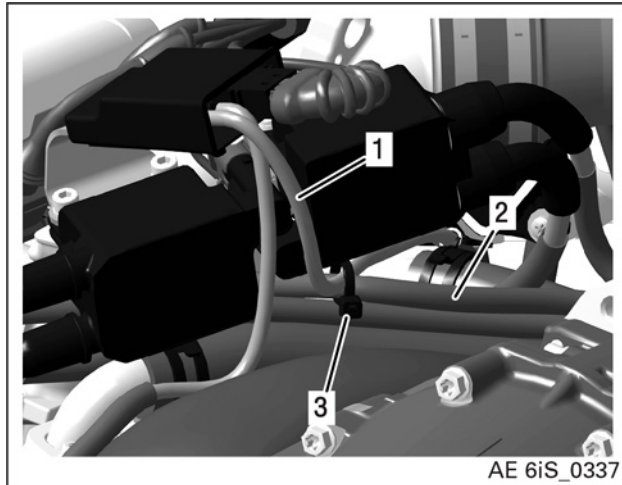


Figure 14.8

- 1 Exhaust gas temperature sensor cable
- 2 Double ignition coil cable
- 3 Cable tie

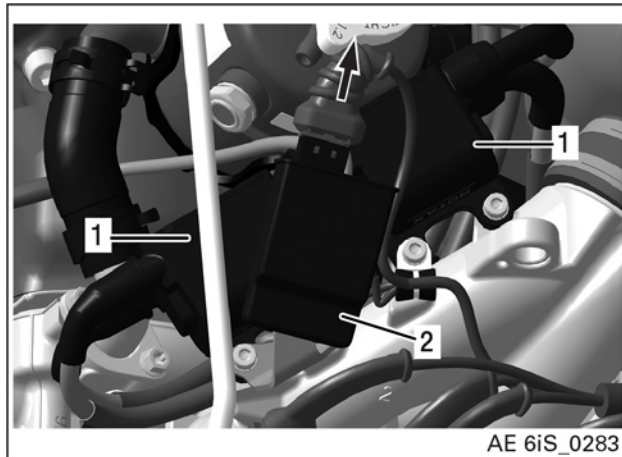


Figure 14.9

- 1 Double ignition coils
- 2 Exhaust Gas Temperature sensor (EGT)



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
3	Unplug the Exhaust Gas Temperature sensor (EGT). See <a href="#">Chapter 76-50-00 Wiring harness</a> .
4	Press spring hook downwards and carefully pull the Exhaust Gas Temperature sensors (cylinders 1 and 2) out of the connector bracket.

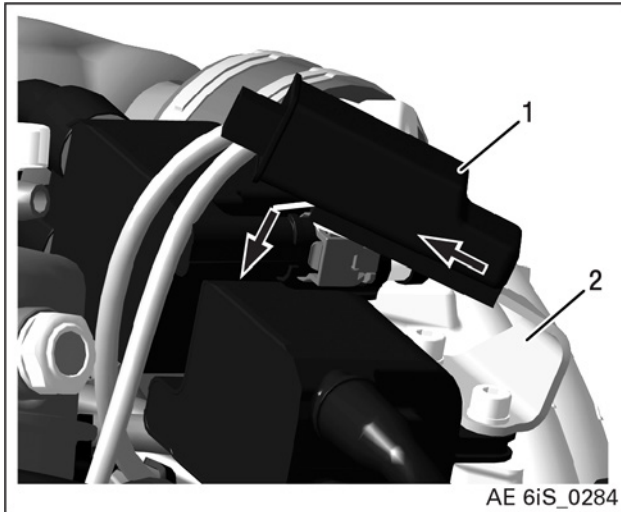


Figure 14.10

- 1 Exhaust Gas Temperature sensor (EGT)    2 Connector bracket

Step	Procedure
5	Loosen Allen screws with lock washers and remove connector bracket and clamp.

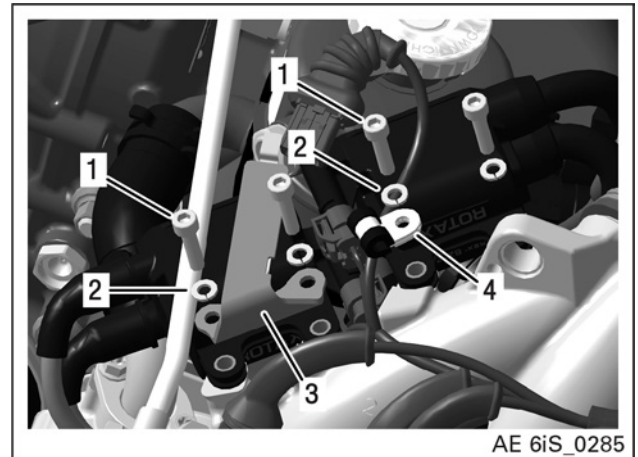


Figure 14.11

- 1 Allen screw                      2 Lock washer  
 3 Connector bracket            4 Clamp

Step	Procedure
6	Unplug the connectors to the double ignition coils. See <a href="#">Chapter 76-50-00 Wiring harness</a> .
7	Remove the double ignition coils

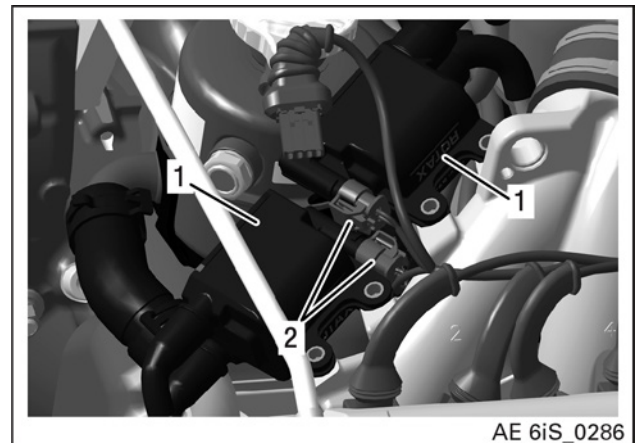


Figure 14.12

- 1 Double ignition coils    2 Ignition coil connector

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SPARK PLUG — REMOVAL



See current Maintenance Manual Line (MML) for the respective engine type. Chapter 12-20-00 Installation of spark plug.

## KNOCK SENSOR — REMOVAL

See [Chapter 76-70-00 Sensors and actuators](#) and [Chapter 76-50-00 Wiring harness](#).

### NOTE

*The knock sensor must only be removed if necessary!*



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSPECTION**

Components can only be replaced, not repaired. If the ignition spark fails, search systematically for the possible cause of the fault. The B.U.D.S. Aircraft diagnostic tool must be used for this.

**DOUBLE IGNITION COIL ASSY. AND IGNITION CABLE ASSY. – INSPECTION**

**Preparation**



General visual inspection.  
 See current Maintenance Manual Line (MML) for the respective engine type.

- Carry out a voltage and resistance test. See [Chapter 76-70-00 Sensors and actuators](#)
- Carry out continuity test on ignition cable assy. See [Chapter 76-70-00 Sensors and actuators](#)

**NOTICE**

**Cracking and other obvious damage to the ignition cable is not permitted!**  
 If in doubt, always replace the cable and connectors in question.

Step	Procedure
1	Check fastening elements (screws, washers and plug holders) for damage, corrosion and deformation.

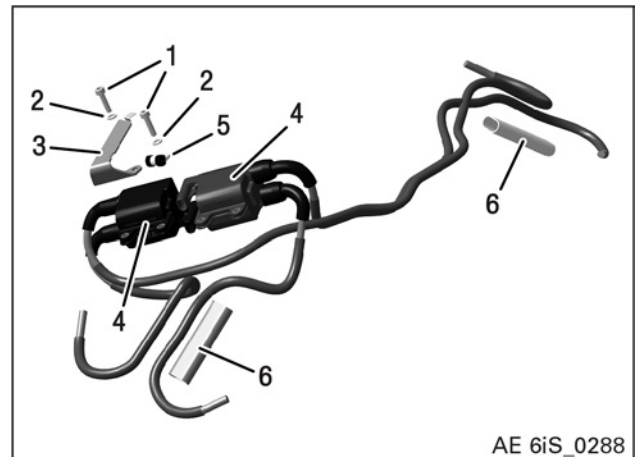


Figure 14.13

- |                     |   |
|---------------------|---|
| 1 Allen screw       | 2 Lock washer                               |
| 3 Connector bracket | 4 Double ignition coils with ignition cable |
| 5 Clamp             | 6 Silicon coated glass-fibre sleeves        |

Step	Procedure
2	Check double ignition coils for damage, corrosion and deformation.
3	Check contact faces: Indentations up to a max. of 0.5 mm (0.0197 in.). Bumps up to a max. of 0.5 mm (0.0197 in.).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

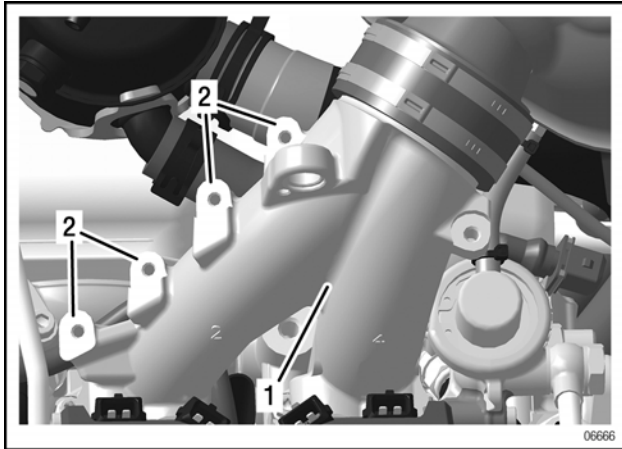


Figure 14.14

1 Intake manifold      2 Contact face

## SPARK PLUG CONNECTOR — INSPECTION

Step	Procedure
1	Check spark plug connector for corrosion and damage.

## SPARK PLUG — INSPECTION



See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12–20–00 section Inspection of spark plugs.

## KNOCK SENSOR — INSPECTION

See [Chapter 76-70-00 Sensors and actuators](#).

## **INSTALLATION**

### **KNOCK SENSOR — INSTALLATION**

See [Chapter 76-70-00 Sensors and actuators](#) and [Chapter 76-50-00 Wiring harness](#).

### **SPARK PLUG — INSTALLATION**



See Maintenance Manual Line (MML) for the respective engine type. Chapter 12-20-00 Installation of spark plug.

### **SPARK PLUG CONNECTOR AND IGNITION CABLE ASSY. — INSTALLATION**

#### NOTICE

**Risk of damage to spark plug connector!**  
 The spark plug connectors must only be installed by hand or using an equivalent tool, that has no pointed or sharp edges.

Step	Procedure
1	Screw the ignition cables into the terminals of the double ignition coil.  <b>NOTE</b> <i>If new double ignition coils are used the ignition cables are already mounted.</i>
2	Pull silicon coated glass-fibre sleeves on the ignition cables Top and Bottom.
3	Route the ignition cable assy. correctly.

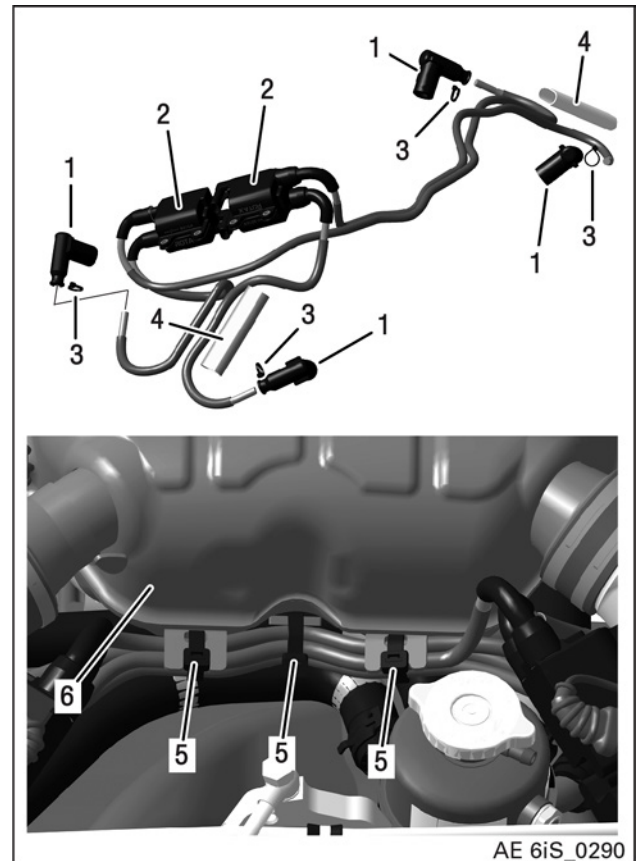


Figure 14.15: TYPICAL

- |   |  |
|---|--|
| 1 Spark plug connector<br>3 Cable ties 94x2.5<br>5 Cable ties 203x7.6 | 2 Double ignition coil with ignition cable assy.<br>4 Coated glass-fibre sleeves<br>6 Airbox |
|---|--|

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

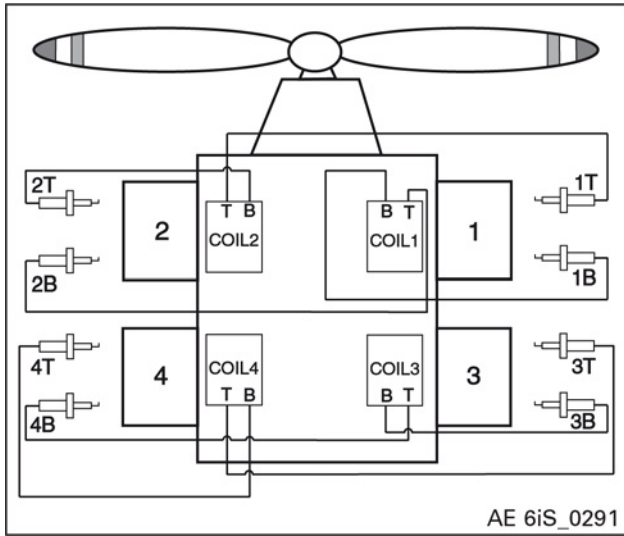


Figure 14.16

Step	Procedure
4	Screw the spark plug connector on the ignition cable assy. and secure it with a cable tie 94x2.5.
5	Put the spark plug connector onto the spark plug.
6	Install double ignition coil, see section .
7	Install ignition cable assy. with cable ties 203x7.6 on the airbox.

**DOUBLE IGNITION COIL —  
 INSTALLATION**

Step	Procedure
1	Plug in the double ignition coil connectors and install cable clamp 8/M5.

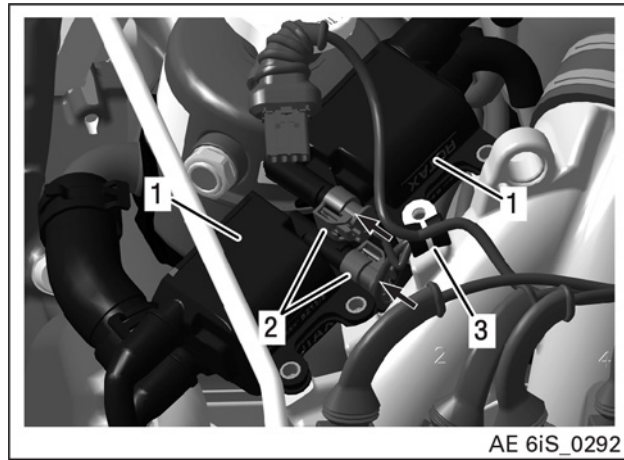


Figure 14.17

- 1 Double ignition coils
- 2 Ignition coil connector
- 3 Cable clamp 8/M5

Step	Procedure
2	Fix the double ignition coils with Allen screws M5x20, connector bracket, cable clamp 8/M5 and lock washers A5. Tightening torque 5 Nm (44 in. lb.).

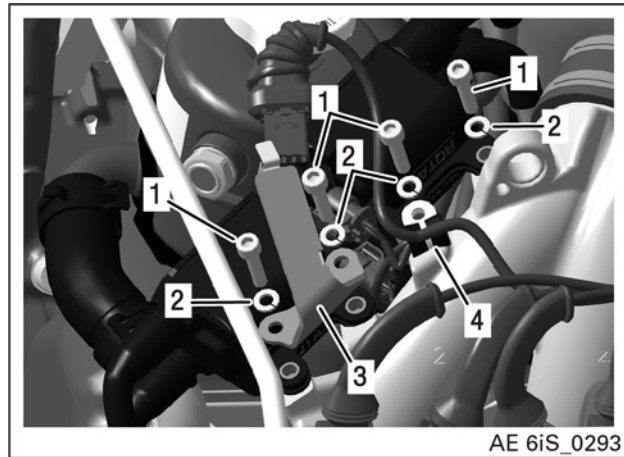


Figure 14.18

- 1 Allen screw M5x20
- 2 Lock washer A5
- 3 Connector bracket
- 4 Cable clamp 8/M5

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
3	Install the exhaust gas temperature sensors (cylinder 1 and cylinder 2) with the spring hook onto the connector bracket and push until it snaps into place.
4	Connect the Exhaust Gas Temperature sensors.  See Chapter 76-50-00, section <a href="#">Exhaust Gas Temperature Sensor (EGT) — connection</a> .

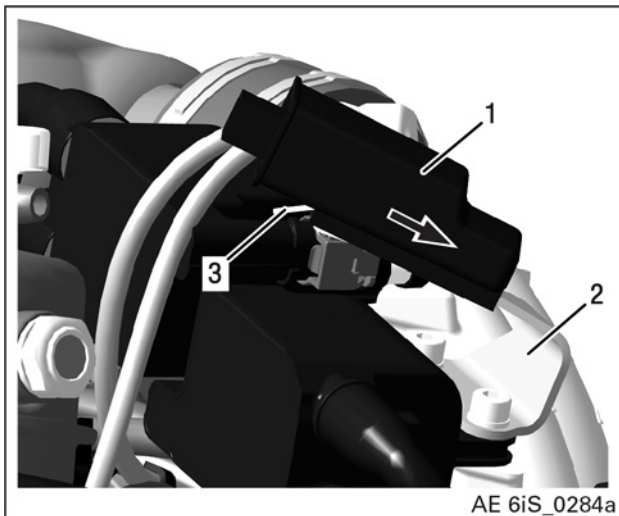


Figure 14.19

- 1 Exhaust Gas Temperature sensor (EGT)
- 2 Connector bracket
- 3 Spring hook

Step	Procedure
5	Secure the cable clamp 12/M6 with an Allen screw M6x14 and washer with LOC-TITE 243. Tightening torque 10 Nm (89 in. lb).

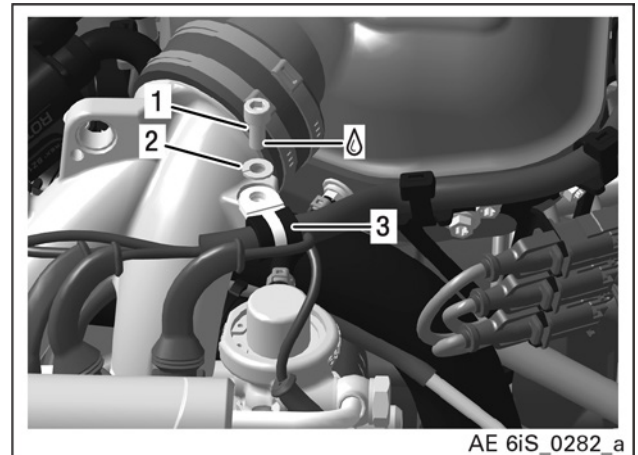


Figure 14.20

- 1 Allen screw M6x14
- 2 Washer A6
- 3 Cable clamp 12/M6

Step	Procedure
6	Install the cable tie on the exhaust gas temperature sensor cable (Cyl. 1_3) connected with the double ignition coil cable.

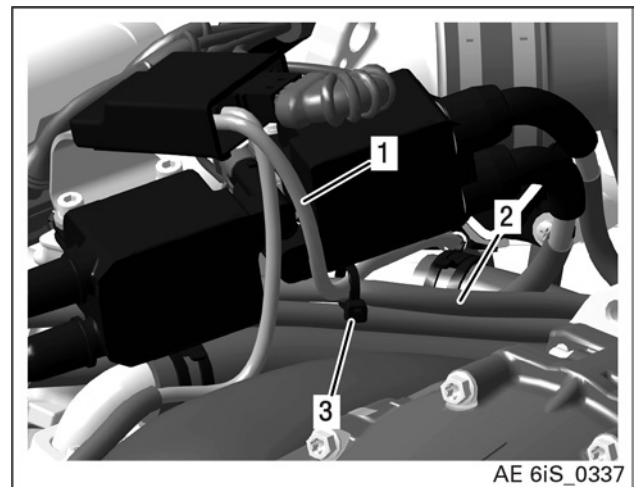


Figure 14.21

- 1 Exhaust gas temperature sensor cable
- 2 Double ignition coil cable
- 3 Cable tie

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INTERNAL GENERATOR —  
INSTALLATION**

See [Chapter 24-20-00](#) Internal generator.

**FINISHING WORK**



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


**Chapter: 75-00-00**  
**COOLING SYSTEM**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>3</b>
<b>Service products</b> .....	<b>4</b>
<b>System description</b> .....	<b>7</b>
Coolant.....	7
Radiator.....	7
Water pump .....	7
Expansion tank .....	7
Overflow bottle .....	7
Safety information .....	7
<b>Connections for display systems</b> .....	<b>8</b>
Coolant Temperature sensor (CTS).....	8
Maintenance .....	8
<b>Removal</b> .....	<b>9</b>
Surrounding assemblies — removal.....	9
Expansion tank with upper form hoses – removal.....	11
Cooling air baffle - removal.....	12
Water pump housing with lower form hoses — removal .....	12
<b>Disassembly</b> .....	<b>15</b>
Ignition housing — disassembly.....	15
Water pump shaft — removal .....	15
Oil seal and rotary seal.....	15
Form hoses — removal.....	16
Water pump housing — disassembly .....	16
<b>Inspection</b> .....	<b>17</b>
Cooling system single parts — inspection.....	17
Axial position of water pump shaft – inspection .....	17
Expansion tank — inspection .....	17
Water pump housing — inspection.....	18
<b>Wear limits</b> .....	<b>19</b>
<b>Assembly</b> .....	<b>20</b>
Ignition housing – assembly .....	20
Water pump housing — assembly.....	21
Form hose – installation .....	22
<b>Installation</b> .....	<b>26</b>
Water pump housing with lower form hoses — installation .....	26
Cooling air baffle – installation .....	28
Expansion tank and form hoses — installation .....	28
Surrounding assemblies — installation.....	29
Finishing work .....	31



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

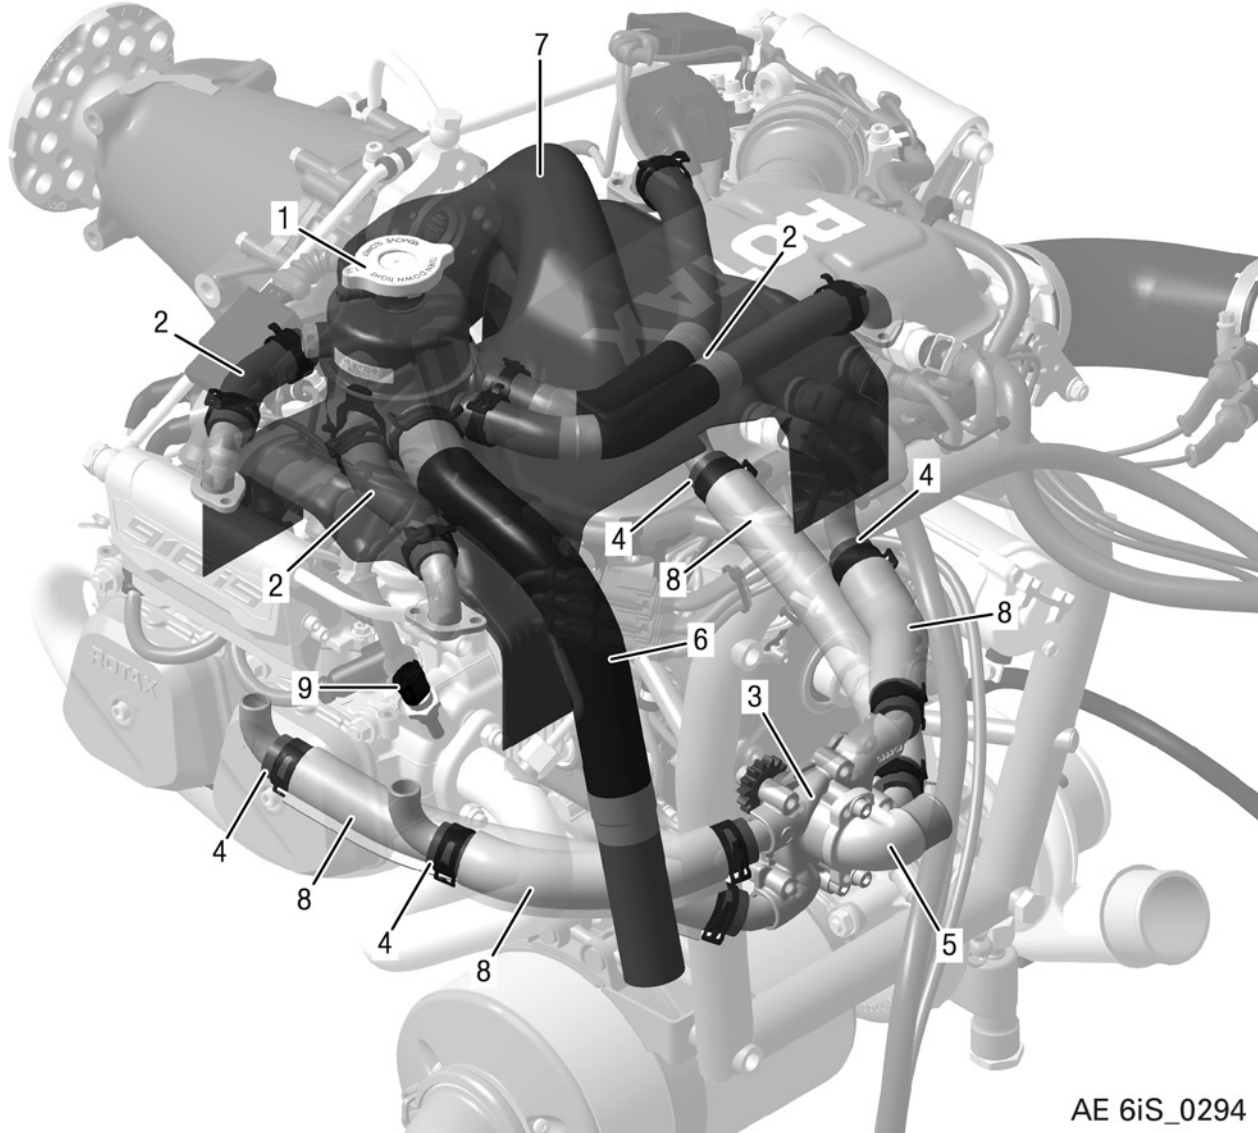

AE 6iS\_0294

Figure 15.1: Position on the engine

- |                        |                     |                                    |
|------------------------|---------------------|------------------------------------|
| 1 Expansion tank assy. | 2 Form hose         | 3 Water pump housing               |
| 4 Water tube           | 5 Water inlet elbow | 6 Form hose                        |
| 7 Cooling air baffle   | 8 Protection tube   | 9 Coolant temperature sensor (CTS) |



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SPECIAL TOOLS**

Description	Part number
Spring clamp plier	877840
Impeller wrench assy.	877295
Insertion jig	876510
Insertion jig	877258
Socket driver T30 ball head	876180
Socket 19x12.5	876130

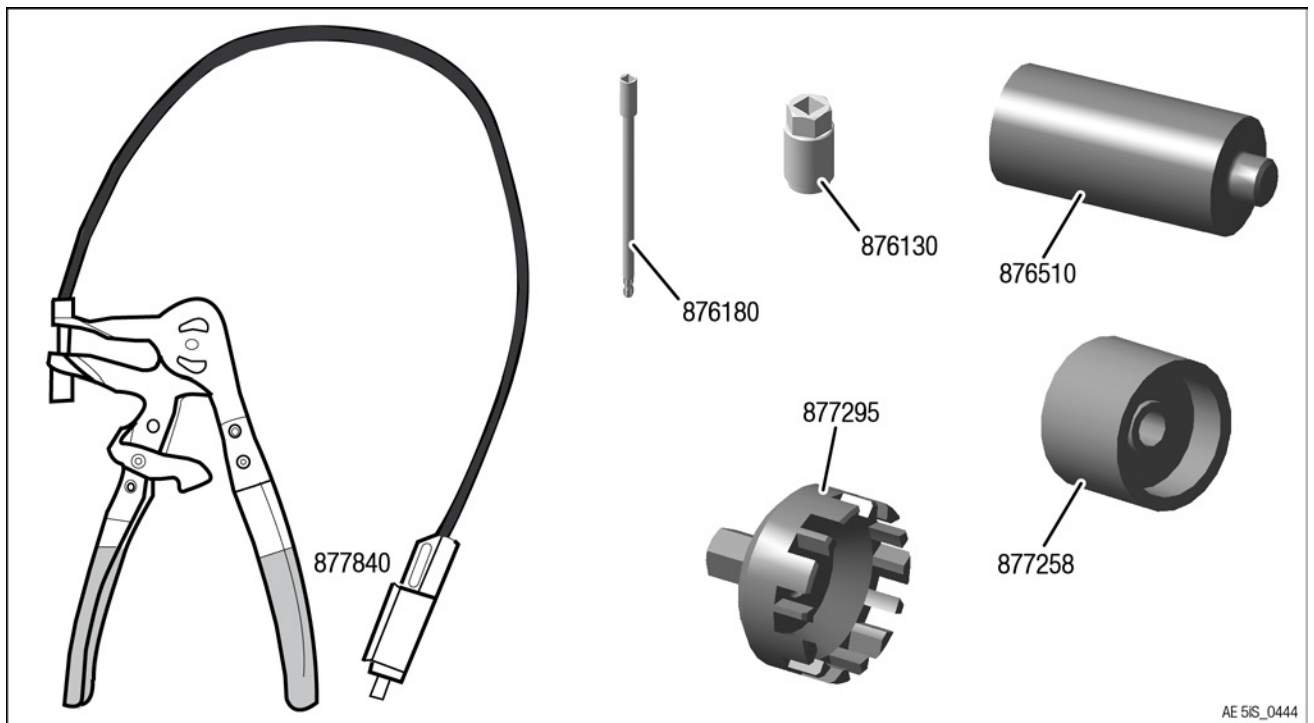


Figure 15.2: Special Tools

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SERVICE PRODUCTS**

<b>Description</b>	<b>Part number</b>
LOCTITE 243	897651
Engine oil	n.a.
LOCTITE 577	899796
LOCTITE 603	899789
LOCTITE 7063	n.a.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

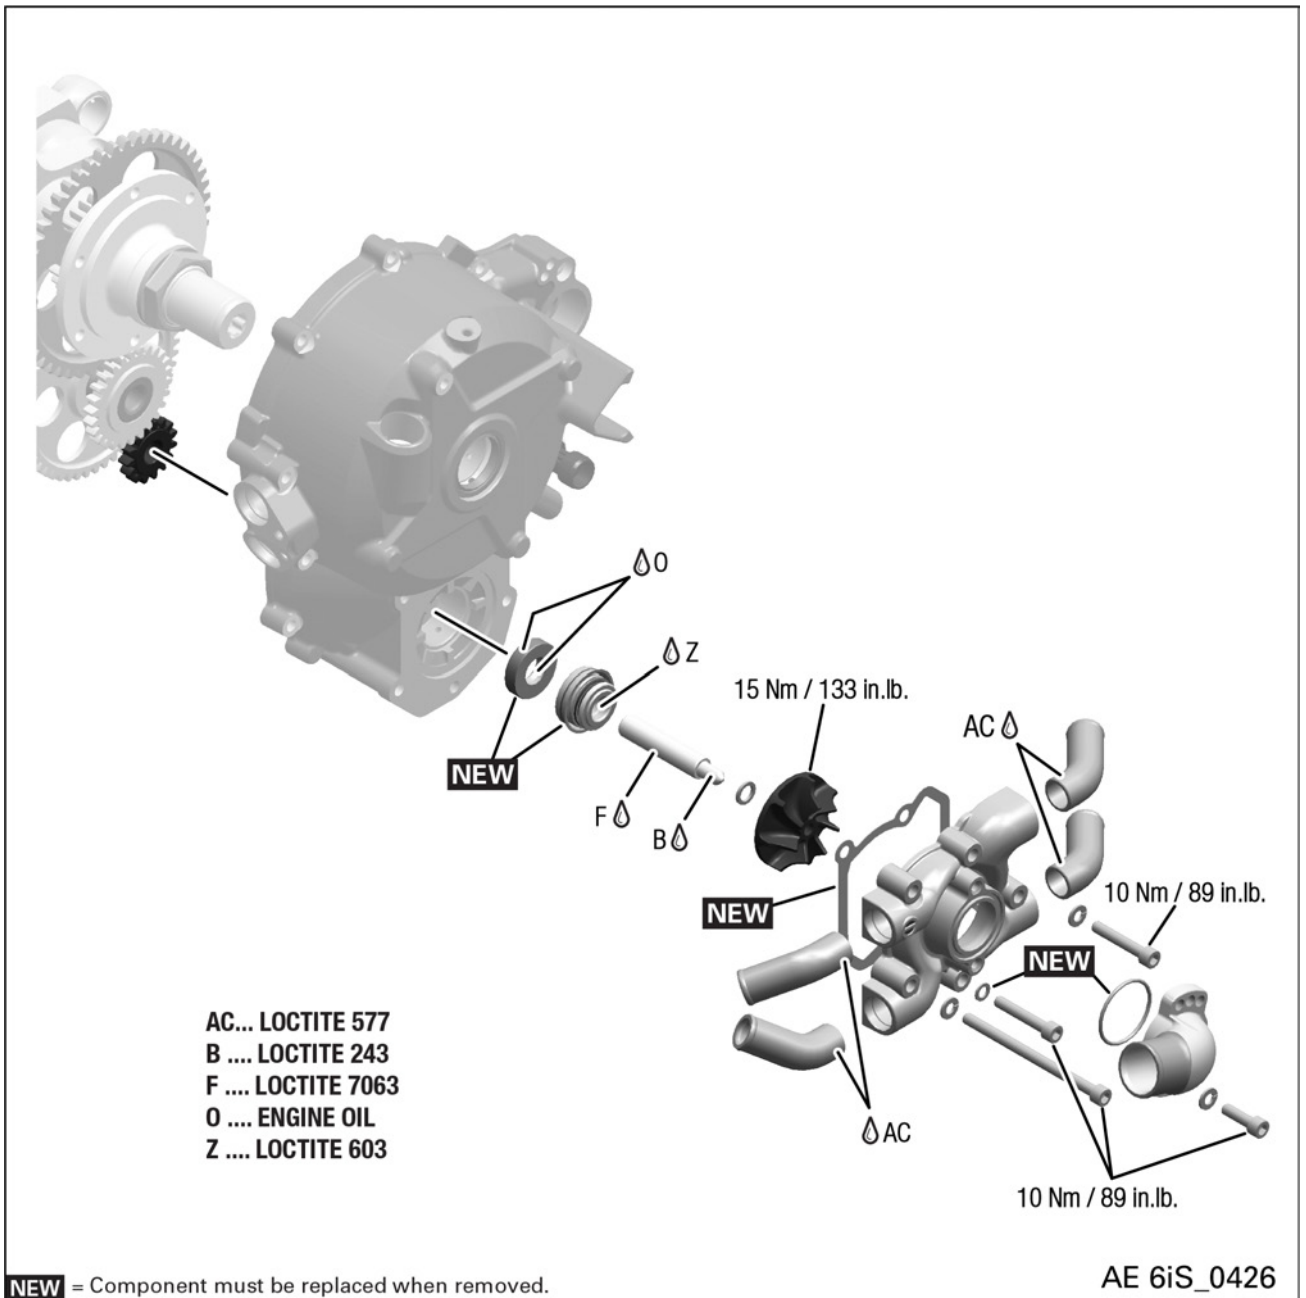


Figure 15.3: Cooling system

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

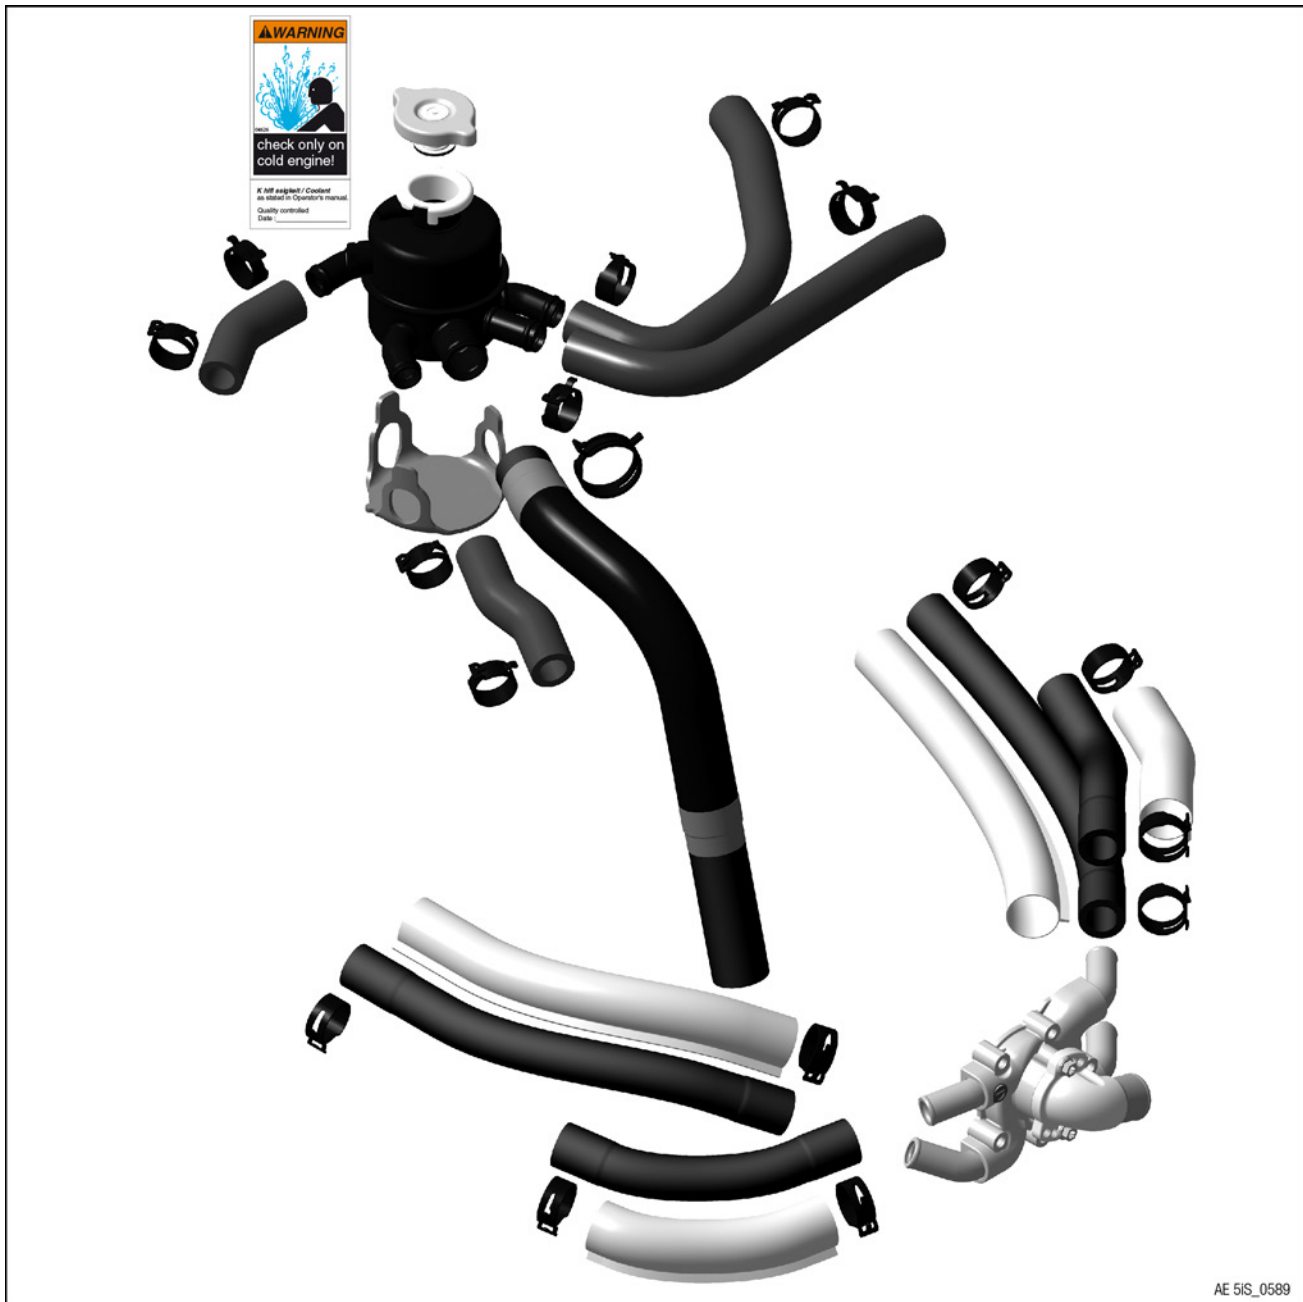


Figure 15.4: Form hoses

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## **SYSTEM DESCRIPTION**

The engine is cooled by liquid-cooled cylinder heads and ram-air-cooled cylinders. The cooling system of the cylinder heads is a closed cooling circuit with an expansion tank and overflow bottle.

### **COOLANT**

The coolant is pumped by a water pump, driven by the camshaft, from the radiator to the individual cylinder heads. The coolant flows out of the top of the cylinder heads and is collected in the expansion tank. Since the standard location of the radiator is below engine level, the expansion tank located on top of the engine allows for coolant expansion.

### **RADIATOR**

See latest Installation Manual (IM) of the respective engine type. For more detailed information on operation, maintenance, safety or flight, consult the documentation provided by the aircraft manufacturer and dealer.

### **WATER PUMP**

The water pump is integrated in the ignition housing. The ignition housing must be removed for repair work on the water pump.

### **EXPANSION TANK**

The expansion tank is closed by a pressure cap (with pressure relief valve and return valve). When the coolant heats up and expands, it opens the pressure relief valve can flow via a thin hose at atmospheric pressure into the transparent overflow bottle. When the coolant cools down, it is sucked back into the cooling circuit.

### **OVERFLOW BOTTLE**

See latest Installation Manual (IM) of the respective engine type. For more detailed information on operation, maintenance, safety or flight, consult the

documentation provided by the aircraft manufacturer and dealer.

## **SAFETY INFORMATION**

### **⚠ WARNING**

#### **Danger of severe burns and scalds!**

Always allow the engine to cool down to ambient temperature before starting any work. The radiator cap on the expansion tank must only be opened when the engine has cooled down!

Ensure that the engine is in the horizontal position!

### **ENVIRONMENTAL NOTE**

**Please observe the disposal regulations applicable in your area.**

### **ENVIRONMENTAL NOTE**

**Observe the safety instructions of the manufacturer of hazardous substances (coolant, oil or fuel) and the applicable regional waste disposal regulations.**

### **ENVIRONMENTAL NOTE**

**Work with the utmost care to ensure that no water pollutants can penetrate into the soil, water or the sewerage system.**

## CONNECTIONS FOR DISPLAY SYSTEMS

### NOTICE

Follow the instructions in the Installation Manual (IM) for respective engine type regarding connections for instrumentation.

## COOLANT TEMPERATURE SENSOR (CTS)

Coolant flows around the temperature sensor, which measures the coolant temperature directly.

The coolant temperature sensor is situated in cylinder head 4.

## MAINTENANCE



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

Before the cooling system is removed, the work described below must be carried out to identify any further malfunctions in the cooling system and rectify them as part of the repair work.

### NOTICE

**If these checks are omitted, it may be necessary to dismantle the cooling system again to rectify any malfunctions after it has been repaired.**



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.



Engine cleaning. See current Maintenance Manual Line (MML) for the respective engine type.



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

**⚠ WARNING**

**Danger of severe burns and scalds!**  
Always allow the engine to cool down to ambient temperature before starting any work.

**ENVIRONMENTAL NOTE**

Please observe the disposal regulations applicable in your area.

**ENVIRONMENTAL NOTE**

Ensure that no coolant gets into the waste water system or the ground – risk of contaminating drinking water!

**NOTICE**

Prevent the ingress of debris particles into all disconnected lines and connections.  
Use appropriate protective coverings.

### Preparation

- Switch the ignition switch OFF.



Drain coolant.  
See Maintenance Manual Line (MML) for the respective engine type.



Drain the fuel.  
See Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.



Disconnect coolant hose. Follow the instructions in the aircraft manufacturer's manual.



Remove the fuel outlet and inlet line on the fuel rail. Follow the instructions in the aircraft manufacturer's manual.

## SURROUNDING ASSEMBLIES — REMOVAL

Only necessary for upper coolant system and cooling air baffle.

### NOTE

*The assemblies and lines are only to be removed if necessary and only as far as necessary.*

Step	Procedure
1	Unplug Coolant Temperature Sensor (CTS), Oil Temperature Sensor (OTS), Oil Pressure Sensor (OPS), Knock sensor and Crankshaft Position Sensor (CPS 1/2) and Boost Pressure Sensor (BPS). See <a href="#">Chapter 76-50-00 Wiring harness</a> .
2	Unplug the spark plug connectors and remove the lower spark plug connectors. See Chapter 74-20-00, section <a href="#">Spark plug connector and ignition cable assy. — removal</a> and <a href="#">Spark plug — removal</a> .
3	Release the attachment of the airbox to ignition housing.
4	Loosen the Allen screw and lock washer from the fuel line assy.
5	Loosen the banjo bolts from cylinder 2/4 and 1/3 and remove the fuel line assy. with sealing rings.
6	Remove Exhaust Gas Temperature sensor (EGT) from the exhaust pipes. See Chapter 76-70-00, section <a href="#">Exhaust gas temperature sensor (EGT1_3/EGT2_4) — removal</a> .
7	Loosen the clamp and remove the air intake hose from the throttle body. See Chapter 73-10-00, section <a href="#">Throttle body assy. — removal</a> .
8	Loosen 4 hex./torx collar screws from the intake manifold (cylinder 2/4 and cylinder 1/3). See <a href="#">Chapter 73-10-00 Fuel system and distribution</a> .
9	Remove the isolating flanges between the intake manifold and the cylinder head.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
10	Pull back the airbox including the intake manifolds carefully.
11	Close the intake ducts using a plug (part no. 860397).

**NOTICE**

**Close the intake duct immediately so that no debris particles can get into the combustion chamber!**

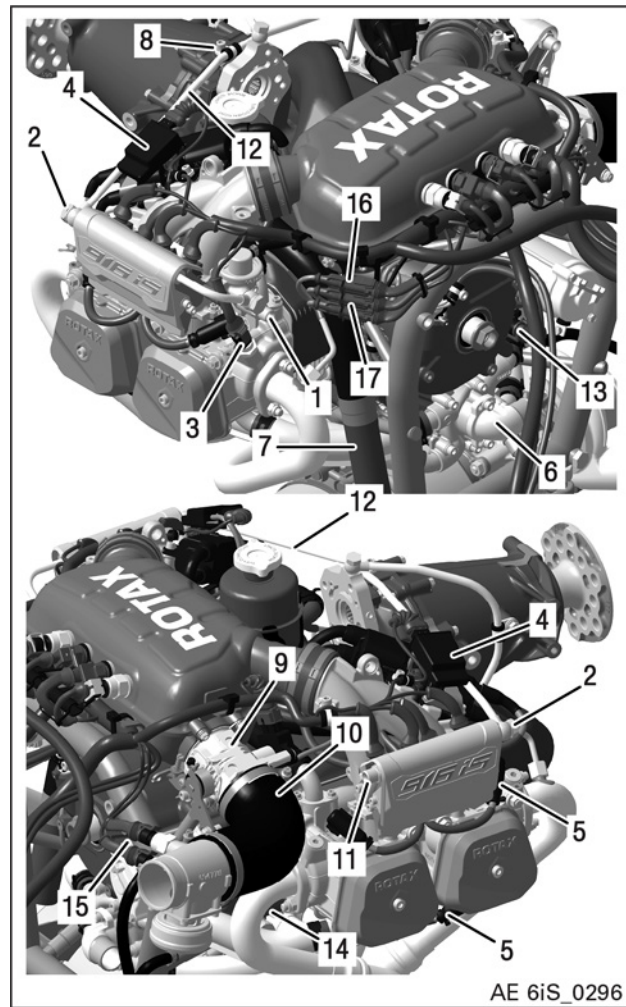


Figure 15.5

- |                                    |  |
|------------------------------------|--|
| 1 Fuel outlet                      | 2 Banjo bolt with sealing rings                |
| 3 Coolant Temperature Sensor (CTS) | 4 Exhaust Gas Temperature (EGT)                |
| 5 Spark plug connector             | 6 Water inlet elbow                            |
| 7 Coolant outlet                   | 8 Allen screw with lock washer and cable clamp |
| 9 Throttle body                    | 10 Air intake hose                             |
| 11 Fuel inlet                      | 12 Fuel hose assy.                             |
| 13 Oil Pressure Sensor (OPS)       | 14 Oil Temperature Sensor (OTS)                |



# BRP-Rotax MAINTENANCE MANUAL HEAVY

- |  |                        |
|--|------------------------|
| <p>15 Boost Pressure Sensor (BPS)</p> <p>17 Crankshaft Position Sensor (CPS 1/2)</p> | <p>16 Knock sensor</p> |
|--|------------------------|

## EXPANSION TANK WITH UPPER FORM HOSES – REMOVAL

**NOTICE**

**Risk of pressure and scuffing marks!**  
Mark the position of the spring clamps. The spring clamps must be re-installed in the same position, otherwise it may not be possible to install the intake manifold.

**NOTICE**

**When removing the form hoses, ensure that the bent sockets are not damaged!**

Step	Procedure
1	Take off the spring clamp using spring clamp pliers part no. 877840.
2	Remove the form hose from the bent socket with a suitable tool.  <b>NOTE</b> <i>Mark the position of the bent socket with a suitable pen (touch-up pen).</i>

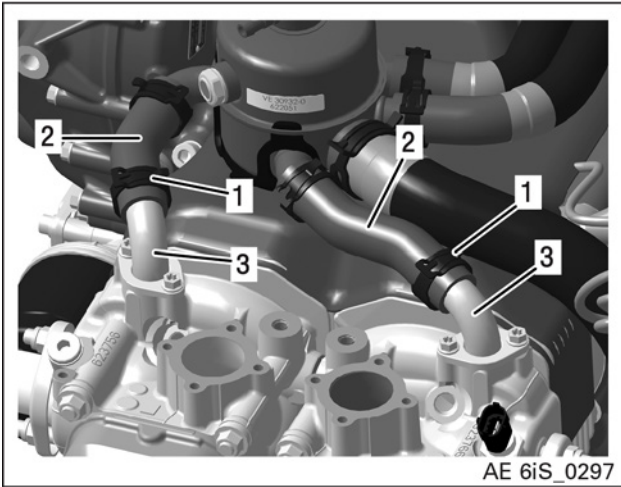


Figure 15.6: Cylinders 2 and 4

- |                |             |
|----------------|-------------|
| 1 Spring clamp | 2 Form hose |
| 3 Bent socket  |             |

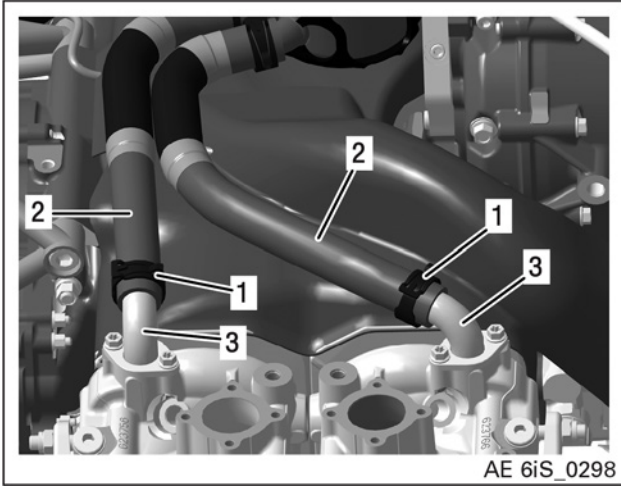


Figure 15.7: Cylinders 1 and 3

- |                |             |
|----------------|-------------|
| 1 Spring clamp | 2 Form hose |
| 3 Bent socket  |             |

Step	Procedure
3	Remove the expansion tank assy. with all its form hoses.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

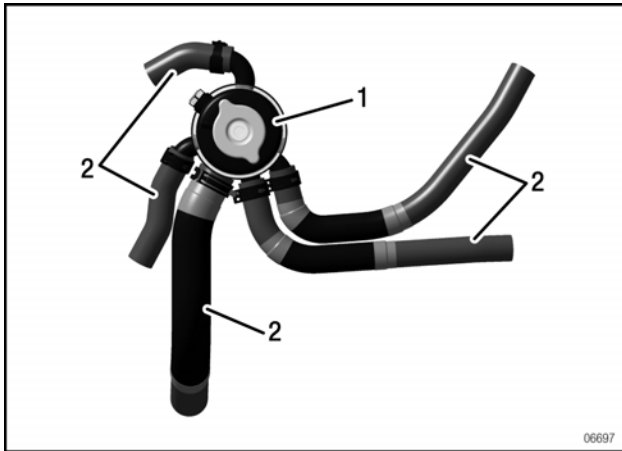


Figure 15.8

- 1 Expansion tank assy. 2 Form hoses

**COOLING AIR BAFFLE - REMOVAL**

**Preparation**

- See Surrounding assemblies – removal

Step	Procedure
1	Remove expansion tank with upper form hoses.
2	Lift up and remove cooling air baffle.

**WATER PUMP HOUSING WITH LOWER FORM HOSES — REMOVAL**

**Preparation**



Remove the coolant hose from water inlet elbow. Follow the instructions in the manufacturer's manual.

**NOTE**

Mark the position of the bent socket with a suitable pen (touch-up pen).

Step	Procedure
1	Remove the form hoses with heat protection tube from bent socket using spring clamp pliers part no. 877840.

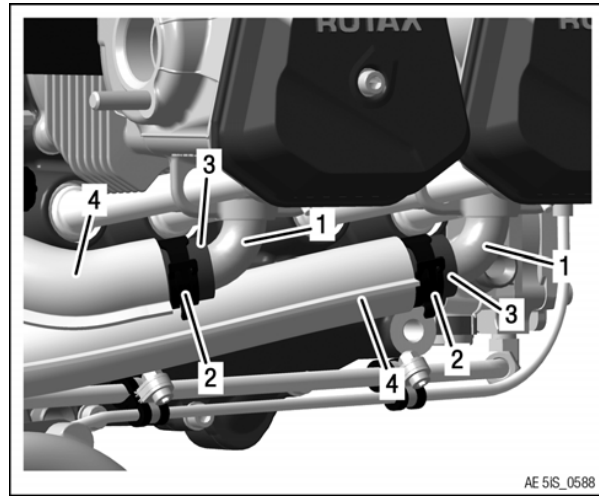


Figure 15.9

- 1 Bent socket 2 Spring clamp  
 3 Form hose 4 Heat protection tube

Step	Procedure
2	Remove all 4 spring type hose clamps using spring clamp pliers part no. 877840 and detach the coolant hoses from the water pump housing.

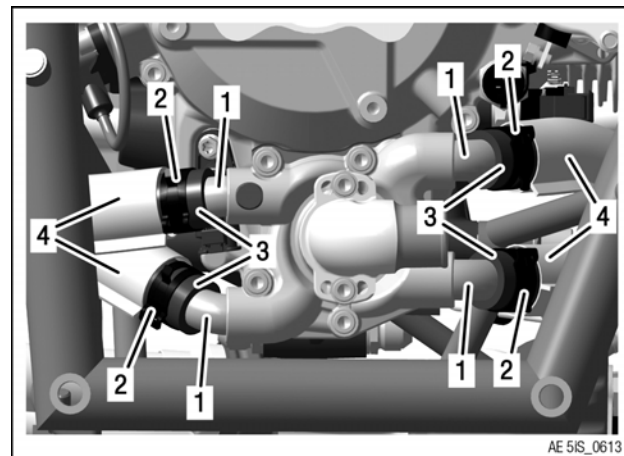


Figure 15.10

- 1 Bent socket 2 Spring clamps  
 3 Form hoses 4 Heat protection tube

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
3	Loosen the 2 Allen screws of the water inlet elbow with washers and remove the water inlet elbow with the O-ring.  <b>NOTE</b> <i>Mark the position of the water inlet elbow with a suitable pen (touch-up pen).</i>

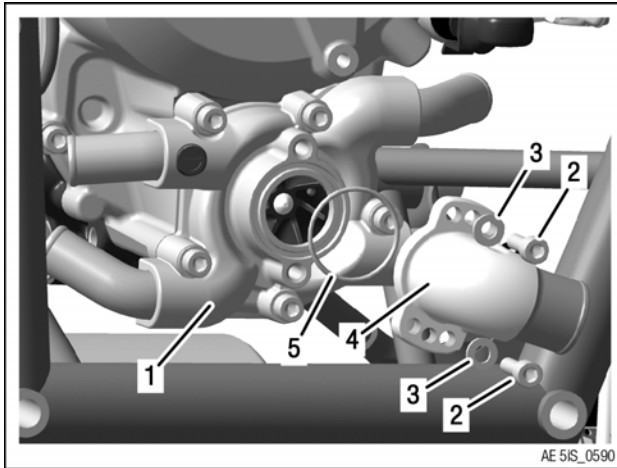


Figure 15.11

- 1 Water pump housing      2 Allen screws
- 3 Washers                      4 Water inlet elbow
- 5 O-ring

Step	Procedure
4	The water pump housing and gasket can be removed by loosening the other 5 Allen screws with washers.

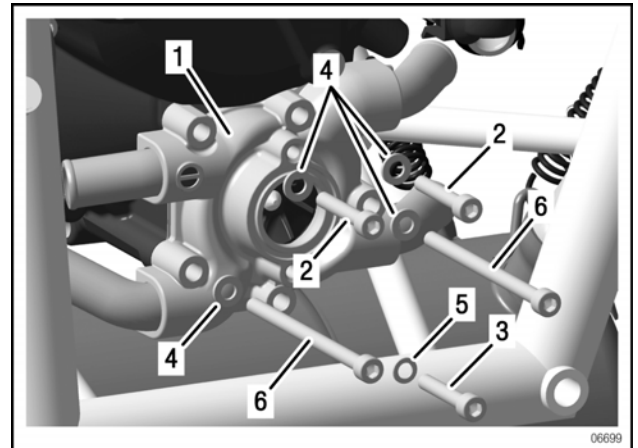


Figure 15.12: TYPICAL

- 1 Water pump housing      2 Allen screw
- 3 Allen screw (stainless steel)      4 Washer
- 5 Sealing ring                      6 Allen screw

Step	Procedure
5	Remove the impeller anti-clockwise with the special tool part no. 877295 with locked crankshaft.



Lock the crankshaft.  
See current Maintenance Manual Line (MML) for the respective engine type.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

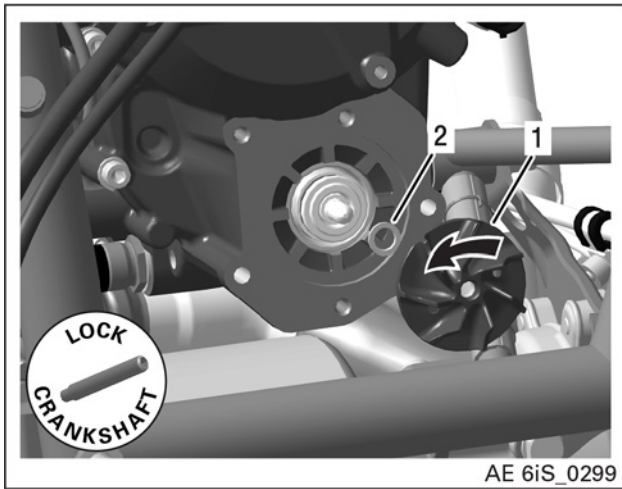


Figure 15.13

1 *Impeller*

2 *Washer*

**DISASSEMBLY**

**IGNITION HOUSING — DISASSEMBLY**

**Preparation**

- Remove the ignition housing. See [Chapter 24–20–00](#) Internal generator.

**WATER PUMP SHAFT — REMOVAL**

Step	Procedure
1	Place the ignition cover on a suitable flat surface.
2	Press out the water pump shaft with a suitable tool.
3	Pull out the water pump gear.

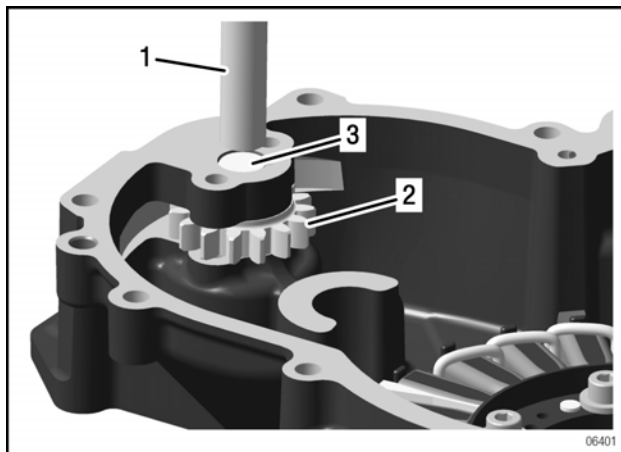


Figure 15.14

- 1 Press-out tool                      2 Water pump gear 15T  
 3 Water pump shaft

**OIL SEAL AND ROTARY SEAL — REMOVAL**

**NOTICE**

**The oil seal and rotary seal are destroyed by this process and must be replaced.**

Step	Procedure
1	Press out the old oil seal and the rotary seal with two bolts and a suitable jig.

**NOTE**

*The diameter of the bolt is 5 mm (0.1969 in.).*

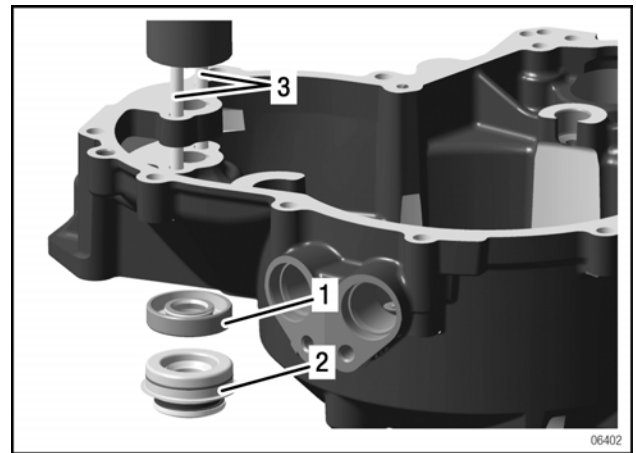


Figure 15.15

- 1 Oil seal                                      2 Rotary seal  
 3 Press-out tool

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## FORM HOSES — REMOVAL

Step	Procedure
1	Take off the spring clamps using spring clamp pliers part no. 877840.
2	Remove the form hoses from the bent socket on the expansion tank with a suitable tool.
<p><b>NOTE</b></p> <p><i>Mark the position of the bent socket with a suitable pen (touch-up pen).</i></p>	
3	Remove the rubber plate.

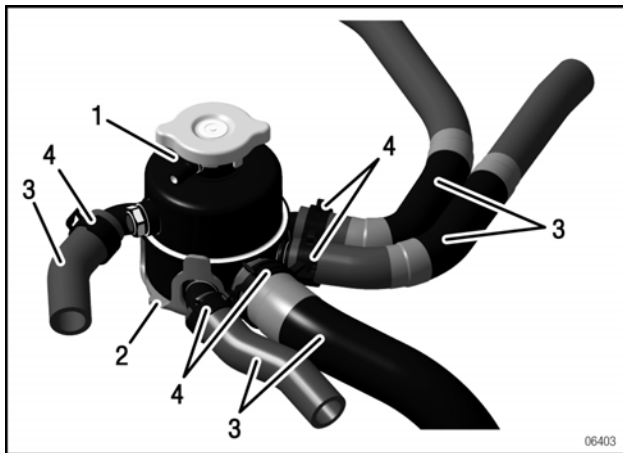


Figure 15.16

- 1 Expansion tank                      2 Rubber plate
- 3 Form hoses                            4 Spring clamp

## WATER PUMP HOUSING — DISASSEMBLY

**⚠ WARNING**

**Danger of severe burns and scalds!**  
Wear heat resistant gloves!

**NOTE**

*Only remove the bent socket when absolutely necessary!*

Step	Procedure
1	Mark the position of the bent socket.
2	Heat the water pump housing to approx. 100 to 120 °C (212 °F to 248 °F) and unscrew the bent socket.
3	Clean the thread (remove LOCTITE residues).

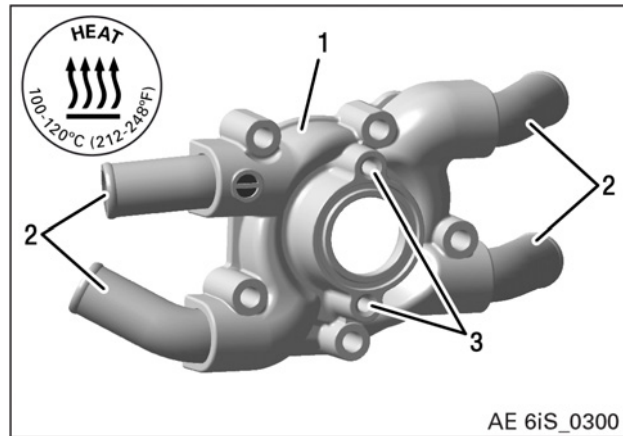


Figure 15.17

- 1 Water pump housing    2 Bent socket
- 3 Thread

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION

### COOLING SYSTEM SINGLE PARTS — INSPECTION

**NOTICE**

**Cracks in cooling system components are not permissible!**  
If in doubt, check the affected parts for cracks using the dye penetrant or similar method.

**NOTICE**

**Form hoses must not be shortened, as this affects the position of the expansion tank. Replace non-reusable or damaged hoses.**

- Clean all parts carefully.
- Check the form hoses for damage and wear.
- Check the Coolant Temperature Sensor (CTS). See [Chapter 76-70-00 section Sensors and actuators](#).

#### NOTE

*Scuffing marks (including scratches) are permissible up to a maximum depth of 0.50 mm (0.0197 in.).*

- Check the spring clamps for damage or deformation.

### AXIAL POSITION OF WATER PUMP SHAFT – INSPECTION

Step	Procedure
1	Check the water pump shaft for wear and corrosion.  <b>NOTE</b> <i>If corrosion is found, the water pump shaft must be replaced.</i>
2	Check the axial position of the water pump shaft and pump gear.

#### NOTE

*The wide collar of the gear points inwards towards the crankcase.*

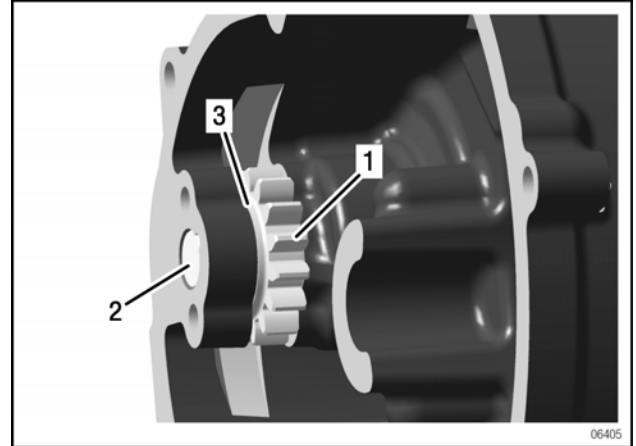


Figure 15.18

- 1 Water pump gear 15T    2 Water pump shaft  
3 Wide collar

### EXPANSION TANK — INSPECTION

Step	Procedure
1	Check the expansion tank for damage, deformation and leaks.

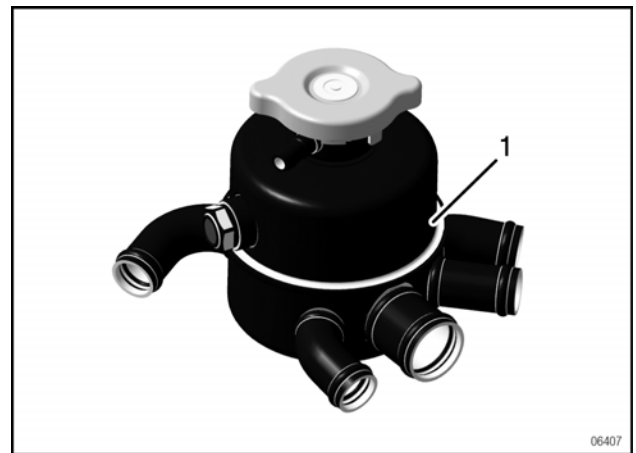


Figure 15.19

- 1 Expansion tank



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**WATER PUMP HOUSING — INSPECTION**

Step	Procedure
1	Check the water pump housing for damage, deformation and leaks.
2	Check the inner side for any signs of contact with the impeller.
3	Measure the gap between impeller and water housing using a feeler gauge, see section <a href="#">Wear limits</a> (WP02).

**NOTE**

*If signs of contact are found, the water pump housing must be replaced.*

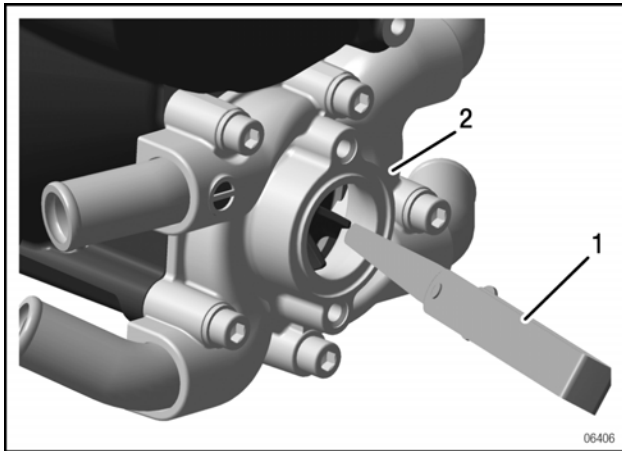


Figure 15.20

1 Feeler gauge

2 Water pump housing



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**WEAR LIMITS**

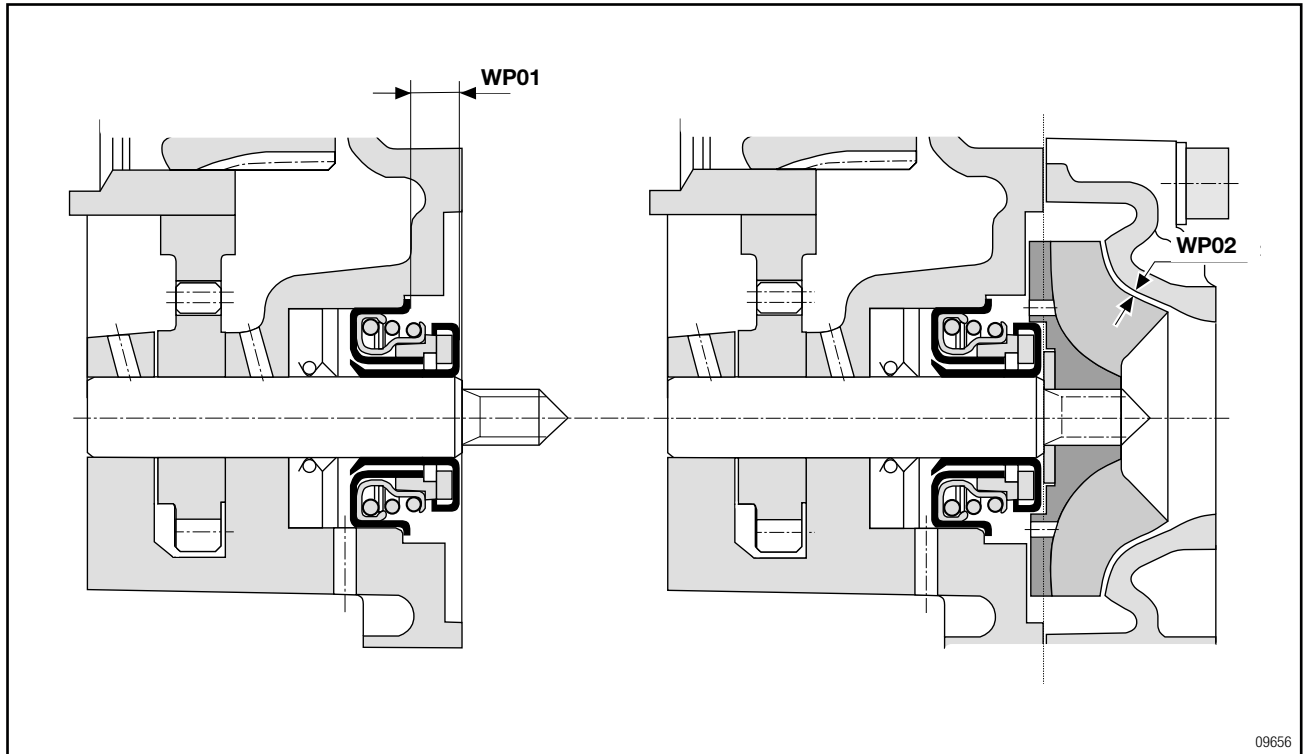


Figure 15.21: Wear Limits

Description	Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements
		min	max				
<b>Water pump</b>							
Reference to flat surface	W-P01	8.55 mm 0.3366 in.	8.85 mm 0.3484 in.	8.85 mm 0.3484 in.		current re-placed	
Distance from impeller	W-P02	0.3 mm 0.012 in.	0.5 mm 0.020 in.	0.7 mm 0.028 in.	0.6 mm 0.024 in.	current re-placed	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**ASSEMBLY**

**IGNITION HOUSING – ASSEMBLY**

**Oil seal – Installation**

Step	Procedure
1	Lubricate the outside of a new oil seal 12x30x7 and press it (with open side showing to crankcase) using a suitable jig part no. 876510 into the ignition housing till end stop.  <b>NOTE</b> <i>Oil seal must not be visible through the leakage bore.</i>

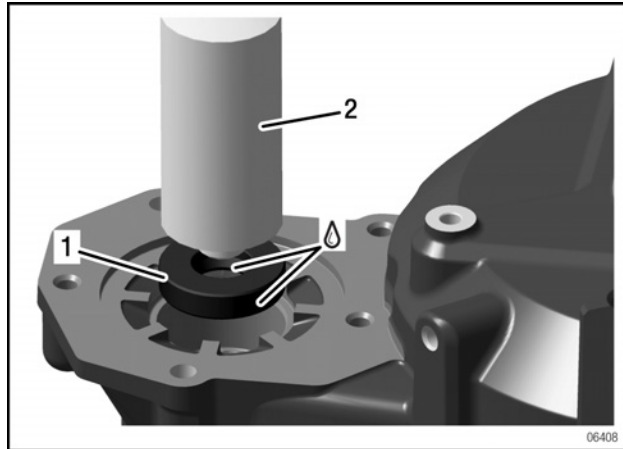


Figure 15.22

- 1 Oil seal 12x30x7      2 Insertion jig part no. 876510

**Water pump shaft – Installation**

**NOTE**

*Degrease water pump shaft with LOCTITE 7063.*

Step	Procedure
1	Apply small amount of LOCTITE 603 to the inner diameter of the new rotary seal and press it into the insertion jig part no. 877258. Then press in the water pump shaft as far as it will go.

**NOTE**

*The spacing WP01 is automatically established with insertion jig part no. 877258.*

**NOTE**

*Ensure that no LOCTITE 603 is in contact with the oil seal.*

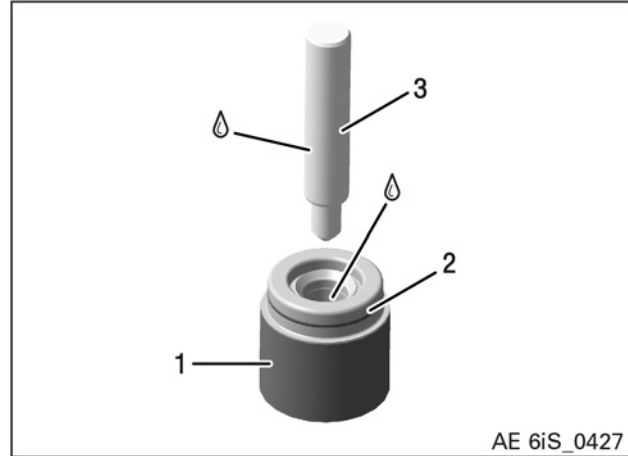


Figure 15.23

- 1 Insertion jig part no. 877258      2 Rotary seal  
 3 Water pump shaft

Step	Procedure
2	Insert the pump gear 15 T in the ignition housing.  <b>NOTE</b> <i>The wide collar of the gear points inwards towards the crankcase.</i>
3	Press the pump shaft with the rotary seal already compressed into the ignition housing using the insertion jig part no. 877258.  <b>NOTE</b> <i>Ensure that the pump gear is aligned with the pump shaft.</i>

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

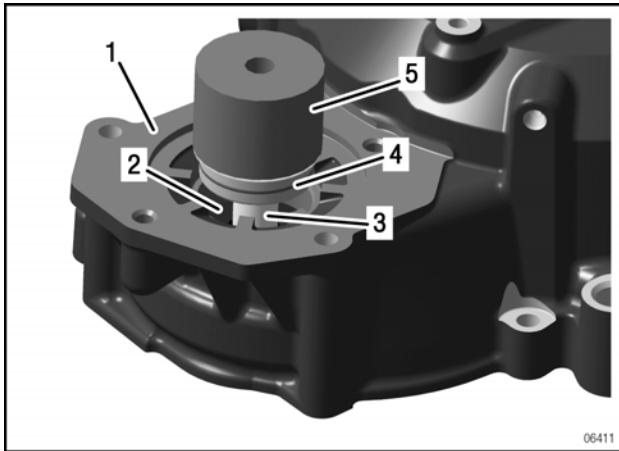


Figure 15.24: TYPICAL

- |   |                               |   |             |
|---|-------------------------------|---|-------------|
| 1 | Ignition housing              | 2 | Oil seal    |
| 3 | Pump shaft                    | 4 | Rotary seal |
| 5 | Insertion jig part no. 877258 |   |             |

Step	Procedure
4	Install the ignition housing. See Chapter 24-20-00 section Ignition housing – installation.
5	Push on the washer 8.2/12.5/1.5 and apply LOCTITE 243 to the thread of the water pump shaft. Then fasten the impeller with the special tool part no. 877295 with locked crankshaft. Tightening torque 15 Nm (133 in. lb.).



Lock the crankshaft.  
 See current Maintenance Manual Line (MML) for the respective engine type.

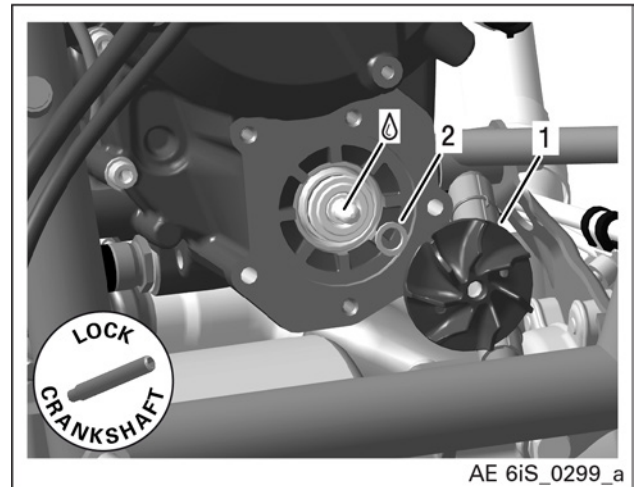


Figure 15.25

- |   |          |   |                     |
|---|----------|---|---------------------|
| 1 | Impeller | 2 | Washer 8.2/12.5/1.5 |
|---|----------|---|---------------------|

**NOTE**

*Ensure that the impeller runs true. If there is noticeable runout, this, and possibly also the pump shaft, must be replaced.*

**WATER PUMP HOUSING — ASSEMBLY**

Step	Procedure
1	Lubricate the bent sockets with LOCTITE 577.
2	Screw the bent socket at least 5 revolutions into the water pump housing and position it.

**NOTE**

*3 bent socket with a bend angle of 45° and 1 bent socket with a bend angle of 20° are installed.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

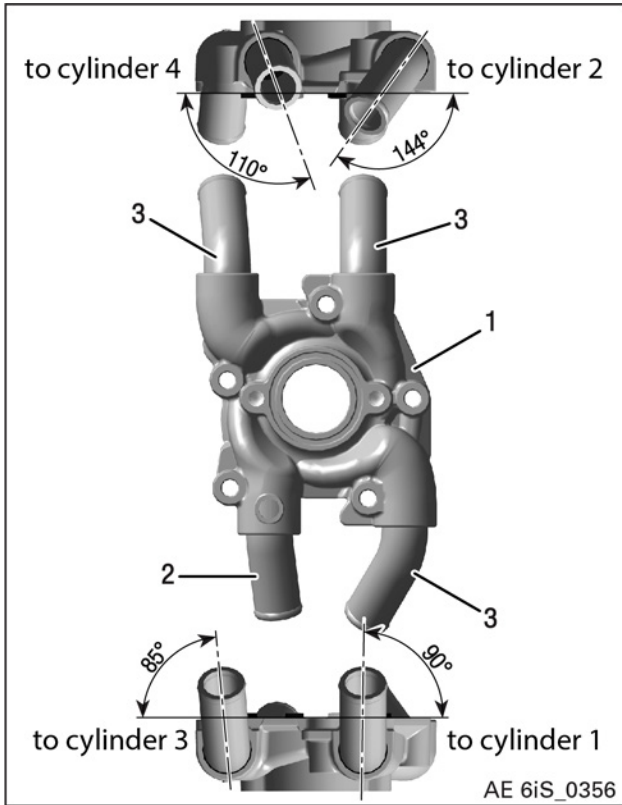


Figure 15.26

- 1 Water pump housing    2 Bent socket 20°
- 3 Bent socket 45°

Step	Procedure
3	Allow the water pump housing to harden for at least 12 hours (at room temperature).

**FORM HOSE – INSTALLATION**

**NOTICE**

The push-on length of the expansion tank is 25 mm (0.9843 in.)!

**NOTICE**

Hoses must not be shortened!

**NOTE**

The hoses are all preformed and cut to length in the factory, and the hose length and push-on length therefore defines the position of the expansion tank. The correct position of the expansion tank ensures trouble-free installation of the governor.

**NOTE**

Mark the push-on lengths of the hoses on the water elbows.

Step	Procedure
1	Install the rubber plate on form hose connection 2, 4 and 1.

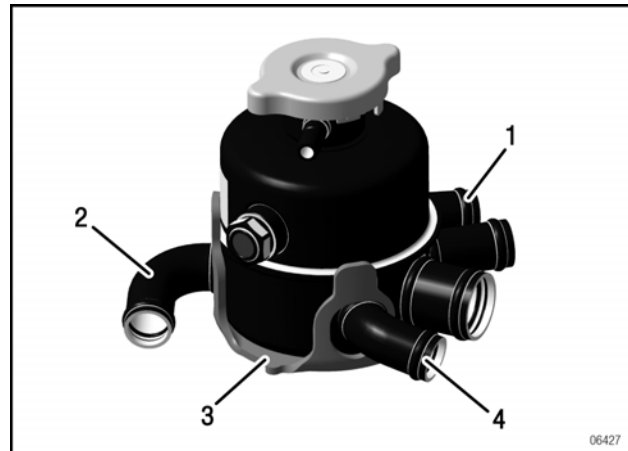


Figure 15.27

- 1 Form hose connection 1    2 Form hose connection 2
- 3 Rubber plate    4 Form hose connection 4

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
2	Install the spring clamp 35 on the form hose radiator outlet.
3	Push on the form hose onto the radiator outlet and align it vertically.

### NOTE

*Align the spring clamp 35 vertically too so that the remaining form hoses can be installed.*

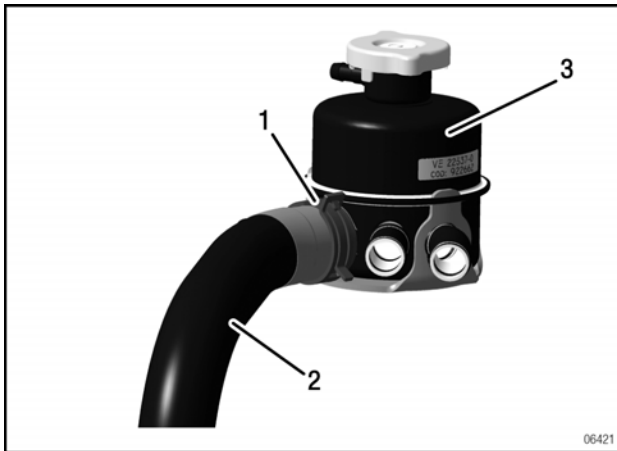


Figure 15.28

- 1 Spring clamp 35
- 2 Form hose radiator outlet
- 3 Expansion tank

Step	Procedure
4	Install the spring clamp 25 on the form hose 3 and align it vertically.

### NOTE

*Align the spring clamp 25 so that it does not come into contact with the other spring clamp 35.*

Step	Procedure
5	Push on form hose 3 and align it horizontally.

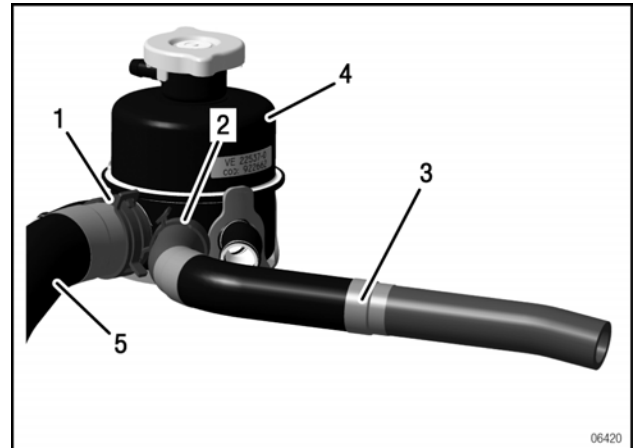


Figure 15.29

- 1 Spring clamp 35
- 2 Spring clamp 25
- 3 Form hose 3
- 4 Expansion tank
- 5 Form hose radiator outlet

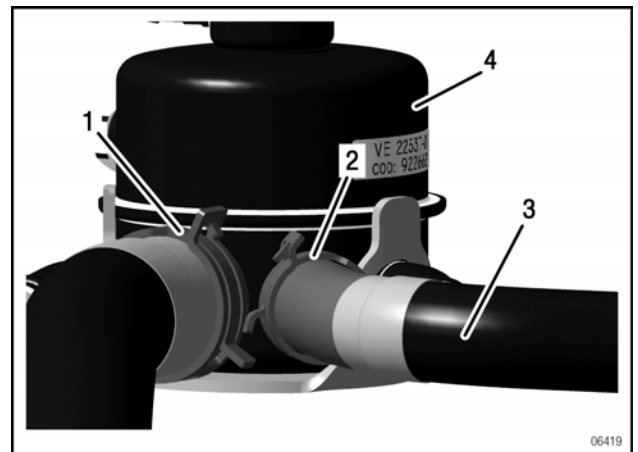


Figure 15.30

- 1 Spring clamp 35
- 2 Spring clamp 25
- 3 Form hose 3
- 4 Expansion tank

Step	Procedure
6	Install the spring clamp 25 on form hose 1.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**NOTE**

*Align the spring clamp 25 so that it is 2 mm (0.0787 in.) away from the spring clamp 25 on form hose 3.*

Step	Procedure
7	Push on form hose 1 and align it horizontally like form hose 3.

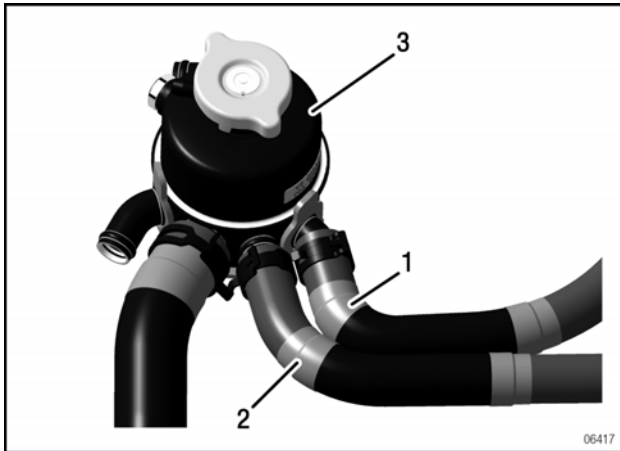


Figure 15.31

- 1 Form hose 1
- 2 Form hose 3
- 3 Expansion tank

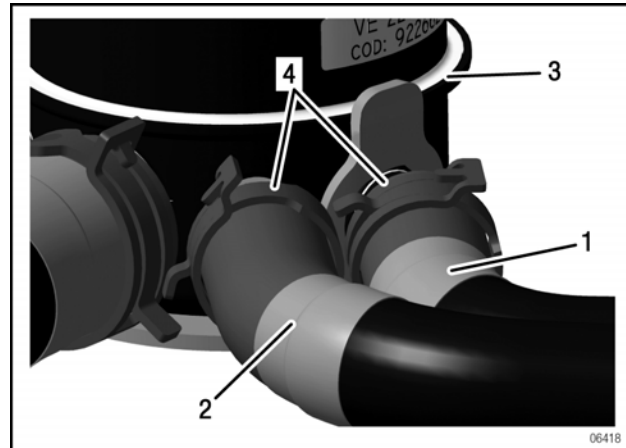


Figure 15.32

- 1 Form hose 1
- 2 Form hose 3
- 3 Expansion tank
- 4 Spring clamp 25

Step	Procedure
8	Install the spring clamp 25 on form hose 4.

**NOTE**


*Align the spring clamp 25 so that it does not come into contact with the other spring clamp 35.*

Step	Procedure
9	Push on form hose 4 and align it horizontally like form hoses 3 and 1.

**NOTE**

*Form hose 4 is symmetrical.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

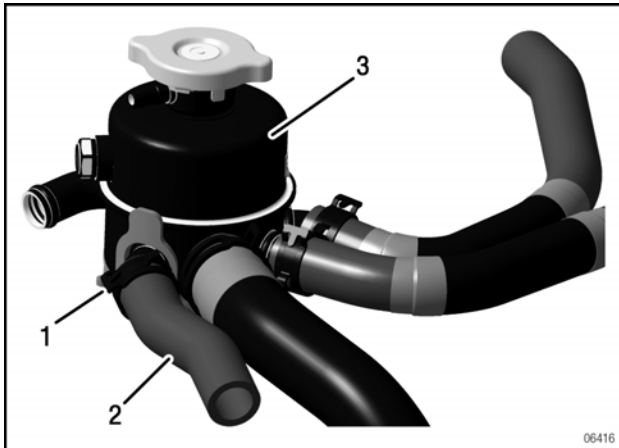

**NOTE**

*Form hose 2 is symmetrical.*

Figure 15.33

- 1 Spring clamp 25
- 2 Form hose 4
- 3 Expansion tank

Step	Procedure
10	Install the spring clamp 25 on form hose 2 and position it vertically.
11	Push on form hose 2 and align it horizontally.

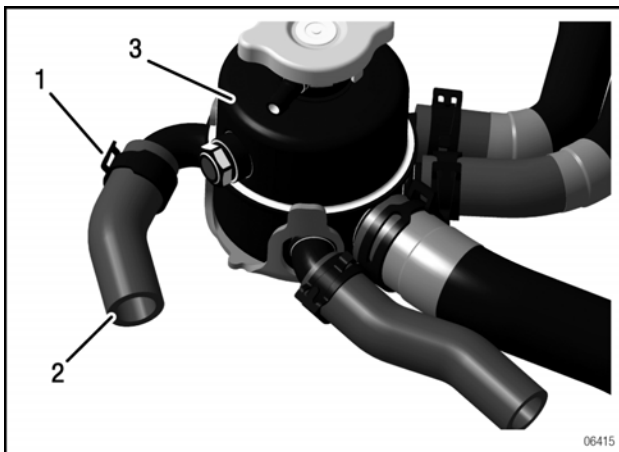


Figure 15.34

- 1 Spring clamp 25
- 2 Form hose 2
- 3 Expansion tank

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**WATER PUMP HOUSING WITH LOWER FORM HOSES — INSTALLATION**

**NOTICE**

**The impeller must not touch the pump housing.**  
 If necessary, the axial position of the impeller must be adjusted.

**NOTE**

Measure the gap between impeller and water pump housing using a feeler gauge, see section [Wear limits \(WP02\)](#).

Step	Procedure
1	Put on a new gasket and fasten the water pump housing to the ignition housing with 2 Allen screws M6x90 and 2 Allen screws M6x35 with washers 6.4. Tightening torque 10 Nm (89 in. lb.).  <b>NOTE</b> <i>Apply lithium-base grease on both sides of the new gasket.</i>
2	Install Allen screw M6x35 (stainless steel) with new sealing ring 6x10. Tightening torque 10 Nm (89 in. lb.).

**NOTICE**

**The bottom M6x35 Allen screw extends into the water chamber and is therefore stainless steel and sealed with a new sealing ring.**

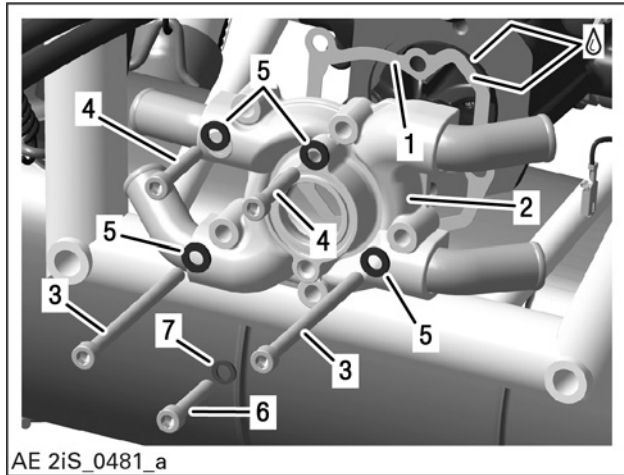


Figure 15.35: : TYPICAL

- |                     |                                       |
|---------------------|---------------------------------------|
| 1 Gasket            | 2 Water pump housing                  |
| 3 Allen screw M6x90 | 4 Allen screw M6x35                   |
| 5 Washers 6.4       | 6 Allen screw M6x35 (stainless steel) |
| 7 Sealing ring 6x10 |                                       |

Step	Procedure
3	Insert the new O-ring 32x2 in the water pump housing and fasten the water inlet elbow in the marked position with 2 Allen screws M6x20 and washers 6.4. Tightening torque 10 Nm (89 in. lb.).

**NOTE**

*The water inlet elbow is symmetrical and can, if required, be fitted in other positions.*



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

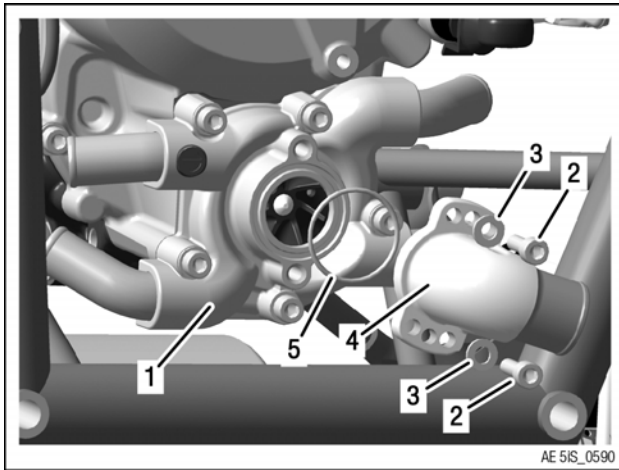


Figure 15.36: TYPICAL

- 1 Water pump housing      2 Allen screw M6x20
- 3 Washer 6.4              4 Water inlet elbow
- 5 O-ring 32x2

Step	Procedure
4	Install 4 form hoses including heat protection tubes with spring clamps 25 on the water pump housing. Use spring clamp pliers part no. 877840.

**NOTICE**

Ensure that the push-on length is correct! The push-on length onto the bent socket on the water pump housing and cylinder head is 27 mm (1.06 in.)

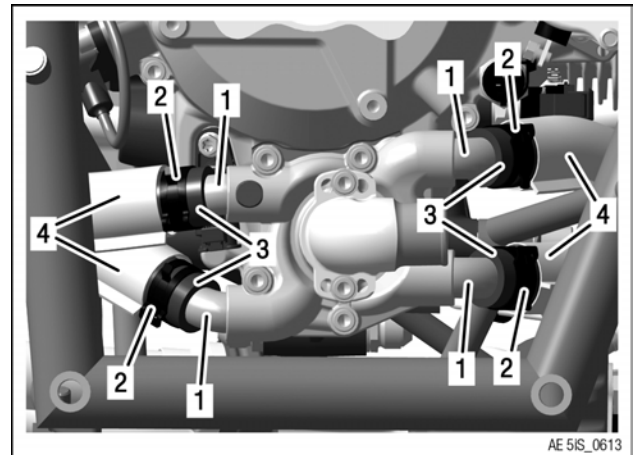


Figure 15.37: : TYPICAL

- 1 Bent sockets              2 Spring clamps
- 3 Form hoses                4 Heat protection tube

Step	Procedure
5	Install form hoses with spring clamps 25 on the cylinder head. Use spring clamp pliers part no. 877840.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

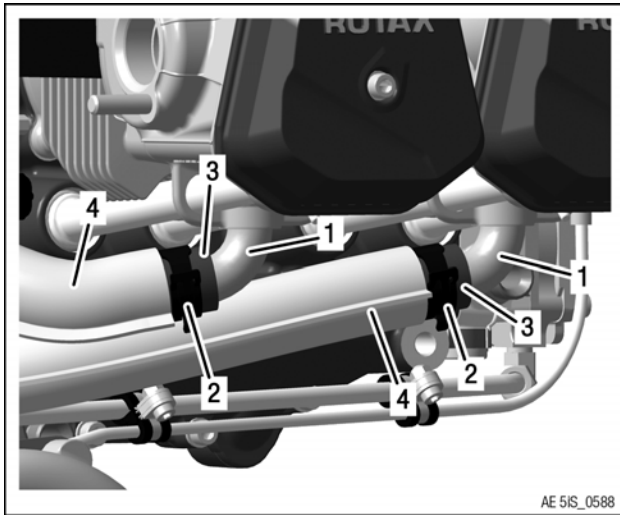


Figure 15.38

- |                |                        |
|----------------|------------------------|
| 1 Bent sockets | 2 Spring clamps 25     |
| 3 Form hoses   | 4 Heat protection tube |

**COOLING AIR BAFFLE – INSTALLATION**

Step	Procedure
1	Attach cooling air baffle.
2	Install expansion tank with upper form hoses.
3	See surrounding assemblies- installation.

**EXPANSION TANK AND FORM HOSES — INSTALLATION**

**Preparation**

- if necessary, install bent socket on cylinder head (1 to 4). See Chapter 72-30-00 section Coolant elbow – installation.

<b>NOTICE</b>
<b>Ensure that the expansion tank is fixed without tension.</b>

**NOTE**

*Check the push-on lengths, readjust the form hoses if necessary.*

Step	Procedure
1	Install 1 spring clamp 25 each on form hoses 1, 2, 3, and 4.
2	Position the expansion tank assy. with the 5 form hoses on the engine.

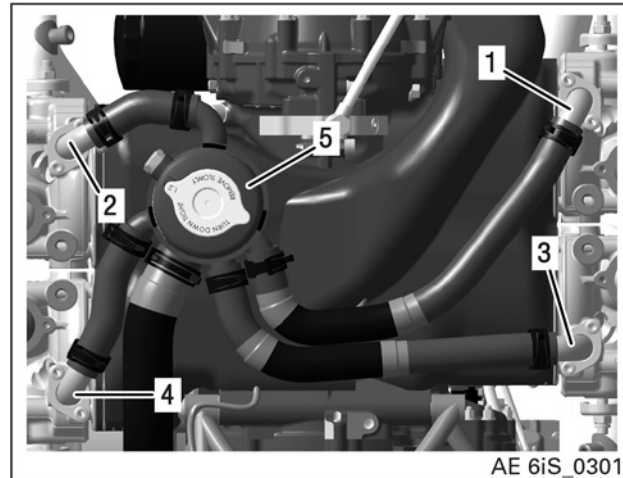


Figure 15.39

- |                  |                 |
|------------------|-----------------|
| 1 Bent socket 1  | 2 Bent socket 2 |
| 3 Bent socket 3  | 4 Bent socket 4 |
| 5 Expansion tank |                 |

<b>NOTICE</b>
<b>Ensure that the push-on length is correct!</b> The push-on length onto the bent socket on the cylinder head is 27 mm (1.06 in.).

Step	Procedure
4	Fasten form hoses 1 to 4 with spring clamps 25.

**NOTE**

*Start with the shortest hose (form hose 2). Then form hose 1, then form hose 3 and form hose 4.*

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

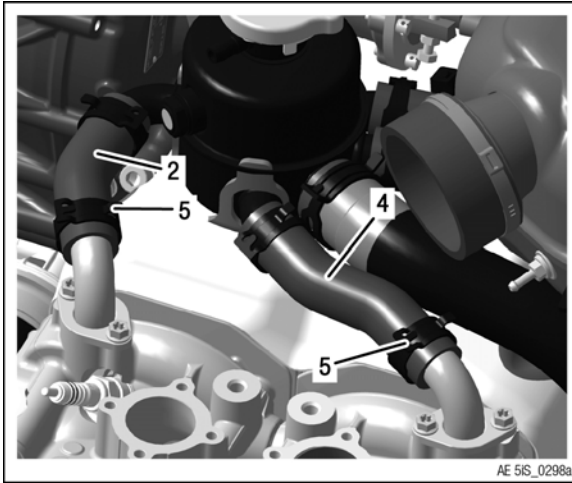


Figure 15.40: Cylinder 2 and 4 TYPICAL

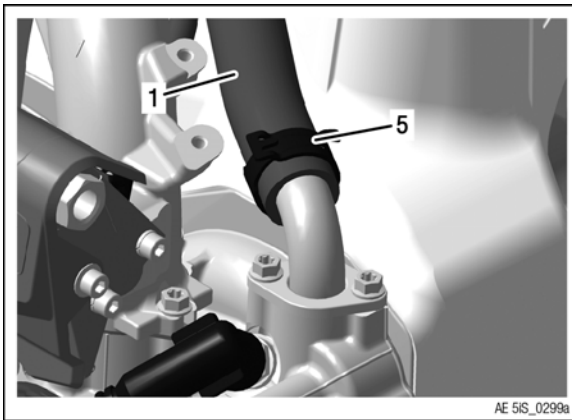


Figure 15.41: Cylinder 1 TYPICAL

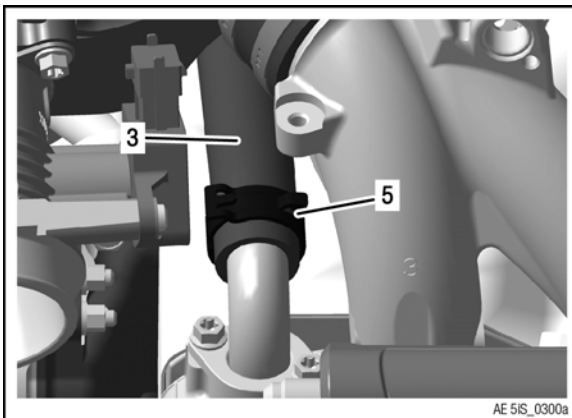


Figure 15.42: Cylinder 3 TYPICAL

- 3 Form hose 3                      4 Form hose 4  
5 Spring clamp

### SURROUNDING ASSEMBLIES — INSTALLATION

Only necessary for upper coolant system and cooling air baffle.

Step	Procedure
1	Remove plug (part no. 860397) from the intake ducts.
2	Push the airbox including the intake manifolds onto the engine carefully.
3	Install the isolating flange between the intake manifold and the cylinder head.
4	Install intake manifolds (cylinder 2/4 and cylinder 1/3) with 4 hex./torx collar screws onto the cylinder heads. See Chapter 73-10-00, section <a href="#">Intake manifold — installation</a> .
5	Install the air intake hose onto the throttle body. See Chapter 73-10-00, section <a href="#">Throttle body assy. — installation</a> .
6	Install Exhaust Gas Temperature sensor (EGT) on the exhaust pipes. See Chapter 76-70-00, section <a href="#">Exhaust gas temperature sensor (EGT1_3/EGT2_4) — installation</a> .
7	Fix the fuel line assy. on the left and right of the fuel rails with banjo bolts M12x1,5x24 and new sealing rings 12x18. Tightening torque 25 Nm (18 ft. lb.).
8	Install the fuel line assy. with cable clamp 8/M6, Allen screw M6x16 and with washer 6.4 on the gearbox housing. tightening torque 10 Nm (89 in. lb.)
9	Fix the airbox with a new lock nut M6 and washer 6.4 on the ignition housing. Tightening torque 10 Nm (89 in. lb.).

- 1 Form hose 1                      2 Form hose 2

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
10	Route lower ignition cables and install and connect lower spark plug connectors. See Chapter 74-20-00, section <a href="#">Spark plug connector and ignition cable assy. — installation</a> .
11	Connect Coolant Temperature Sensor (CTS), Oil Temperature Sensor (OTS), Oil Pressure Sensor (OPS), Knock sensor (KNOCK), Crankshaft Position Sensor (CPS 1/2) and Boost Pressure Sensor (BPS). See <a href="#">Chapter 76-50-00 Wiring harness</a>

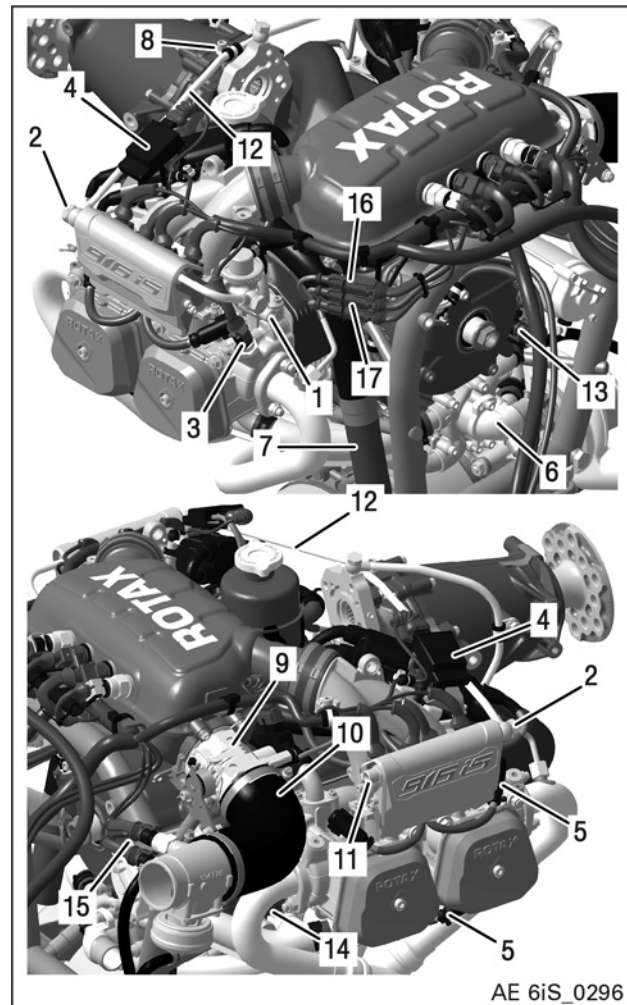


Figure 15.43

- |  |  |
|--|--|
| <p>1 Fuel outlet</p> <p>3 Coolant Temperature Sensor (CTS)</p> <p>5 Spark plug connector</p> <p>7 Coolant outlet</p> <p>9 Throttle body</p> <p>11 Fuel inlet</p> <p>13 Oil Pressure Sensor (OPS)</p> | <p>2 Banjo bolt with sealing rings</p> <p>4 Exhaust Gas Temperature (EGT)</p> <p>6 Water inlet elbow</p> <p>Allen screw with lock washer and cable clamp</p> <p>8</p> <p>10 Air intake hose</p> <p>12 Fuel hose assy.</p> <p>14 Oil Temperature Sensor (OTS)</p> |
|--|--|

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

- 
- 15 *Boost Pressure Sensor (BPS)*      16 *Knock sensor*
- 17 *Crankshaft Position Sensor (CPS 1/2)*

### FINISHING WORK



Install the fuel outlet and inlet line on the fuel rail.  
Follow the instructions in the aircraft manufacturer's manual.



Install coolant hoses (inlet and outlet).  
Follow the instructions in the aircraft manufacturer's manual.



Fill with operating fluids or check filling levels.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Flush the engine cooling system.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system.



Purge the oil system.  
See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**Chapter: 76-00-00**  
**ENGINE CONTROL**

**TOPICS IN THIS CHAPTER**

**916 i TYPE A**

**Introduction**

The Engine Management System (EMS) consists primarily of:

- Control unit (Electronic Control Unit = ECU)
- ECU signals
- EMS power supply
- Fuse box (FUSE BOX)
- Switches
- Wiring

**916 i TYPE C 24**


The Engine Management System (EMS) consists primarily of:

- Control unit (Electronic Control Unit = ECU)
- ECU signals
- EMS power supply
- Fuse box (FUSE BOX)
- AC-DC Converter
- Switches
- Wiring



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE A

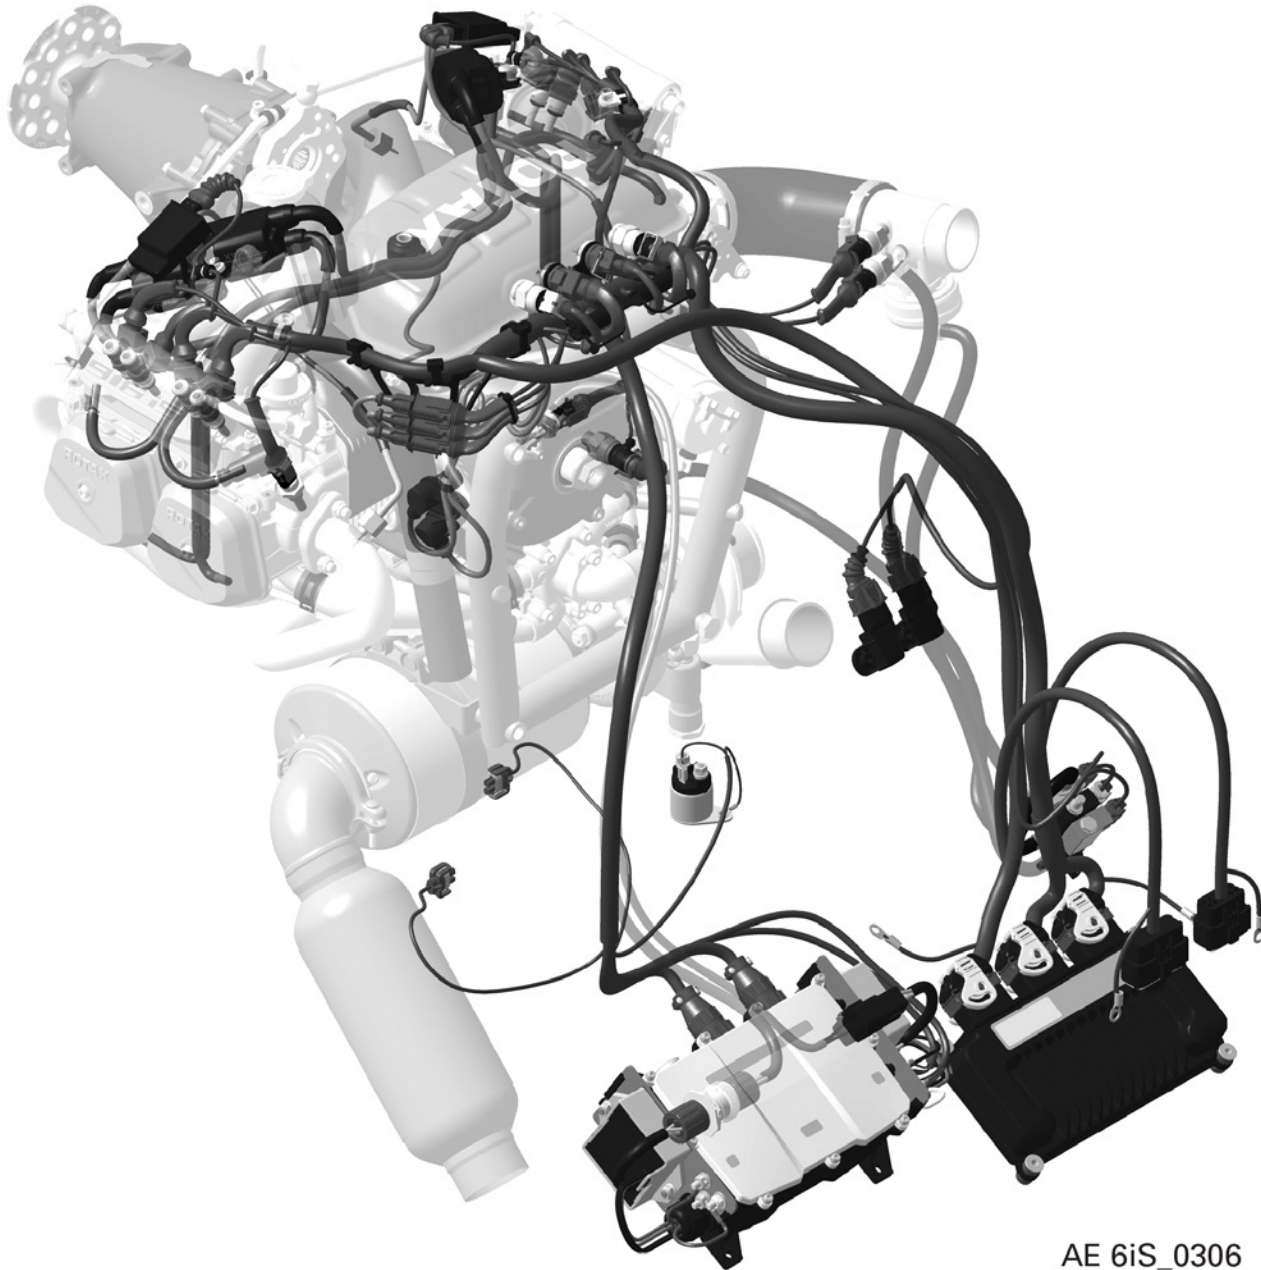


AE 6iS\_0306

Figure 4.1: Position on the engine



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE C24

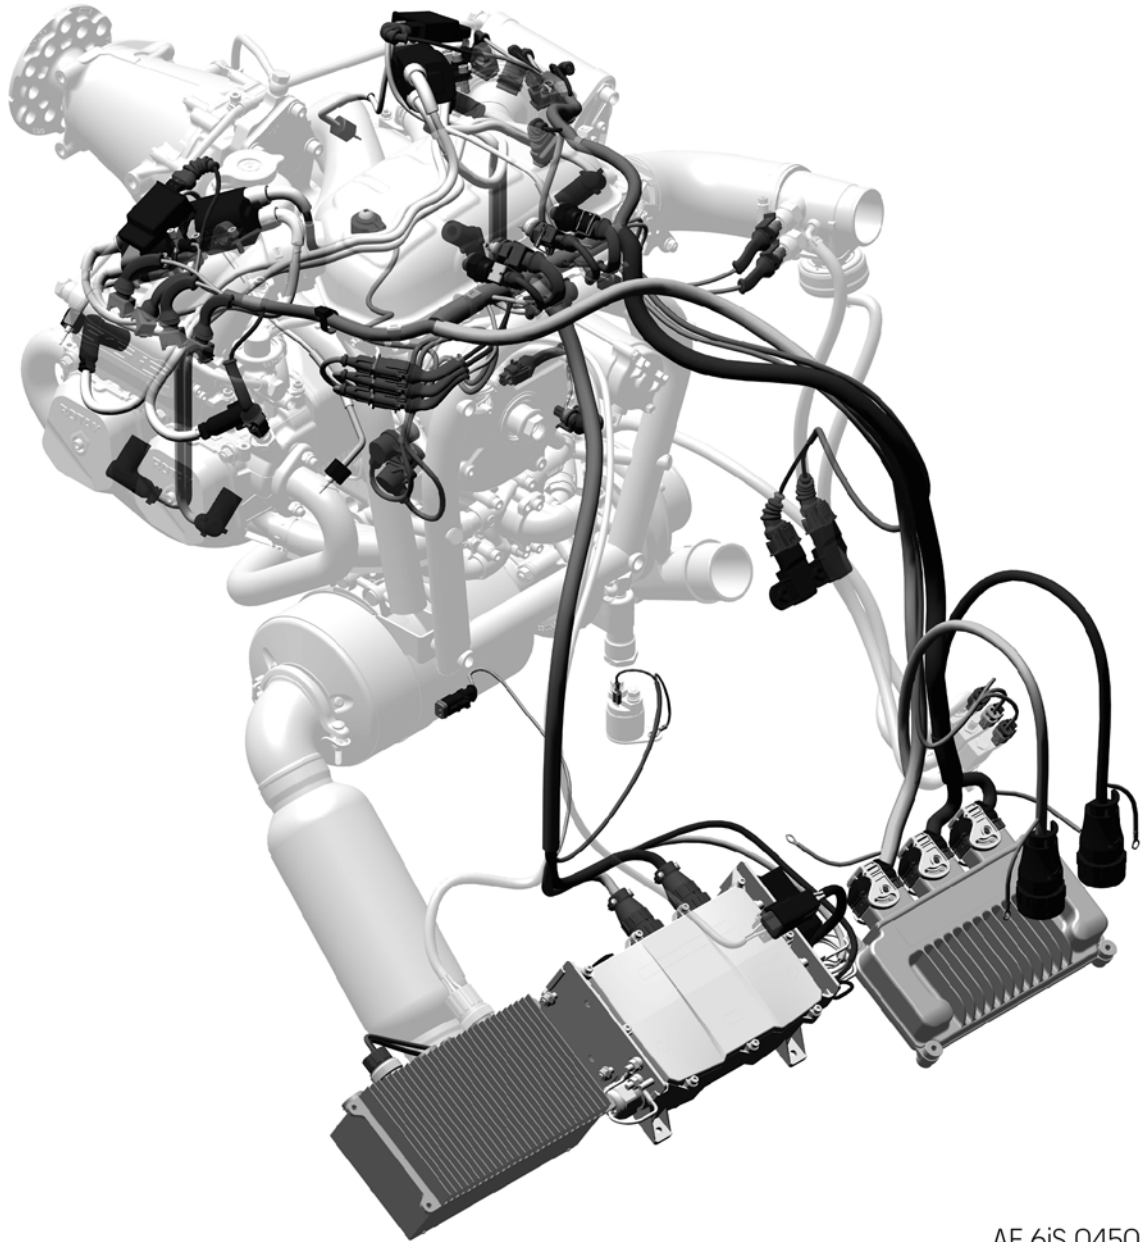

AE\_6iS\_0450

Figure 4.2: Position on the engine

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 76–10–00**  
**ENGINE CONTROL UNIT (ECU)**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>2</b>
<b>System description</b> .....	<b>4</b>
General note .....	4
Safety instruction.....	4
Maintenance .....	4
Technical data .....	5
<b>Removal</b> .....	<b>7</b>
ECU - removal .....	7
<b>Inspection</b> .....	<b>8</b>
ECU - inspection .....	8
<b>Installation</b> .....	<b>9</b>
ECU - installation.....	9
<b>ECU - read out and flashing</b> .....	<b>10</b>
<b>ECU on workbench</b> .....	<b>11</b>
Connection .....	11
Identify current ECU configuration .....	11
Read out log files.....	13
Software Update .....	14
<b>ECU installed in aircraft</b> .....	<b>16</b>
Connection .....	16
Finishing work.....	16

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SPECIAL TOOLS

Description	Part number
B.U.D.S SET LEVEL 1	864021
B.U.D.S SET LEVEL 2	864022
B.U.D.S SET LEVEL 3	864023
Service Wiring Harness 1)	864280
Y-Cable (Sub-D DE9 female on male/male junction) 2) 3)	SW-004
B.U.D.S. Aircraft Software	n.a.
Computer/Notebook/Netbook	n.a.

- 1) Only required if ECU is detached from the wiring harness.
- 2) Only required if the Aircraft has two separated Sub-D DE9 connectors.
- 3) The y-cable must be be according to the wiring diagram in Fig. 1.


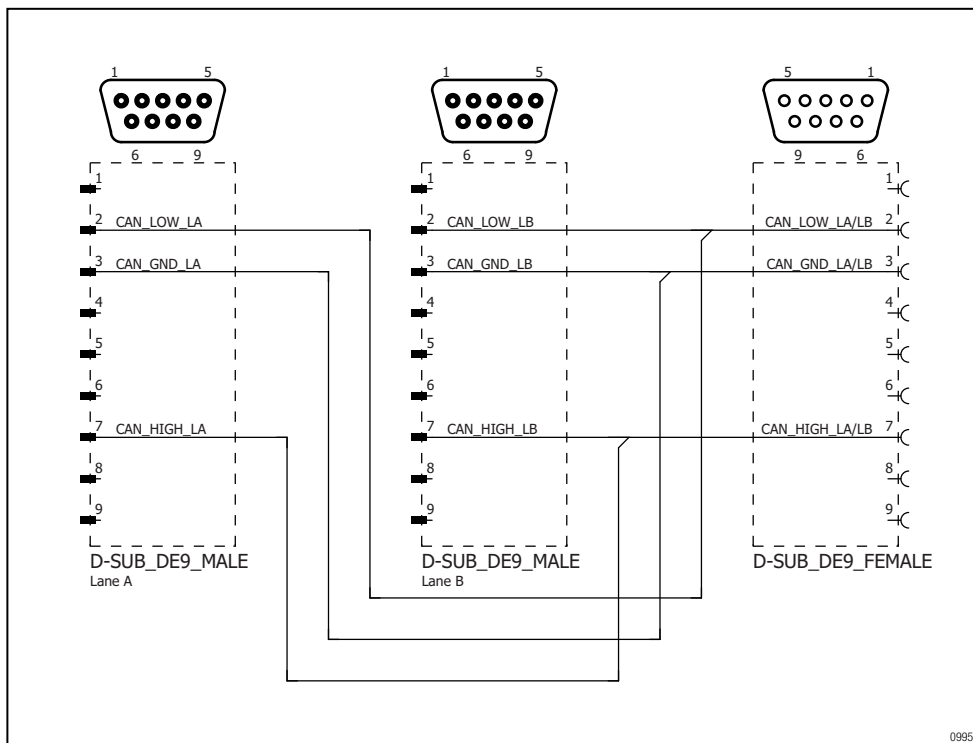


Figure 16.1: Wiring Diagram

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

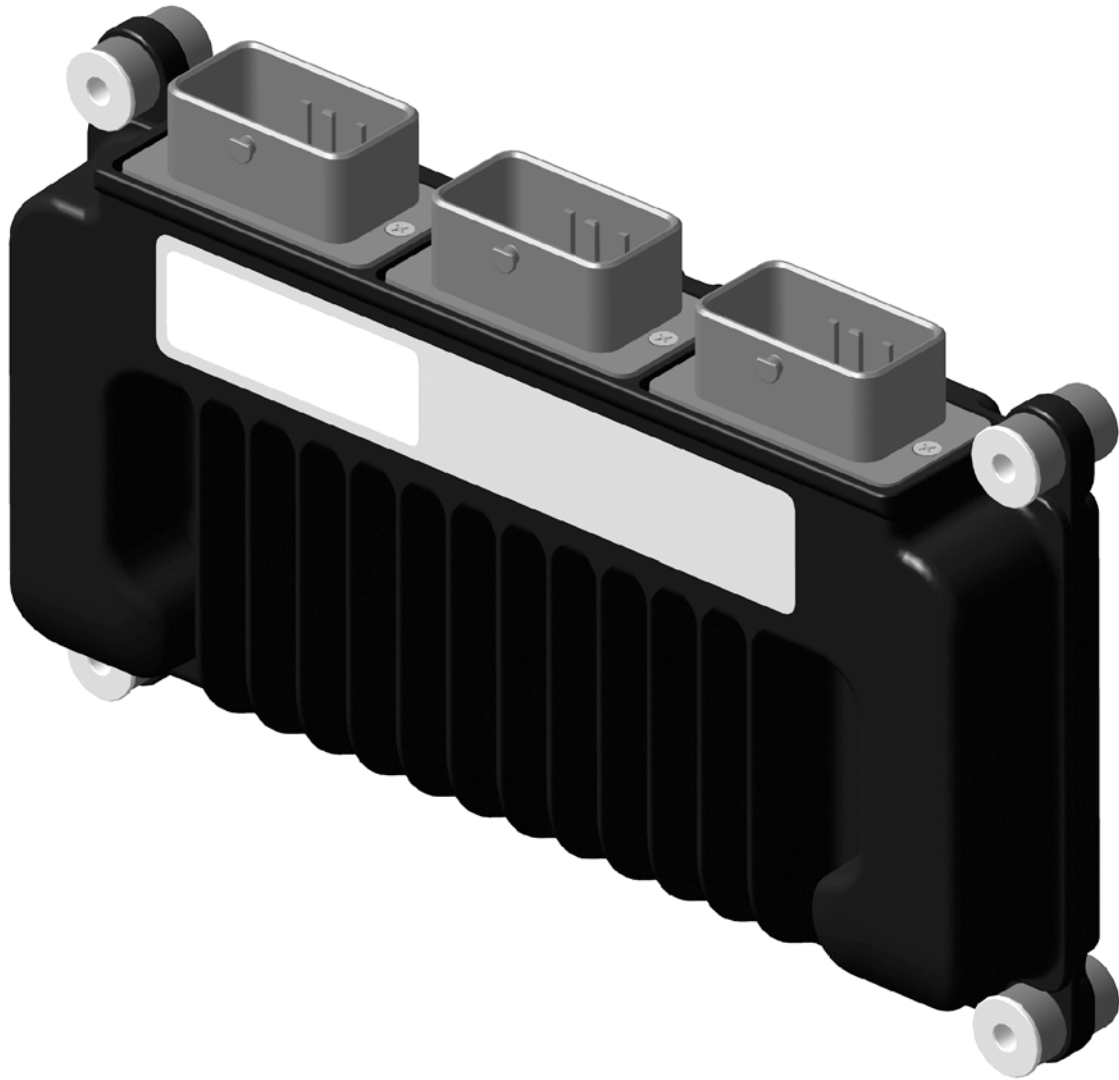

AE 6iS\_0049

Figure 16.2: Engine Control Unit (ECU)

## **SYSTEM DESCRIPTION**

### **GENERAL NOTE**

The Engine Control Unit is the central module in the engine management system.

Sensors continuously measure pressure, rotation speed, temperature, load and knock signals and send these measurement values to the ECU.

The digital ECU uses these measurement values to determine not only the mixture but also the optimum injection point for the fuel and ignition points specifically for each cylinder.

### **NOTE**

*The general safety instructions must be followed during all work on the ECU!*

### **SAFETY INSTRUCTION**

#### **⚠ WARNING**

**Danger of damage to engine! There is a risk of short circuits and cable fires during work on the engine management system.**

All installation work on the engine management system should be carried out with the engine switched off and the battery (negative terminal) disconnected. All engine controls (e.g. switches) must be set in a way that the engine is not supplied with electrical power.

#### **NOTICE**

**Danger of damage to the fuel distribution system and ignition unit!**


### **MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

TECHNICAL DATA

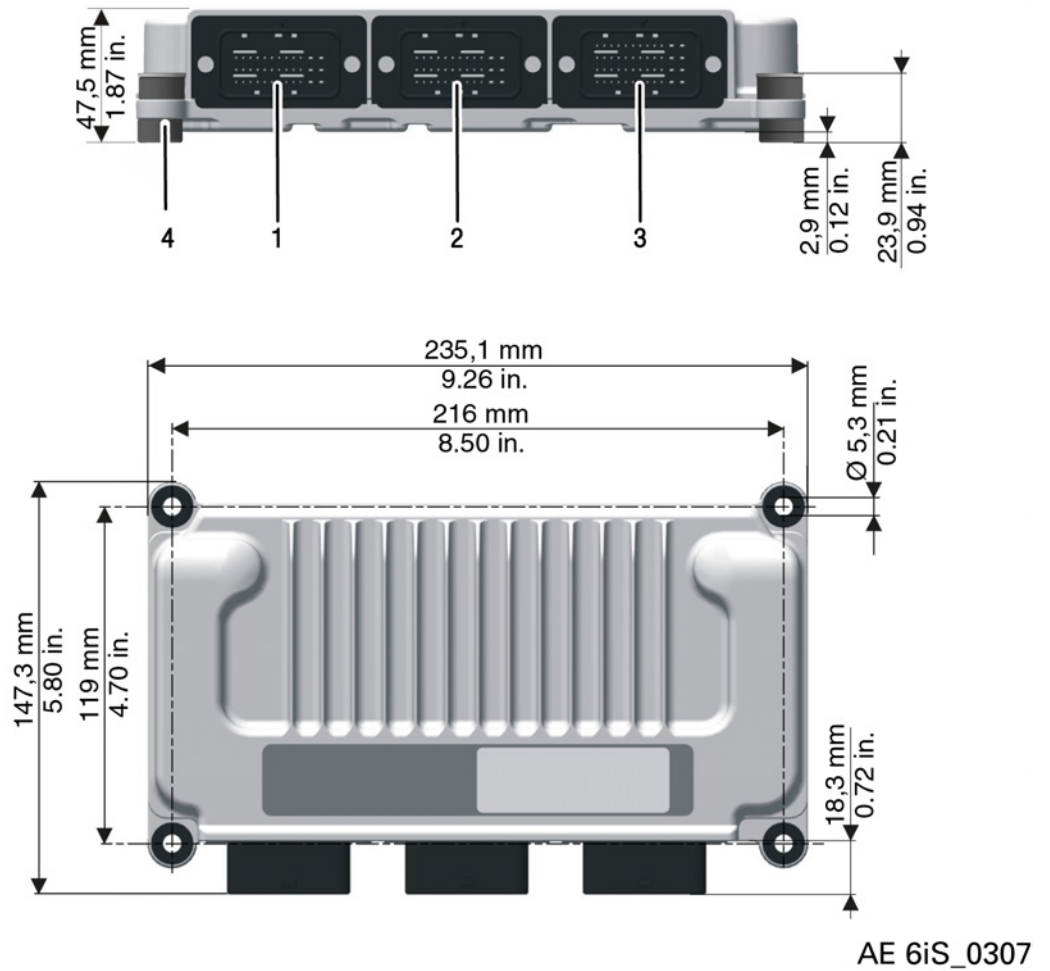

AE 6iS\_0307

Figure 16.3: ECU

- 1 Connector socket A1
- 3 Connector socket B

- 2 Connector socket A2
- 4 Attachment points

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

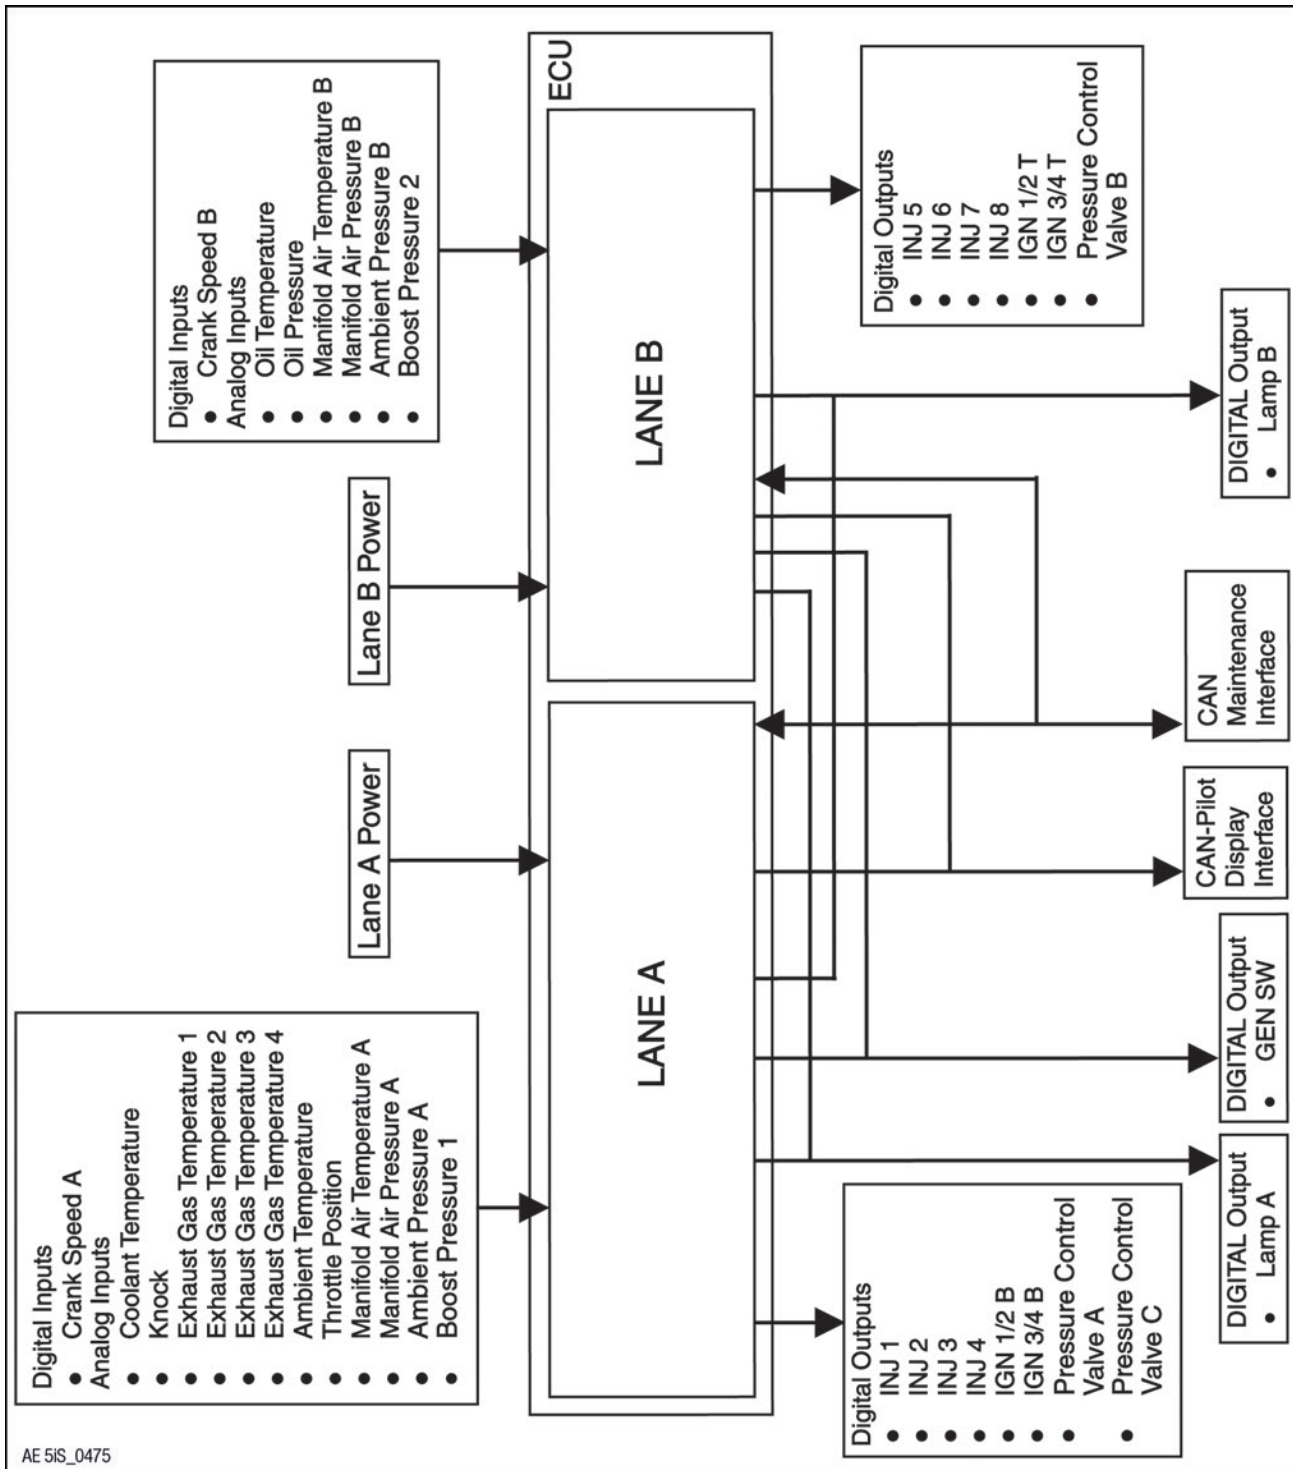


Figure 16.4: Control unit ECU



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

### Preparation


Before the ECU is removed, the work and checks described below must be carried out to identify any malfunctions and rectify them as part of the repair work.

- Turn the ignition switch "OFF"
- General visual inspection. See relevant Maintenance Manual Line (MML) Chapter 05-00-00 and 12-20-00
- Remove the battery grounding cable according to the aircraft manufacturer's specifications

### NOTICE

**The wire connectors of the ECU must not be opened and closed more than 20 times! This must be shown on the device by a clearly visible label with a printed numerical sequence (1-20) and by documentation conforming to self-monitoring guidelines.**

Step	Procedure
1	Unplug the connectors ( labeled LANE A1, LANE A2 and LANE B). <ul style="list-style-type: none"> <li>• Press in the lock so to rotate the lever.</li> <li>• Press the lever down until it latches.</li> <li>• Remove the connector.</li> </ul>

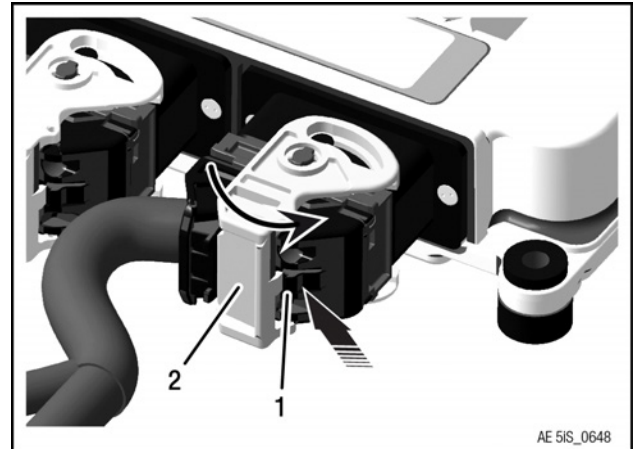


AE 5IS\_0648

Figure 16.6: : TYPICAL

1 Lock

2 Lever

### ECU - REMOVAL

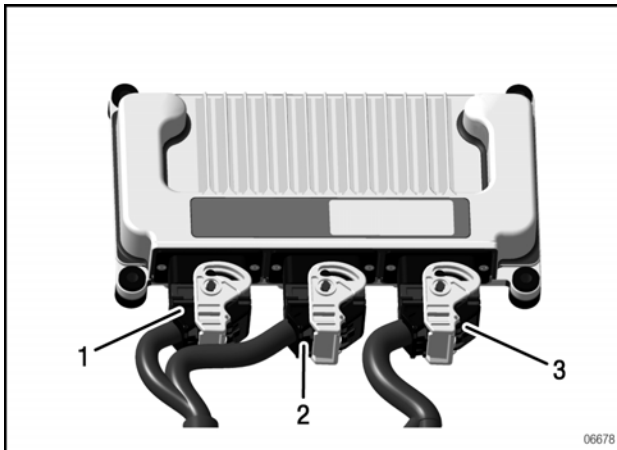

06678

Figure 16.5: : TYPICAL

- |  |                                      |
|--|--------------------------------------|
| <p>1 Connector Coupler (LANE A1)</p> <p>3 Connector Coupler (LANE B)</p> | <p>2 Connector Coupler (LANE A2)</p> |
|--|--------------------------------------|

### NOTICE

**Removal must be carried out according to the aircraft manufacturer's instructions.**

Step	Procedure
2	Remove the mounting bolts/screws according to the aircraft manufacturer's specifications. Remove the ECU.

## **INSPECTION**

### **ECU - INSPECTION**

#### **NOTICE**

The functional test of the ECU can only be carried out with the corresponding software (B.U. D.S. Aircraft), as part of an engine test run (see relevant Maintenance Manual Line 12-20-00) or on an approved test bench.



General visual inspection.  
See Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 and 12-20-00.

<b>Step</b>	<b>Procedure</b>
1	Check the component surfaces of the ECU for damage.

#### **NOTE**

*Deformation and deep scratches are not permissible.*

<b>Step</b>	<b>Procedure</b>
2	Check flat and contact surfaces for Allen/hex. screws and nuts.
3	Check the screws and nuts for damage and wear.

#### **NOTE**

*Replace damaged screws and nuts. Check the corresponding internal thread too when changing the screws.*

<b>Step</b>	<b>Procedure</b>
4	Check the plug connection for damage and wear.
5	Check the rubber mounting grommets for damage.
6	Check the label on the ECU for readability.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSTALLATION

### Preparation

NOTICE
<p>The wire connectors of the ECU must not be opened and closed more than 20 times! This must be shown on the device by a clearly visible label with a printed numerical sequence (1-20) and by documentation conforming to self-monitoring guidelines.</p>

### NOTE

*The ECU can only be replaced as a complete spare part.*

### ECU - INSTALLATION

NOTICE
<p>Installation must be carried out according to the aircraft manufacturer's and to the specifications of the Installation Manual (IM).</p>

Step	Procedure
1	Install the Engine Control Unit according to the aircraft manufacturer's instructions.
2	Plug the wiring harness (main strand) into the ECU and turn lever. <ul style="list-style-type: none"> <li>• Plug in connector LANE A1</li> <li>• Plug in connector LANE A2</li> <li>• Plug in connector LANE B</li> </ul>

### NOTE

*Ensure that the correct connection is made to the corresponding LANE by using the white line marking.*

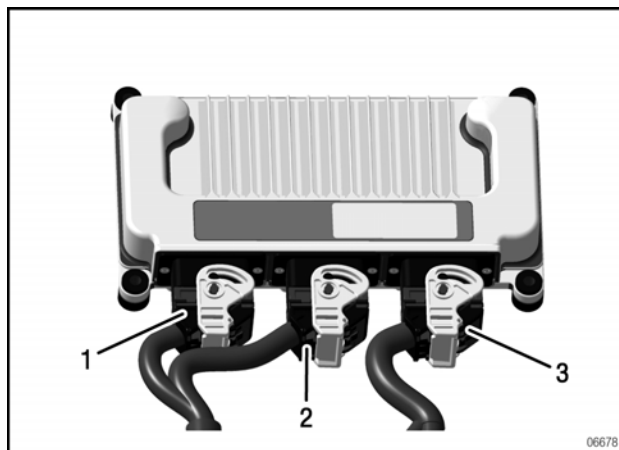


Figure 16.7: : TYPICAL

- 1 Connector (LANE A1)    2 Connector (LANE A2)
- 3 Connector (LANE B)

### NOTE

*Put the lever completely horizontal, place on the connector, then close the lever 90°. The lock must latch.*

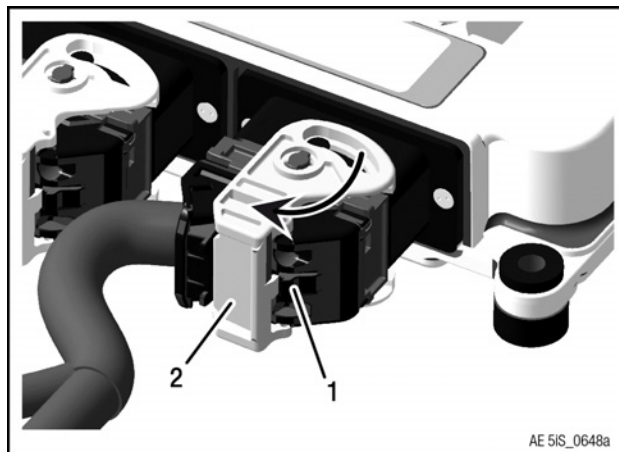


Figure 16.8: : TYPICAL

- 1 Lock                      2 Lever

Step	Procedure
3	Install the battery grounding cable according to the aircraft manufacturer's instructions.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

## **ECU - READ OUT AND FLASHING**

### **Introduction**

The intention of this procedural instruction is to guide users through the process of identifying the software- and hardware version of an ECU. Although ECU software changes must be documented within the engine logbook and on the ECU (update label), it is mandatory to identify the current ECU software- and hardware version by using B.U.D.S. Aircraft software.

Generally this process can be performed in two different ways:

- **Situation 1:** ECU has been removed from an Aircraft. That means the ECU has been disconnected from the wiring harness and removed from the aircraft
- **Situation 2:** ECU is installed in an Aircraft. The ECU is connected to the wiring harness and installed in the Aircraft.

Because the situations are essentially different, those two situations will be described independently in this chapter.

### **NOTE**

*Before extracting logs or loading ECU software make sure you have installed the latest version of B.U.D.S. Aircraft in accordance to SI-916 i-002.*

## ECU ON WORKBENCH

### NOTICE

Do not open and close the ECU connectors more than 20 times, otherwise it is required to change the ECU and the wiring harness. If it is possible it is recommended to perform the software loading process as described in Situation 2 to save connection cycles. For a flawless software loading procedure ensure that the selected power supply is able to provide constant voltage.

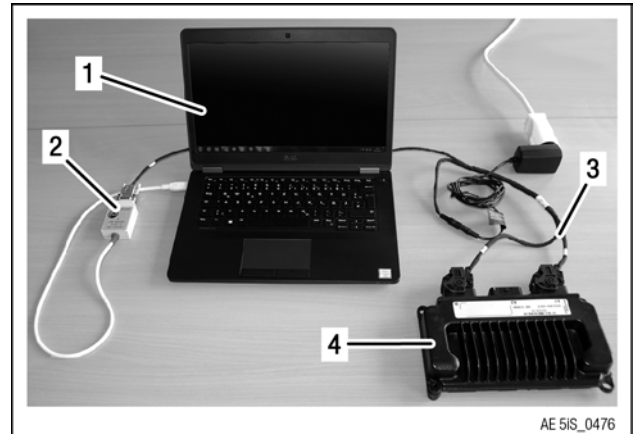


Figure 16.9: Computer with ECU

- |                          |                         |
|--------------------------|-------------------------|
| 1 Computer               | 2 B.U.D.S. Aircraft Set |
| 3 Service Wiring Harness | 4 ECU                   |

## CONNECTION

Step	Procedure
1	Connect B.U.D.S. Aircraft Set with the USB-Port of your computer. If the device is connected and installed the RED indicator light should light up.
2	Connect the B.U.D.S. Aircraft Set Sub-D DE9 connector with the Sub-D DE9 socket of the Service Wiring Harness.
3	Connect the Service Wiring Harness with the LANE A1 and LANE B connectors of the ECU.

### NOTICE

**Please note labeling of the ECU and the Service Wiring Harness.**

Step	Procedure
4	Connect power adapter of Service Wiring Harness with power supply (100-230 V~50/60 Hz, 500 mA).
5	Now the setup should be as shown in following figure.

## IDENTIFY CURRENT ECU CONFIGURATION

Step	Procedure
1	Launch B.U.D.S. Aircraft by double clicking the desktop icon. Alternatively B.U.D.S. Aircraft can also be started through the start menu entry (e.g. Start - Programs - BUDS - run BUDS).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

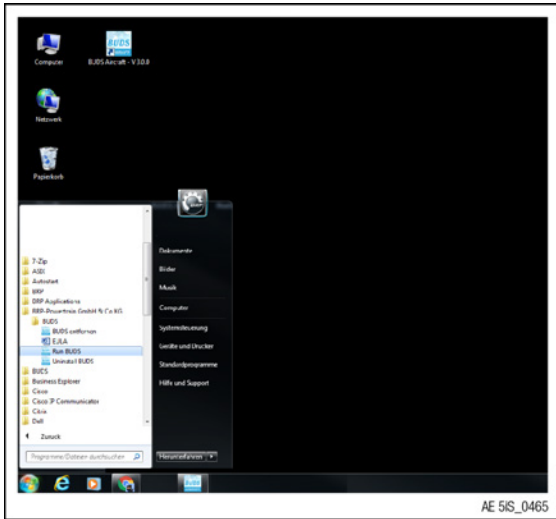


Figure 16.10: B.U.D.S. Aircraft Start

Step	Procedure
2	Wait until the program has been started completely.
3	Check if both Lane Health Indicators (top-left corner) turn green. If they are gray check connections and power supply and/or restart B.U.D.S. Aircraft.
4	Change to "ECU configuration" tab.

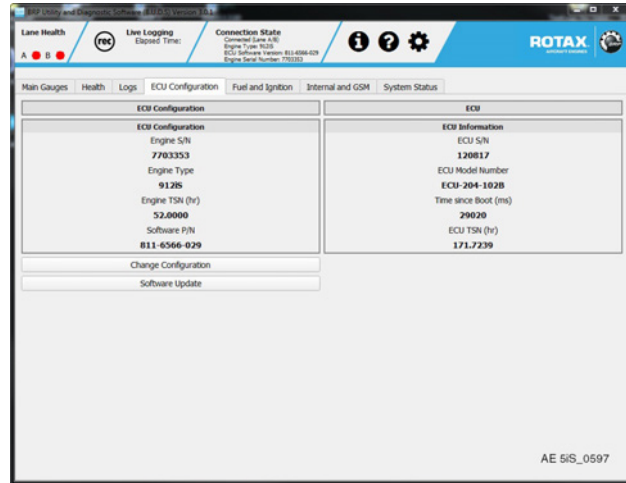


Figure 16.11: ECU configuration tab

Step	Procedure
5	<p>Read and note the values of following fields:</p> <ul style="list-style-type: none"> <li>• Software P/N: This value indicates the current software installed on the ECU.</li> </ul> <p><b>NOTE</b></p> <p><i>Knowing the current "Software Config. Part Number" and "ECU part number" is crucial, when loading ECU software or verifying if ECU has the latest software installed.</i></p>
6	<p>Disconnect the wiring attached to connect the ECU with the computer.</p> <ul style="list-style-type: none"> <li>• Disconnect power supply of the Service Wiring Harness.</li> <li>• Disconnect B.U.D.S. Aircraft Set</li> <li>• Disconnect Service Wiring Harness connectors</li> </ul>

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## READ OUT LOG FILES

### General

To have all information it is recommended to extract Lane A and B and also Fault and Data logs. The extraction process (read out) may take 10 minutes or more depending on the number of logs.

### NOTE

*Fault logs: Fault, failure and warning entries in the ECU.*

*Data logs: ECU data recorded in a rolling memory.*

Step	Procedure
1	Change to "Logs" tab.
2	Select "Extract logs".

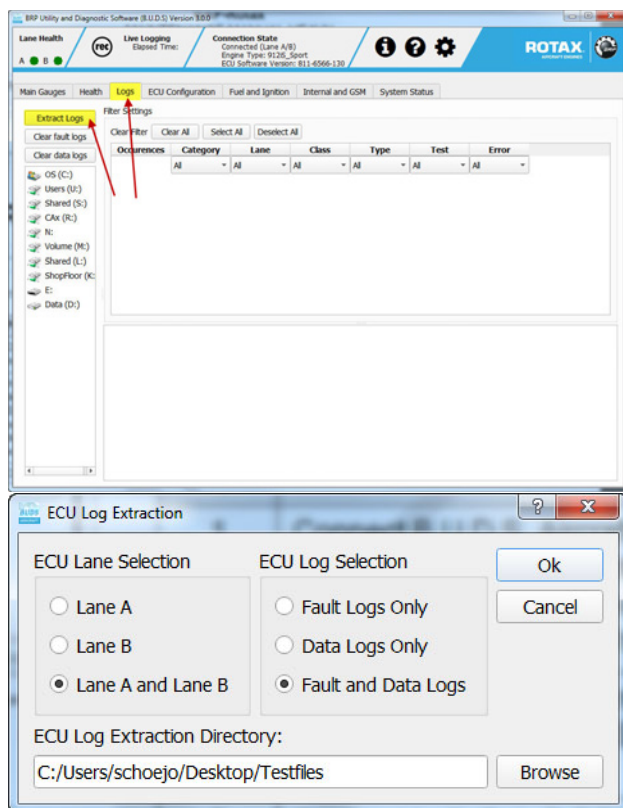


Figure 16.12

Step	Procedure
3	Disconnect and re-connect the power supply if B.U.D.S. Aircraft requests to do so.

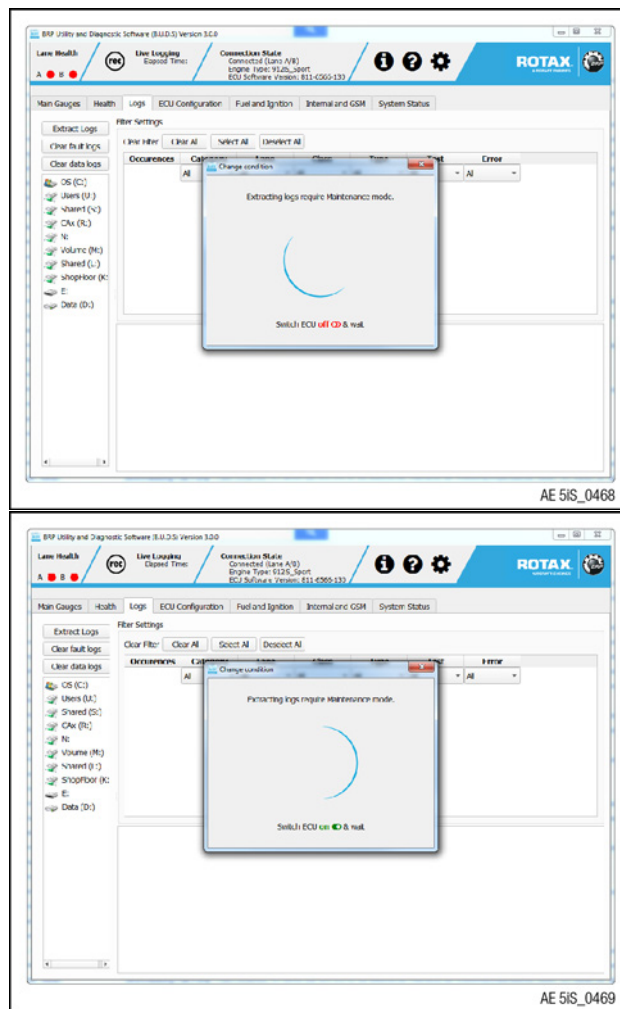


Figure 16.13

### NOTE

*After the extraction process has finished B.U.D.S. Aircraft requests to power cycle the ECU (Disconnect + Re-connect power supply).*

# BRP-Rotax MAINTENANCE MANUAL HEAVY

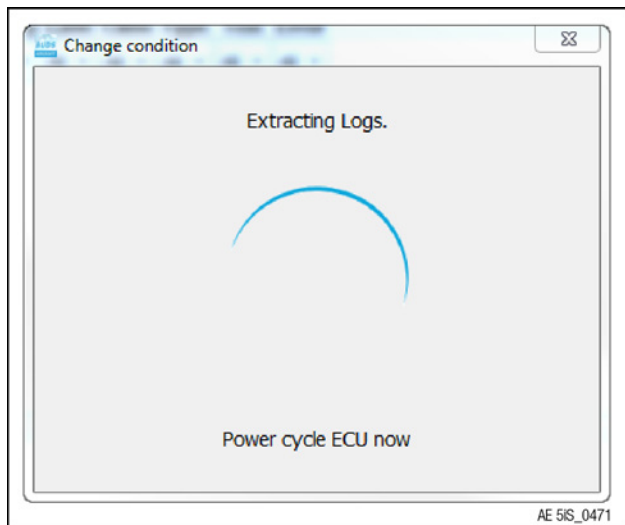


Figure 16.14

Step	Procedure
1	<p>Check the currently installed ECU Software version and the set Engine type.</p> <p><b>NOTE</b></p> <p><i>The last three digits of the “Software P/N” illustrate the currently installed ECU Software version.</i></p>

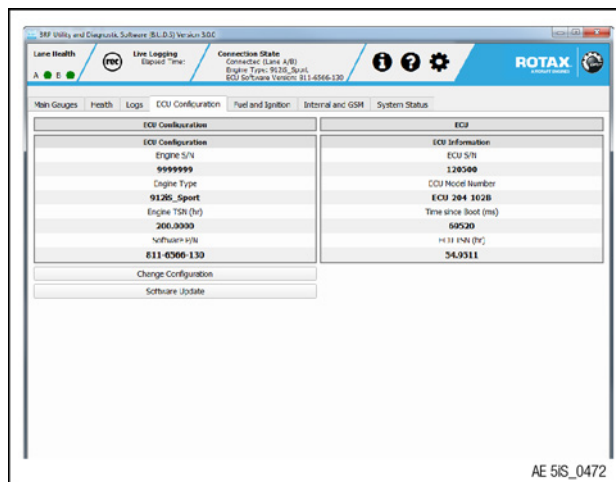


Figure 16.15

Step	Procedure
4	<p>Disconnect the wiring connecting the ECU with the computer.</p> <ul style="list-style-type: none"> <li>• Disconnect power supply of the Service Wiring Harness.</li> <li>• Disconnect B.U.D.S. Aircraft Set</li> <li>• Disconnect Service Wiring Harness connectors</li> </ul>
5	<p>With the Windows Explorer navigate to the created Log-File. This file can now be copied and for example attached to an E-mail or otherwise used.</p>

**⚠ WARNING**

**Only Software that is compatible with a specific engine type is allowed to be flashed on an ECU . If the engine type in the ECU deviates from the hardware configuration of the engine, contact a distributor immediately.**

## SOFTWARE UPDATE

### Preparation

Connect Computer with ECU and identify configuration as described in the previous subsections in this chapter.

Step	Procedure
2	Select “Software Update”.
3	Disconnect and re-connect the power supply if B.U.D.S. Aircraft requests to do so.
4	Select “Browse” and navigate to the appropriate ECU Software file (.ath) and confirm with “Open”.
5	The path to this file and the Software P/N will be shown.



# BRP-Rotax MAINTENANCE MANUAL HEAVY

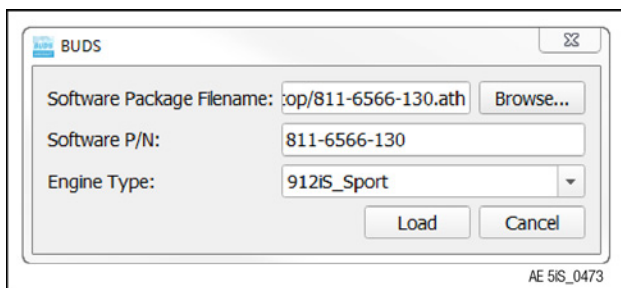


Figure 16.16: : TYPICAL

Step	Procedure
6	Select "Load".
7	After the extraction process has finished B.U.D.S. Aircraft requests to power cycle the ECU (Disconnect + Re-connect power supply).
8	Please wait until the Software flashing process is finished. The process itself should take approximately 1 minute (a status display will indicate the progress).

Step	Procedure
	be done. See following Figure for example of correct health tab (using service harness only).
3	The Software flashing process itself is now complete. Switch "OFF" the ECU.
4	Remove all wiring connections.

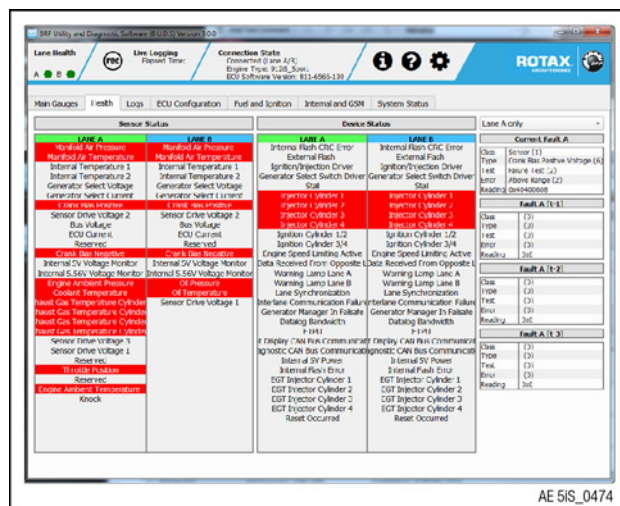


Figure 16.17: Health tab

## Check of the Software version

### NOTE

*If the Software flashing process was interrupted (e.g. the ECU was disconnected from the computer) it is necessary to restart the flashing process with the desired Software. If this flashing process also fails, flash the initial software on the ECU and afterwards retry flashing the desired Software version.*

Step	Procedure
1	Check warning lamp indicators. If both warning lamp indicators (section "Lane Health"/top toolbar) start to flash "RED" after rebooting the ECU, check compatibility between set Engine type and ECU Software version.
2	Change to "Health"-Tab and check the Sensor Status and Device Status. If there are Errors/Events the ECU might be damaged and further investigation needs to

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## ECU INSTALLED IN AIRCRAFT

The identification of current ECU configuration, read out of logs and the software updating process is the same as on workbench, see previous section.

### CONNECTION

#### NOTICE

**The battery must provide constant voltage thru the whole extraction process. If this can't be ensured, an external power supply must be used.**

#### Connect computer with ECU

#### NOTE

*If 2 Sub-D connectors are installed, proceed as follows. If only 1 Sub-D connector is installed, connect B.U.D.S. Aircraft Set directly.*

Step	Procedure
1	Connect B.U.D.S. Aircraft Set with the USB-Port of your computer. If the device is connected and installed the RED indicator light should light up.
2	Connect the B.U.D.S. Aircraft Set Sub- D DE9 connector with the Sub-D DE9 socket of the Y-cable.
3	Connect both Sub-D DE9 sockets of the Maintenance CAN with the Sub-D DE9 connectors of the Y-cable.
4	Now the setup should be as shown in following figure.
5	Activate the EMS by supplying it with aircraft power.

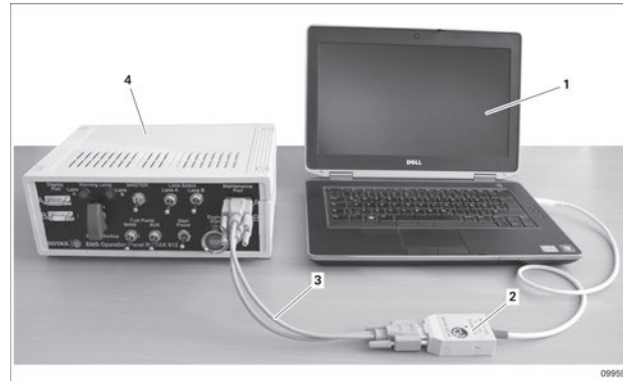


Figure 16.18

- |            |                         |
|------------|-------------------------|
| 1 Computer | 2 B.U.D.S. Aircraft Set |
| 3 Y-cable  | 4 Cockpit (Simulation)  |

### FINISHING WORK

- Attach all the necessary fastenings (e.g. cable ties, holders, clamps etc.) of the wiring harness.
- Transfer the actual data documented when removing the old ECU to the newly installed ECU.
- Delete the error memory of the new ECU.



Carry out an engine test run. See Maintenance Manual Line (MML) for the respective engine type.

- Read out the ECU.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 76-20-00**  
**FUSE BOX**

**TOPICS IN THIS CHAPTER**

<b>System description .....</b>	<b>4</b>
General note .....	4
Safety instruction .....	4
Maintenance .....	4
Technical data .....	5
<b>Fuse box.....</b>	<b>8</b>
Fuse Box — removal .....	8
Regulator A — removal .....	9
Regulator B — removal .....	11
AC-DC CONVERTER – Removal .....	13
<b>Installation.....</b>	<b>14</b>
Regulator A — installation .....	14
Regulator B — installation .....	18
AC-DC CONVERTER – Installation .....	21
Fuses .....	21
Cover – Installation .....	22
Regulator – continuity check .....	22
Fuse box — installation .....	23
Inspection of the fuse box installation .....	24
Finishing work .....	24

# BRP-Rotax MAINTENANCE MANUAL HEAVY

916 i TYPE A

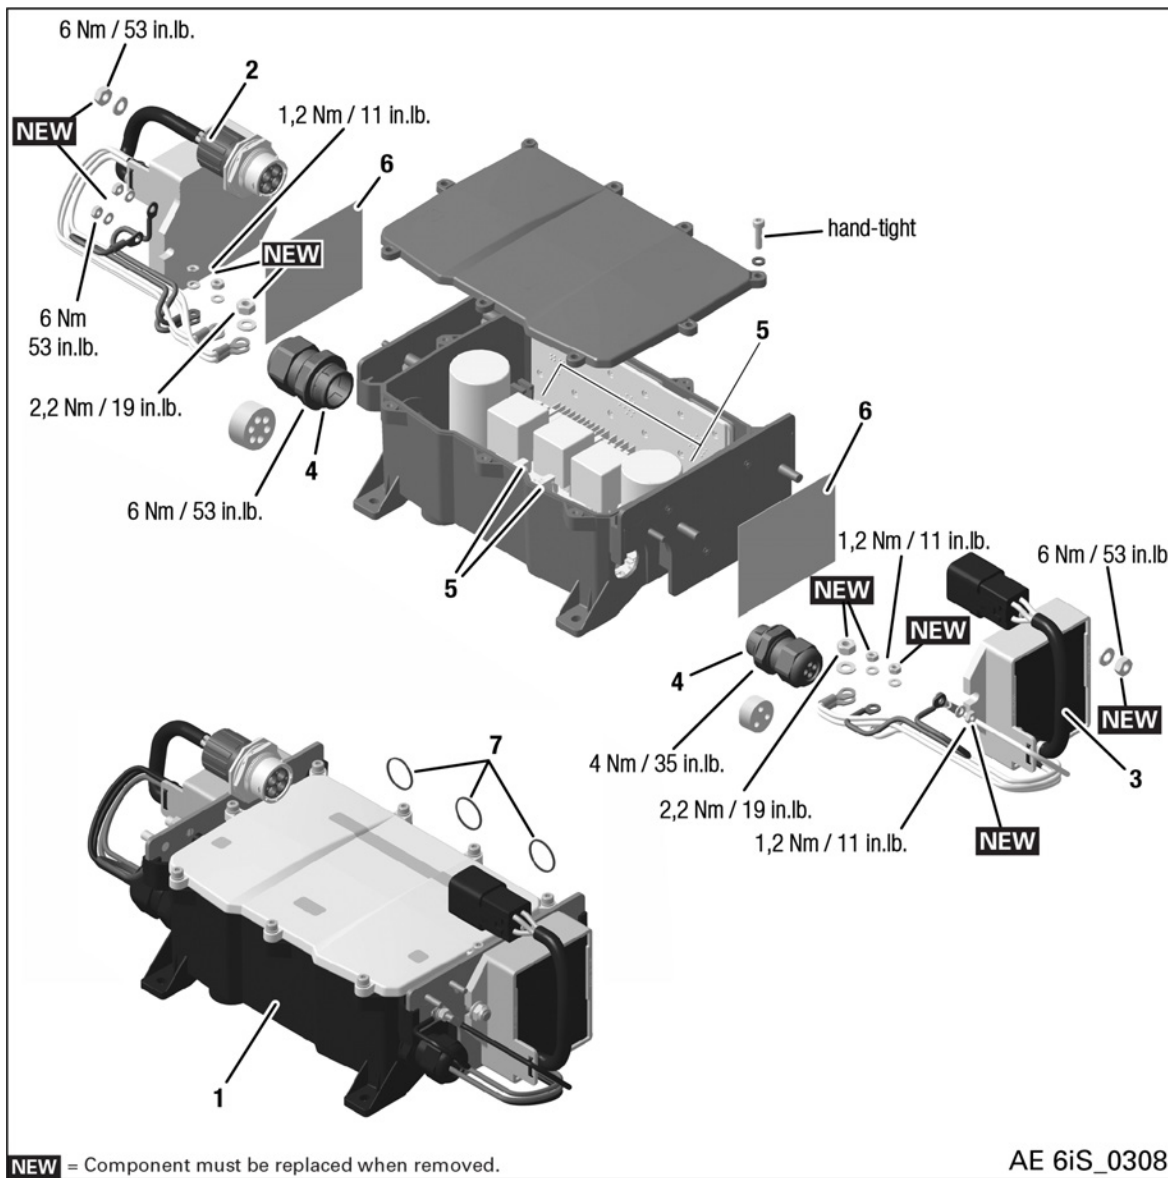


Figure 17.1

- |                  |                     |
|------------------|---------------------|
| 1 Fuse box assy. | 2 Regulator B       |
| 3 Regulator A    | 4 Sealing insert    |
| 5 Fuses          | 6 Heat transfer pad |
| 7 Sealing ring   |                     |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

916 i TYPE C24

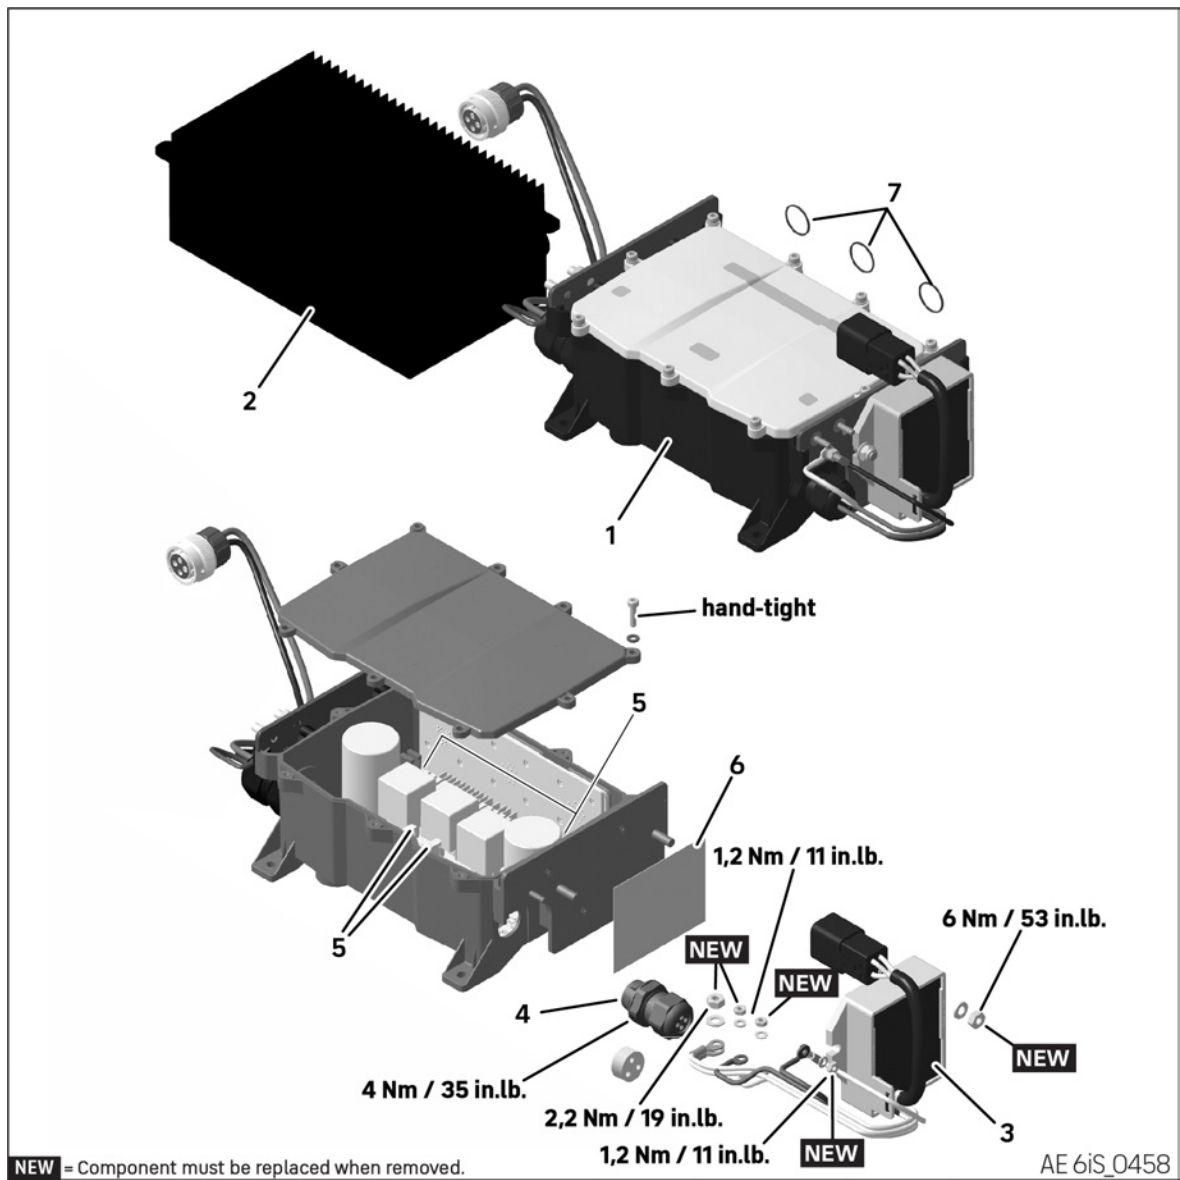


Figure 17.2

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>1 Fuse box assy.</li> <li>3 Regulator A</li> <li>5 Fuses</li> <li>7 Sealing ring</li> </ul> | <ul style="list-style-type: none"> <li>2 24 V AC-DC converter</li> <li>4 Sealing insert</li> <li>6 Heat transfer pad</li> </ul> |
|--|---|

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### SYSTEM DESCRIPTION

#### GENERAL NOTE

All the components of the voltage supply, e.g. fuses, are included in the power supply unit.

#### SAFETY INSTRUCTION

##### **WARNING**

##### **Danger of damage to engine!**

There is a risk of short circuits and cable fires during work on the fuse box. All engine controls (e.g. switches) must be set in a way that the engine is not supplied with electrical power.

#### NOTE

*The general safety instructions must be followed during all work on the fuse box!*

#### MAINTENANCE



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

TECHNICAL DATA

916 i TYPE A


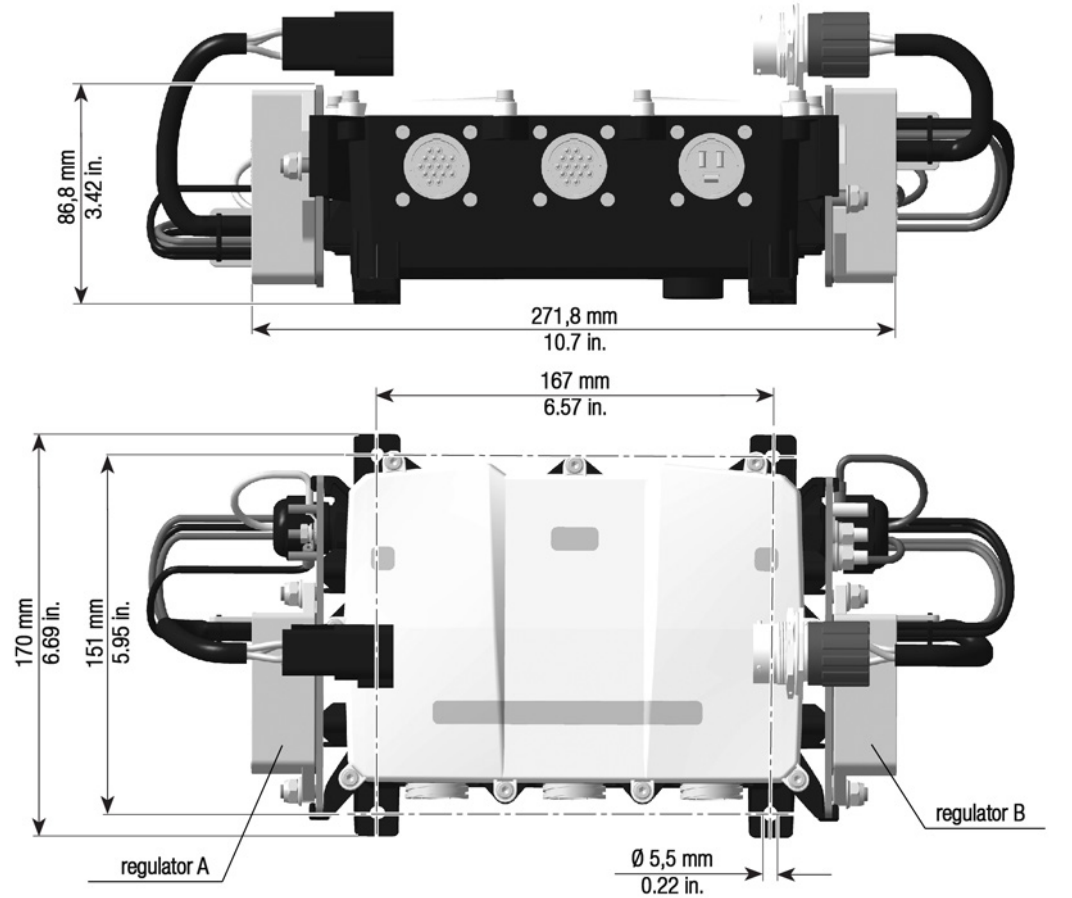


Figure 17.3: Fuse Box

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

916 i TYPE C 24

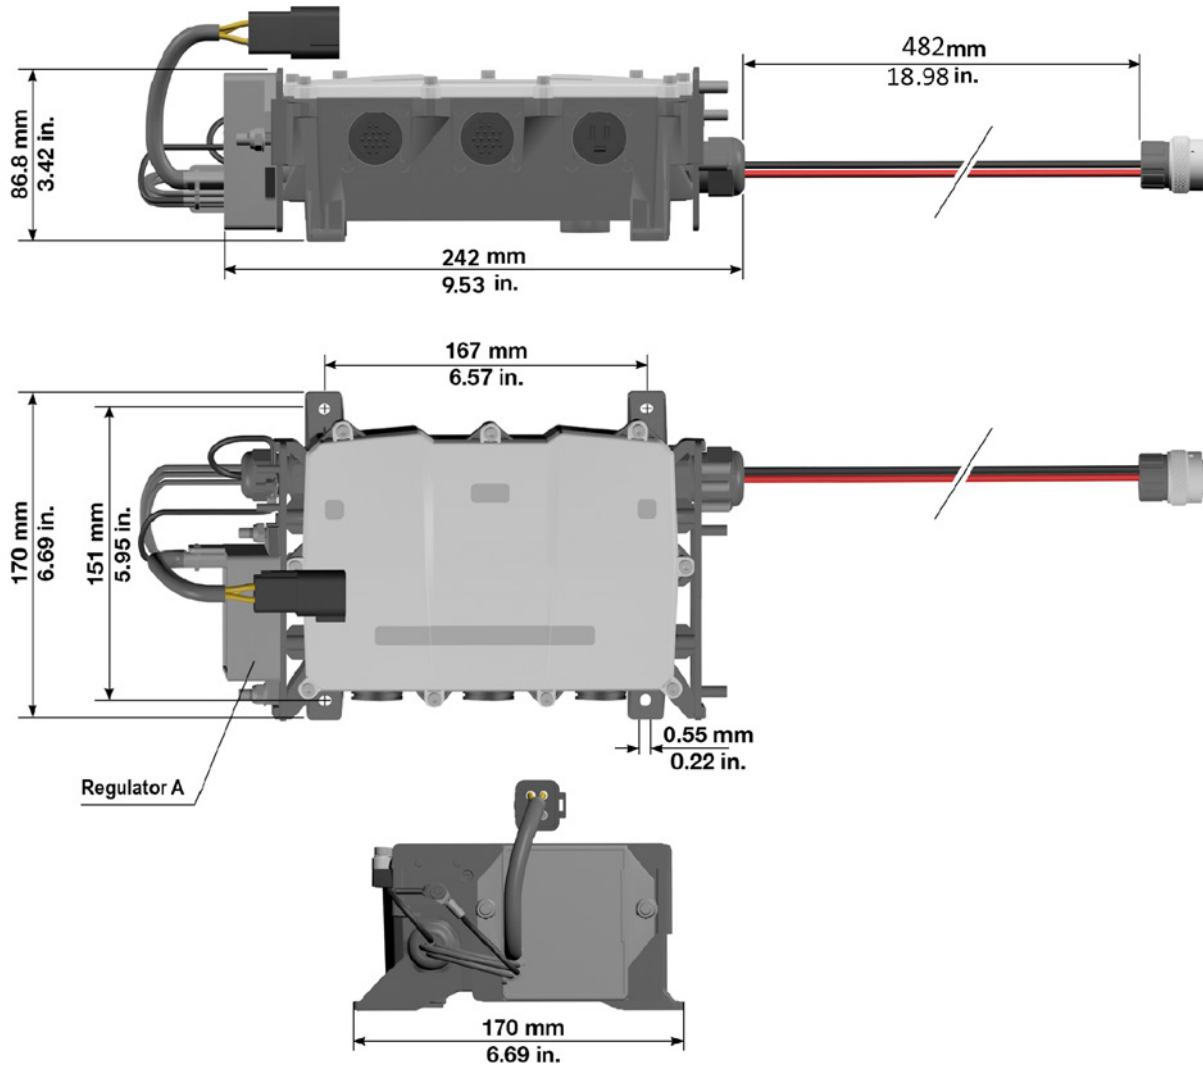

AE\_5iS\_0826

Figure 17.4



BRP-Rotax  
MAINTENANCE MANUAL HEAVY

916 i TYPE C 24

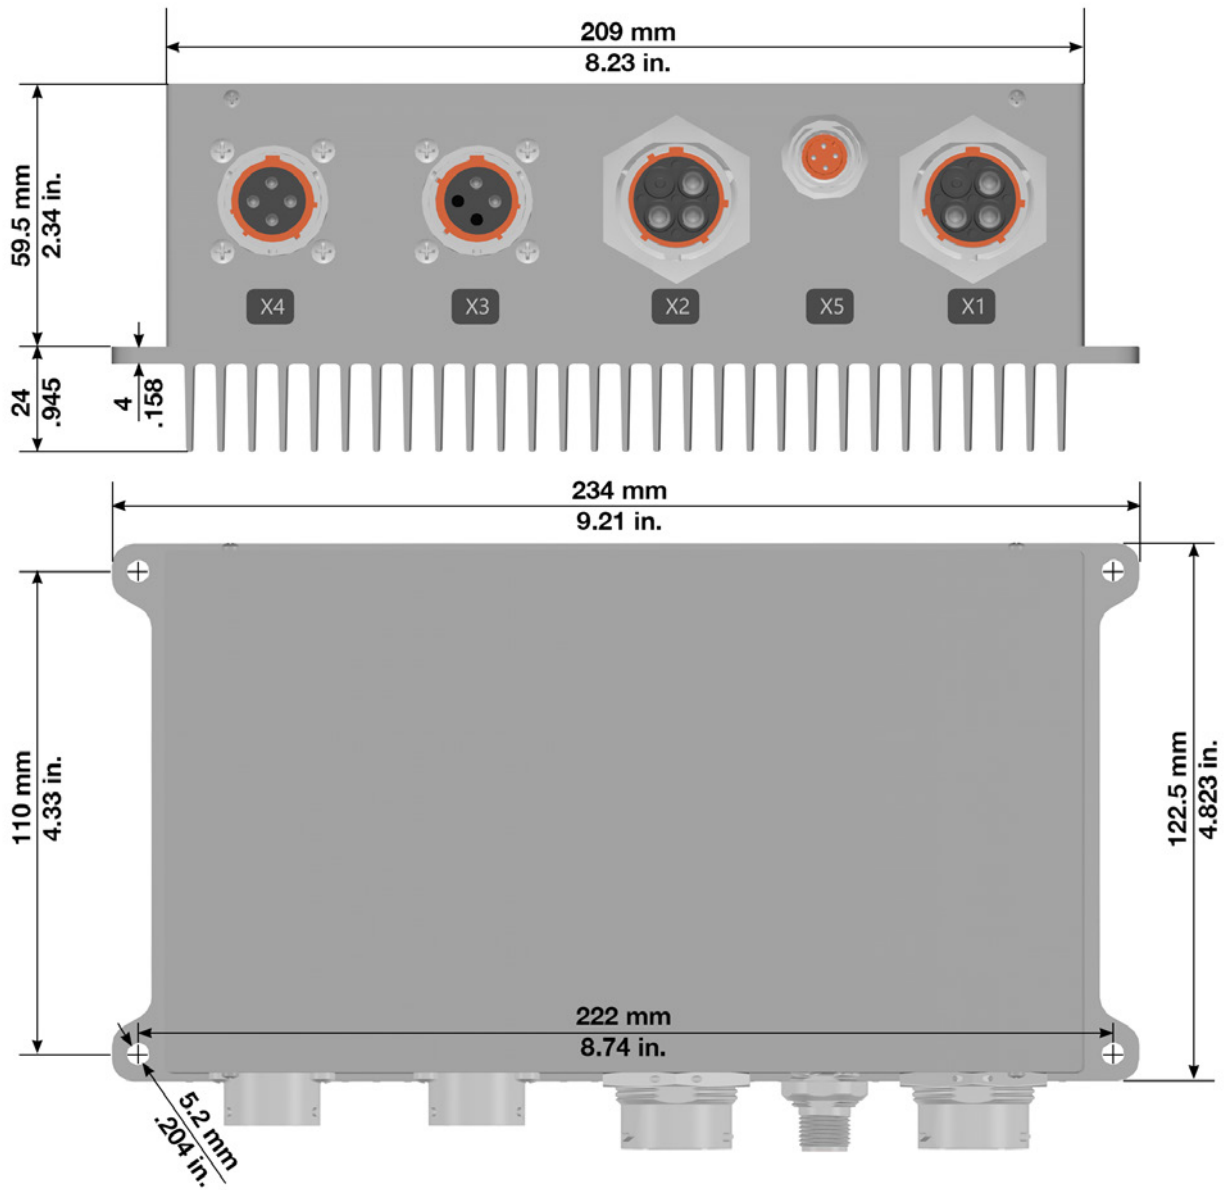


Figure 17.5

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## FUSE BOX

### Preparation

Before the fuse box is removed, the work and checks described below must be carried out to identify any further malfunctions in the engine and rectify them as part of the repair work.

- Turn the ignition switch “OFF”
- General visual inspection. See relevant Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 and 12-00-00.

## FUSE BOX — REMOVAL

### Preparation

- Remove all the necessary fastenings (e.g. cable ties, holders, clamps etc. ) of the wiring harness and the aircraft wiring harness.

Step	Procedure
1	Unplug the aircraft wiring harness in accordance with the aircraft manufacturer's specifications.
2	Unplug the engine wiring harness and grounding connectors from the fuse box. See <a href="#">Chapter 76-50-00 Wiring harness</a> .

#### 916 i TYPE A

Step	Procedure
3	Press in the latch on the top of the connector (Regulator A) or unscrew the connector (Regulator B) and disconnect the connectors.

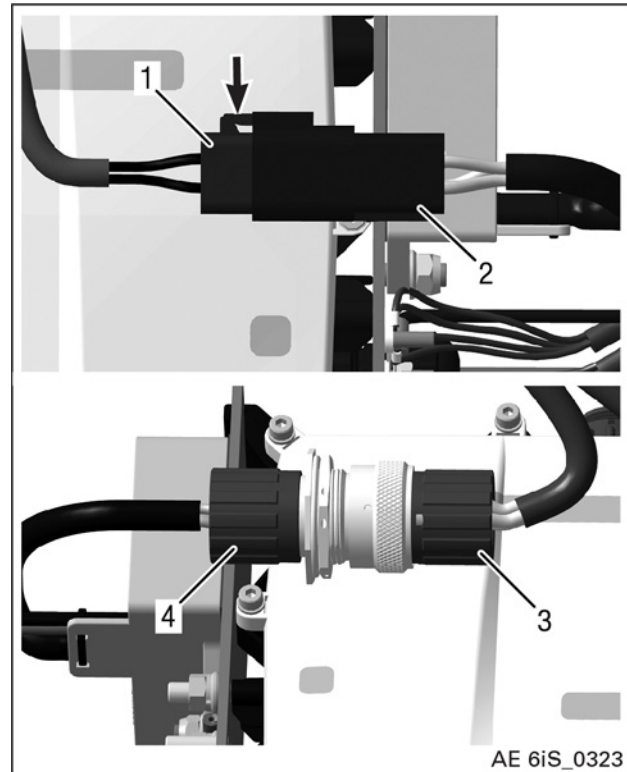


Figure 17.6: : TYPICAL

- |   |                                    |   |                                 |
|---|------------------------------------|---|---------------------------------|
| 1 | Stator connector A (DEUTSCH black) | 2 | Connection socket (Regulator A) |
| 3 | Stator connector B (Amphenol)      | 4 | Connection socket (Regulator B) |

#### 916 i TYPE C24

Step	Procedure
3	Push in the tab on the top of the connector regulator A and at the same time pull the connector out of the connection socket and to disconnect the connector AC-DC Converter X3, first unscrew and then pull the connector out of the connector socket.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

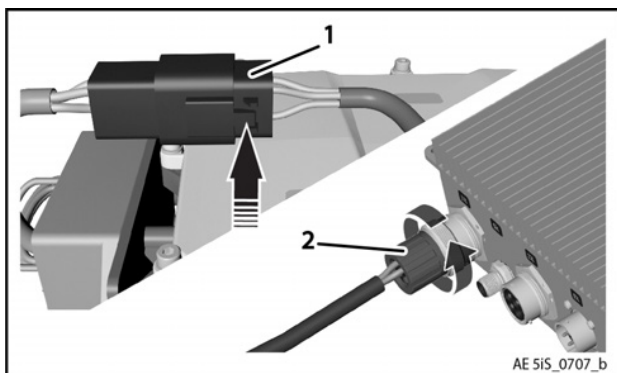


Figure 17.7

- 1 Stator connector A (DEUTSCH black)      2 Stator connector B (Amphenol)

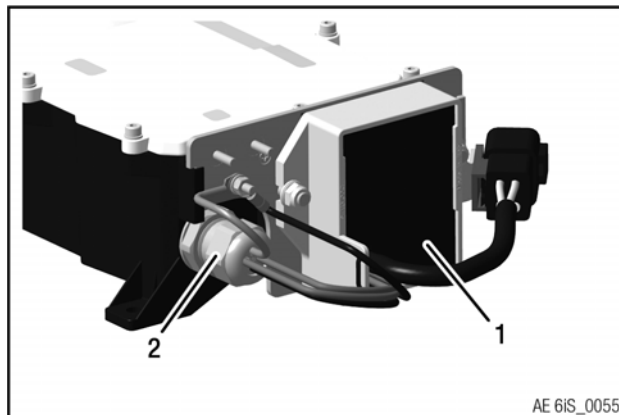


Figure 17.8: : TYPICAL

- 1 Regulator B      2 Cap nut of the gasket screw connection

NOTICE

Removal must be carried out according to the aircraft manufacturer's instructions.

Step	Procedure
4	Remove the attachment screws of the fuse box according to the aircraft manufacturer's specifications. Remove the fuse box.

Step	Procedure
2	Remove the cover. Loosen 9 Allen screws along with plastic washer. Allen wrench A/F 3 mm.

**916 i TYPE A**

## REGULATOR A — REMOVAL

Step	Procedure
1	Loosen the gasket screw connection. Wrench size A/F 25.

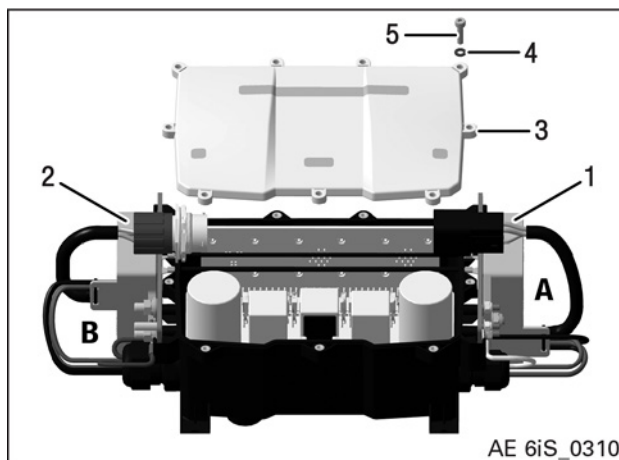


Figure 17.9

- 1 Regulator A      2 Regulator B  
3 Cover      4 Plastic washer  
5 Allen screws

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## 916 i TYPE C24

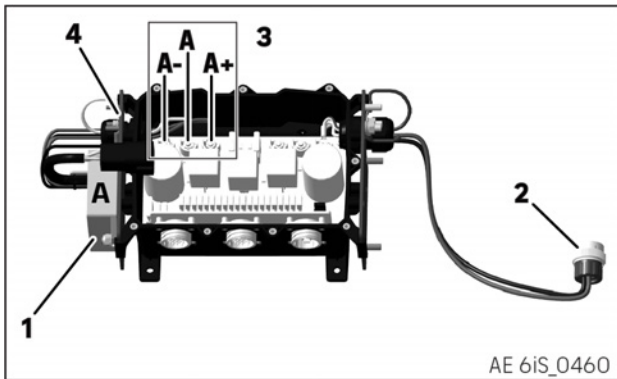


Figure 17.10

- 1 Regulator A
- 2 Connector AC-DC converter
- 3 Cover
- 4 Plastic washer
- 5 Allen screws

Step	Procedure
3	Disconnect the 2 RED/WHITE cable from connection bolt A+. Loosen the M5 lock nut with washer. Wrench size: A/F 8. Loosen the cable from connection bolt.
4	Disconnect the 2 BLACK cable from regulator plate. Loosen the 1 M4 lock nut with washer. Wrench size: A/F 7 Loosen the cable from connection bolt.
5	Disconnect the 1 BLACK cable from connection bolt A. Loosen the M4 lock nut with washer. Wrench size: A/F 7. Loosen the cable from connection bolt.
6	Disconnect the 1 BLACK cable from connection bolt A-. Loosen the M4 lock nut with washer. Wrench size: A/F 7. Loosen the cable from connection bolt.

## 916 i TYPE A

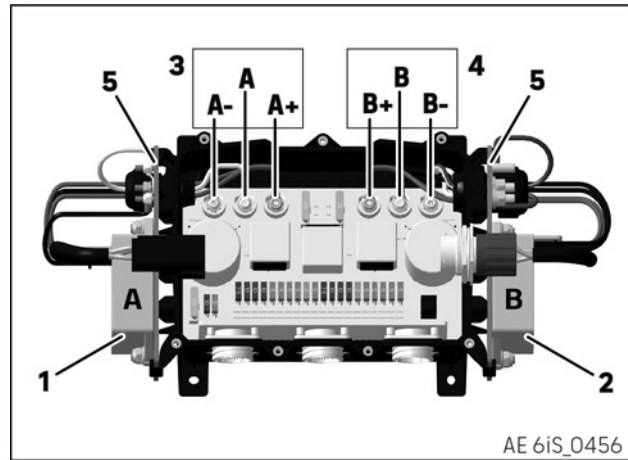


Figure 17.11

- 1 Regulator A
- 2 Regulator B
- 3 Connection bolt regulator A
- 4 Connection bolt regulator B
- 5 Regulator plate

## 916 i TYPE C24

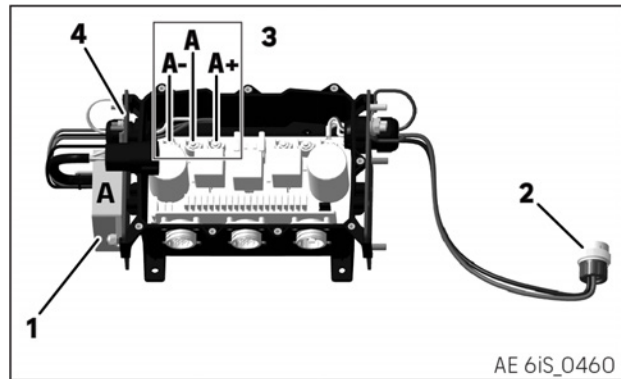


Figure 17.12

- 1 Regulator A
- 2 Connector AC-DC converter
- 3 Cover
- 4 Plastic washer
- 5 Allen screws

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

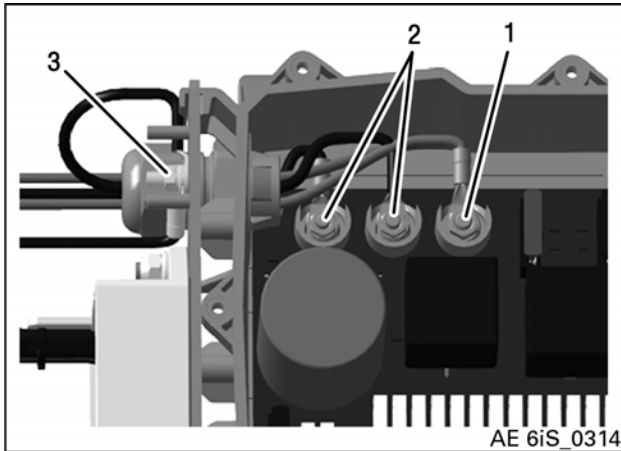


Figure 17.13

- 1 Lock nut M5 with washer
- 2 Lock nut M4 with washer
- 3 Lock nut M4 with washer

Step	Procedure
7	Remove the regulator A. Loosen the 2 M6 lock nut with washer. Wrench size: A/ F 10.

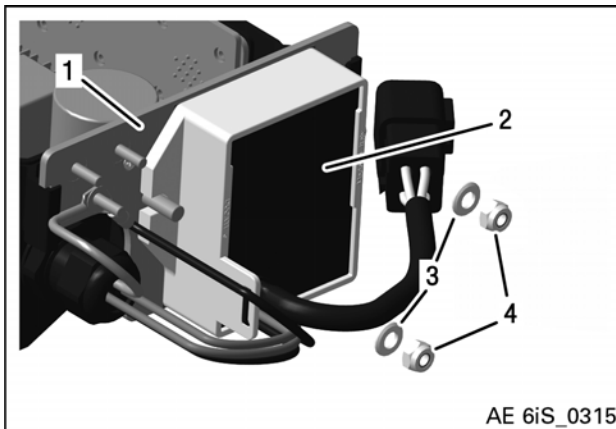


Figure 17.14

- 1 Regulator plate
- 2 Regulator A
- 3 Washer
- 4 Lock nut M6

Step	Procedure
8	Pull the 2 RED-WHITE and the 2 BLACK cables with grommet out of the fuse box. To pull out the cables easily, avoid tilting of the cable lugs.

**NOTE**

*The connecting thread of sealing union must not be dismantled, if you replace the regulator. An exchange of this plastic insert is only necessary, if it is damaged.*

Step	Procedure
9	Remove the regulator A.

**NOTE**

*Be careful when handling the dismantled regulator. The heat transfer pad may adhere to the back side of the regulator and/or the regulator plate.*

**REGULATOR B — REMOVAL**

**916 i TYPE A**

Step	Procedure
1	Loosen the gasket screw connection. Wrench size A/F 30.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

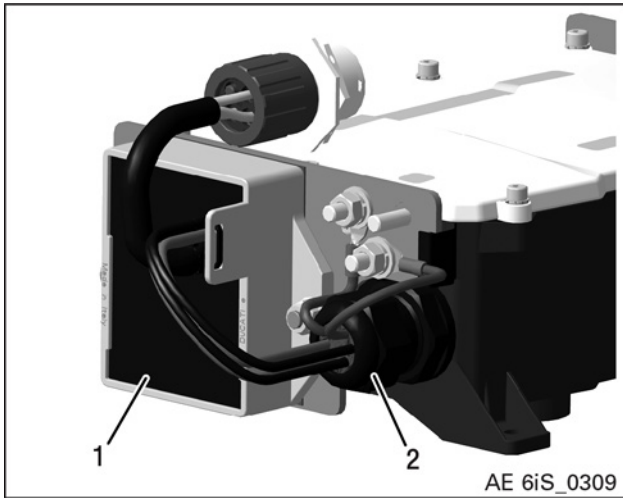


Figure 17.15

- 1 Regulator B                      2 Cap nut of the gasket screw connection

Step	Procedure
2	Remove the cover. Loosen 9 Allen screws along with plastic washer. Allen wrench A/F 3 mm.

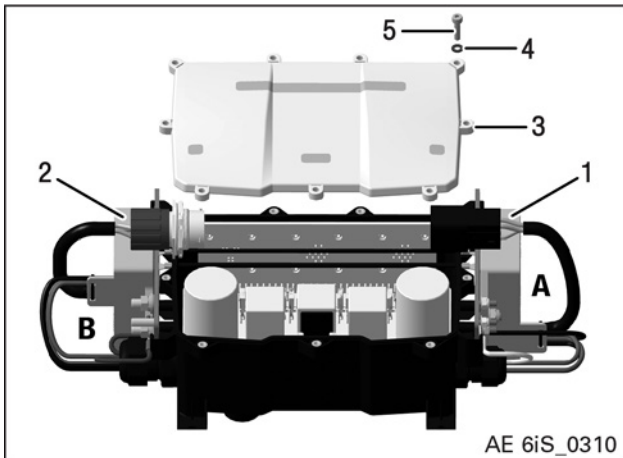


Figure 17.16

- 1 Regulator A                      2 Regulator B  
3 Cover                                4 Plastic washer  
5 Allen screws

Step	Procedure
3	Disconnect the 2 RED/WHITE cable from connection bolt B+. Loosen the M5 lock nut with washer. Wrench size: A/F 8. Loosen the cable from connection bolt.
4	Disconnect the 2 BLACK cable from regulator plate. Loosen the 2 M6 lock nut with washer. Wrench size: A/F 10 Loosen the cable from connection bolt.
5	Disconnect the 2 BLACK cable from connection bolt B. Loosen the M4 lock nut with washer. Wrench size: A/F 7. Loosen the cable from connection bolt.
6	Disconnect the 2 BLACK cable from connection bolt B-. Loosen the M4 lock nut with washer. Wrench size: A/F 7. Loosen the cable from connection bolt.

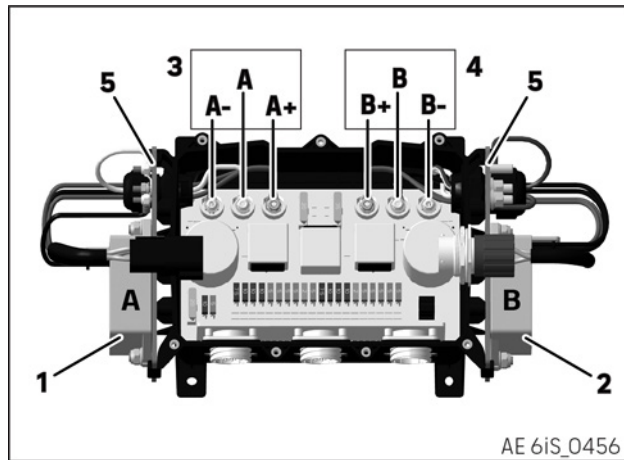


Figure 17.17

- 1 Regulator A                      2 Regulator B  
3 Connection bolt regulator A    4 Connection bolt regulator B  
5 Regulator plate

# BRP-Rotax MAINTENANCE MANUAL HEAVY

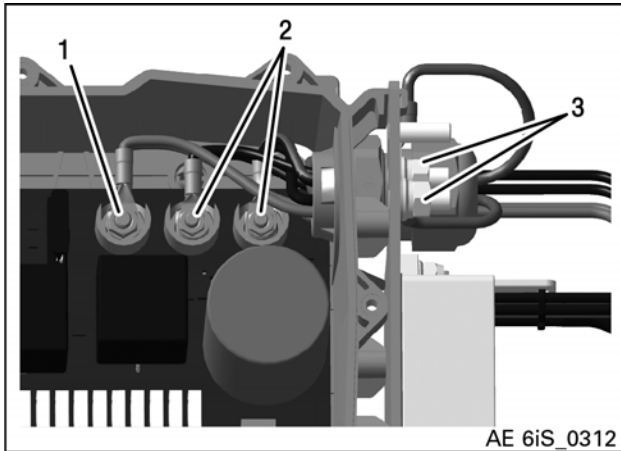


Figure 17.18

- |   |                                  |
|---|----------------------------------|
| <p>1 Lock nut M5 with washer</p> <p>3 Lock nut M6 with washer</p> | <p>2 Lock nut M4 with washer</p> |
|---|----------------------------------|

Step	Procedure
7	Remove the regulator B. Loosen the 2 M6 lock nut with washer. Wrench size: A/ F 10.

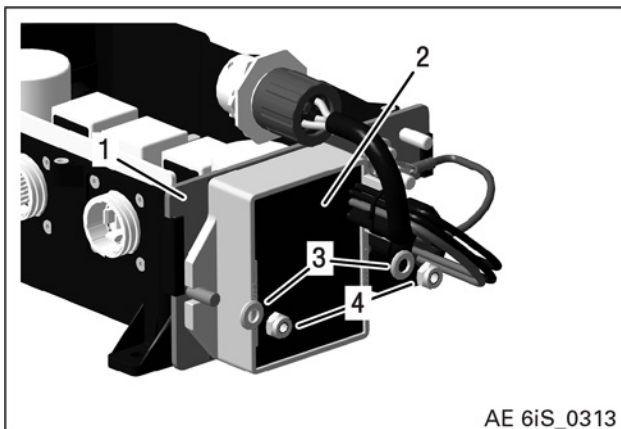


Figure 17.19

- |  |   |
|--|---|
| <p>1 Regulator plate</p> <p>3 Washer</p> | <p>2 Regulator B</p> <p>4 Lock nut M6</p> |
|--|---|

Step	Procedure
8	Pull the 2 RED-WHITE and the 4 BLACK cables with grommet out of the fuse box. To pull out the cables easily, avoid tilting of the cable lugs.

### NOTE

*The connecting thread of sealing union must not be dismantled, if you replace the regulator. An exchange of this plastic insert is only necessary, if it is damaged.*

Step	Procedure
9	Remove the regulator B.

### NOTE

*Be careful when handling the dismantled regulator. The heat transfer pad may adhere to the back side of the regulator and/or the regulator plate.*

## AC-DC CONVERTER – REMOVAL

### 916 i TYPE C24

For removal of the AC-DC Converter, see Installation Manual (IM) for the respective engine type.



# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### INSTALLATION

#### NOTE

If the wire is broken or the connector is defective, the damage can be repaired. The cable must be long enough if the connector is cut off. Repair with the tools described here must comply with the aircraft standard of the respective country.

Part no. from the Connector Set	Associated Tool Set
866420	DEUTSCH HDT-48 - 00
481510	Connector set stator LANE B. DMC® AF8 / DMC® UH2-5 / DMC® QXRT08 or equivalent

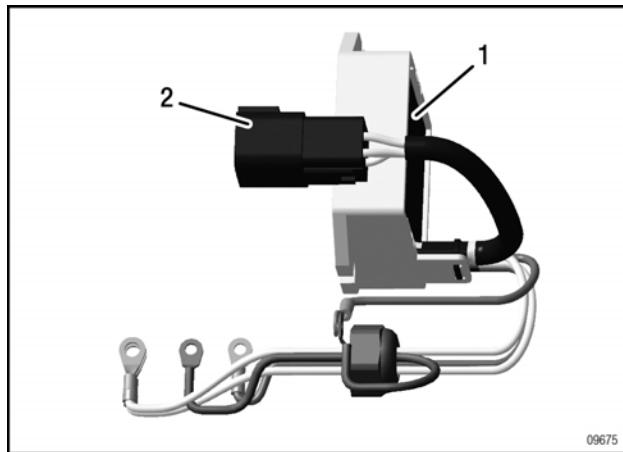


Figure 17.20

- 1 Regulator A                      2 DEUTSCH connector (black)

#### 916 i TYPE A

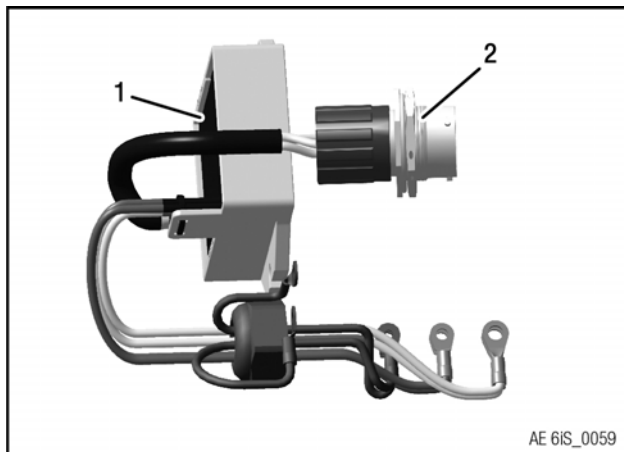


Figure 17.21

- 1 Regulator B                      2 Amphenol connector

**NOTICE**

All hex nuts (self-locking) must be replaced after each removal (e.g. replacement of a regulator).

### REGULATOR A — INSTALLATION

**NOTICE**

The surface on the back of the regulator must be cleaned before applying the heat transfer pads. Remove the protective film with caution, because rapid stripping can damage the heat transfer pad.

Step	Procedure
1	Clean the regulator plate. Remove residues of the thermal paste or the heat transfer pads.
2	Bonding the heat transfer pad to the regulator A. Remove the protective film from heat transfer pad and stick the heat transfer pad with the adhesive surface onto the regulator A (avoid any folds or bubbles).



# BRP-Rotax MAINTENANCE MANUAL HEAVY

**NOTE**

*When using a heat transfer pad, no additional application of a thermal compound is required.*

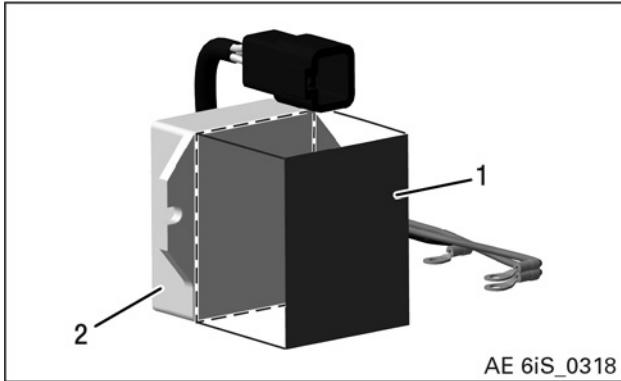


Figure 17.22

- 1 Heat transfer pad      2 Regulator

**NOTICE**

**The regulator must be mounted so that it does no project beyond the regulator plate.**

Step	Procedure
3	Fasten regulator A on the regulator plate with 2 new lock nuts M6 and washers 6.4. Tightening torque: 6 Nm (53 in. lb). Wrench size: A/F.

**NOTE**

*Tighten the two new lock nuts M6 alternately to ensure a smooth seat of rectifier regulator on the regulator plate.*

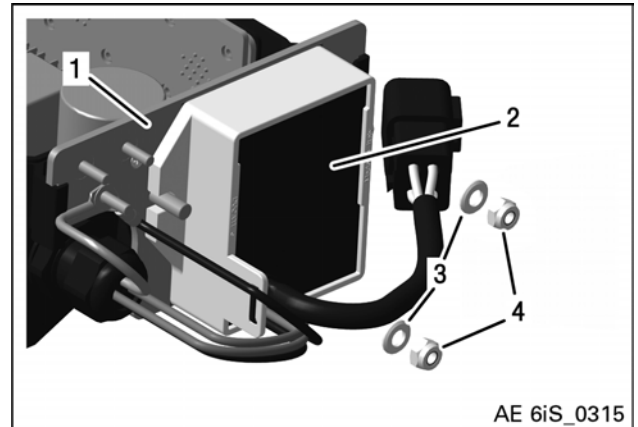


Figure 17.23

- 1 Regulator plate      2 Regulator B  
3 Washer 6.4      4 Lock nut M6

Step	Procedure
4	Remove the connecting thread of sealing union of the rectifier regulator that should be mounted.

**NOTE**

*The connecting thread of sealing union is included with each regulator as replacement part. An exchange of this plastic insert is only necessary if it is damaged.*

# BRP-Rotax MAINTENANCE MANUAL HEAVY

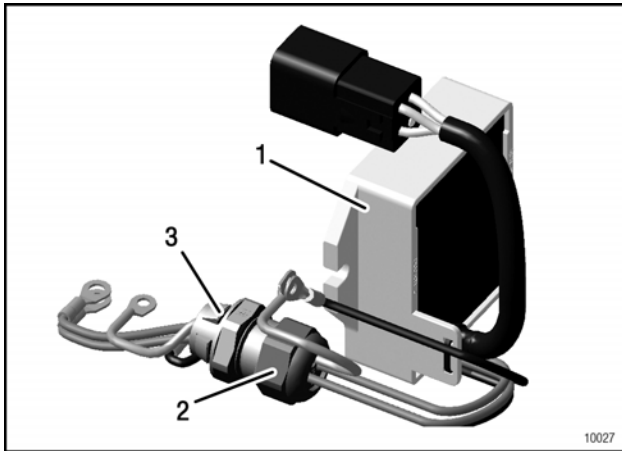


Figure 17.24

- 1 Regulator A
- 2 Cup nut of the gasket screw connection
- 3 Thread of the gasket screw connection

**NOTICE**

**When pressing in the gasket screw connection, avoid damaging the connecting thread.**

Step	Procedure
5	Pull all the cables 2 RED/WHITE (marking: A+) and 2 BLACK (marking: A and A-) into the fuse box. The plastic insert must be pressed completely into the connecting thread of sealing union.

**NOTICE**

**Note the wire marking and labeling of the connecting bolts (labeled on the board of the fuse box). All cables must be installed without kinks.**

**NOTICE**

**The ring terminals attached to the connecting ports A-, A and A+ must not touch each other (except those rings which are attached to the same connection bolt).**

Step	Procedure
6	BLACK cable (1 pcs, labeled: A-) connect to connection bolt A-. Fasten the cable lug with new lock nut M4 and washer 4.3 on the connection bolt. The crimping of the lower cable lug must be directed towards the board of fuse box. The crimping of the upper cable lug must be directed toward the cover of the fuse box Tightening torque: 1.2 Nm (11 in.lb). Wrench size: A/F 7.
7	BLACK cable (1 pcs, labeled: A) connect to connection bolt A. Fasten the cable lug with new lock nut M4 and washer 4.3 on the connection bolt. Tightening torque: 1.2 Nm (11 in.lb). Wrench size: A/F 7.
8	RED-WHITE cable (2 pcs, labeled: A+) connect to connection bolt A+. Fasten the cable lug with new lock nut M5 and washer 5.3 on the connection bolt. The crimping of the lower cable lug must be directed towards the board of fuse box. The crimping of the upper cable lug must be directed toward the cover of the fuse box Tightening torque: 2.2 Nm (19 in.lb). Wrench size: A/F 8.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## 916 i TYPE A

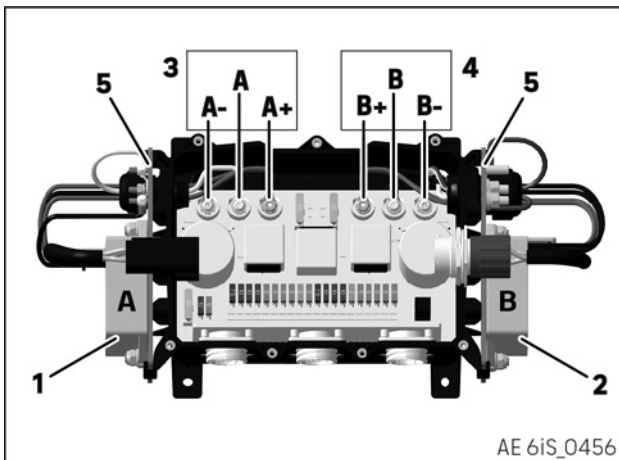


Figure 17.25

- |  |   |
|--|---|
| <p>1 Regulator A</p> <p>3 Connection bolt regulator A</p> <p>5 Regulator plate</p> | <p>2 Regulator B</p> <p>4 Connection bolt regulator B</p> |
|--|---|

## 916 i TYPE C24

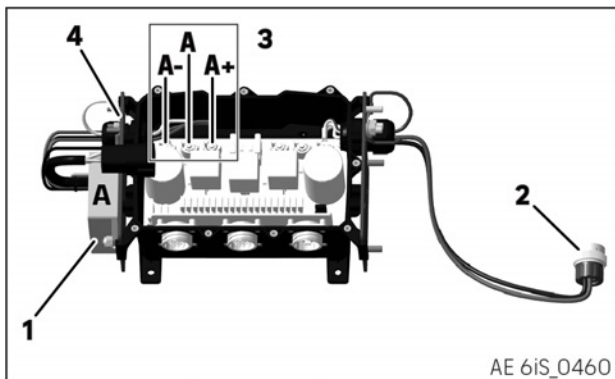


Figure 17.26

- |   |   |
|---|---|
| <p>1 Regulator A</p> <p>3 Connection bolt regulator A</p> | <p>2 Connector AC-DC converter</p> <p>4 Regulator plate</p> |
|---|---|

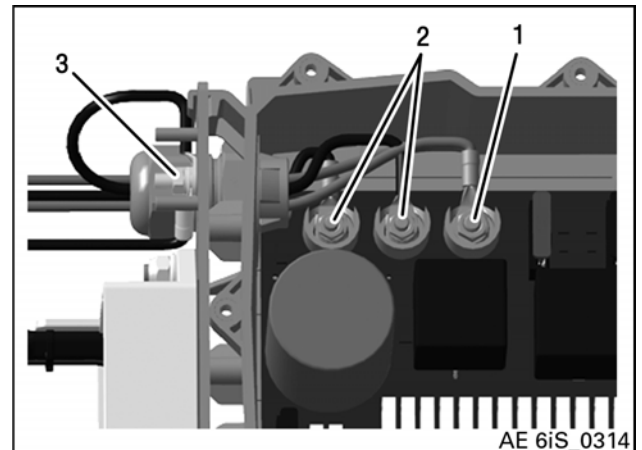


Figure 17.27

- |   |                                      |
|---|--------------------------------------|
| <p>1 Lock nut M5 with washer 5.3</p> <p>3 Lock nut M4 with washer 4.3</p> | <p>2 Lock nut M4 with washer 4.3</p> |
|---|--------------------------------------|

Step	Procedure
9	Connect the unlabeled cable ends coming out of the fuse box and the regulator (2 pcs. BLACK) with the regulator plate. Fasten the cable lug with locking nut M4 and washer 4.3 on the connection bolt. Tightening torque: 1.2 Nm (11 in.lb). Wrench size: A/F 7.
10	Fasten gasket screw connection. Tightening torque: 4 Nm (35 in.lb). Wrench size: A/F 25.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

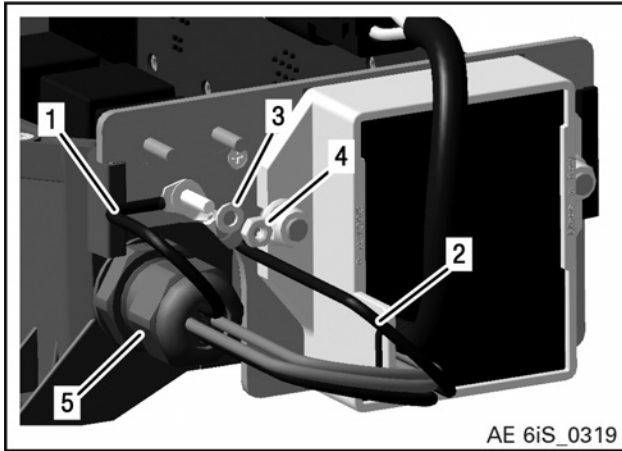


Figure 17.28

- 1 Cable Black
- 2 Cable Black
- 3 Washer 4.3
- 4 Lock nut M4
- 5 Cap nut of the gasket screw connection

**REGULATOR B — INSTALLATION**

**916 i TYPE A**

**NOTICE**

The surface on the back of the regulator must be cleaned before applying the heat transfer pads. Remove the protective film with caution, because rapid stripping can damage the heat transfer pad.

Step	Procedure
1	Clean the regulator plate: Remove residues of the thermal paste or the heat transfer pads.
2	Bonding the heat transfer pad to the regulator B. Remove the protective film from heat transfer pad and stick the heat transfer pad with the adhesive surface onto the regulator B (avoid any folds or bubbles).

**NOTE**

*When using a heat transfer pad, no additional application of a thermal compound is required.*

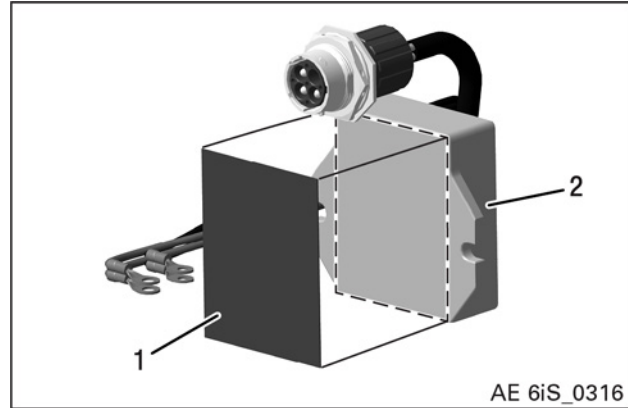


Figure 17.29

- 1 Heat transfer pad
- 2 Regulator B

**NOTICE**

The regulator must be mounted so that it does not project beyond the regulator plate.

Step	Procedure
3	Fasten regulator B on the regulator plate with 2 new lock nuts M6 and washers 6.4. Tightening torque: 6 Nm (53 in.lb). Wrench size: A/F 10.

**NOTE**

*Tighten the two new lock nuts M6 alternately to ensure a smooth seat of rectifier regulator on the regulator plate.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

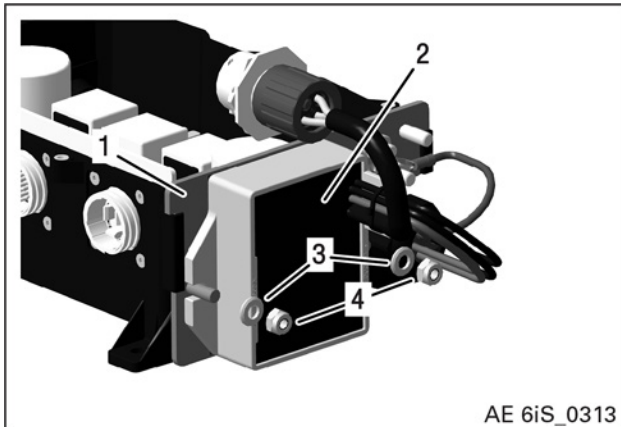


Figure 17.30

- 1 Regulator plate
- 2 Regulator B
- 3 Washer
- 4 Lock nut M6

Step	Procedure
4	Remove the connecting thread of sealing union of the rectifier regulator that should be mounted.

**NOTE**

*The connecting thread of sealing union is included with each rectifier regulator as replacement part. An exchange of this plastic insert is only necessary if it is damaged.*

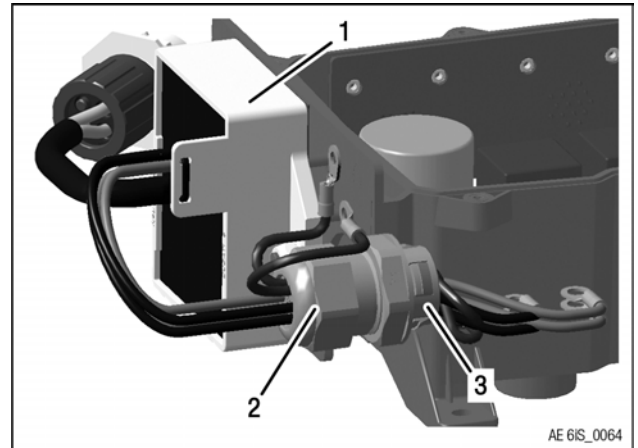


Figure 17.31

- 1 Regulator B
- 2 Cap nut of the gasket screw connection
- 3 Thread of the gasket screw connection

<b>NOTICE</b>	
<b>When pressing in the gasket screw connection, avoid damaging the connecting thread.</b>	

Step	Procedure
5	Pull all the cables 2 RED/WHITE (marking: B+) and 4 BLACK (marking: B and B-) into the fuse box. The plastic insert must be pressed completely into the connecting thread of sealing union.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### NOTICE

Note the wire marking and labeling of the connecting bolts (labeled on the board of the fuse box). All cables must be installed without kinks.

### NOTICE

The ring terminals attached to the connecting ports B-, B and B+ must not touch each other (except those rings which are attached to the same connection bolt).

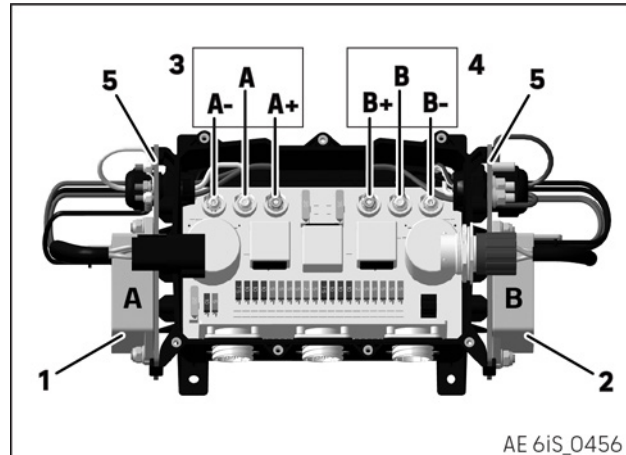


Figure 17.32: Connection

- |  |   |
|--|---|
| <p>1 Regulator A</p> <p>3 Connection bolt regulator A</p> <p>5 Regulator plate</p> | <p>2 Regulator B</p> <p>4 Connection bolt regulator B</p> |
|--|---|

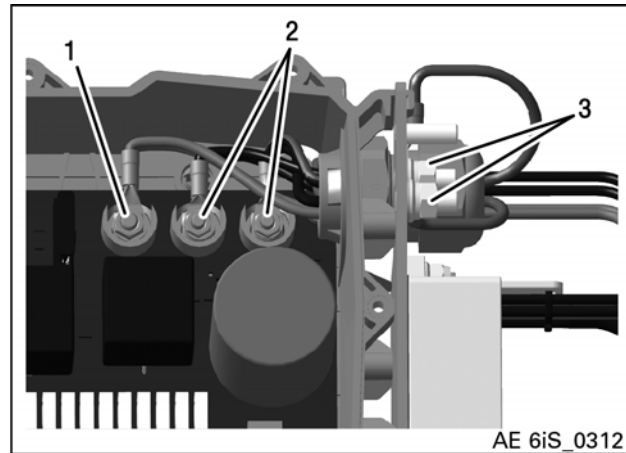


Figure 17.33: Connection

- |   |                                      |
|---|--------------------------------------|
| <p>1 Lock nut M5 with washer 5.3</p> <p>3 Lock nut M6 with washer 6.4</p> | <p>2 Lock nut M4 with washer 4.3</p> |
|---|--------------------------------------|

Step	Procedure
6	<p>BLACK cable (2 pcs, labeled: B-) connect to connection bolt B-. Fasten the cable lug with new lock nut M4 and washer 4.3 on the connection bolt.</p> <p>The crimping of the lower cable lug must be directed towards the board of fuse box.</p> <p>The crimping of the upper cable lug must be directed toward the cover of the fuse box Tightening torque: 1,2 Nm (11 in.lb). Wrench size: A/F 7.</p>
7	<p>BLACK cable (2 pcs, labeled: B) connect to connection bolt B. Fasten the cable lug with new lock nut M4 and washer 4.3 on the connection bolt.</p> <p>The crimping of the lower cable lug must be directed towards the board of fuse box. The crimping of the upper cable lug must be directed toward the cover of the fuse box Tightening torque: 1,2 Nm (11 in.lb). Wrench size: A/F 7.</p>
8	<p>RED-WHITE cable (2 pcs, labeled: B+) connect to connection bolt B+. Fasten the cable lug with new lock nut M5 and washer 5.3 on the connection bolt.</p> <p>The crimping of the lower cable lug must be directed towards the board of fuse box. The crimping of the upper cable lug must be directed toward the cover of the fuse box Tightening torque: 2,2 Nm (19 in.lb). Wrench size: A/F 8.</p>

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
9	Connect the unlabeled cable ends coming out of the fuse box and the regulator (2 pcs. BLACK) with the regulator plate. Positioning of the cables must be as shown in Figure Connection Fasten the cable lug with locking nut M6 and washer 6.4 on the connection bolt. Tightening torque: 6 Nm (53 in.lb). Wrench size: A/F 10.
10	Fasten gasket screw connection. Tightening torque: 6 Nm (53 in.lb). Wrench size: A/F 30.

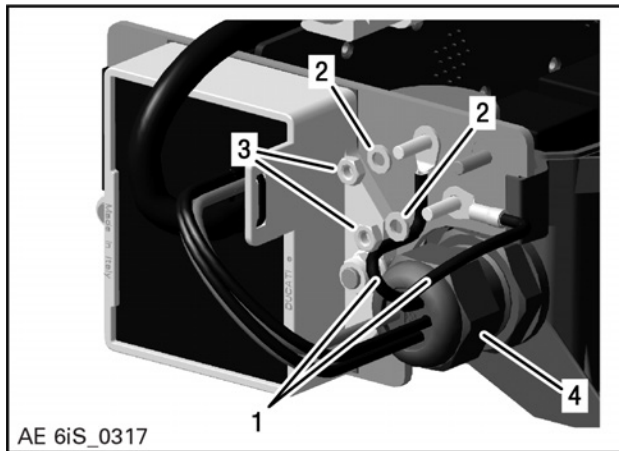


Figure 17.34

- |               |  |
|---------------|--|
| 1 Cable BLACK | 2 Washer 6.4                             |
| 3 Lock nut M6 | 4 Cap nut of the gasket screw connection |

## AC-DC CONVERTER – INSTALLATION

### 916 i TYPE C24

For installation of the AC-DC Converter, see Installation Manual (IM) for the respective engine type.

## FUSES

If a fuse is damaged, it must be replaced by a new one with the same values.

### ⚠ WARNING

**A fuse with a higher amperage must not be used, as this can lead to severe damage.**

### Arrangement of the fuses

F2	7.5 A Selector switch B
F3	7.5 A Selector switch A
F4	10 A Fuel pump B
F5	10 A Fuel pump A
F6	10 A Ignition 3t
F7	10 A Ignition 1b
F8	10 A Ignition 3b
F9	10 A Ignition 1t
F10	5 A Injector 4
F11	5 A Injector 3
F12	5 A Injector 2
F13	5 A Injector 1
F14	2 A Caution lamp A
F15	2 A Caution lamp B
F16	5 A Injector 8
F17	5 A Injector 7
F18	5 A Start switch
F19	5 A Turbocharger
F20	20 A ATO fuse
F21	35 A ATO fuse
F22	5 A Injector 6
F23	5 A Injector 5

### NOTE

*For 916 i Type C24 Fuse (F4) is not used.*



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

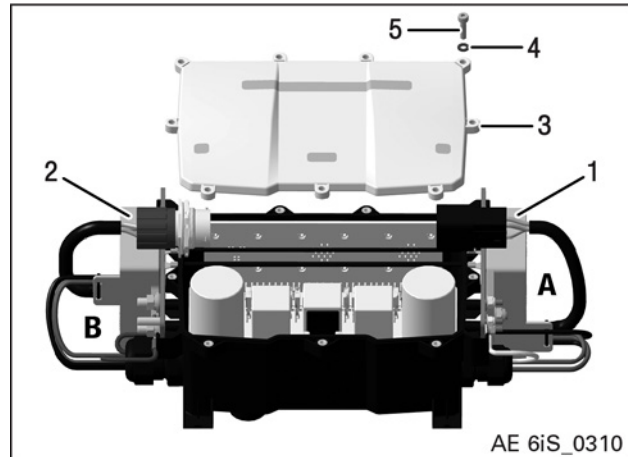
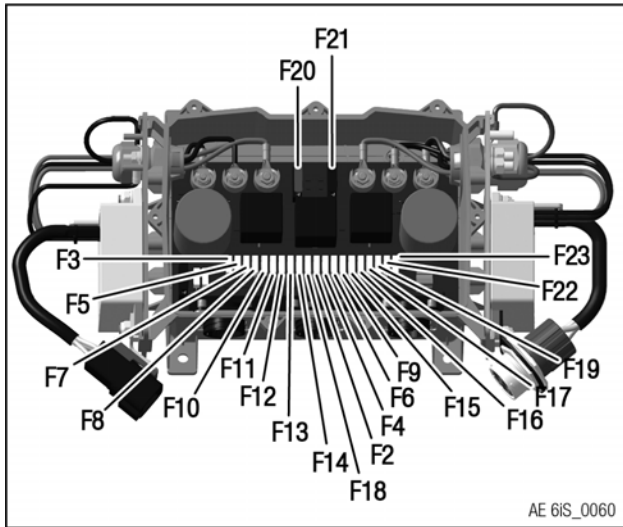


Figure 17.36

Figure 17.35: : TYPICAL

**COVER – INSTALLATION**

**NOTICE**

Over tightening the Allen screws M4x16 leads to cracking of the cover.

Step	Procedure
1	Hand-tight cover using 9 Allen screws M4x16 with plastic washers.

**NOTE**

*Before attaching the cover, check the correct position of the gasket.*

- 1 Regulator A
- 2 Regulator B
- 3 Cover
- 4 Plastic washer
- 5 Allen screws M4x16

**REGULATOR – CONTINUITY CHECK**

**only 916 i TYPE  
A**

Before installing the fuse box carry out a continuity check using a multimeter between the regulator housing of regulator A and regulator B. A conductive connection (continuity) must not be present.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**NOTICE**

If a conductive connection (continuity) is present, the installation of the regulator has to be checked. The fuse box must not be installed in an aircraft until the error is fixed and the installation corrected.

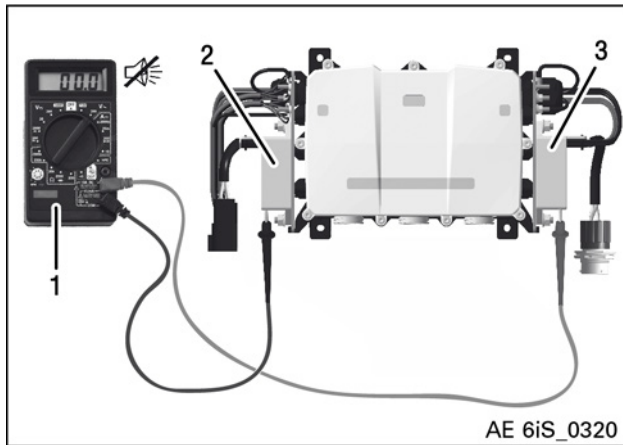


Figure 17.37: :TYPICAL

- 1 Multimeter
- 2 Regulator A
- 3 Regulator B

**FUSE BOX — INSTALLATION**

**NOTICE**

Installation must be carried out according to the aircraft manufacturer's and to the specifications of the Installation Manual (IM).

Step	Procedure
1	Install the fuse box in accordance with the aircraft manufacturer's specifications.
2	Connect the engine wiring harness and grounding connectors on the fuse box. See <a href="#">Chapter 76-50-00 section Wiring harness</a> .  <b>NOTE</b> <i>Using the marking of the wiring harness.</i>
3	Connect the aircraft wiring harness in accordance with the aircraft manufacturer's specifications.

**916 i TYPE A**

Step	Procedure
4	Connect the connector socket (regulator A) and the connector socket (regulator B) plug in the connector socket, then screw the outer ring onto the socket.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

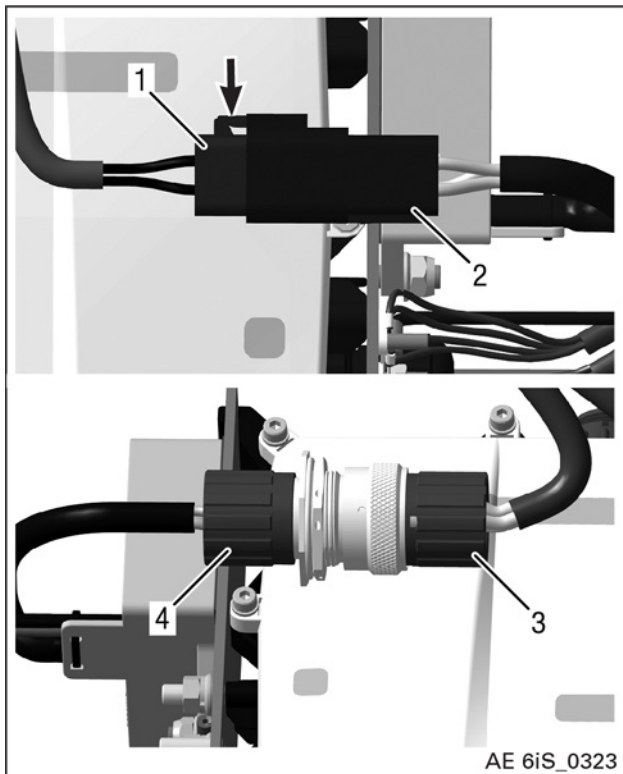


Figure 17.38: TYPICAL

- 1 Stator connector A (Deutsch black)
- 2 Connection socket (Regulator A)
- 3 Stator connector B (Amphenol)
- 4 Connection socket (Regulator B)

### 916 i TYPE C24

Step	Procedure
4	Connect the connector socket (regulator A) and the connector socket and to connect the connector AC-DC Converter X3, plug in the connector into the connector socket, then screw the outer ring onto the socket.

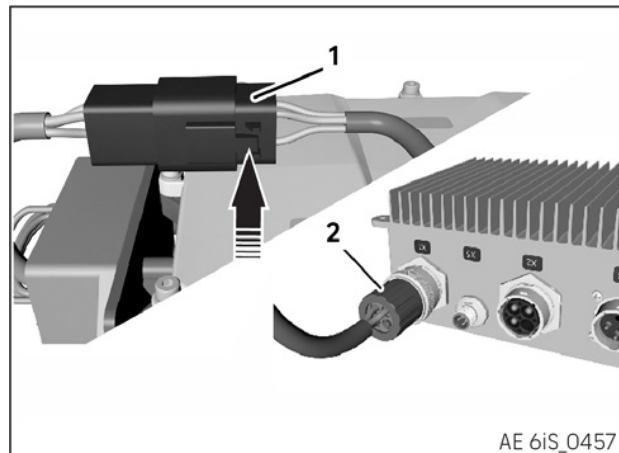


Figure 17.39: TYPICAL

- 1 Stator connector A (Deutsch black)
- 2 Stator connector B (Amphenol)

## INSPECTION OF THE FUSE BOX INSTALLATION



See Installation Manual (IM) for the respective engine type.

## FINISHING WORK

- Attach all the necessary fastenings (e.g. cable ties, holders, clamps etc.) of the wiring harness.



Carry out an engine test run. See Maintenance Manual Line (MML) for the respective engine type.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 76–50–00**  
**WIRING HARNESS**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>5</b>
<b>Service products</b> .....	<b>6</b>
<b>System description</b> .....	<b>11</b>
General note .....	11
Safety instruction.....	11
Maintenance .....	11
<b>Removal</b> .....	<b>12</b>
HIC A and HIC B — disconnection .....	12
Starter relay — disconnection.....	12
Ambient air pressure and temperature sensors (AAPTS) — disconnection .....	12
Ground cables – disconnection.....	13
Pressure control valve (PCV) – disconnection.....	13
Fuse box — disconnection .....	14
Fuel pump — disconnection .....	15
Engine control unit (ECU) — disconnection .....	15
Exhaust Gas Temperature Sensor (EGT) — disconnection .....	15
Double ignition coil — disconnection .....	15
Coolant temperature sensor — disconnection.....	16
Fuel injector — disconnection.....	16
Throttle position sensor (TPS) — disconnection.....	16
Boost pressure sensor (BPS) – disconnection .....	16
Oil temperature sensor (OTS) — disconnection .....	17
Oil pressure sensor (OPS) — disconnection .....	17
Crankshaft position sensor (CPS) — disconnection.....	18
Knock sensor (KNOCK) — disconnection.....	18
Manifold air pressure sensor (MAPS) — disconnection .....	18
Manifold air temperature sensor (MATS) — disconnection .....	19
Wiring harness — removal .....	20
<b>Inspection</b> .....	<b>21</b>
<b>Installation</b> .....	<b>22</b>
Wiring harness — installation .....	23
Manifold air pressure sensor (MAPS) — connection.....	27
Manifold air temperature sensor (MATS_1/MATS_2) — connection.....	27
Knock sensor (KNOCK) — connection .....	28
Crankshaft position sensors (CPS)— connection .....	28
Oil temperature (OTS) and oil pressure sensor (OPS) — connection .....	28
Throttle position sensor (TPS) — connection .....	28
Boost pressure sensor (BPS) – connection.....	28
Coolant temperature sensor (CTS) — connection .....	28
Exhaust Gas Temperature Sensor (EGT) — connection .....	28
Fuel injector — connection .....	28
Double ignition coil — connection .....	29
Pressure control valve (PCV) — connection .....	29

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Strain relief — connection .....	29
Engine control unit (ECU) — connection .....	29
Fuel pump — connection .....	30
Fuse box — connection .....	30
Ambient air pressure and temperature sensor (APTS) — connection .....	30
Starter relay — connection .....	30
Ground cables – connection .....	30
HIC A and HIC B — connection .....	30
Finishing work .....	30

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE A


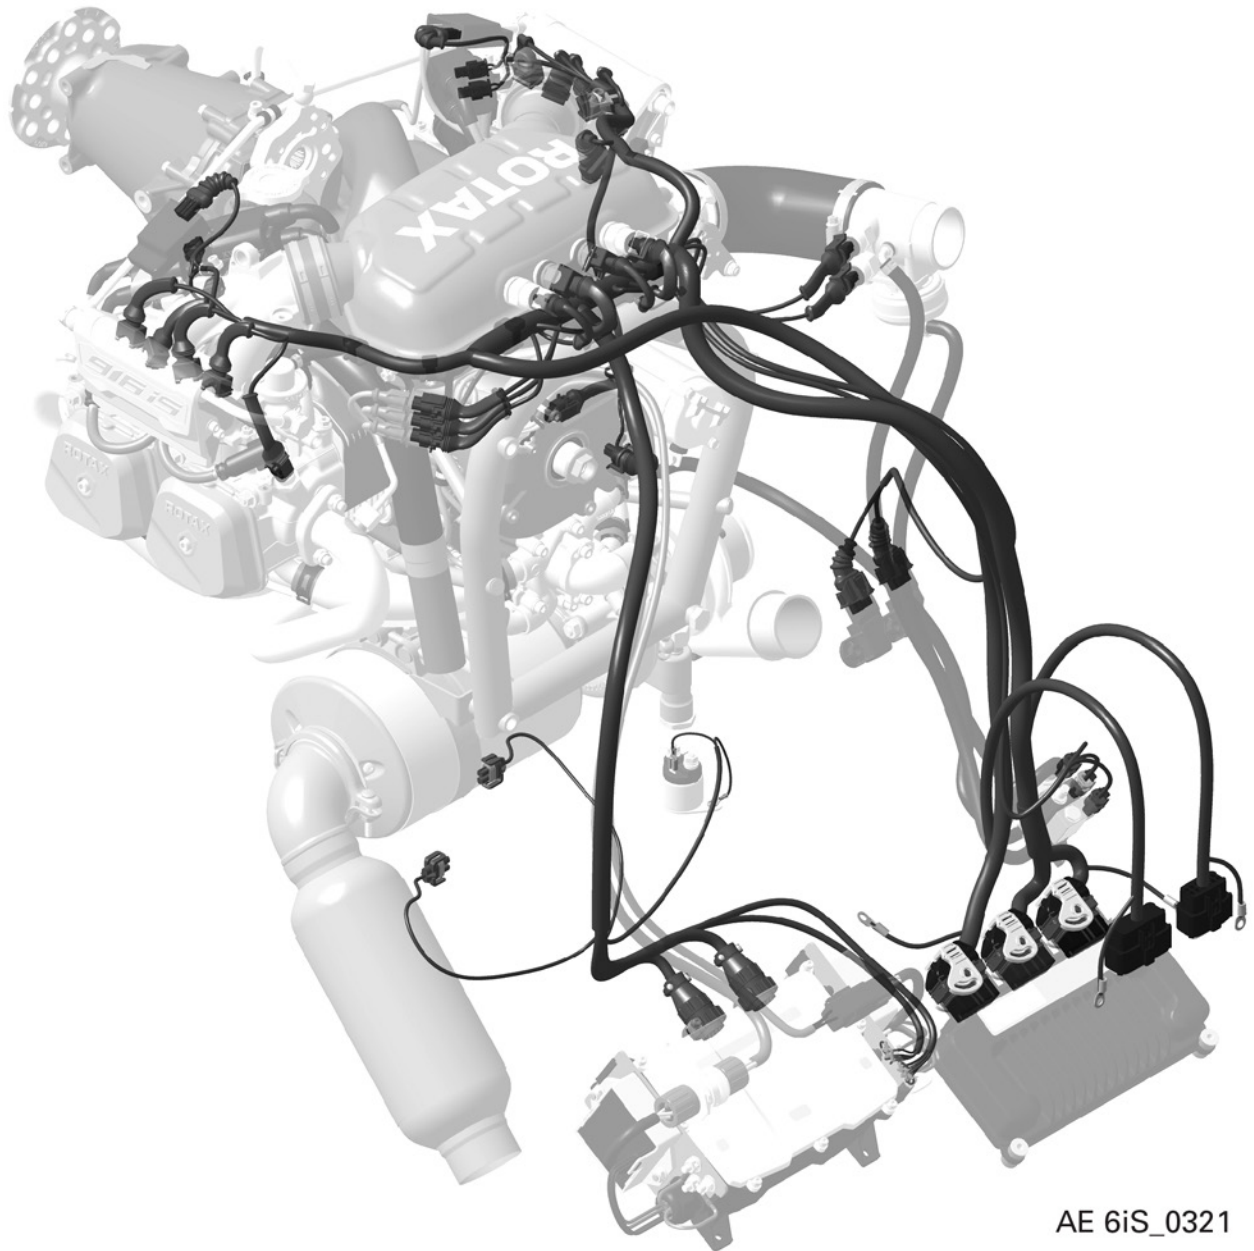


Figure 18.1: Wiring harness

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

916 i TYPE C24

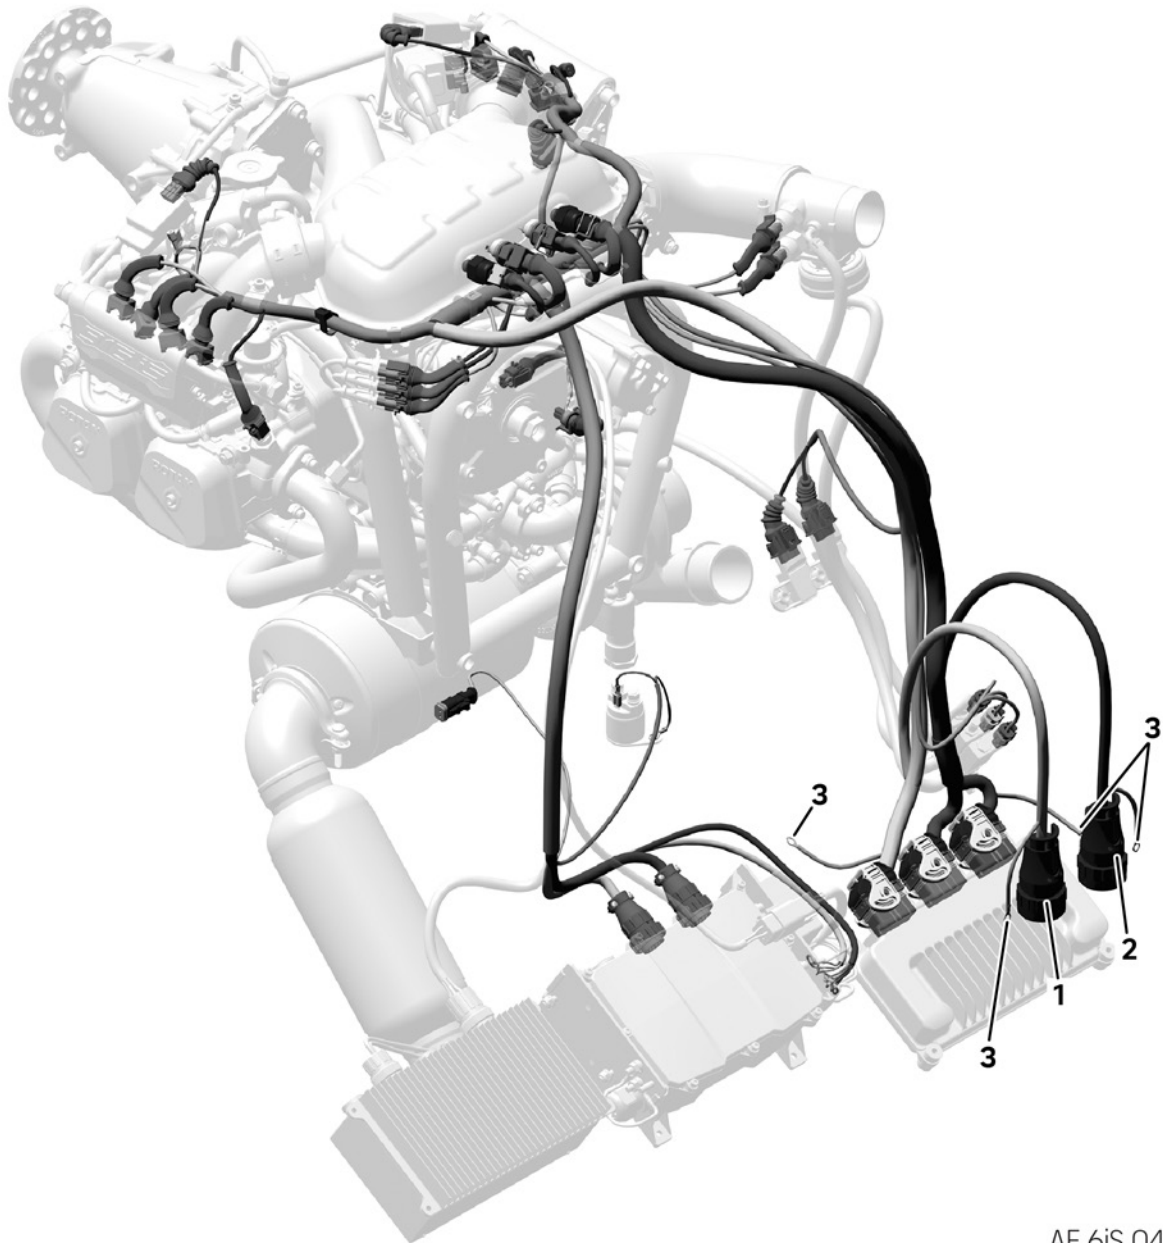

AE\_6iS\_0441

Figure 18.2: Wiring harness

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SPECIAL TOOLS**

Description	Part number	
ECU Adapter	277012	

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE 243	897651
Deoxit contact spray	n.a.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**916 i TYPE A**

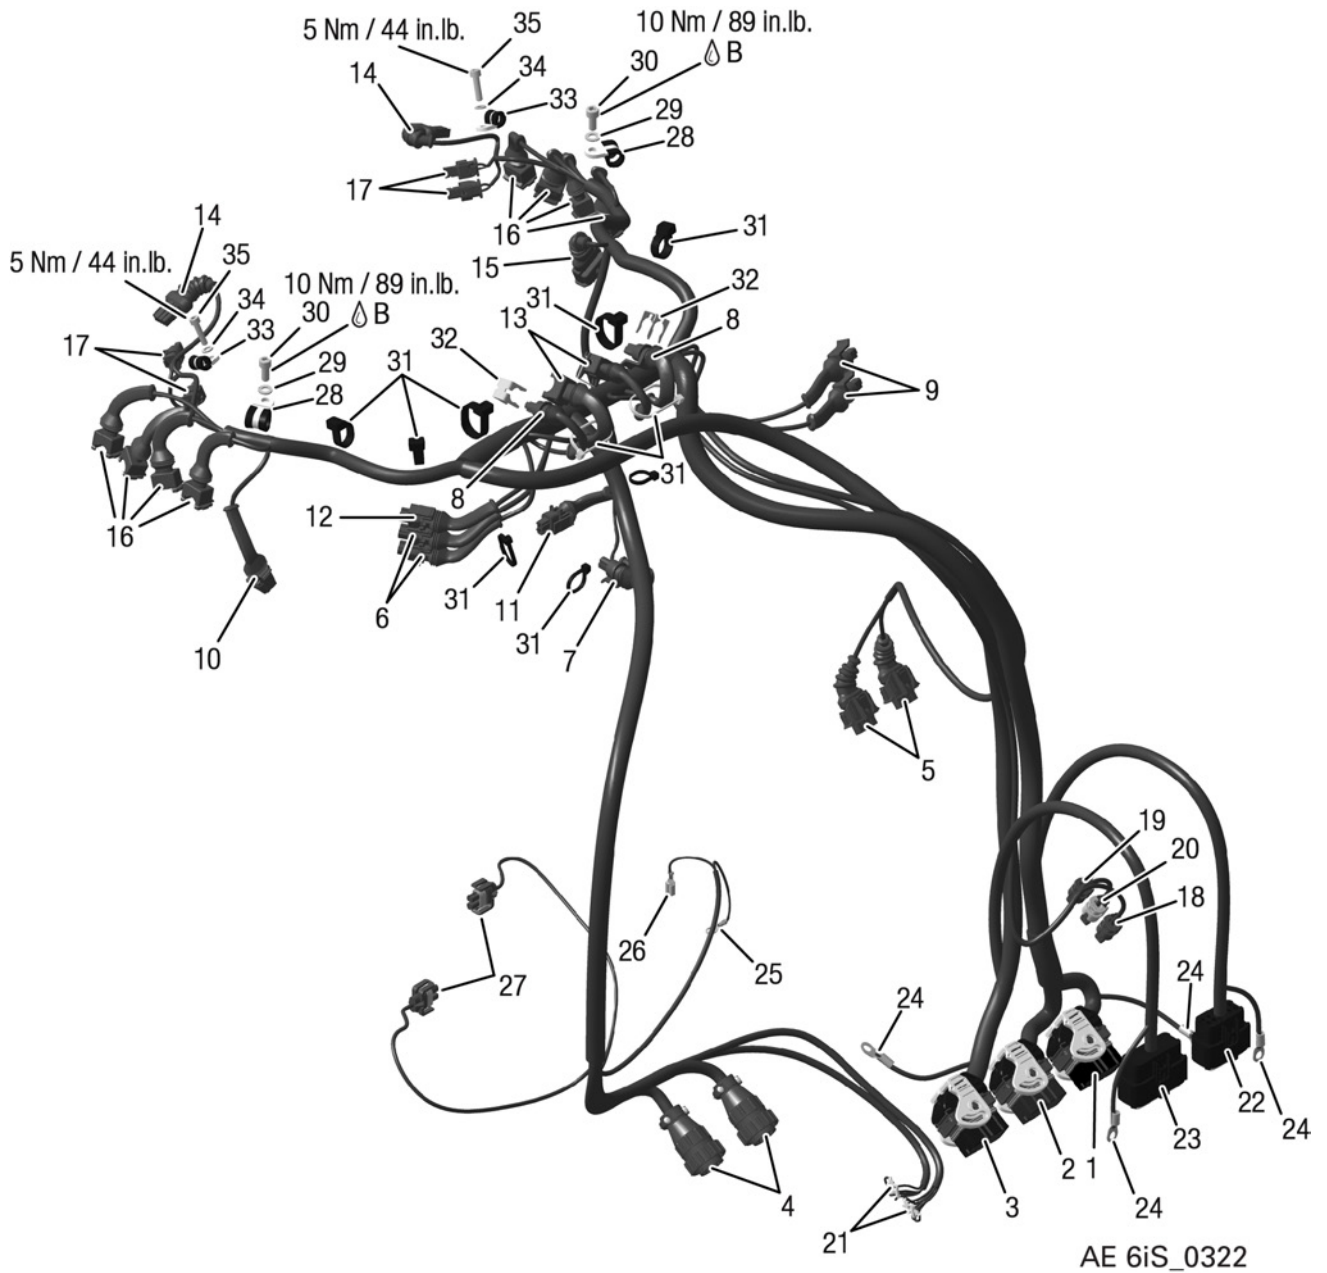


Figure 18.3: Wiring Harness

- |                         |                             |
|-------------------------|-----------------------------|
| 1 ECU LANE A1 Connector | 2 ECU LANE A2 Connector     |
| 3 ECU LANE B Connector  | 4 Connector FUSE BOX X1, X2 |
| 5 Connector AAPTS       | 6 Connector CPS             |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

---

- |    |                             |    |                                |
|----|-----------------------------|----|--------------------------------|
| 7  | Connector OPS               | 8  | Connector MAPS                 |
| 9  | Connector BPS               | 10 | Connector CTS                  |
| 11 | Connector OTS               | 12 | Connector KNOCK                |
| 13 | Connector MATS              | 14 | Connector EGT                  |
| 15 | Connector TPS               | 16 | Connector INJ                  |
| 17 | Connector ignition coil     | 18 | Connector PCV A                |
| 19 | Connector PCV B             | 20 | Connector PCV C                |
| 21 | Ring terminal EMS ground    | 22 | Connector HIC A                |
| 23 | Connector HIC B             | 24 | Ring terminal Ground cables    |
| 25 | Ring terminal starter relay | 26 | Faston connector starter relay |
| 27 | Fuel pump connector         | 28 | Cable clamp 12/M6              |
| 29 | Washer 6.4                  | 30 | Allen screw M6x14              |
| 31 | TIE WRAP                    | 32 | Clamp – MAPS sensor            |
| 33 | Cable clamp 8/M5            | 34 | Lock washer A5                 |
| 35 | Allen screw M5x20           |    |                                |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

916 i TYPE C24

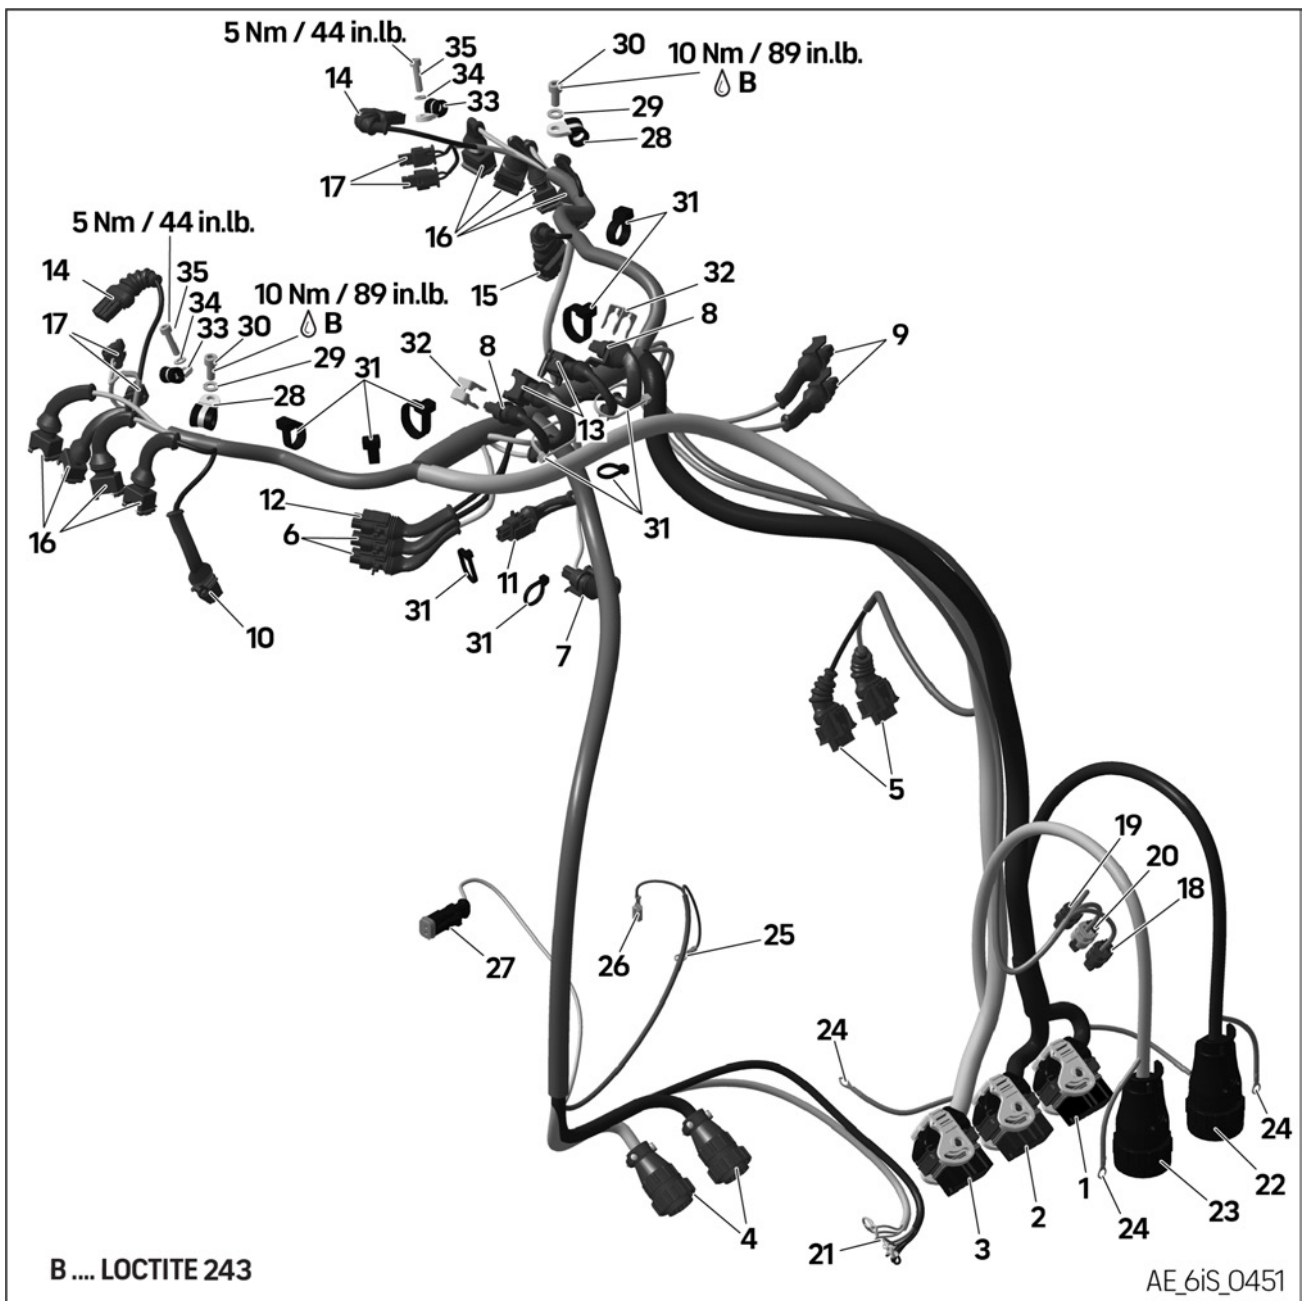


Figure 18.4: Wiring harness

- |                         |                             |
|-------------------------|-----------------------------|
| 1 ECU LANE A1 Connector | 2 ECU LANE A2 Connector     |
| 3 ECU LANE B Connector  | 4 Connector FUSE BOX X1, X2 |
| 5 Connector AAPTS       | 6 Connector CPS             |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

---

- |    |                             |    |                                |
|----|-----------------------------|----|--------------------------------|
| 7  | Connector OPS               | 8  | Connector MAPS                 |
| 9  | Connector BPS               | 10 | Connector CTS                  |
| 11 | Connector OTS               | 12 | Connector KNOCK                |
| 13 | Connector MATS              | 14 | Connector EGT                  |
| 15 | Connector TPS               | 16 | Connector INJ                  |
| 17 | Connector ignition coil     | 18 | Connector PCV A                |
| 19 | Connector PCV B             | 20 | Connector PCV C                |
| 21 | Ring terminal EMS ground    | 22 | Connector HIC A                |
| 23 | Connector HIC B             | 24 | Ring terminal Ground cables    |
| 25 | Ring terminal starter relay | 26 | Faston connector starter relay |
| 27 | Fuel pump connector         | 28 | Cable clamp 12/M6              |
| 29 | Washer 6.4                  | 30 | Allen screw M6x14              |
| 31 | TIE WRAP                    | 32 | Clamp – MAPS sensor            |
| 33 | Cable clamp 8/M5            | 34 | Lock washer A5                 |
| 35 | Allen screw M5x20           |    |                                |

## **SYSTEM DESCRIPTION**

### **GENERAL NOTE**

The wiring harness consists essentially of two main parts, one for LANE A and one for LANE B. Both are each connected with connectors to the ECU and to the individual connectors to the sensors and actuators.

The wiring harness connects all the engine parts necessary for operation. In this way it provides the electric supply for these parts and the exchange of control and regulation signals.

### **SAFETY INSTRUCTION**

#### **⚠ WARNING**

**Non-compliance can result in serious injuries or death! The wiring harness and connectors may only be disassembled by the manufacturer, by an authorised distributor or by an aerospace company.**

#### **NOTICE**

**Danger of damage to the power plant and aircraft! It must be ensured that no electric voltage is connected and that repairs are carried out properly.**

### **NOTE**

*The general safety instructions must be followed during all work on the wiring harness!*

### **MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

### Preparation



General visual inspection.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 and 12-00-00.



Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.



Please observe the instructions of the aircraft manufacturer.

- Turn the ignition switch OFF.
- Disconnect the wiring harness from the aircraft frame in accordance with the aircraft manufacturers specifications.

### NOTE

*All connectors must be provided with a protective covering after being removed or detached.*

### HIC A AND HIC B — DISCONNECTION

Wiring harness designation:

- HIC\_A
- HIC\_B



Disconnect the HIC\_A and HIC\_B connectors in accordance with the aircraft manufacturer's specifications.

### STARTER RELAY — DISCONNECTION

Wiring harness designation:

- Starter relay

Step	Procedure
1	Pull off Faston connector. Press the lock to pull off the Faston connector.
2	Remove the grounding bolt / screw. Observe the instructions of the aircraft manufacturer.

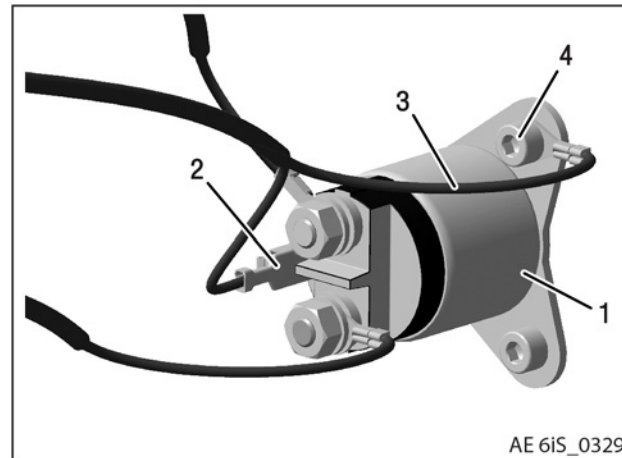


Figure 18.5

- |                     |                               |
|---------------------|-------------------------------|
| 1 Starter relay     | 2 Faston connector (aircraft) |
| 3 Ground (aircraft) | 4 Bolt / screw (aircraft)     |

### AMBIENT AIR PRESSURE AND TEMPERATURE SENSORS (AAPT) — DISCONNECTION

Wiring harness designation:

- AAPT (2 sensors)

Step	Procedure
1	Push in the tab on the top of the connector and at the same time pull the connector out of the connection socket.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

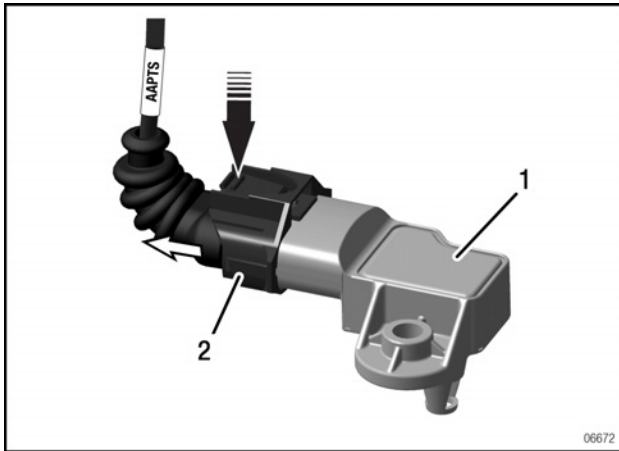


Figure 18.6

- Ambient air pressure and temperature sensor (AAPTS)*
- 1 *Connection socket*    2 *Connection socket (AAPTS)*

**GROUND CABLES – DISCONNECTION**



For disconnection of the ground cables please observe the instructions of the aircraft manufacturer.

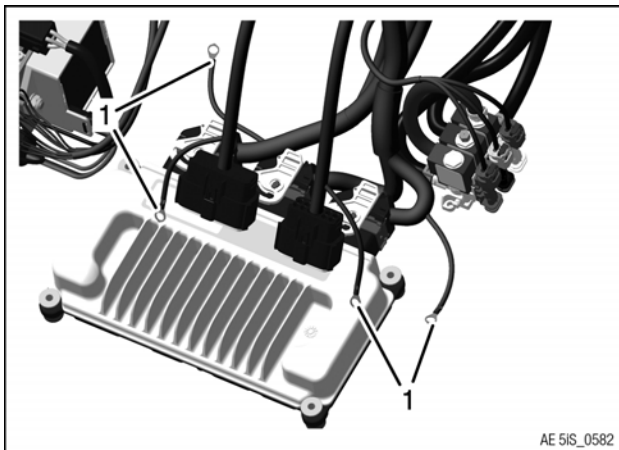


Figure 18.7: TYPICAL

- 1 *Ground cables*

**PRESSURE CONTROL VALVE (PCV) – DISCONNECTION**

Wiring harness designation:

- PCV A
- PCV B
- PCV C

Step	Procedure
1	Pull the red tab to unlock the connector.
2	Push in the tab of the connector and pull it off at the same time.

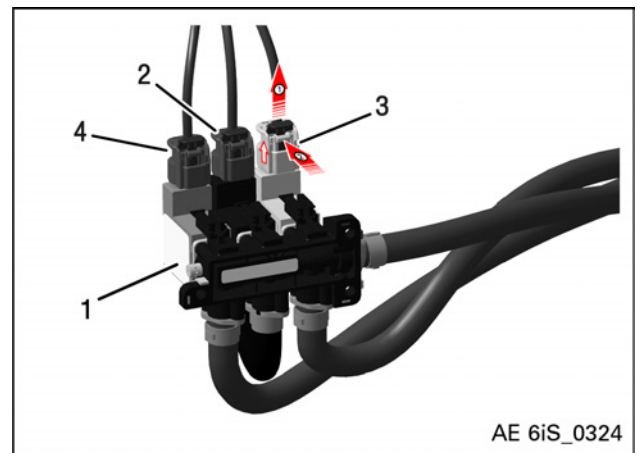


Figure 18.8

- 1 *Pressure control valve (PCV)*    2 *Connector PCV A*
- 3 *Connector PCV B*    4 *Connector PCV C*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**FUSE BOX — DISCONNECTION**

Step	Procedure
1	Loosen lock nut from ground cables on regulator plate A.

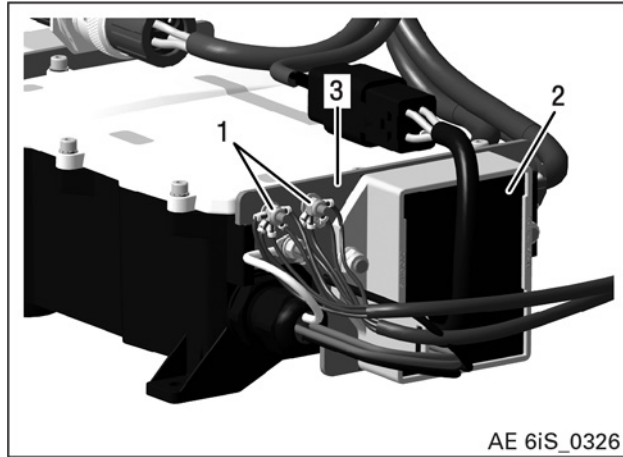


Figure 18.9

- 1 Ground cables
- 2 Regulator A
- 3 Regulator plate A

Step	Procedure
2	Loosen the two connectors X1, X2 (labelled Fuse box A, Fuse box B) from fuse box.  <b>NOTE</b> <i>Unscrew the connector cap nut anti-clockwise.</i>

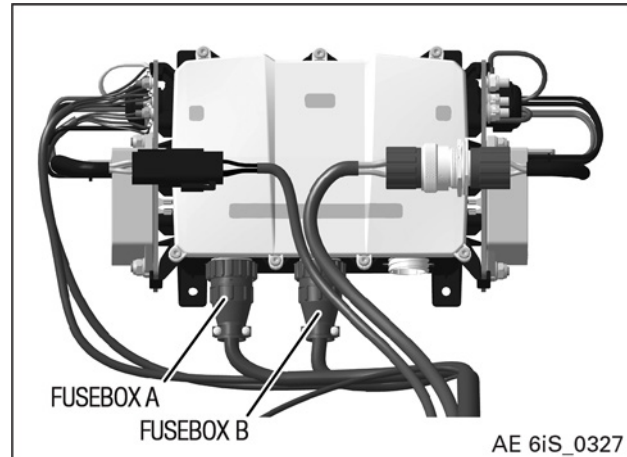


Figure 18.10: TYPICAL

**NOTE**

*Round connectors have different grooves and cannot be mixed up.*

Step	Procedure
3	Pull the connectors out of the connector socket.  <b>NOTE</b> <i>Do not lose the sealing rings (inside of socket).</i>



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## FUEL PUMP — DISCONNECTION

Wiring harness designation:

- FUEL PUMP\_A (MAIN pump)
- FUEL PUMP\_B (AUX pump). Only 916 i A Series.



Disconnect the fuel pump in accordance with the aircraft manufacturer's specifications.

## ENGINE CONTROL UNIT (ECU) — DISCONNECTION

Wiring harness designation:

- ECU LANE A1
- ECU LANE A2
- ECU LANE B

Step	Procedure
1	Unplug the ECU connectors labeled ECU LANE A1, ECU LANE A2 and ECU LANE B. See Chapter <a href="#">Chapter 76-10-00</a> section Control unit.

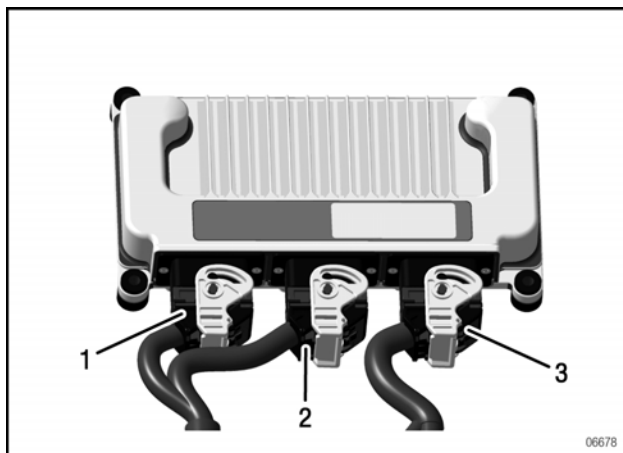


Figure 18.11: TYPICAL

- 1 Connector (LANE A1)    2 Connector (LANE A2)  
3 Connector (LANE B)

## EXHAUST GAS TEMPERATURE SENSOR (EGT) — DISCONNECTION

Wiring harness designation:

- EGT\_1-3
- EGT\_2-4

Step	Procedure
1	Remove the rubber grommet from the EGT connectors.
2	Disconnect the plug connection to the EGT sensors 1-3 and 2-4 by pressing the lock tab and pull off the connector at the same time.

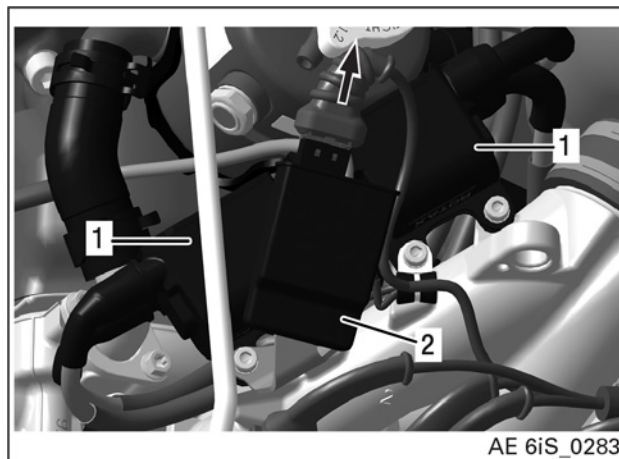


Figure 18.12: TYPICAL

- 1 Double ignition coils    2 EGT connector

## DOUBLE IGNITION COIL — DISCONNECTION

See [Chapter 74-20-00](#) section Ignition unit.

Wiring harness designation:

- COIL\_1
- COIL\_2
- COIL\_3
- COIL\_4

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**COOLANT TEMPERATURE SENSOR — DISCONNECTION**

Wiring harness designation:

- CTS

Step	Procedure
1	Disconnect the plug connection to the coolant temperature sensor by pressing the lock tab and pull off the connector at the same time.

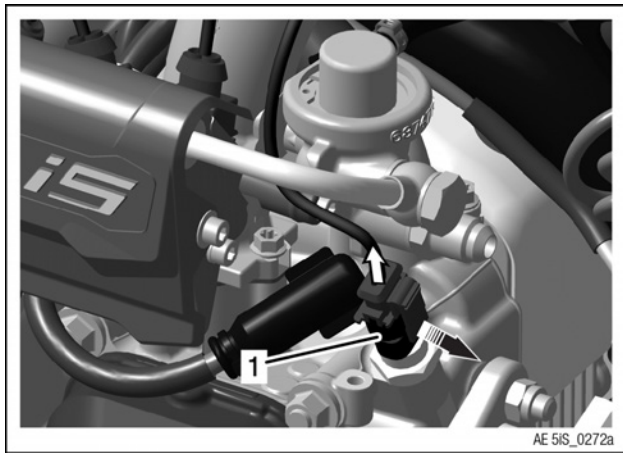


Figure 18.13: TYPICAL

- 1 *Coolant Temperature Sensor (CTS)*

**FUEL INJECTOR — DISCONNECTION**

Wiring harness designation:

- INJ\_1 to INJ\_8
- See Chapter 73-10-00, section [Fuel rail — removal](#).

**THROTTLE POSITION SENSOR (TPS) — DISCONNECTION**

Wiring harness designation:

- TPS

NOTICE	
<b>Do not damage the wiring harness. Always cut cable ties on the side of the support plate facing away from the wiring harness.</b>	

Step	Procedure
1	Cut 2 cable ties on the airbox.
2	Disconnect the plug connection to the throttle position sensor (TPS) by pressing the lock tab and pull off the connector at the same time.

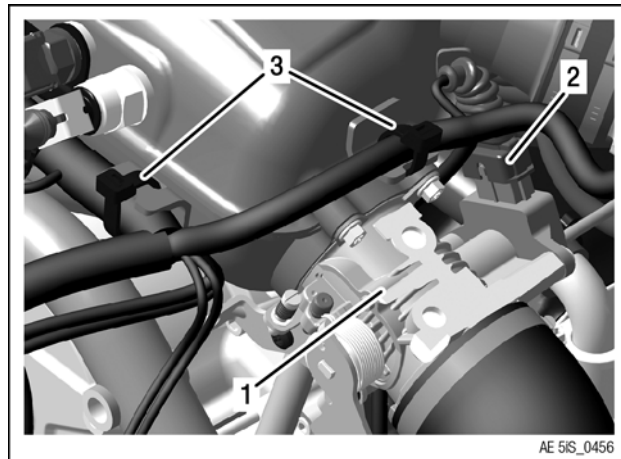


Figure 18.14

- 1 *Throttle body socket assy.*
- 2 *TPS connector*
- 3 *Cable ties*

**BOOST PRESSURE SENSOR (BPS) — DISCONNECTION**

Wiring harness designation:

- BPS\_1
- BPS\_2

Step	Procedure
1	Lift the latch and pull off the connector to the Boost Pressure Sensor (BPS).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

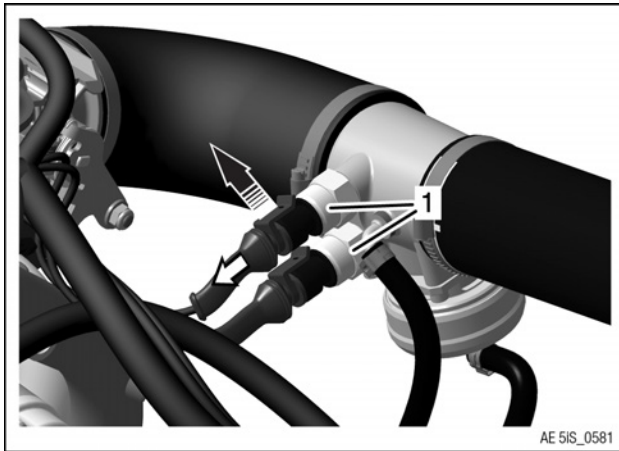


Figure 18.15

- 1 Boost Pressure Sensor (BPS)

**OIL TEMPERATURE SENSOR (OTS) — DISCONNECTION**

Wiring harness designation:

- OTS

NOTICE	
<p><b>Do not damage the wiring harness.</b>                      Always cut cable ties on the side of the support plate facing away from the wiring harness.</p>	

Step	Procedure
1	Remove cable tie.
2	Lift the latch and pull off the connector to the Oil Temperature Sensor (OTS).

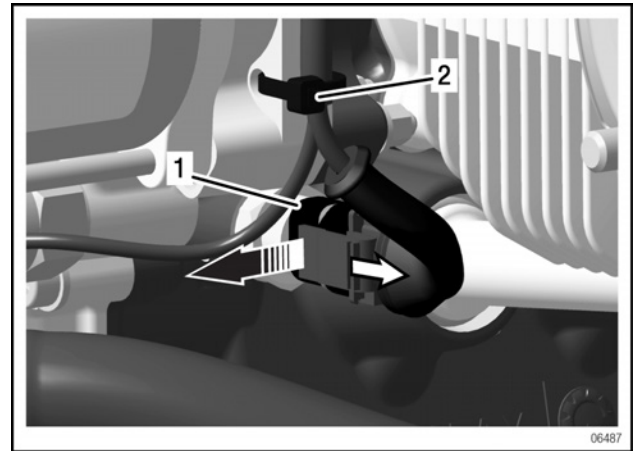


Figure 18.16: OTS

- 1 Oil Temperature Sensor (OTS)
- 2 Cable tie

**OIL PRESSURE SENSOR (OPS) — DISCONNECTION**

Wiring harness designation:

- OPS

NOTICE	
<p><b>Do not damage the wiring harness.</b>                      Always cut cable ties on the side of the support plate facing away from the wiring harness.</p>	

Step	Procedure
1	Remove cable tie.
2	Lift the latch and pull off the connector to the Oil Pressure Sensor (OPS).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

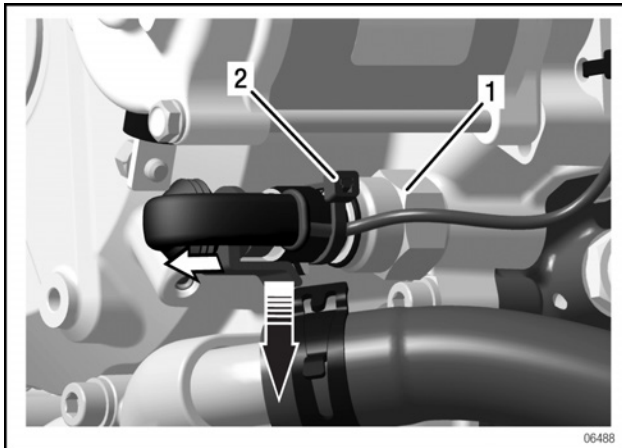


Figure 18.17: OPS

- 1 Oil Pressure Sensor (OPS)
- 2 Cable ties

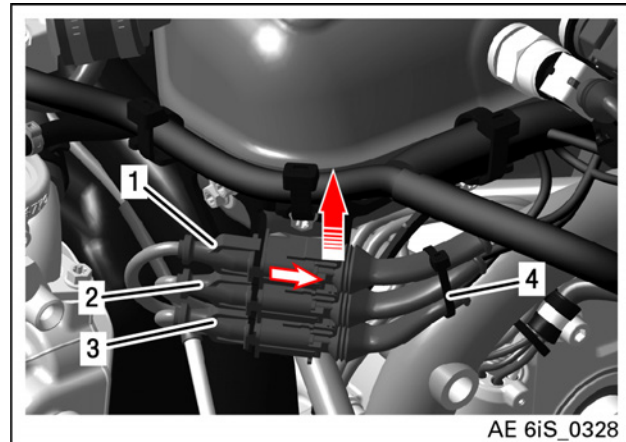


Figure 18.18

- 1 KNOCK sensor connector
- 2 CPS\_1 connector
- 3 CPS\_2 connector
- 4 Cable tie

**CRANKSHAFT POSITION SENSOR (CPS)  
 — DISCONNECTION**

Wiring harness designation:

- CPS\_1
- CPS\_2

<b>NOTICE</b>	
<p><b>Do not damage the wiring harness.</b>            Always cut cable ties on the side of the support plate facing away from the wiring harness.</p>	

Step	Procedure
1	Remove cable tie.
2	Lift the latch and pull off the connector to the crankshaft position sensors (CPS_1, CPS_2).

**KNOCK SENSOR (KNOCK) —  
 DISCONNECTION**

Wiring harness designation:

- KNOCK

Step	Procedure
1	Remove cable ties.
2	Lift the latch and pull off the connector to the knock sensors (KNOCK).

**MANIFOLD AIR PRESSURE SENSOR (MAPS)  
 — DISCONNECTION**

Wiring harness designation:

- MAPS\_1
- MAPS\_2

<b>NOTICE</b>	
<p><b>Do not damage the wiring harness.</b>            Always cut cable ties on the side of the support plate facing away from the wiring harness.</p>	

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
1	Remove the 2 cable ties and 2 clips.
2	Lift the latch and pull off the connectors to the manifold air pressure sensors (MAPS_1, MAPS_2).

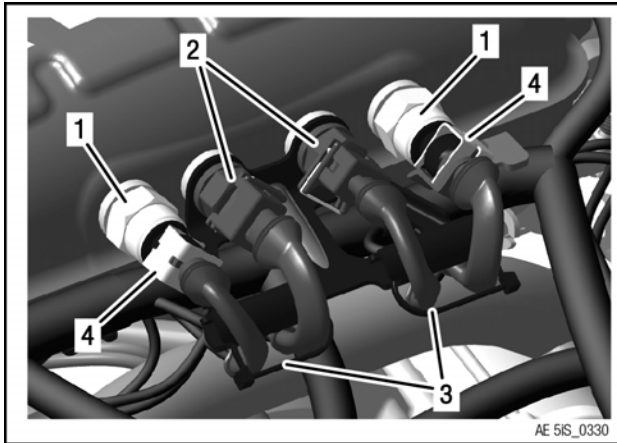


Figure 18.19

- |  |  |
|--|--|
| <p>1 Manifold Air Pressure Sensors</p> <p>3 Cable ties</p> | <p>2 Manifold Air Temperature Sensors</p> <p>4 Clips</p> |
|--|--|

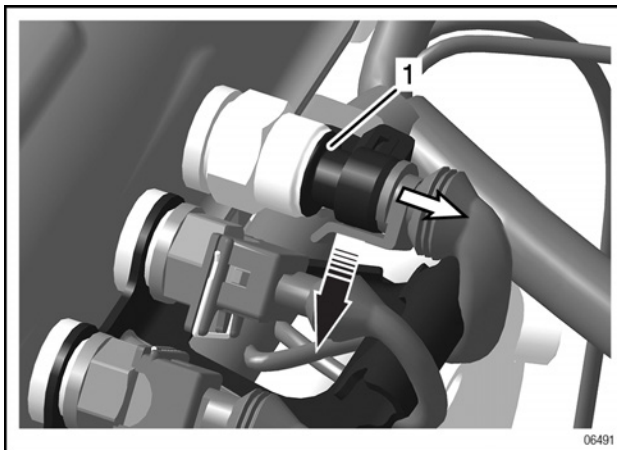


Figure 18.20

- 1 Manifold Air Pressure Sensor

## MANIFOLD AIR TEMPERATURE SENSOR (MATS) — DISCONNECTION

Wiring harness designation:

- MATS\_1
- MATS\_2

NOTICE
<p><b>Do not damage the wiring harness.</b> Always cut cable ties on the side of the support plate facing away from the wiring harness.</p>

Step	Procedure
1	Cut cable ties and unplug the connectors of the 2 manifold air pressure sensors (MAPS_1, MAPS_2), if necessary.
2	Press the metal spring and pull off the connector to the manifold air temperature sensors (MATS_1, MATS_2).

**NOTE**

*Do not lose the connector gasket (inside the connector).*

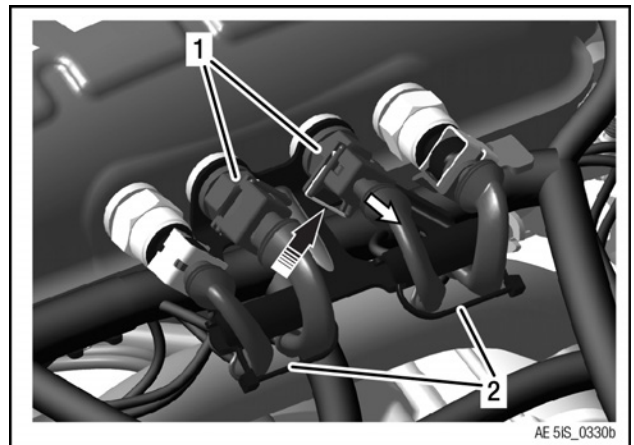


Figure 18.21

- |  |                     |
|--|---------------------|
| <p>1 Manifold Air Temperature Sensors (MATS_1, MATS_2)</p> | <p>2 Cable ties</p> |
|--|---------------------|

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
3	Remove the cable ties from the airbox.
4	Unscrew clamps and remove it with Allen screws and washers.

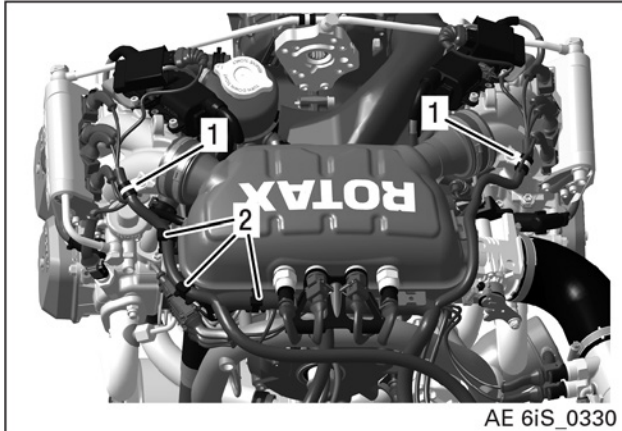


Figure 18.22

1 Cable clamps                      2 Cable ties

## WIRING HARNESS — REMOVAL

- The wiring harness can be removed after all clamps and cable ties are removed and connectors disconnected.



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION

### NOTICE

When work is carried out on the components of the engine management system, there is a risk that these might get damaged. Never put measuring probes in plug connectors or use other "aids" to carry out tests in the plug connectors.

### NOTICE

All electronic components must be in the original state. Any modification e.g. to the wiring harness can lead to incorrect inputs or operating faults.



General visual inspection.  
See Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 and 12-20-00.

## NOTE

*It must be ensured that all plug-in connections are properly crimped with the cables. (There must be no bent, deformed or loose pins in the plug connections!)*

### Electric test

The electric test of the wiring harness takes place in the installed state.

Step	Procedure
1	Unplug the wiring harness at the ECU and connect adapter part no. 277012.
2	Wire harness can be tested using an Ohmmeter.



Figure 18.23

1 Adapter part no.  
277012

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### INSTALLATION

#### Preparation

- Check all the wiring harness sections provided.

#### ⚠ WARNING

Non-compliance can result in serious injuries or death! The wiring harness must not be routed through areas or fastened to components in which the maximum permissible temperature of 120 °C (248 °F) can be exceeded during engine operation.

#### NOTICE

The wire connectors of the ECU must not be opened and closed more than 20 times! This must be shown on the device by a clearly visible label with a printed numerical sequence (1-20) and by documentation conforming to self-monitoring guidelines.

#### NOTICE

Danger due to damage to the wiring harness! For correct operation of the engine, it is necessary for the wiring harness to be in full working order and protected from scuffing, wear, tearing, extreme bending radii and other types of stress. Do not route the wiring harness in the vicinity of belt drives or rollers without the use of appropriate protective measures.

#### NOTE

Before connecting a connector, remove the protective covering which may be attached both to the connector and to the connection socket.

#### NOTE

If necessary, clean the pins of the connector and coat them as follows: AMP/ECU connector with a thin layer of Deoxit contact spray. All the other connectors with a dielectric silicone-based lubricant or an equivalent lubricant.

Step	Procedure
1	Lay the wiring harness correctly according to the routing plan.

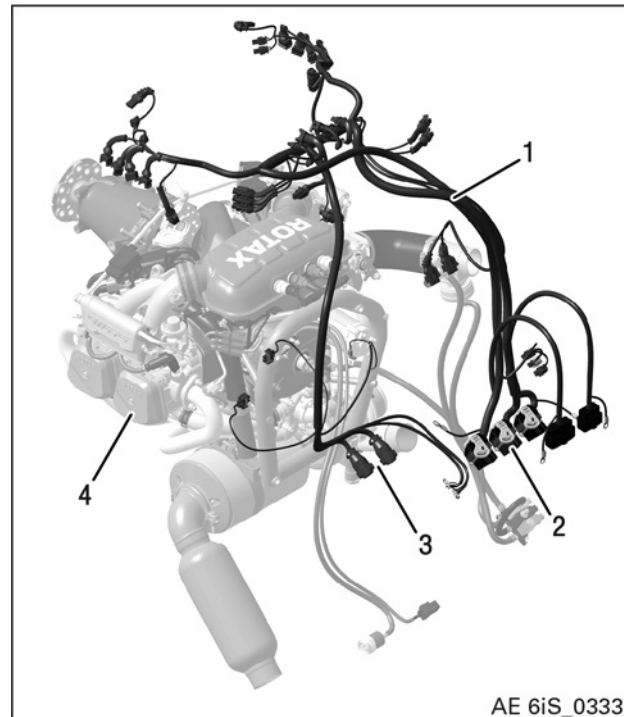


Figure 18.24

- |                       |                         |
|-----------------------|-------------------------|
| 1 Wiring harness      | 2 ECU connection socket |
| 3 FUSE BOX connectors | 4 Engine                |



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**WIRING HARNESS — INSTALLATION**

Wiring harness

916 i TYPE A

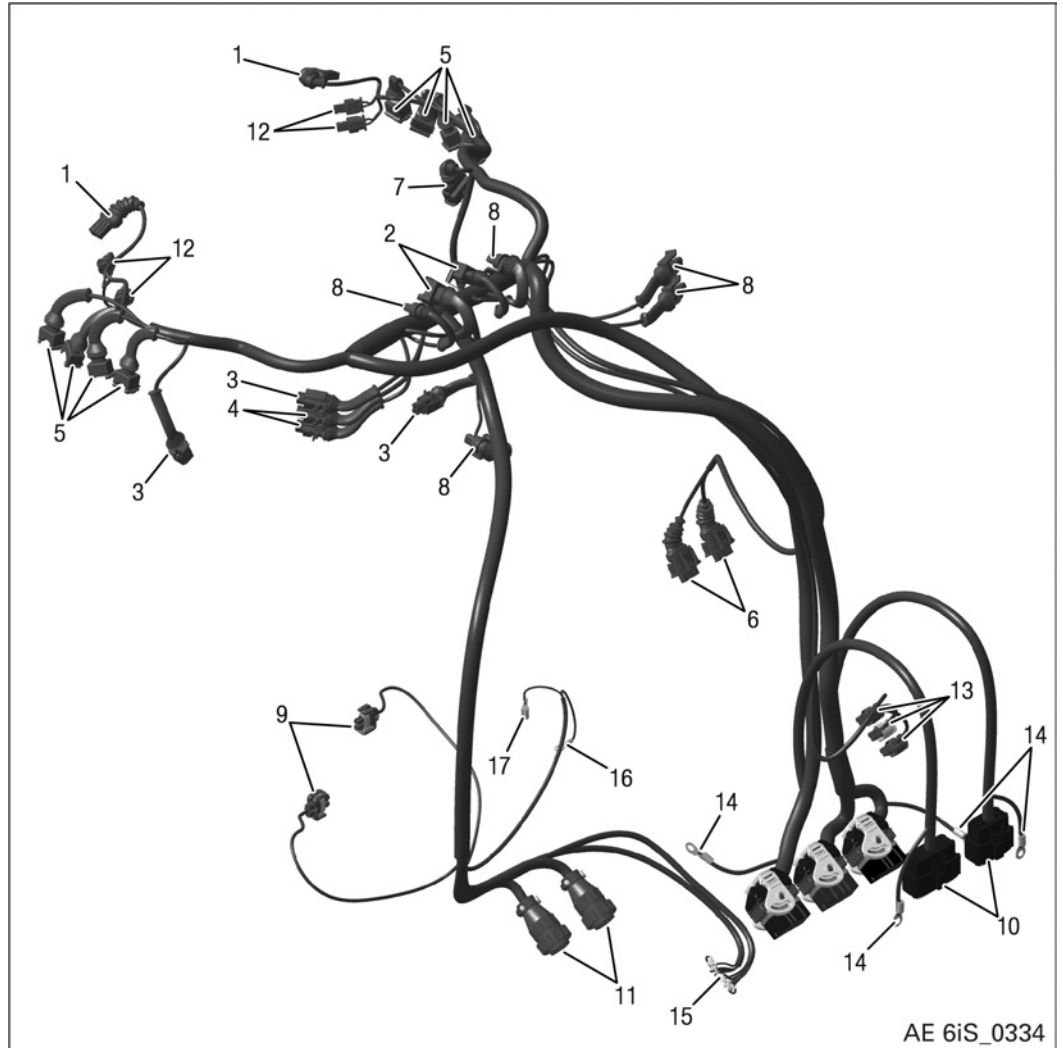


Figure 18.25

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Pos	Part no. of connector set	Corresponding tool
1	481455	Crimping pliers TYCO 539 635-1 Jaws TYCO 539 737-2 Disassembly tool TYCO 1-1579007-6
2	881292	
3	881296	
4	881298	
5	881300	
6	881306	Crimping pliers TYCO 539 635-1 Jaws TYCO 539 737-2 7 881308 Disassembly tool DELPHI 12094429
7	881308	
8	881302	Crimping pliers DELPHI 12155975 Disassembly tool DELPHI 12094429
9	881304	
10	881294	Crimping pliers MOLEX 0638114400 Disassembly tool MOLEX 63813-1500
11	881312	Crimping pliers TYCO 58495-1 Disassembly tool TYCO 305 183
12	481452	Crimping pliers MOLEX 64016-0035 Disassembly tool MOLEX 63813-1500
13	481452, 481453, 481454	Crimping pliers MOLEX 64016-0035 Disassembly tool MOLEX 63813-1500
14	966057	-
15	965701	-
16	964059	-
17	864011	-

BRP-Rotax  
MAINTENANCE MANUAL HEAVY

916 i TYPE C24

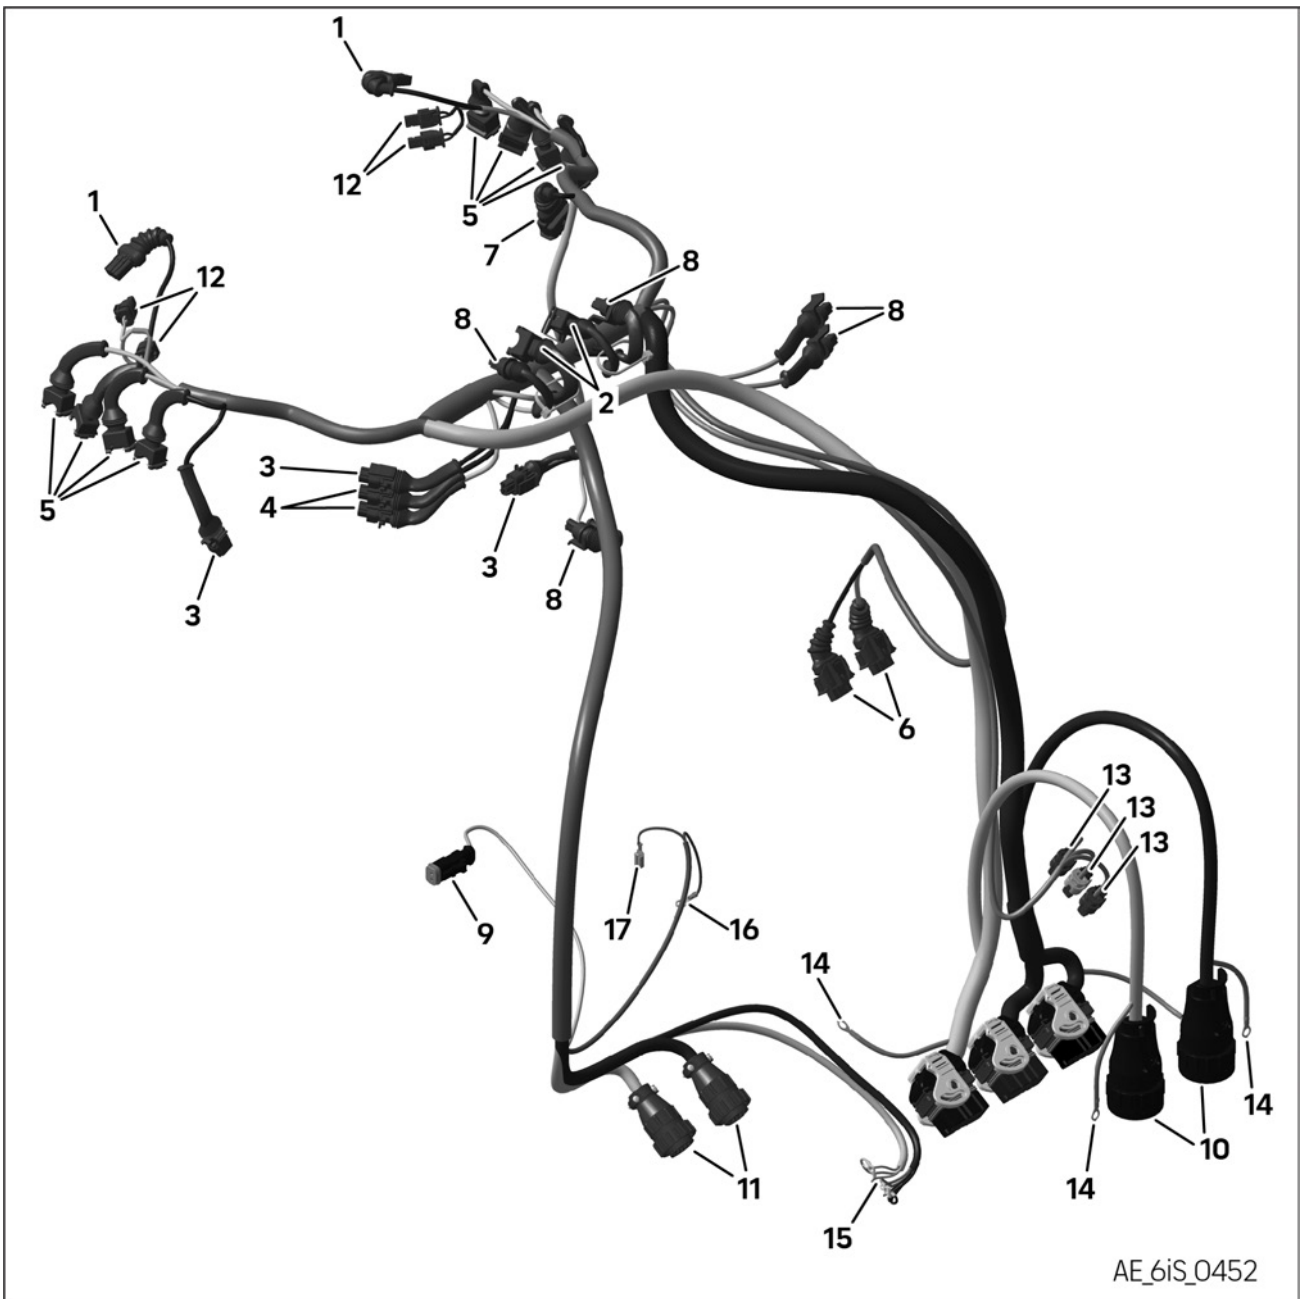


Figure 18.26: Wiring harness

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Pos	Part no. of connector set	Corresponding tool
1	481455	Crimping pliers TYCO 539 635-1 Jaws TYCO 539 737-2 Disassembly tool TYCO 1-1579007-6
2	881292	
3	881296	
4	881298	
5	881300	
6	881306	Crimping pliers TYCO 539 635-1 Jaws TYCO 539 737-2 7 881308 Disassembly tool DELPHI 12094429
7	881308	
8	881302	Crimping pliers DELPHI 12155975 Disassembly tool DELPHI 12094429
9	881304	
10	XXX	-
11	881312	Crimping pliers TYCO 58495-1 Disassembly tool TYCO 305 183
12	481452	Crimping pliers MOLEX 64016-0035 Disassembly tool MOLEX 63813-1500
13	481452, 481453, 481454	Crimping pliers MOLEX 64016-0035 Disassembly tool MOLEX 63813-1500
14	966057	-
15	965701	-
16	964059	-
17	864011	-

**NOTE**

*If the wire is broken or the connector is defective, the damage can be repaired. The cable must be long enough if the connector is cut off.  
 Repair with the tools described here must comply with the aircraft standard of the respective country.*

### MANIFOLD AIR PRESSURE SENSOR (MAPS) — CONNECTION

The sensors are connected and disconnected in the same way. See [Chapter 76-50-00 section Wiring harness](#).

#### NOTE

*Do not forget to install the clips and note the positions of them. Check for tight fit and correct position of the clips on sensor and connector.*

#### NOTE

*Do not forget to attach the cable ties (strain relief).*

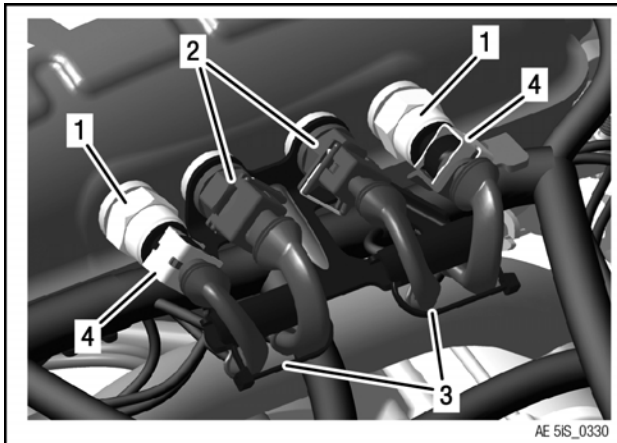


Figure 18.27

- |   |                               |   |                                  |
|---|-------------------------------|---|----------------------------------|
| 1 | Manifold Air Pressure Sensors | 2 | Manifold Air Temperature Sensors |
| 3 | Cable ties                    | 4 | Clips                            |

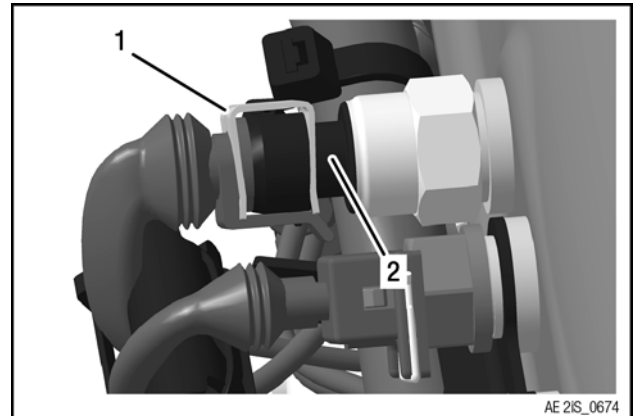


Figure 18.28

- |   |      |   |                                     |
|---|------|---|-------------------------------------|
| 1 | Clip | 2 | Manifold Air Pressure Sensor (MAPS) |
|---|------|---|-------------------------------------|

### MANIFOLD AIR TEMPERATURE SENSOR (MATS\_1/MATS\_2) — CONNECTION

The sensors are connected and disconnected in the same way. See [Chapter 76-50-00 section Wiring harness](#).

#### NOTE

*Check if connector gasket is installed.*

#### NOTE

*Do not forget to attach the cable ties (strain relief).*

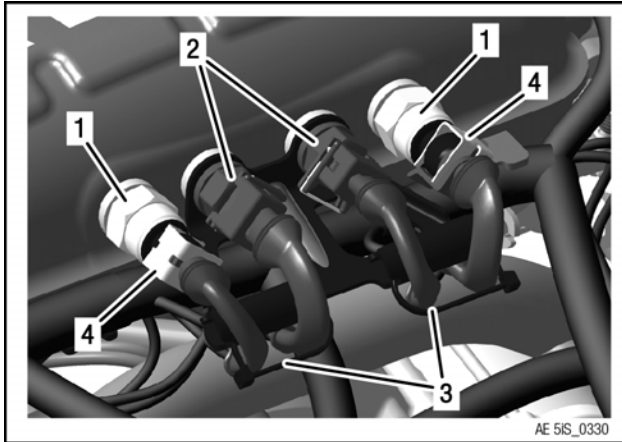


Figure 18.29

- |   |                               |   |                                  |
|---|-------------------------------|---|----------------------------------|
| 1 | Manifold Air Pressure Sensors | 2 | Manifold Air Temperature Sensors |
| 3 | Cable ties                    | 4 | Clips                            |

### KNOCK SENSOR (KNOCK) — CONNECTION

The sensor is connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness – removal](#).

### CRANKSHAFT POSITION SENSORS (CPS)— CONNECTION

The sensors are connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness – removal](#).

#### NOTE

*The connectors of the sensors are marked with dots:*

- *CPS\_1 (marked with 1 dot)*
- *CPS\_2 (marked with 2 dots)*

#### NOTE

*Do not forget to attach the cable ties (strain relief).*

### OIL TEMPERATURE (OTS) AND OIL PRESSURE SENSOR (OPS) — CONNECTION

The sensors are connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness – removal](#).

#### NOTE

*Do not forget to attach the cable ties (strain relief).*

### THROTTLE POSITION SENSOR (TPS) — CONNECTION

The sensor is connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness – removal](#).

### BOOST PRESSURE SENSOR (BPS) — CONNECTION

The sensors are connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness – removal](#).

### COOLANT TEMPERATURE SENSOR (CTS) — CONNECTION

#### NOTICE

**Do not clamp the cables for INJ\_4 and CTS (Coolant Temperature Sensor) together.**

The sensor is connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness – removal](#).

### EXHAUST GAS TEMPERATURE SENSOR (EGT) — CONNECTION

The sensors are connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness – removal](#).

### FUEL INJECTOR — CONNECTION

See Chapter 73-10-00, section [Fuel rail – installation](#).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## DOUBLE IGNITION COIL — CONNECTION


See Chapter 74-20-00, section [Double ignition coil — installation](#)

## PRESSURE CONTROL VALVE (PCV) — CONNECTION

The sensors are connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness — removal](#).

### NOTE

*The connectors of the PCV have different color designation. PCV\_A - black, PCV\_B - yellow and PCV\_C - gray.*

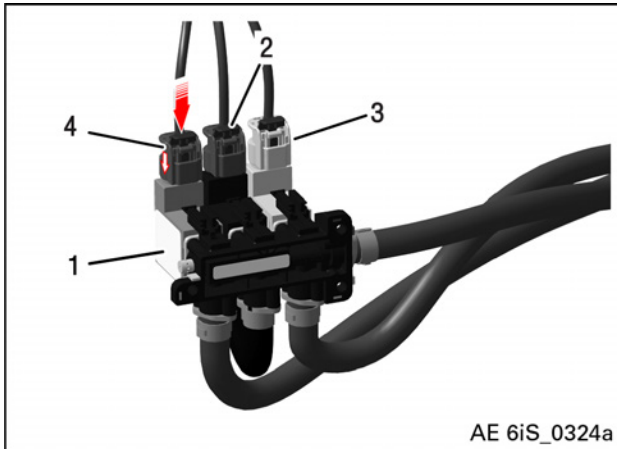

- |   |                              |   |                 |
|---|------------------------------|---|-----------------|
| 1 | Pressure control valve (PCV) | 2 | Connector PCV_A |
| 3 | Connector PCV_B              | 4 | Connector PCV_C |

Figure 18.30

## STRAIN RELIEF — CONNECTION

Step	Procedure
1	Attach strain reliefs to the wiring harness with cable ties.
2	Apply LOCTITE 243 to screws. Install cable clamps 12/M6 with Allen screws M6x16 and washers 6.4. Tightening torque 10 Nm (89 in. lb.)

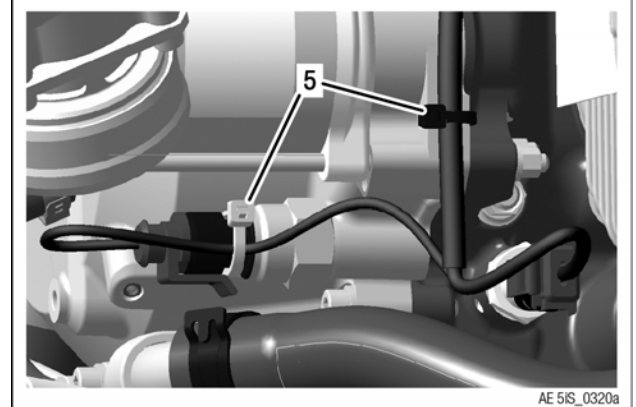
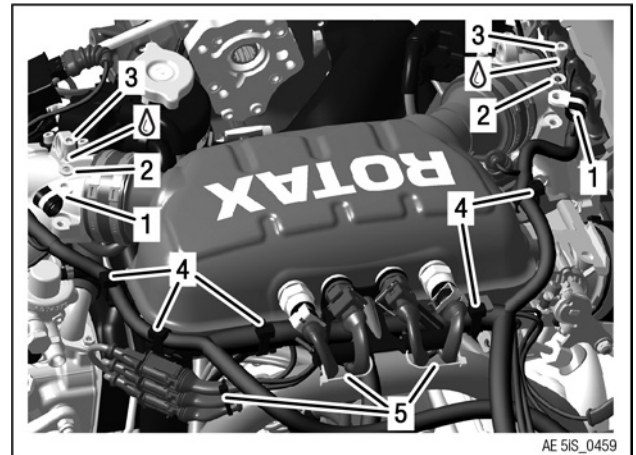


Figure 18.31

- |   |                      |   |                      |
|---|----------------------|---|----------------------|
| 1 | Cable clamp 12/M6    | 2 | Washer 6.4           |
| 3 | Allen screw M6x16    | 4 | Cable tie 203x7.6 mm |
| 5 | Cable tie 142x3.2 mm |   |                      |

## ENGINE CONTROL UNIT (ECU) — CONNECTION

The ECU is connected and disconnected in the same way. See [Chapter 76-50-00 section Wiring harness — removal](#).

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### NOTICE

The wire connectors of the ECU must not be opened and closed more than 20 times! This must be shown on the device by a clearly visible label with a printed numerical sequence (1-20) and by documentation conforming to self-monitoring guidelines.

### FUEL PUMP — CONNECTION



For connection of the fuel pump connectors (labeled FUEL PUMP\_A, FUEL PUMP\_B) please observe the instructions of the aircraft manufacturer.

### FUSE BOX — CONNECTION

The sensor round connector is connected and disconnected in the same way. See Chapter [76-50-00 section Wiring harness – removal](#).

### AMBIENT AIR PRESSURE AND TEMPERATURE SENSOR (APTS) — CONNECTION

The sensors are connected and disconnected in the same way. See [76-50-00 section Wiring harness – removal](#).

### STARTER RELAY — CONNECTION

The starter relay is connected and disconnected in the same way. See [76-50-00 section Wiring harness – removal](#).



Please observe the instructions of the aircraft manufacturer.

### GROUND CABLES – CONNECTION



For connection of the ground cables please observe the instructions of the aircraft manufacturer.

### HIC A AND HIC B — CONNECTION



Connect the HIC\_A and HIC\_B connectors in accordance with the aircraft manufacturer's specifications.

### FINISHING WORK

- Check that all plug connections are secure, contacted and free from corrosion and dirt.
- Check the grounding for good contact and cleanliness.
- Connect the wiring harness to the aircraft frame in accordance with the aircraft manufacturer's specifications.



Carry out an engine test run. See latest Maintenance Manual Line (MML), Chapter 12-20-00.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 76-70-00**  
**SENSORS AND ACTUATORS**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>3</b>
<b>Service products</b> .....	<b>4</b>
<b>System description</b> .....	<b>7</b>
General note .....	7
Sensors .....	7
Actuators and indicators.....	7
Safety instruction.....	8
Maintenance .....	8
<b>Removal</b> .....	<b>9</b>
Manifold air pressure sensor (MAPS_1/MAPS_2) — removal .....	9
Oil pressure sensor (OPS) — removal .....	10
Ambient air pressure and temperature sensor (AAPTS) — removal.....	10
Pressure control valve (PCV) – removal .....	11
Manifold air temperature sensor (MATS_1/MATS_2) — removal .....	11
Exhaust gas temperature sensor (EGT1_3/EGT2_4) — removal.....	12
Oil temperature sensor (OTS) — removal.....	14
Coolant temperature sensor (CTS) — removal .....	14
Knock sensor (KNOCK) — removal .....	14
Crankshaft position sensor (CPS_1/CPS_2) — removal .....	15
Throttle position sensor (TPS) — removal .....	16
Boost pressure sensor (BPS) — removal .....	17
Fuel injector (INJ) — removal .....	17
Double ignition coil — removal .....	17
<b>Inspection</b> .....	<b>18</b>
Sensors and actuators .....	18
General test procedure .....	18
General resistance measurement .....	18
Resistance measurement (temperature sensor).....	19
Voltage measurement.....	19
Current measurement.....	20
Manifold air pressure sensor (MAPS_1/MAPS_2) — inspection .....	21
Boost pressure sensor (BPS) — inspection .....	21
Oil pressure sensor (OPS) — inspection .....	22
Manifold air temperature sensor (MATS_1/MATS_2) — inspection .....	23
Oil temperature sensor (OTS) — inspection .....	23
Coolant temperature sensor (CTS) — inspection .....	24
Exhaust gas temperature sensor (EGT 1_3/EGT 2_4) - inspection .....	24
Knock sensor (Knock) — inspection.....	24
Crankshaft position sensor (CPS_1/CPS_2) — inspection.....	25
Throttle position sensor (TPS) — inspection .....	25
Ambient air pressure and temperature sensor (AAPTS) — inspection.....	26
Fuel injectors — inspection .....	27
Double ignition coil — inspection .....	27

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Ignition cables — inspection .....	28
<b>Installation.....</b>	<b>29</b>
Oil pressure sensor (OPS) — installation.....	29
Boost pressure sensor (BPS) — installation .....	29
Manifold air pressure sensor (MAPS_1/MAPS_2) — installation .....	30
Pressure control valve (PCV) – installation .....	30
Ambient air pressure and temperature sensor (AAPTS) — installation.....	31
Coolant temperature sensor (CTS) — installation.....	31
Manifold air temperature sensor (MATS_1/MATS_2) — installation .....	32
Oil temperature sensor (OTS) — installation.....	32
Exhaust gas temperature sensor (EGT1_3/EGT2_4) — installation.....	33
Knock sensor (KNOCK) — installation .....	34
Crankshaft position sensor (CPS_1/CPS_2) — installation .....	35
Throttle position sensor (TPS) — installation .....	37
Fuel injector (INJ) — installation .....	37
Double ignition coil — installation.....	37
Finishing work .....	37

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SPECIAL TOOLS**

Description	Part number
Multimeter	n.a.
Socket wrench 21x12.5 for MAPS and OPS	876075
Socket wrench 19x12.5 for CTS and OTS	876130

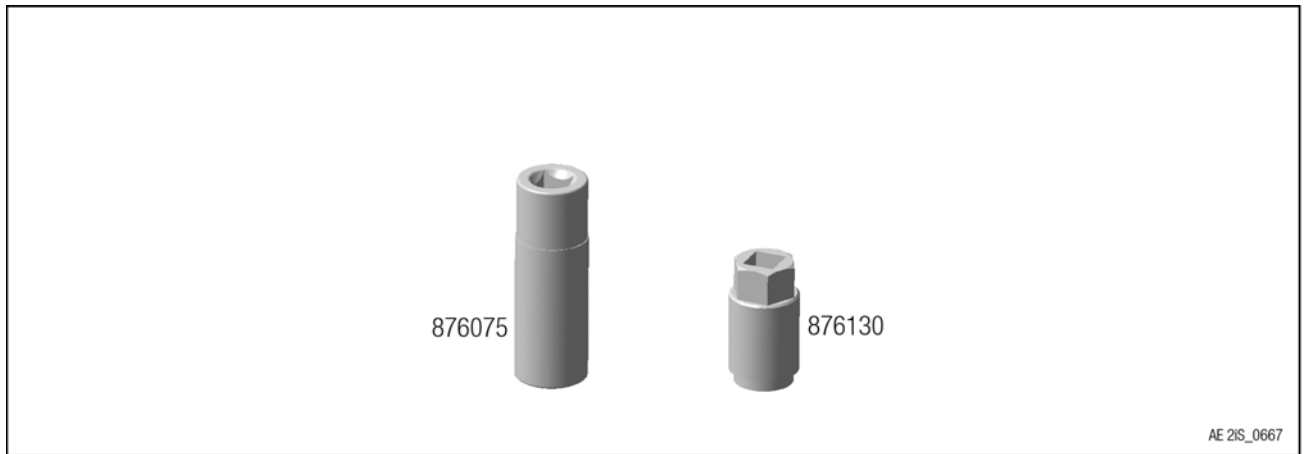


Figure 19.1: Special Tools

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE 243	897651
LOCTITE ANTI SEIZE 8151	297434

# BRP-Rotax MAINTENANCE MANUAL HEAVY

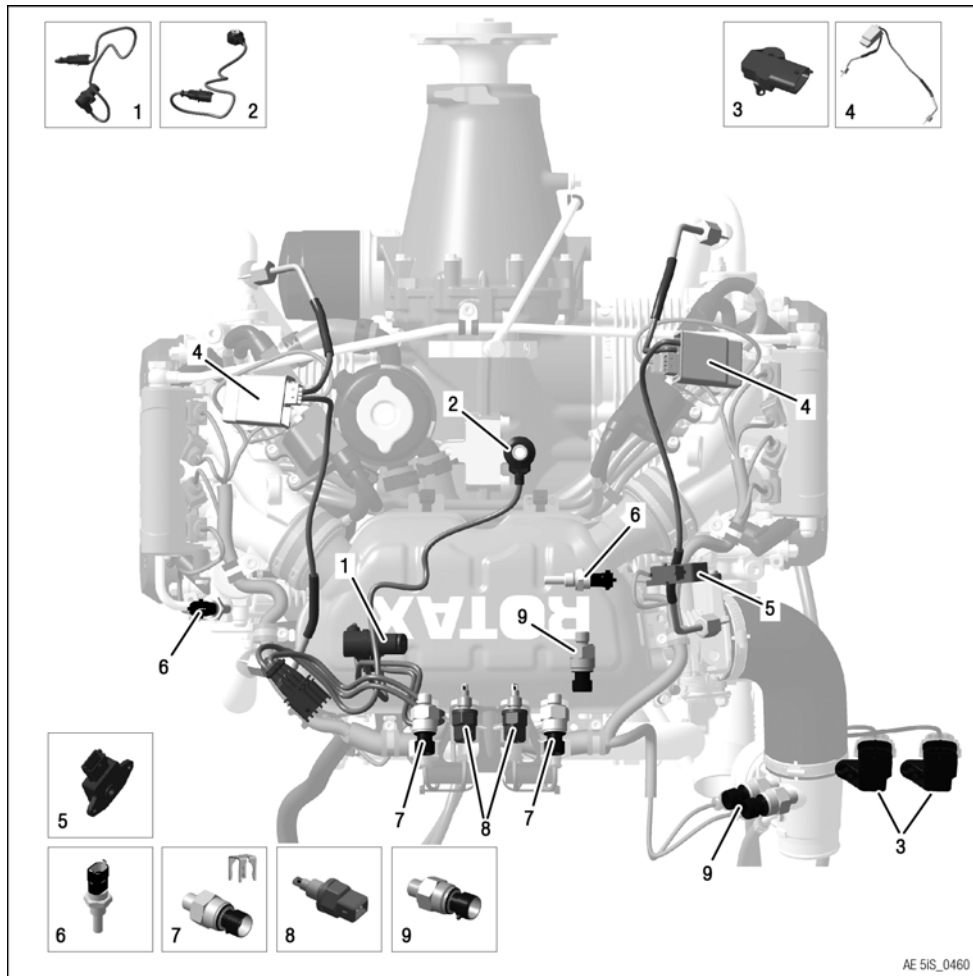


Figure 19.2: Sensors, TYPICAL

- |   |  |   |  |
|---|--|---|--|
| 1 | <i>Crankshaft position sensor (CPS 1 + 2)</i>                    | 2 | <i>Knock sensor (KNOCK)</i>  |
| 3 | <i>Ambient air pressure and temperature sensor (AAPTS)</i>       | 4 | <i>Exhaust gas temperature sensor (EGT)</i>                              |
| 5 | <i>Throttle position sensor (TPS)</i>                            | 6 | <i>Coolant temperature sensor (CTS) and Oil temperature sensor (OTS)</i> |
| 7 | <i>Manifold air pressure sensor (MAPS 1 + 2)</i>                 | 8 | <i>Manifold air temperature sensor (MATS 1 + 2)</i>                      |
| 9 | <i>Oil pressure sensor (OPS) and Boost pressure sensor (BPS)</i> |   |  |

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

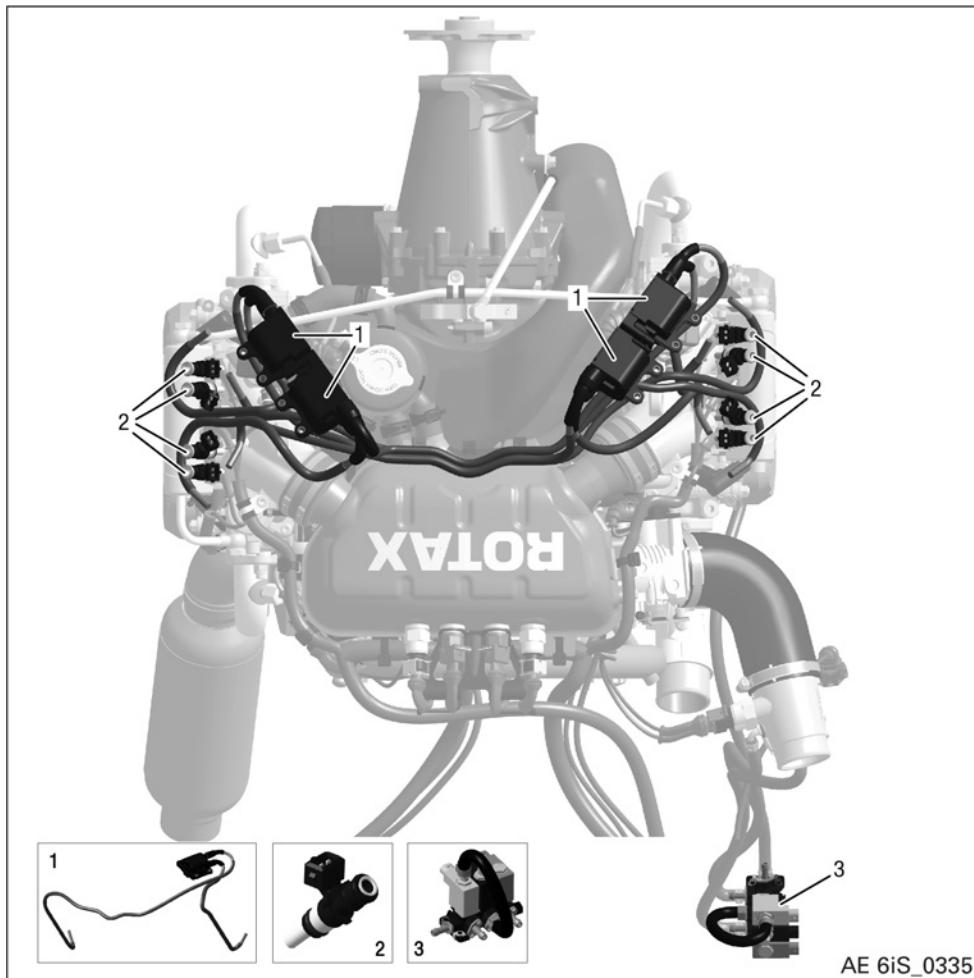


Figure 19.3: Actuators

1 Double ignition coils

2 Fuel injectors

3 Pressure control valve (PCV)

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### **SYSTEM DESCRIPTION**

#### **GENERAL NOTE**

In order to ensure that the engine is in the desired operating state and in full working order, a number of sensors are placed on it and used for the Engine Management System (EMS). The information captured by the sensors is transmitted to the ECU where it is processed, and the corresponding signals are sent on to the actuators.

#### **SENSORS**

##### **1 Ambient air pressure and temperature sensor**

Wiring harness designation: APTS

Ambient air pressure and ambient temperature are measured with a combined pressure/temperature sensors. These measurement values are used to compensate for the different altitude and external temperatures.

##### **1 Oil pressure sensor**

Wiring harness designation: OPS

The sensor measures the oil pressure of the engine.

##### **2 Manifold air pressure sensors**

Wiring harness designation: MAPS\_1/MAPS\_2

The sensors measure the pressure of the intake air in the airbox.

##### **2 Manifold air temperature sensors**

Wiring harness designation: MATS\_1/MATS\_2

The sensors measure the temperature of the intake air in the airbox.

##### **2 Exhaust gas temperature sensors**

Wiring harness designation: EGT\_1\_3/EGT\_2\_4

The sensors measure the temperature of the exhaust gas and are used to regulate the injection quantity.

##### **1 Coolant temperature sensor**

Wiring harness designation: CTS

The sensor measures the coolant temperature directly in the cylinder head of cylinder 4.

##### **1 Oil temperature sensor**

Wiring harness designation: OTS

The sensor measures the oil temperature.

##### **1 Knock sensor**

Wiring harness designation: KNOCK

"Knocking" means uncontrolled combustion in petrol engines, which is caused by auto-ignition of the

mixture in the combustion chamber. This undesirable combustion results in increased mechanical loads in the engine.

Operation in this condition over a long period can damage or even destroy the piston. Characteristic frequencies are generated during knocking. These frequencies are detected by the knock sensor and sent to the engine control unit (ECU).

##### **1 Throttle position sensor**

Wiring harness designation: TPS

The throttle position sensor measures the position of the throttle valve in the throttle body.

##### **4 Double ignition coils**

Wiring harness designation: COIL\_1/COIL\_2/ COIL\_3/COIL\_4

Each double ignition coil supplies 2 spark plugs with high voltage.

##### **2 Crankshaft position sensors**

Wiring harness designation: CPS\_1/CPS\_2

The engine control unit (ECU) requires the current position of the crankshaft for exact control of the ignition and injection points. The crankshaft position sensors measure the revolutions of the crankshaft and give the ECU information about the position of the pistons and the position of the crankshaft.

### **ACTUATORS AND INDICATORS**

#### **Fuel injectors**

Wiring harness designation: INJ\_1 to INJ\_8

In the engine, eight injection valves (INJ) are used, two for each cylinder.

#### **Double ignition coils**

Wiring harness designation: COIL\_1 to COIL\_4

Four double ignition coils (with one primary coil and one secondary coil each) are attached to the engine. Each end of the secondary coil is connected to a spark plug of different cylinders by ignition cables.

#### **Pressure control valve (PCV)**

Wiring harness designation: PCV\_A, PCV\_B and PCV\_C

Electromechanical control device, used to control the gas flow in the area of turbocharger, pop-off valve and wastegate.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### SAFETY INSTRUCTION

#### **⚠ WARNING**

Danger of severe burns and scalds! Always allow the engine to cool down to ambient temperature before starting any work.

#### **⚠ WARNING**

Danger of injury when removing hose connections, sensors and actuators! Risk of fire due to flammable substances (e.g. fuel). Open flames and smoking in the installation area is not permitted!

#### **NOTICE**

**Danger of damage to the fuel distribution system and ignition unit!**  
Do not touch or pull off ignition cables when the engine is running or at starting speed.

### NOTE

*The general safety instructions must be followed during all work on the sensors and actuators!*

#### **ENVIRONMENTAL NOTE**

Please observe the disposal regulations applicable in your area.

#### **ENVIRONMENTAL NOTE**

Observe the safety instructions of the manufacturer of hazardous substances (coolant, oil or fuel) and the applicable regional waste disposal regulations.

#### **ENVIRONMENTAL NOTE**

Work with the utmost care to ensure that no water pollutants can penetrate into the soil, water or the sewerage system.

### MAINTENANCE



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.



## **REMOVAL**

### **Preparation**

Before the sensors and actuators are removed, the procedures and checks described below must be carried out to identify any further faults in the cylinder head and rectify them as part of repair work.

### **NOTE**

*This work can only be carried out on the whole unit.*

- General visual inspection. See relevant Maintenance Manual Line (MML) for the respective engine type.
- Use the BUDS diagnostic unit for troubleshooting and to read out the error memory. See Chapter 76-10-00, section [ECU - read out and flashing](#)

### **Plausibility test**

BUDS (check the plausibility of the values of the sensors with the aid of the Maintenance Tool):

Step	Procedure
1	Engine standstill (cold engine).
2	Activate ECU.
3	Check the plausibility of the pressure, temperature values.
4	Start the engine.
5	Check the plausibility of the sensors.

### **Elimination process for manifold air pressure sensors (MAPS), manifold air temperature sensors (MATS) and fuel injection valves (INJ)**

In order to identify a component clearly as defective, you should follow the process of elimination, e.g. change round the wiring harness connectors on the sensors.

- If the error on the LANE remains the same, this means the wiring harness is not in working order.

If the error appears on the other LANE after the changeover, this means the sensor is not in working order.

- Turn the ignition switch OFF.

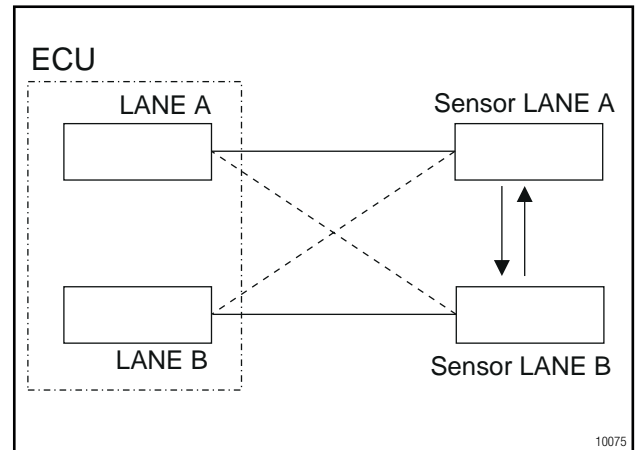


Figure 19.4: Wiring diagram – elimination process

## **MANIFOLD AIR PRESSURE SENSOR (MAPS\_1/MAPS\_2) — REMOVAL**

Installation position: Airbox

Step	Procedure
1	Disconnect the manifold air pressure sensor (MAPS). See <a href="#">Chapter 76-50-00 section Wiring harness – removal</a> .
2	Loosen the sensor with a 21 mm socket (part no. 876075) and remove it.
3	Close the threaded bore with the appropriate protective covering.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

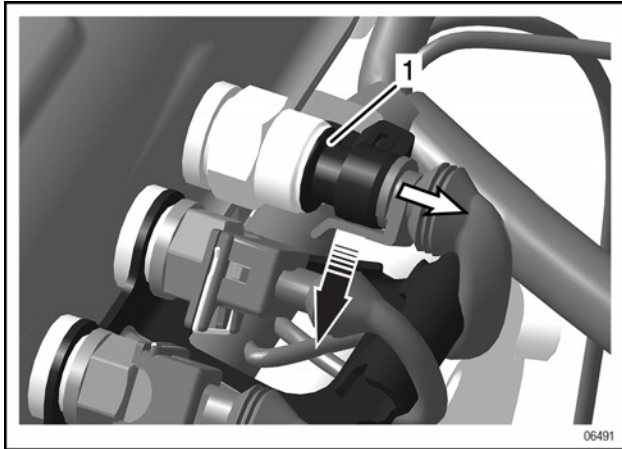


Figure 19.5

- 1 Manifold air pressure sensor (MAPS)

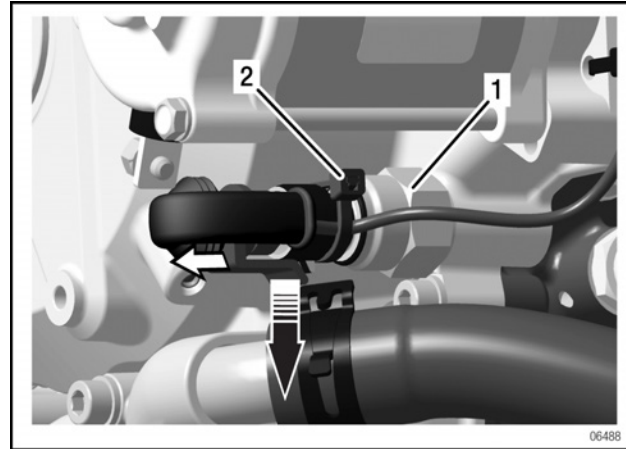


Figure 19.6

- 1 Oil pressure sensor (OPS)
- 2 Cable ties

**OIL PRESSURE SENSOR (OPS) —  
 REMOVAL**

**NOTE**

*Be prepared! When removing the oil temperature sensor, oil may leak from the bore.*

Installation position: Ignition housing

Step	Procedure
1	Disconnect the oil pressure sensor (OPS). See <a href="#">Chapter 76-50-00 section Wiring harness – removal.</a>

Step	Procedure
2	Loosen the oil pressure sensor with a 19 mm socket (part no. 876130) and remove it.
3	Close the threaded bore with the appropriate protective covering.

**AMBIENT AIR PRESSURE AND  
 TEMPERATURE SENSOR (AAPT) —  
 REMOVAL**

Installation position: Aircraft frame

Step	Procedure
1	Disconnect the ambient air pressure and temperature sensor (AAPT). See <a href="#">Chapter 76-50-00 section Wiring harness – removal.</a>
2	Follow the aircraft manufacturer's instructions for removal.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

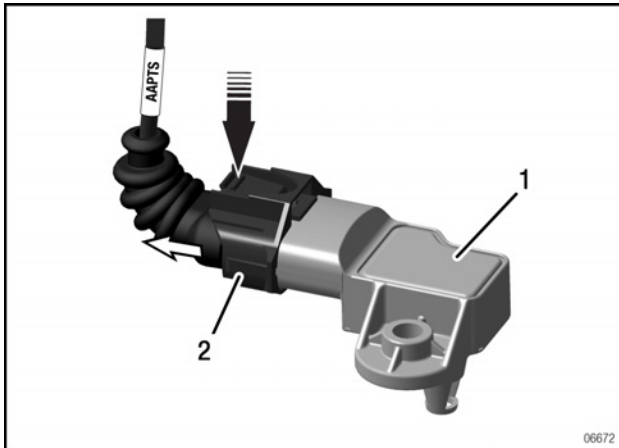


Figure 19.7

- Ambient air pressure and temperature sensor (AAPT)*
- 1    *Connection socket (AAPT)*    2    *Connection socket*

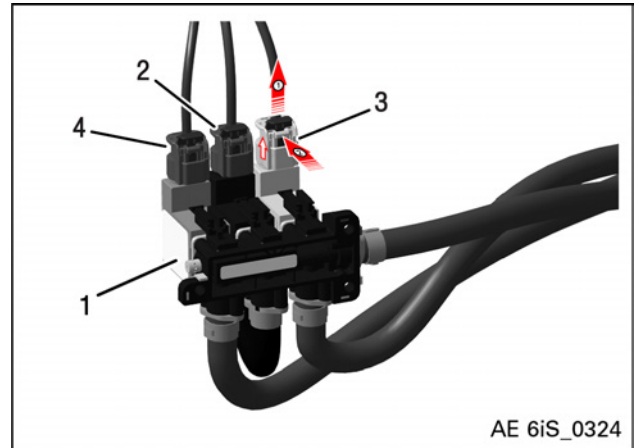


Figure 19.8

- 1    *Pressure control valve (PCV)*    2    *Connector PCVA*
- 3    *Connector PCV B*    4    *Connector PCV C*

**PRESSURE CONTROL VALVE (PCV) – REMOVAL**

Installation position: Aircraft frame

Step	Procedure
1	Disconnect the pressure control valve (PCV). See Chapter 76-50-00 section <a href="#">Wiring harness – removal</a>
2	Follow the aircraft manufacturer's instructions for removal.
3	For removal of the hoses, see Chapter 73-10-00 section <a href="#">Pressure control valve (PCV) - removal</a> .

**MANIFOLD AIR TEMPERATURE SENSOR (MATS\_1/MATS\_2) — REMOVAL**

Installation position: Airbox

Step	Procedure
1	Disconnect the manifold air temperature sensor. See Chapter 76-50-00 section <a href="#">Wiring harness – removal</a> .

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

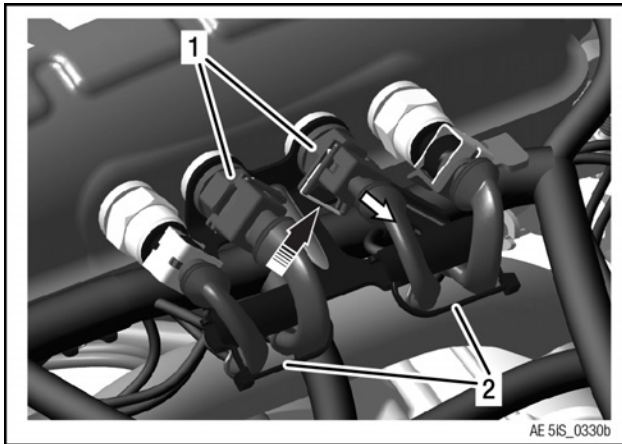


Figure 19.9

- 1 *Manifold air temperature sensors*      2 *Cable ties*

Step	Procedure
2	Unscrew the sensor with a 19 mm socket (part no. 876130) and remove it together with the sealing ring and the connector bracket.
3	Close the threaded bore with the appropriate protective covering.

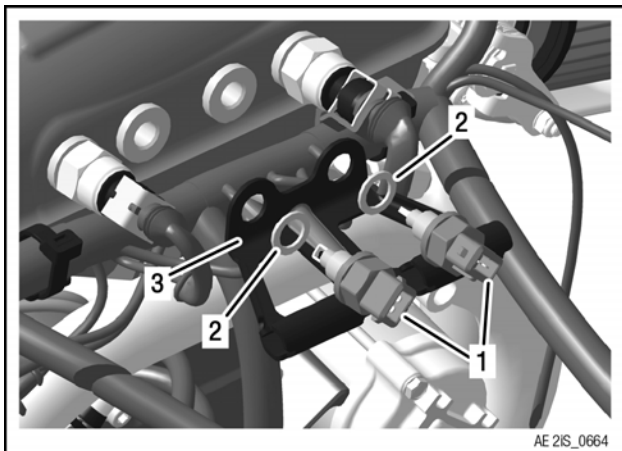


Figure 19.10

- 1 *Manifold air temperature sensors*      2 *Sealing rings*  
 3 *Connector bracket*

**EXHAUST GAS TEMPERATURE SENSOR (EGT1\_3/EGT2\_4) — REMOVAL**

Installation position: Double ignition coils, exhaust pipes

Step	Procedure
1	Disconnect the exhaust gas temperature sensor (EGT1_3/EGT2_4). See Chapter 76-50-00 section <a href="#">Wiring harness – removal</a> .

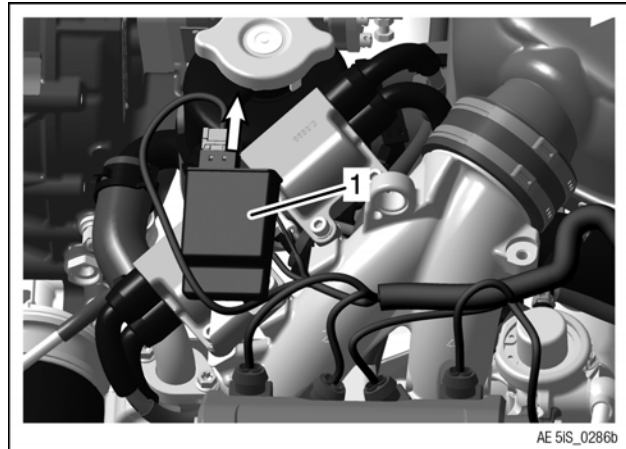


Figure 19.11

- 1 *Exhaust gas temperature sensor (EGT)*

Step	Procedure
2	Press the spring hook downwards and carefully pull exhaust gas temperature sensor (EGT1_3 and/or EGT2_4) out of the connector bracket.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

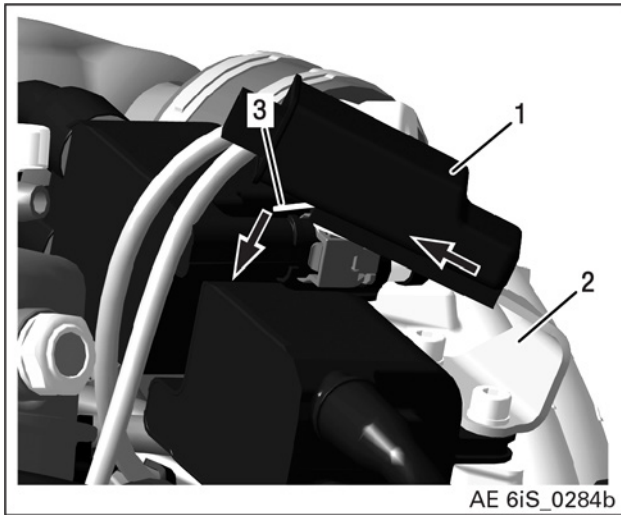


Figure 19.12: TYPICAL

- 1 Exhaust gas temperature sensor (EGT)
- 2 Connector bracket
- 3 Spring hooks

**NOTICE**

**Do not damage the cables.**  
 Always cut cable ties on the side of the support plate facing away from the cables.

Step	Procedure
3	If necessary, cut the cable tie from the exhaust gas temperature sensor cable (Cyl. 1_3 connected with the double ignition coil cable).

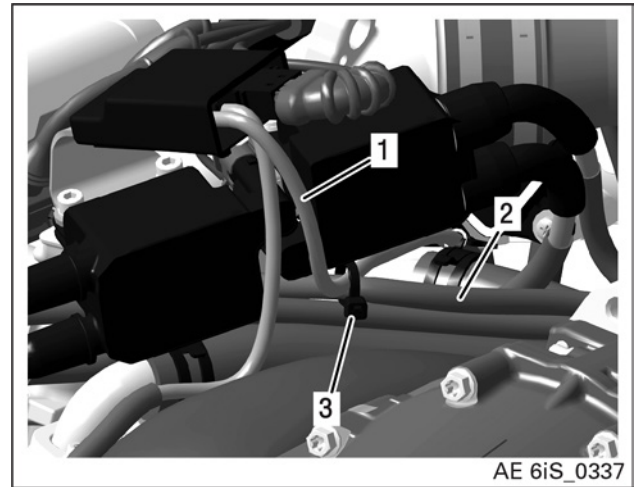


Figure 19.13: TYPICAL

- 1 Exhaust gas temperature sensor cable
- 2 Double ignition coil cable
- 3 cable tie

Step	Procedure
4	Unscrew the exhaust gas temperature sensor (EGT) and remove with washer from the exhaust pipe.

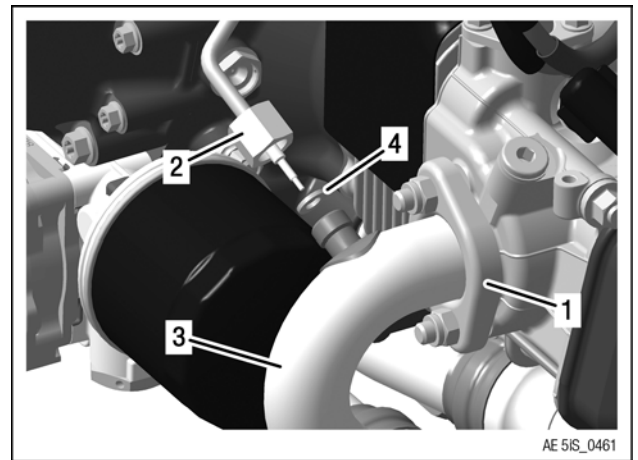


Figure 19.14

- 1 Exhaust flange
- 2 Exhaust gas temperature sensor
- 3 Exhaust pipe
- 4 Washer

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**OIL TEMPERATURE SENSOR (OTS) — REMOVAL**

**NOTE**

*When removing the oil temperature sensor, oil may leak from the bore.*

Installation position: Crankcase

Step	Procedure
1	Disconnect the oil temperature sensor (OTS). See <a href="#">Chapter 76-50-00 section Wiring harness – removal</a> .

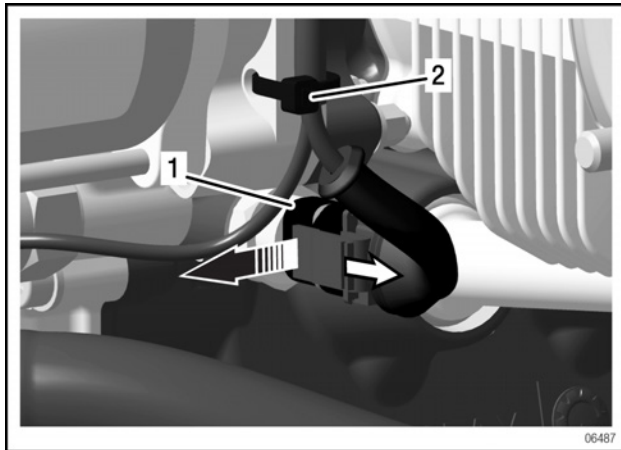


Figure 19.15

- 1 Oil temperature sensor      2 Cable ties

Step	Procedure
2	Use a 19 mm socket (part no. 876130) to remove the oil temperature sensor from the crankcase.
3	Close the bore with the appropriate protective covering.

**COOLANT TEMPERATURE SENSOR (CTS) — REMOVAL**

**Preparation**



Drain coolant.  
 See current Maintenance Manual Line (MML) for the respective engine type.

Installation position: Cylinder head (cylinder 4)

Step	Procedure
1	Disconnect the coolant temperature sensor (CTS). See <a href="#">Chapter 76-50-00 section Wiring harness – removal</a> .
2	Use a 19 mm (part no. 876130) to remove the coolant temperature sensor from the cylinder head.

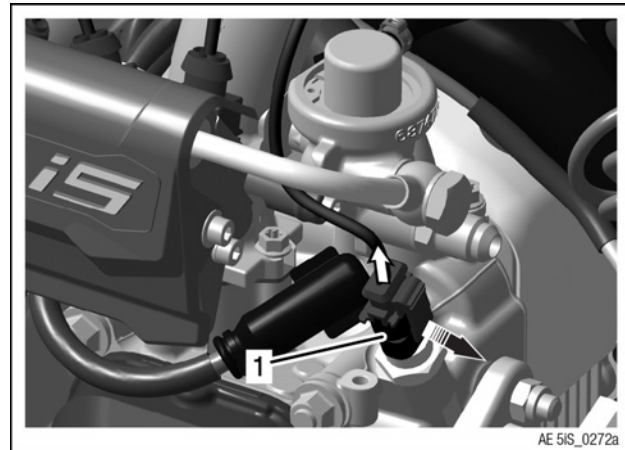


Figure 19.16

- 1 Coolant temperature sensor (CTS)

**KNOCK SENSOR (KNOCK) — REMOVAL**

**Preparation**

- Remove cooling air baffle. See [Chapter 75-00-00, section Cooling air baffle - removal](#).

Installation position: Crankcase



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
1	Disconnect the knock sensor. See <a href="#">Chapter 76-50-00 section Wiring harness – removal</a> .
2	Pull the connector out of the connector bracket.

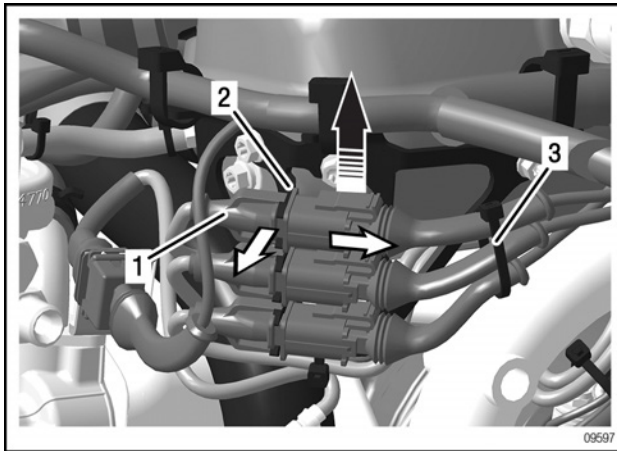


Figure 19.17

- 1 Connector                      2 Connector bracket  
 3 Cable tie

**NOTE**

*Mark the position of the sensor.*

Step	Procedure
3	Loosen the binding head screw.
4	Remove the knock sensor.

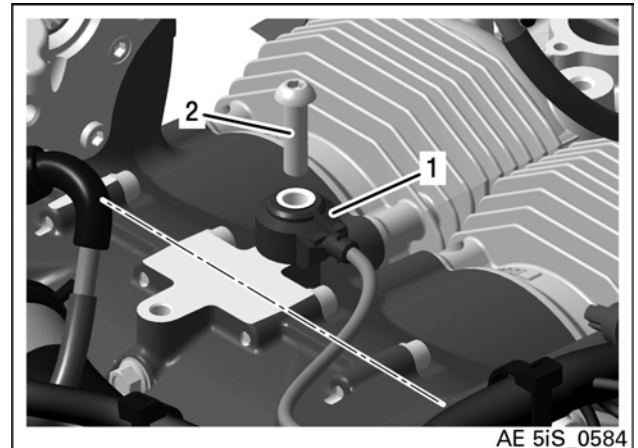


Figure 19.18

- 1 Knock sensor                      2 Binding head screw

**CRANKSHAFT POSITION SENSOR (CPS\_1/CPS\_2) — REMOVAL**

**NOTE**

*When removing the crankshaft position sensor, oil may leak from the bore.*

Installation position: Ignition housing

NOTICE	
<b>Do not damage the cables.</b>	
Always cut cable ties on the side of the support plate facing away from the cables.	

Step	Procedure
1	Disconnect the crankshaft position sensor (CPS). See <a href="#">Chapter 76-50-00 section Wiring harness – removal</a> .
2	Remove cable ties.
3	Pull the connector out of the connector bracket.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

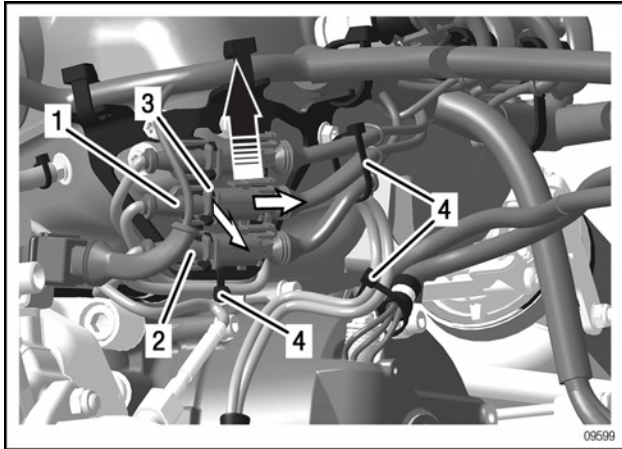


Figure 19.19

- 1 Connector CPS\_1      2 Connector CPS\_2
- 3 Connector bracket    4 Cable ties

Step	Procedure
4	Remove the Allen screw with washer and remove the cable clamp.
5	Loosen the Allen screw with lock washer and remove the crankshaft position sensor (CPS).
6	Close the opening with the appropriate protective plug.

**NOTE**

*Ensure that the O-ring is positioned on the crankshaft position sensor.*

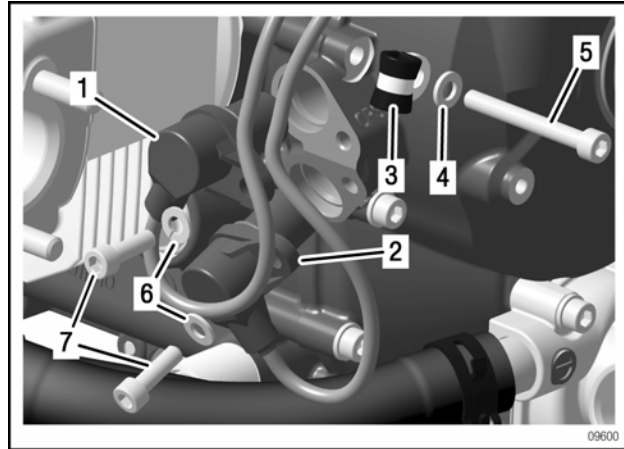


Figure 19.20

- 1 Crankshaft position sensor CPS\_1      2 Crankshaft position sensor CPS\_2
- 3 Cable clamp      4 Washer
- 5 Allen screw M6x50      6 Lock washer
- 7 Allen screw M6x20

**THROTTLE POSITION SENSOR (TPS) — REMOVAL**

Installation position: Throttle body

**NOTE**

*The throttle position sensor (TPS) is not available as a spare part.*

Step	Procedure
1	Disconnect the throttle position sensor (TPS). See Chapter <a href="#">76-50-00 section Wiring harness – removal</a> .



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

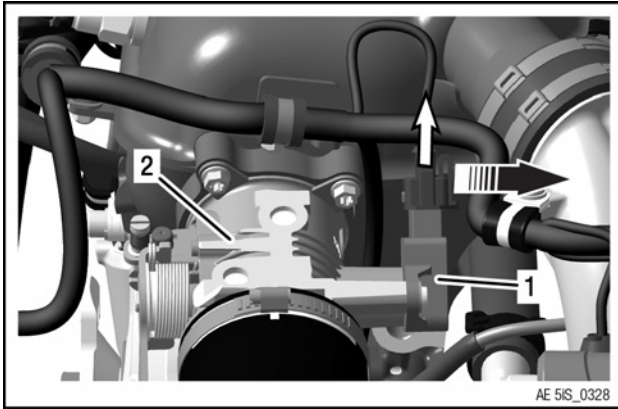


Figure 19.21

- 1 *Throttle position sensor (TPS)*      2 *Throttle body assy.*

**BOOST PRESSURE SENSOR (BPS) — REMOVAL**

Installation position: Pop off valve assy.

Step	Procedure
1	Disconnect the boost pressure sensor (BPS). See Chapter <a href="#">76-50-00 section Wiring harness – removal</a> .
2	Loosen the pressure sensor with a 21 mm socket (part no. 876075) and remove it.
3	Close the opening with the appropriate protective plug.

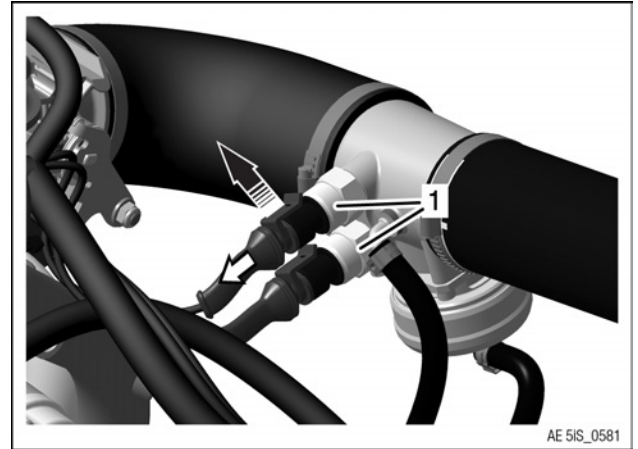


Figure 19.22

- 1 *Boost pressure sensor (BPS)*

**FUEL INJECTOR (INJ) — REMOVAL**

For removal of the fuel injection, see Chapter 73-10-00, section [Fuel rail — removal](#).

**DOUBLE IGNITION COIL — REMOVAL**

For removal of the double ignition coils, see Chapter 74-20-00, section [Double ignition coil – removal](#).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION

### SENSORS AND ACTUATORS

#### NOTICE

Replace parts in the event of physical damage or resistance readings out of the wear limits.

#### Preparation

#### NOTE

Before starting to inspect the sensors and actuators, ensure that the whole aircraft system is fully functional!



Observe the instructions of the aircraft manufacturer.

Aircraft components to be checked:

- Battery
- Fuses
- Grounding connections
- Cable connections

### GENERAL TEST PROCEDURE

#### NOTICE

During work on the components of the engine management system, there is a risk of damage. Never put measuring probes in plug connectors or use paper clips to carry out tests in the plug connectors.

#### NOTE

The MAINTENANCE TOOL BUDS software must be used for diagnostics!

- After a problem has been solved, any error entries in the ECU must be documented with the MAINTENANCE TOOL and then deleted.

#### Functional test

The function of the sensors and actuators must be checked with the ECU activated.

### GENERAL RESISTANCE MEASUREMENT

Before checking the resistance, ensure that there is no voltage present at the component to which the ohmmeter is connected. Always pull out the connectors beforehand. Switch off the ignition. Disconnect the battery. Otherwise the measurement unit can be damaged.

The ohmmeter is connected to the 2 connections of a consumer or to the 2 ends of an electric line. It doesn't matter which cable (+/-) of the measurement unit is clamped to which contact. Exceptions are resistance measurements on components which contain diodes.

The resistance measurement on the engine usually covers 2 areas:

- Resistance or component check
- Continuity check of an electric cable, a switch etc. This checks whether an electric cable is disconnected so that the connected electric device cannot function. The ohmmeter is connected to the two ends of the electric cable in question for the measurement. If the resistance is close to 0 (zero) then there is continuity. This means the electric cable is in working order. If the cable is broken, the measurement unit displays infinity.

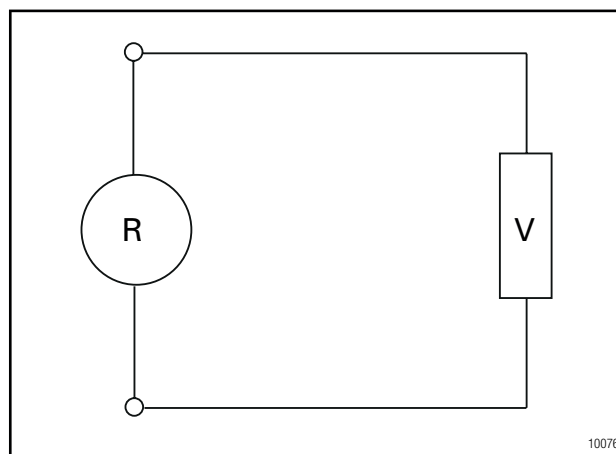


Figure 19.23

R Ohmmeter

V Consumer

## RESISTANCE MEASUREMENT (TEMPERATURE SENSOR)

### General note

If resistance values are measured with an ohmmeter, all values are given at a temperature of approx. 20 ° C. A resistance value changes with temperature. The temperature sensors which are mostly used in the engine are NTC (Negative Temperature Coefficient) and operate in the opposite manner i.e. the resistance value essentially falls when the temperature rises. This must be taken into account when measuring at temperatures which differ from the specified values. The relationship between the resistance and the temperature can be found in the respective diagram of the relevant sensor. The resistance value of a temperature sensor can appear to be in working order at ambient temperature but defective at other temperatures. If in doubt, replace the sensor.

### NOTE

*It should be remembered that the static measurement is only meaningful for the determined temperature ranges. Exact information can be obtained if the sensor has been tested over a wider temperature range.*

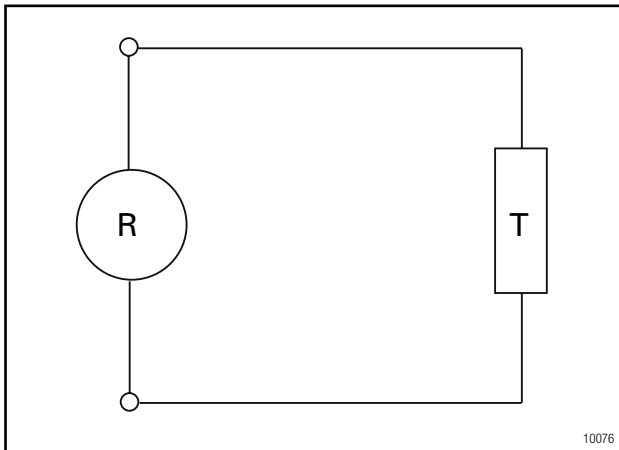


Figure 19.24

R Ohmmeter                      T Temperature sensor

## VOLTAGE MEASUREMENT

### General note

NOTICE
<p><b>Voltage supply: The secondary side of the ignition unit is an exception to the following instructions! The ignition voltage can be up to 30 000 volts! This high voltage must only be measured with a special measurement unit or an oscilloscope with a special test probe.</b></p>

Voltage can be detected with a simple test lamp or a voltage tester. However, this only indicates whether voltage is connected at all. To check the level of the voltage present, a voltmeter (= multimeter) must be connected.

Step	Procedure
1	The voltmeter must first be adjusted to the measurement range of the voltage to be measured. Voltages on the engine are generally no higher than approx. 28 volts.
2	Connect the cables of the measurement unit parallel to the consumer.

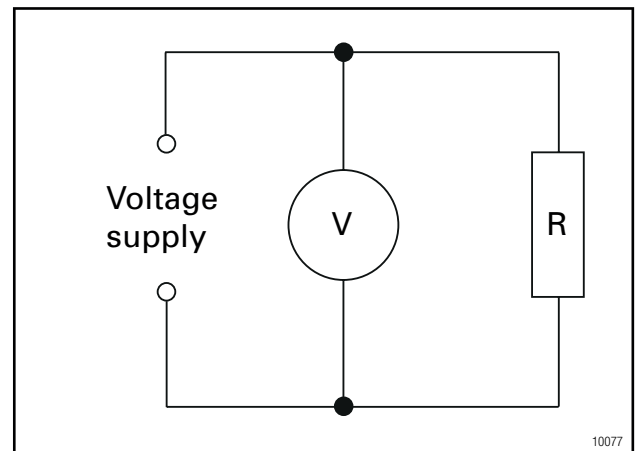


Figure 19.25

V Parallel-connected voltmeter                      R Consumer

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**CURRENT MEASUREMENT**

**General note**

It is not often necessary to measure the amperage on the engine. This requires an ammeter, which is usually integrated in a multimeter.

**NOTICE**

**Amperage: Never measure the amperage in the cable to the starter with a normal ammeter! The measurement unit can be destroyed by the high currents which occur here. A current clamp can be used for measuring such high amperages.**

Step	Procedure
1	Before the current measurement, the measurement unit is adjusted to the measurement range in which the amperage you are measuring is likely to be found. If this is not known, set the highest measurement range, and if there is no display, switch down to the next measurement range, and so on.
2	If not using a clamp-on ammeter, the circuit must be disconnected in order to measure the amperage. The measurement unit (ammeter) is connected in between.

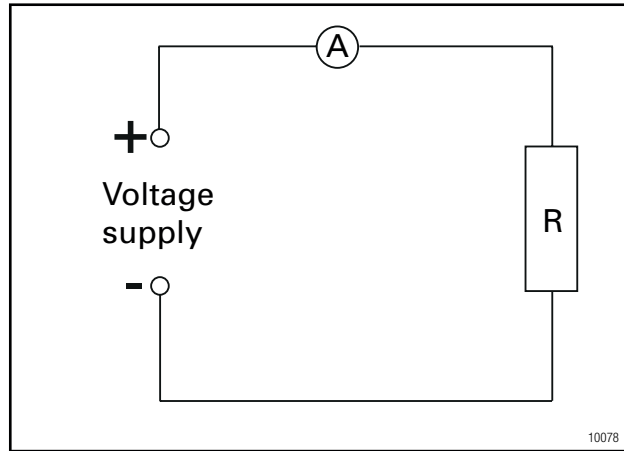


Figure 19.26

A *Series-connected ammeter*      R *Consumer*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**MANIFOLD AIR PRESSURE SENSOR (MAPS\_1/MAPS\_2) — INSPECTION**

Step	Procedure
1	Inspect for physical damage.
2	Measure the amps between pin B and C.

Manifold air pressure sensor (MAPS_1, MAPS_2)			
Signal	PIN	Voltage [in V]	Remarks
Supply voltage	B	5 V ± 0.5	
OUT	C	0.5 .... 4.5 V	corresponds to 0 to 2 bar
GROUND	A	0 V	
Measurement			
Pressure (bar/psi)	Current [in V]		
2 bar / 29 psi	4.5 V		
0	0V		

Figure 19.27

**BOOST PRESSURE SENSOR (BPS) — INSPECTION**

Step	Procedure
1	Inspect for physical damage.
2	Measure the amps between pin B and C.

Boost pressure sensor (BPS_1, BPS_2)			
Signal	PIN	Voltage [in V]	Remarks
Supply voltage	B	5 V ± 0.5	
OUT	C	0.5 .... 4.5 V	corresponds to 0 to 2 bar
GROUND	A	0 V	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

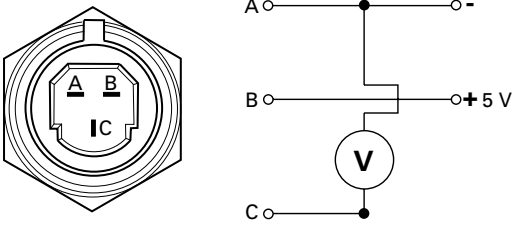
Boost pressure sensor (BPS_1, BPS_2)			
Signal	PIN	Voltage [in V]	Remarks
<b>Measurement</b>			10079
<b>Pressure (bar/psi)</b>	<b>Current [in V]</b>		
2 bar / 29 psi	4.5 V		
0	0.5 V		

Figure 19.28

**OIL PRESSURE SENSOR (OPS) — INSPECTION**

**NOTE**

*The range of the sensor is from 0 to 10 bar (0 to 145 psi). These values are also indicated on the sensor.*

Step	Procedure
1	Inspect for physical damage.
2	Measure the amps between pin B and C.

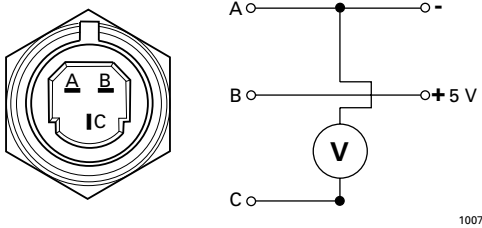
Oil pressure sensor (OPS)			
Signal	PIN	Voltage [in V]	Remarks
Supply voltage	B	5 V ± 0.5	
OUT	C	0.5 .... 4.5 V	corresponds to 0 to 10 bar
GROUND	A	0 V	
<b>Measurement</b>			10079
<b>Pressure (bar/psi)</b>	<b>Current [in V]</b>		
10 bar / 145 psi	4.5 V		
0	0V		

Figure 19.29

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**MANIFOLD AIR TEMPERATURE SENSOR (MATS\_1/MATS\_2) — INSPECTION**

Step	Procedure
1	Inspect for physical damage.
2	Measure the resistance between the two pins.

Manifold air temperature sensor (MATS_1, MATS_2)	
Measurement	
Temperature [°C/°F]	Resistance [Ω]
- 10 °C / 14 °F	9217 +/- 9 %
0 °C / 38 °F	5808 +/- 7%
20 °C / 68 °F	2500 +/- 5 %
80 °C / 176 °F	331 +/- 10 %

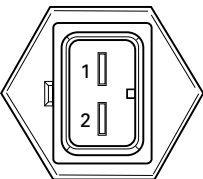
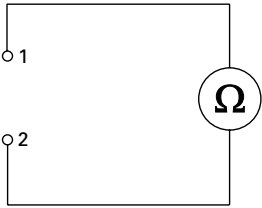



Figure 19.30

**OIL TEMPERATURE SENSOR (OTS) — INSPECTION**

Step	Procedure
1	Inspect for physical damage.
2	Measure the resistance between the two pins.  <b>NOTE</b> <i>Grounding connection of the temperature sensor need to be set to measure the resistance correctly. The ground connection of the oil temperature sensor is established directly via the ignition housing.</i>
3	The max. operating temperatures must not be exceeded. In the event of temperature rise above the limit check the oil system, see current Maintenance Manual Line (MML) for the respective engine type.

Oil temperature sensor (OTS)	
Measurement	
Temperature [°C/°F]	Resistance [Ω]
- 10 °C / 14 °F	9395 +/- 7 %
0 °C / 32 °F	5895 +/- 7 %
20 °C / 68 °F	2499 +/-6 %
80 °C / 176 °F	323 +/-3 %
100 °C / 212 °F	187 +/- 2 %

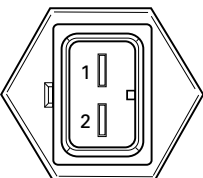
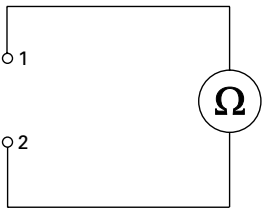



Figure 19.31

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**COOLANT TEMPERATURE SENSOR (CTS) — INSPECTION**

Step	Procedure
1	Inspect for physical damage.
2	Measure the resistance between the two pins.

Coolant temperature sensor (CTS)	
Measurement	
Temperature [°C/°F]	Resistance [Ω]
- 10 °C / 14 °F	9395 +/- 7 %
0 °C / 32 °F	5895 +/- 7 %
20 °C / 68 °F	2499 +/-6 %
80 °C / 176 °F	323 +/-3 %
100 °C / 212 °F	187 +/- 2 %

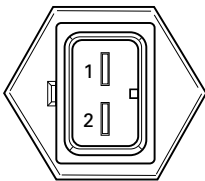
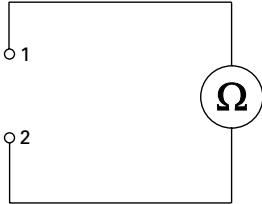



Figure 19.32 10080

**EXHAUST GAS TEMPERATURE SENSOR (EGT 1\_3/EGT 2\_4) - INSPECTION**

**NOTE**

*EGT sensors cannot be tested for voltage and/or resistance. If the function is not given and/or an error occurs, please renew the sensor.*

**KNOCK SENSOR (KNOCK) — INSPECTION**

Step	Procedure
1	Inspect for physical damage.
2	Measure the resistance between the two pins.

Knock sensor	
Measurement	
Measuring points	Resistance [Ω]
Between PIN 1 and PIN 2	4 to 10 MΩ
Between PIN and housing	≥ 1 MΩ


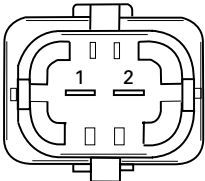



Figure 19.33 10081

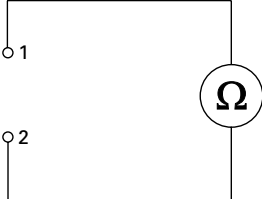

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

## **CRANKSHAFT POSITION SENSOR (CPS\_1/CPS\_2) — INSPECTION**

### **General visual inspection**

- Check that the sensors are fitted securely
- Corrosion or damage to the wiring, connector contacts or connections
- Check the O-ring on the crankshaft position sensor
- Check the thread
- Check the crankshaft position sensor surface
- Check the crankshaft position sensor bore

### **NOTE**

*CPS sensors cannot be tested for voltage and/or resistance. If the function is not given and/or an error occurs, please renew the sensor.*

## **THROTTLE POSITION SENSOR (TPS) — INSPECTION**

### **General visual inspection**

- Check the setting of the throttle valve actuation and travel (are both stops reached yes/ no)
- Corrosion or damage to the connector and contacts
- Check that the sensor shaft moves freely
- Check that the sensors are fitted securely
- Check the parameters of the throttle valve setting with B.U.D.S.

<b>Step</b>	<b>Procedure</b>
1	Measure the voltage between pin 2 and 3.

<b>Throttle position sensor (TPS)</b>			
<b>Signal</b>	<b>PIN</b>	<b>Voltage [in V]</b>	<b>Remarks</b>
Supply voltage	1	+ 5 V	
Earth offset	2	0 V	
Signal	3	0.25 to 4.7 V	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

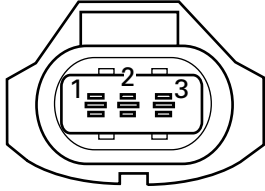
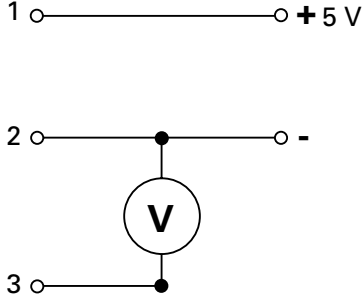
Throttle position sensor (TPS)			
Signal	PIN	Voltage [in V]	Remarks
<b>Measurement</b>			
<b>Position</b>	<b>Voltage [in V]</b>		
Closed	0.25 V		
Max. opened	4.7 V		10082

Figure 19.34

**AMBIENT AIR PRESSURE AND TEMPERATURE SENSOR (AAPTS) — INSPECTION**

Step	Procedure
1	Inspect for physical damage.
2	Measure the resistance for the temperature reading between pin 1 and 2.
3	Measure the voltage for the pressure reading between pin 1 and 4.

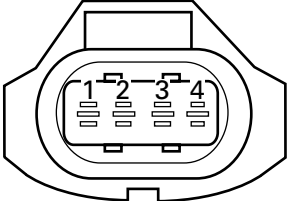
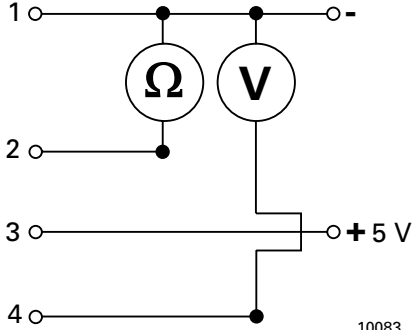
Ambient air pressure and temperature sensor (AAPTS)			
Signal	PIN	Voltage [in V]	Remarks
Supply voltage	3	5 V +/- 0.25 V	
Earth offset	1	0 V	
Signal temperature	2	45 kΩ - 89 Ω	
Pressure	4	0.25 V - 4.75 V	
<b>Measurement</b>			
<b>Pressure (bar/psi)</b>	<b>Voltage [in V]</b>		
0.35 bar / 5.08 psi	1.41 V +/- 0.065 V		
0.95 bar / 13.78 psi	3.84 V +/- 0.065 V		
<b>Temperature (°C / °F)</b>	<b>Resistance [Ω]</b>		
- 10 °C / 14 °F	9395 Ω +/- 4 %		
0 °C / 32 °F	5895 Ω +/- 3.8 %		
20 °C / 68 °F	2499 Ω +/- 3.4 %	10083	

Figure 19.35

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Ambient air pressure and temperature sensor (AAPT)	
30 °C / 86 °F	1706 Ω +/- 3.1 %
50 °C / 122 °F	833.8 Ω +/- 2.8 %
80 °C / 176 °F	322.5 Ω +/- 2.3 %
100 °C / 212 °F	186.6 Ω +/- 2.0 %

## FUEL INJECTORS — INSPECTION

### General visual inspection

- Corrosion or damage to the wiring, connector contacts or connections
- Check the labeling of the injection valves

### Functional test

- Check flow rate
- Conduct leakage check
- Check the "spray pattern" using the map

### NOTICE

**Risk of damage to engine management system components! There is a risk of a permanent bypass (fuel pressure surge).**

### Voltage and resistance test

The internal resistance between pin 1 and 2 is about 12 Ω


## DOUBLE IGNITION COIL — INSPECTION

### General visual inspection

- Corrosion or damage to the wiring, connector contacts or connections
- Check the labeling of the connector

## BRP-Rotax MAINTENANCE MANUAL HEAVY

Double ignition coil	
Measurement	
Measuring points	Resistance
Primary side	0.5 $\Omega$ +/- 0.5 $\Omega$
Secondary side	9 k $\Omega$ +/- 0.9 k $\Omega$
Between primary and secondary side	Infinite

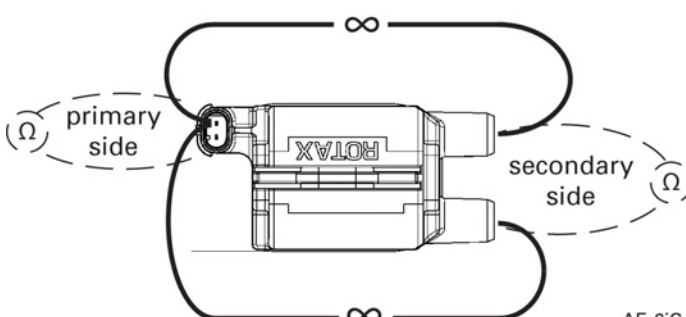

AE 6iS\_0336

Figure 19.36

### IGNITION CABLES — INSPECTION

#### NOTICE

**Cracking and other obvious damage to the ignition cables are not permitted! If in doubt, always replace the cables and connectors.**

#### General visual inspection

- Check for corrosion or damage to the ignition cables

#### Continuity check

- Use a multimeter with continuity check function and test the ignition cables to ensure there is continuity.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**Preparation**

- Clean all parts carefully
- Remove protective coverings

**OIL PRESSURE SENSOR (OPS) —  
 INSTALLATION**

Step	Procedure
1	Clean the thread of the oil pressure sensor.
2	Apply LOCTITE 243 to the thread of the oil pressure sensor and use a 19 mm socket (part no. 876130) to tighten it. Tightening torque 15 Nm (133 in. lb.).

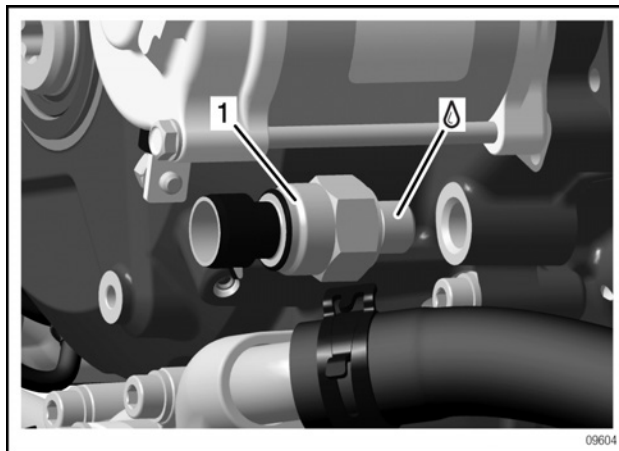


Figure 19.37

- 1 Oil pressure sensor (OPS)

Step	Procedure
3	The sensor is connected and disconnected in the same way. See Chapter <a href="#">76-50-00 section Wiring harness – removal</a> .
4	Attach cable ties (strain relief).

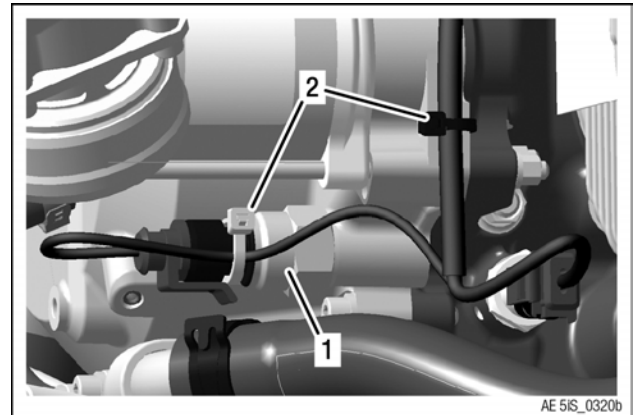


Figure 19.38

- 1 Oil pressure sensor (OPS)      2 Cable ties

**BOOST PRESSURE SENSOR (BPS) —  
 INSTALLATION**

Step	Procedure
1	Clean the thread of the boost pressure sensor.
2	Tighten the boost pressure sensor with a 21 mm socket (part no. 876075). Tightening torque 19 Nm (168 in. lb.).
3	The sensor is connected and disconnected in the same way. See Chapter <a href="#">76-50-00 section Wiring harness – removal</a> .

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

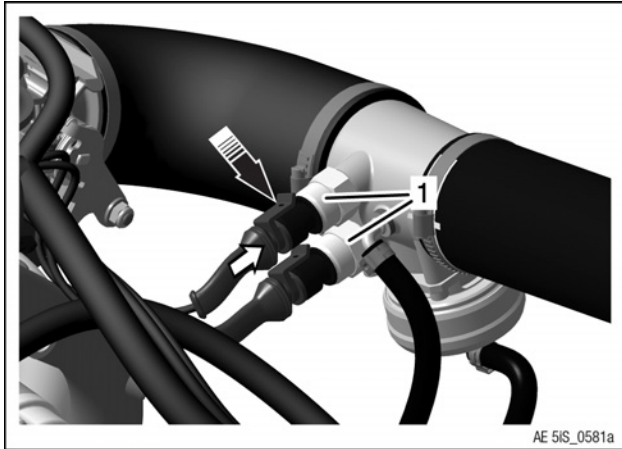


Figure 19.39

- 1 Boost pressure sensor (BPS)

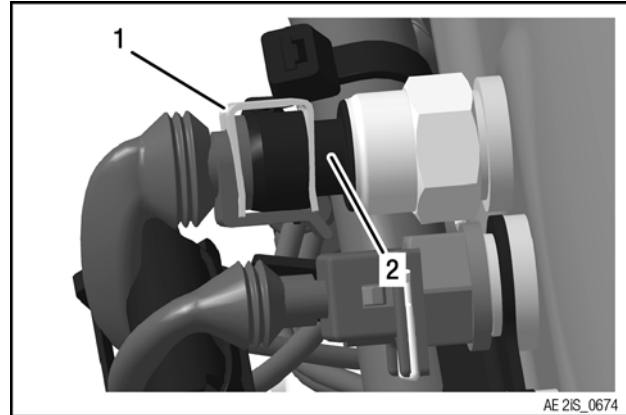


Figure 19.40

- 1 Clip
- 2 Manifold air pressure sensor (MAPS\_1/MAPS\_2)

**MANIFOLD AIR PRESSURE SENSOR (MAPS\_1/MAPS\_2) — INSTALLATION**

Step	Procedure
1	Clean the thread of the manifold air pressure sensor.
2	Tighten the manifold air pressure sensor with a 21 mm socket (part no. 876075). Tightening torque 15 Nm (133 in. lb.).
3	The sensors are connected and disconnected in the same way. See <a href="#">Chapter 76-50-00 section Wiring harness – removal</a> .
4	Install the clip. Check for tight fit and correct position of the clamp on sensor and connector.
5	Attach cable ties (strain relief).

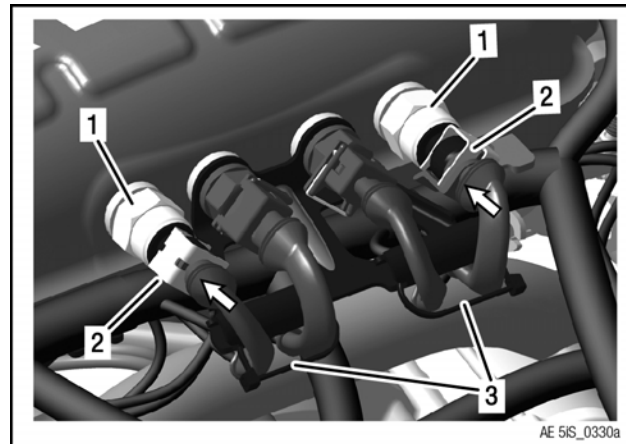


Figure 19.41

- 1 Manifold air pressure sensors (MAPS\_1/MAPS\_2)
- 2 Clip
- 3 Cable ties

**PRESSURE CONTROL VALVE (PCV) – INSTALLATION**

**NOTE**

*For installation of the hoses, see [Chapter 73-10-00 section Pressure control valve hoses - installation](#).*

## BRP-Rotax MAINTENANCE MANUAL HEAVY



For installation of the pressure control valve (PCV) follow the instructions of the aircraft manufacturer.

Step	Procedure
1	The sensor is connected and disconnected in the same way. See Chapter 76-50-00 section <a href="#">Wiring harness – removal</a> .  <b>NOTE</b> <i>The connectors of the PCV have different color designation: PCV_A black, PCV_B yellow and PCV_C gray.</i>

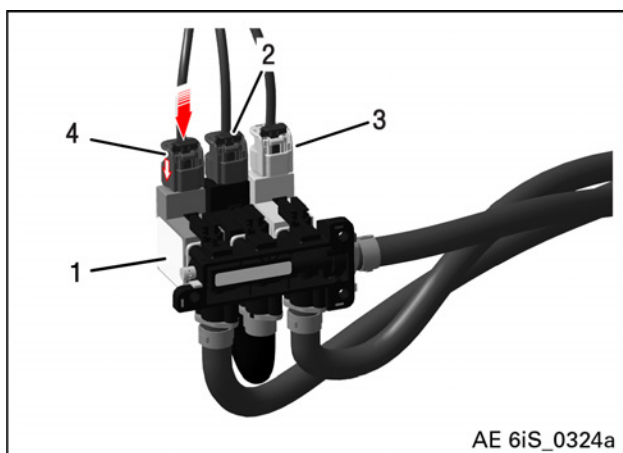


Figure 19.42

- |                                |                   |
|--------------------------------|-------------------|
| 1 Pressure control valve (PCV) | 2 Connector PCV A |
| 3 Connector PCV B              | 4 Connector PCV C |

### AMBIENT AIR PRESSURE AND TEMPERATURE SENSOR (AAPT) — INSTALLATION



For installation of the ambient air pressure and temperature sensor (AAPT) follow the instructions of the aircraft manufacturer.

Step	Procedure
1	The sensor is connected and disconnected in the same way. See Chapter 76-50-00 section <a href="#">Wiring harness – removal</a> .

### COOLANT TEMPERATURE SENSOR (CTS) — INSTALLATION

Step	Procedure
1	Clean the thread of the coolant temperature sensor.
2	Apply LOCTITE 243 to the thread of the coolant temperature sensor and use a 19 mm socket (part no. 876130) to tighten it. Tightening torque 15 Nm (133 in. lb.).
3	The sensor is connected and disconnected in the same way. See Chapter 76-50-00 section <a href="#">Wiring harness – removal</a> .

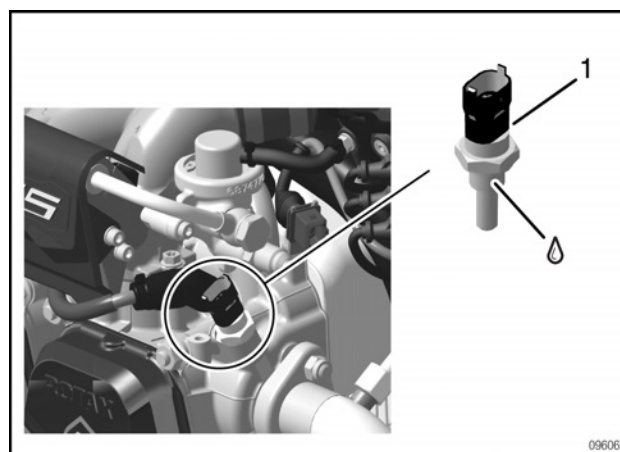


Figure 19.43

- 1 Coolant temperature sensor (CTS)

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**MANIFOLD AIR TEMPERATURE  
 SENSOR (MATS\_1/MATS\_2) —  
 INSTALLATION**

Step	Procedure
1	Clean the thread of the manifold air temperature sensor.
2	Install manifold air temperature sensor with the connector bracket and new sealing ring A12x18 using a 19 mm socket (part no. 876130). Tightening torque 10 Nm (89 in. lb.).

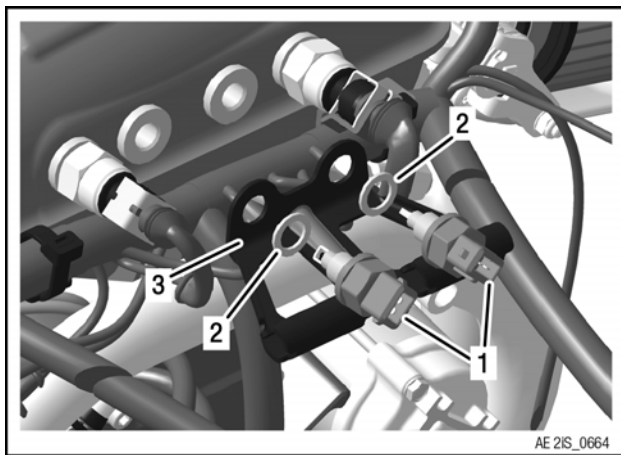


Figure 19.44

- 1 *Manifold air temperature sensor (MATS)*    2 *Sealing ring A12x18*  
 3 *Connector bracket*

Step	Procedure
3	The sensors are connected and disconnected in the same way. See <a href="#">Chapter 76-50-00 section Wiring harness – removal</a>
4	Attach cable ties (strain relief).

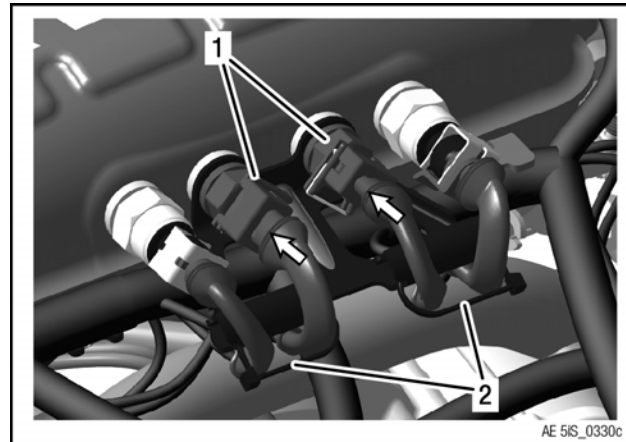


Figure 19.45

- 1 *Manifold air temperature sensor (MATS)*    2 *Cable ties*

**OIL TEMPERATURE SENSOR (OTS) —  
 INSTALLATION**

Step	Procedure
1	Clean the thread of the oil temperature sensor.
2	Apply LOCTITE 243 to the thread of the oil temperature sensor and use a 19 mm socket (part no. 876130) to tighten it. Tightening torque 15 Nm (133 in. lb.).
3	The sensor is connected and disconnected in the same way. See <a href="#">Chapter 76-50-00 section Wiring harness – removal</a> .



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

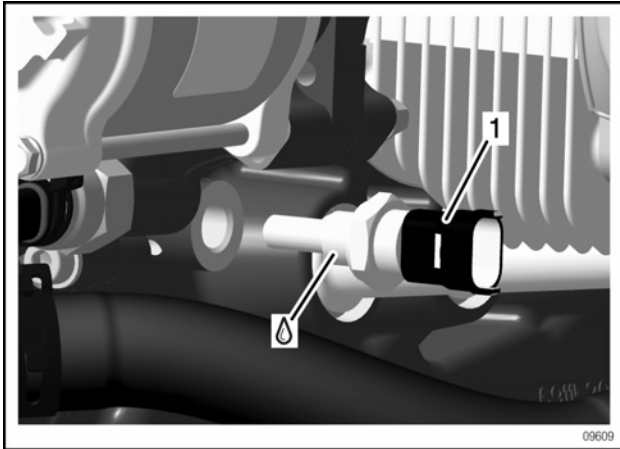


Figure 19.46

- 1 Oil temperature sensor (OTS)

Step	Procedure
4	Attach cable ties.

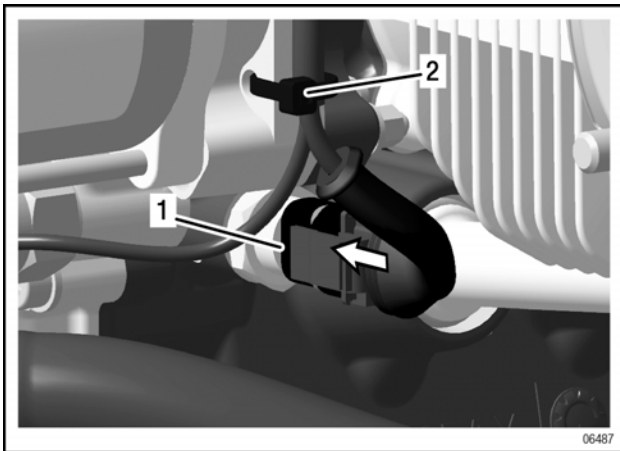


Figure 19.47

- 1 Oil temperature sensor (OTS)
- 2 Cable ties

**EXHAUST GAS TEMPERATURE SENSOR (EGT1\_3/EGT2\_4) — INSTALLATION**

Step	Procedure
1	Install the exhaust gas temperature sensors (cylinder 1 and cylinder 2) with the spring hook onto the connector bracket and push until it snaps into place.
2	Lay the wires of the exhaust gas temperature sensors.

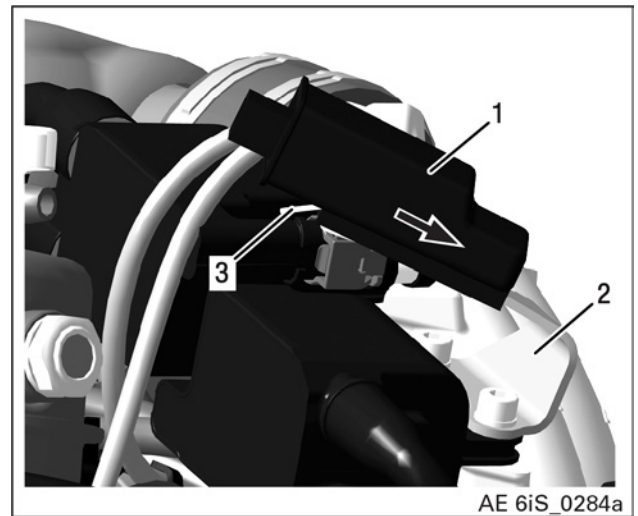


Figure 19.48

- 1 Exhaust gas temperature sensor (EGT)
- 2 Connector bracket
- 3 Spring hook

Step	Procedure
3	Clean the thread of the exhaust gas temperature sensor.
4	Apply LOCTITE ANTI SEIZE to the thread of the exhaust gas temperature sensor.
5	Tighten the exhaust gas temperature sensors with washer 6.4 on the exhaust pipes. Tightening torque 20 Nm (15 ft. lb).

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

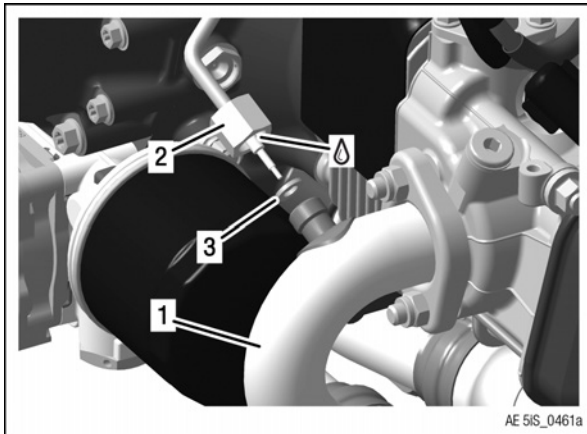


Figure 19.49: TYPICAL

- 1 Exhaust pipe
- 2 Exhaust gas temperature sensor
- 3 Washer 6.4

Step	Procedure
6	The sensors are connected and disconnected in the same way. See Chapter <a href="#">76-50-00</a> section <a href="#">Wiring harness – removal</a> .
7	Install cable tie on the exhaust gas temperature (EGT) sensor cable (Cyl. 1_3) connected with the double ignition coil cable.

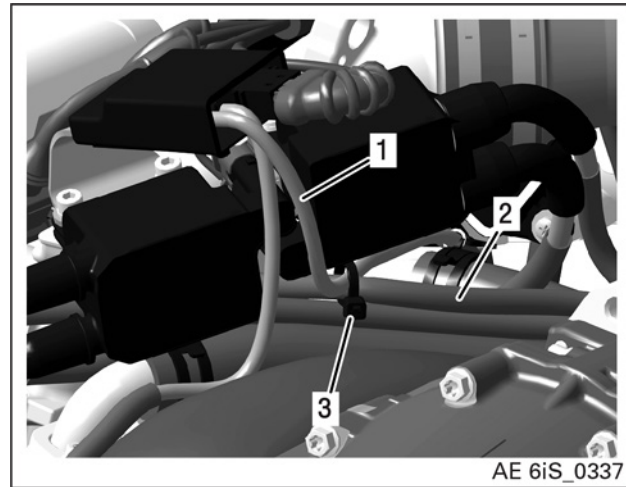


Figure 19.50

- 1 EGT sensor cable
- 2 Double ignition coil cable
- 3 Cable tie

**KNOCK SENSOR (KNOCK) —  
 INSTALLATION**

Step	Procedure
1	Clean the end face of the knock sensor.
2	Attach the knock sensor with binding head screw M8x30. Tightening torque 25 Nm (18 ft .lb).
<p><b>NOTE</b></p> <p><i>The cable of the knock sensor must be parallel to the crankcase interface pointing in the direction of the ignition cover.</i></p>	

# BRP-Rotax MAINTENANCE MANUAL HEAVY

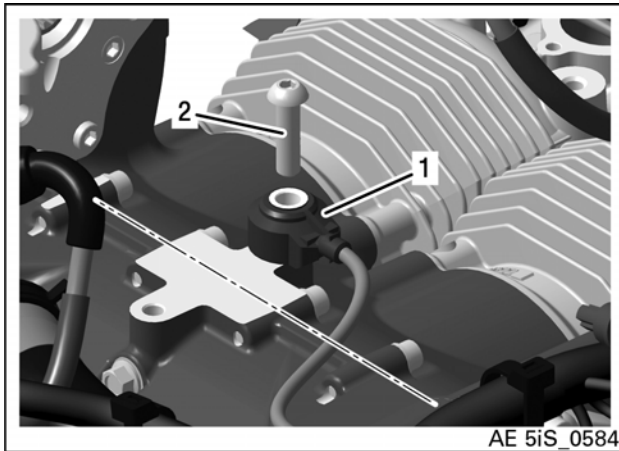


Figure 19.51: TYPICAL

- 1 Knock sensor      2 Binding head screw  
M8x30

Step	Procedure
3	Connect the respective wiring harness connector (KNOCK) to the knock sensor.
4	Carefully push the connector in the upper position of the connector bracket.

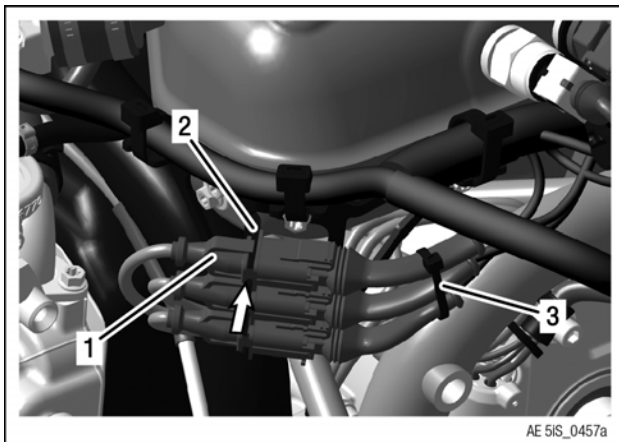


Figure 19.52

- 1 Connector (KNOCK)      2 Connector bracket  
3 Cable tie

Step	Procedure
5	Attach the cables of the knock sensor with a cable tie.

### Finishing work:

Install the cooling air baffle, see Chapter 75-00-00, section [Cooling air baffle – installation](#)

## CRANKSHAFT POSITION SENSOR (CPS\_1/CPS\_2) — INSTALLATION

### NOTE

*Check O-ring for damage, before installation.*

### NOTE

*Lubricate O-rings with LITHIUM BASE GREASE.*

Step	Procedure
1	Place CPS_1 into the upper sensor position and CPS_2 into lower position. Tighten crankshaft position sensors using Allen screws M6x20 with lock washers A6 and secure with LOCTITE 243. Tightening torque 10 Nm (89 in. lb.)

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**NOTICE**

Arrange the cable so that it does not rest against the engine suspension frame or other components.

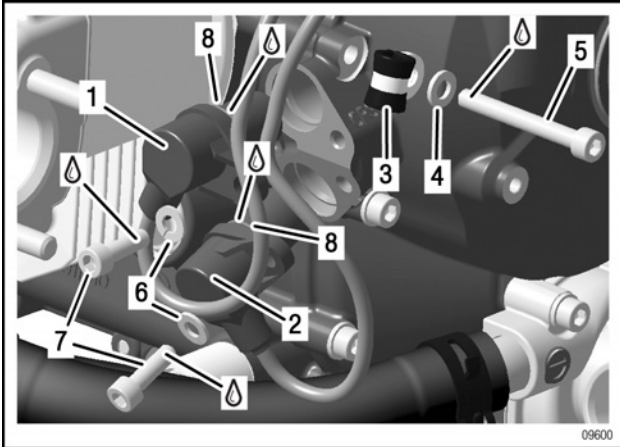


Figure 19.53

- |                                    |                                    |
|------------------------------------|------------------------------------|
| 1 Crankshaft position sensor CPS_1 | 2 Crankshaft position sensor CPS_2 |
| 3 Cable clamp                      | 4 Washer 6.4                       |
| 5 Allen screw M6x50                | 6 Lock washer A6                   |
| 7 Allen screw M6x20                | 8 O-ring                           |

**NOTICE**

The thread of the Allen screw M6x50 reaches into the crankcase and is therefore glued in with LOCTITE 243. Improper installation can cause an oil leakage!

Step	Procedure
2	Push the cable clamp over both cables and tighten with Allen screw M6x50 and washer 6.4 with LOCTITE 243 to the ignition housing. Tightening torque 10 Nm (89 in. lb.)
3	Plug the respective wiring harness connector into the corresponding crankshaft position sensor CPS_1 / CPS_2.  <b>NOTE</b> <i>The connectors of the sensors are marked with dots: CPS_1 (marked with 1 dot) and CPS_2 (marked with 2 dots)</i>
4	Carefully push each connector (CPS_1/ CPS_2) into the connector bracket. Secure the connectors with 2 cable ties.

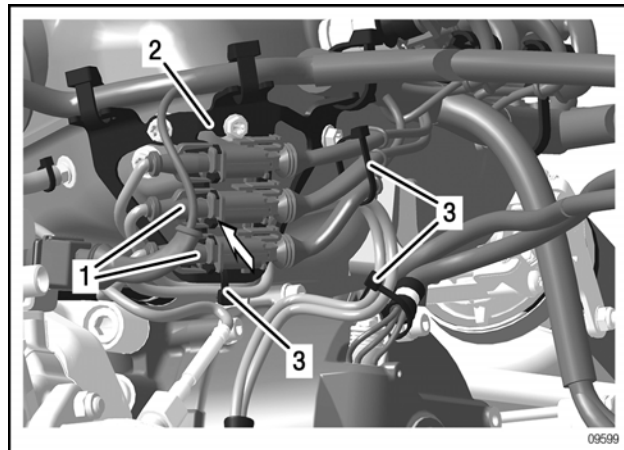


Figure 19.54: TYPICAL

- |                            |                     |
|----------------------------|---------------------|
| 1 Connector (CPS_1/ CPS_2) | 2 Connector bracket |
| 3 Cable ties               |                     |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## THROTTLE POSITION SENSOR (TPS) — INSTALLATION

### NOTE

*The throttle position is not available as a spare part.*

Step	Procedure
1	Install the throttle body assy., if necessary. See Chapter 73-10-00, section <a href="#">Throttle body assy. — installation</a> .
2	The sensors are connected and disconnected in the same way. See Chapter <a href="#">76-50-00 section Wiring harness — removal</a> .

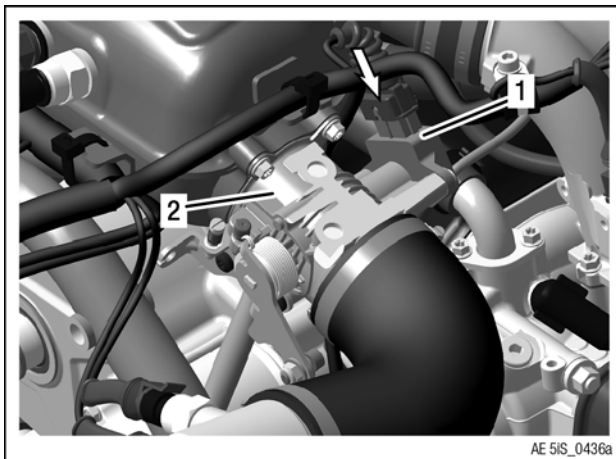


Figure 19.55

- 1 *Throttle position sensor (TPS)*      2 *Throttle body assy.*

## FUEL INJECTOR (INJ) — INSTALLATION

For installation of the fuel injection, see Chapter 73-10-00, section [Fuel rail — installation](#).

## DOUBLE IGNITION COIL — INSTALLATION

For installation of the double ignition coils, see Chapter 74-20-00, section [Double ignition coil — installation](#)

## FINISHING WORK

- Complete the engine



Fill with operating fluids (coolant, oil or fuel). See current Maintenance Manual Line (MML) for the respective engine type.



Flush the engine cooling system. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Flushing the engine cooling system.



Purge the oil system. See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00, section "Purging the lubrication system".



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK


**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**Chapter: 78-00-00**  
**EXHAUST SYSTEM**

**TOPICS IN THIS CHAPTER**

<b>System description</b> .....	<b>3</b>
Safety instruction .....	3
<b>Connections for display systems</b> .....	<b>4</b>
Exhaust gas temperature display .....	4

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

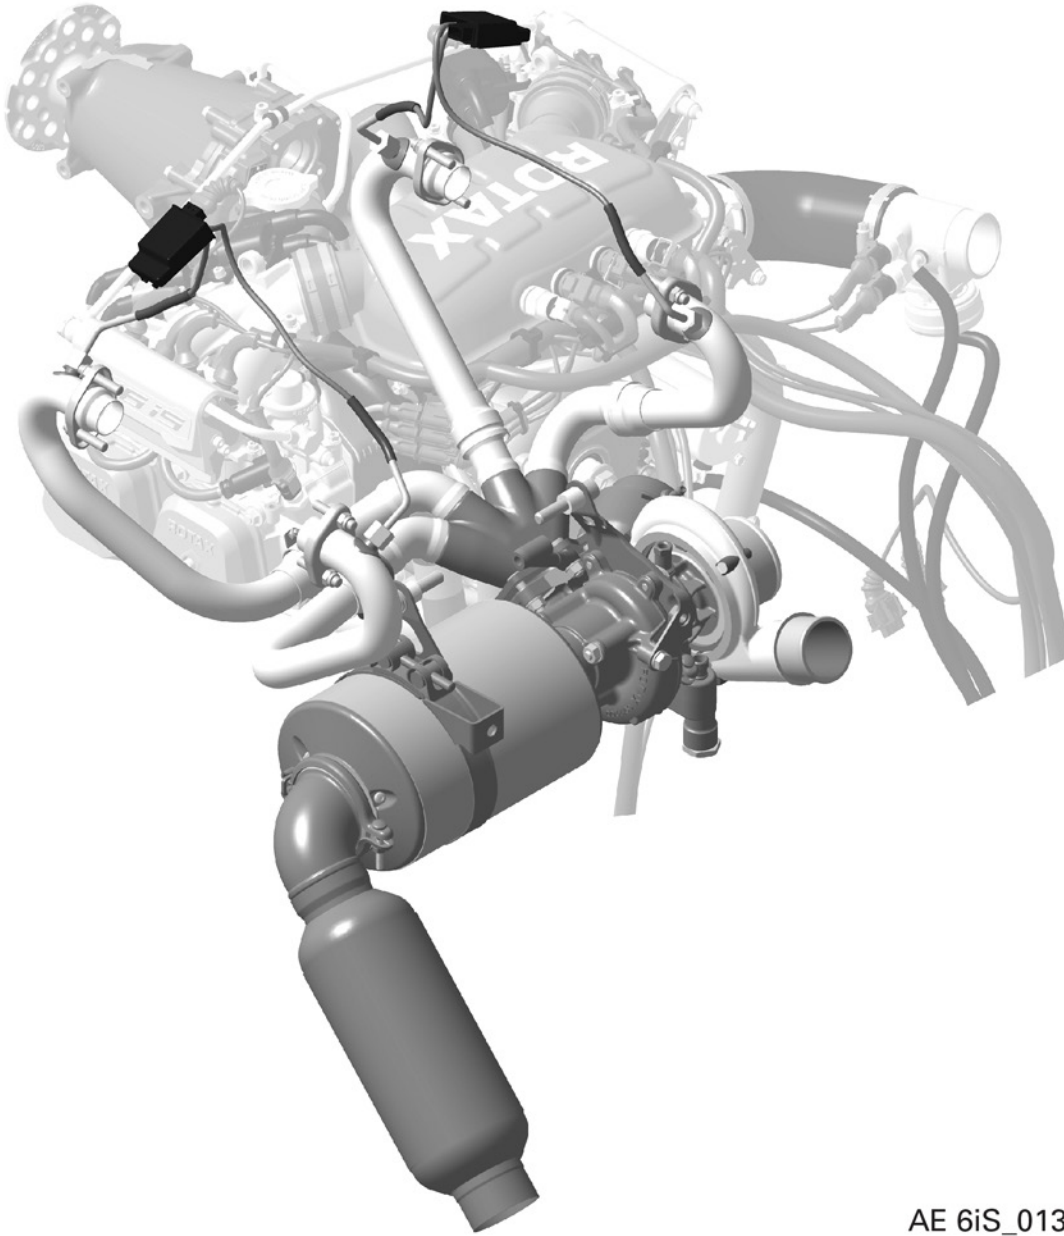

AE 6iS\_0139

Figure 20.1: Exhaust system



## **SYSTEM DESCRIPTION**

### **Exhaust flow**

The Exhaust gases are pushed out of the cylinders through the exhaust pipes and are brought together in the exhaust manifold. From there the exhausts gases pass the turbine side of the turbocharger (depending on the wastegate position). From there the exhaust gases leave the engine through the muffler.

### **Exhaust Gas**

#### **Temperature Sensors (EGT)**

The sensors for reading of the exhaust gas temperature are located the exhaust pipes near the cylinder outlet.

## **SAFETY INSTRUCTION**

**⚠ WARNING**

**Danger of severe burns and scalds! Allow the engine and exhaust system to cool to ambient temperature before starting work.**

## **CONNECTIONS FOR DISPLAY SYSTEMS**

### **EXHAUST GAS TEMPERATURE DISPLAY**

For removal, inspection and installation see Chapter 76-70-00.

The engine is equipped with 4 EGT temperature sensors for regulating the optimal fuel/air mixture. These can be installed in various ways depending on the exhaust system. One control box supports two sensors.

#### **NOTICE**

**Corrosion damage on sensors! The sensors must be installed vertically from the pipe.**


**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 78-10-00**  
**EXHAUST**

**TOPICS IN THIS CHAPTER**

<b>Service products .....</b>	<b>3</b>
<b>System description .....</b>	<b>6</b>
Maintenance .....	6
<b>Removal .....</b>	<b>7</b>
Exhaust pipe — removal .....	7
Exhaust manifold assy. – removal .....	7
Exhaust bracket — removal .....	7
Muffler assy. — removal .....	8
<b>Inspection .....</b>	<b>10</b>
Exhaust assy. — inspection .....	10
Exhaust pipe and cylinder head — inspection .....	10
Exhaust bracket – inspection .....	10
Muffler assy. — inspection .....	10
<b>Installation.....</b>	<b>12</b>
Muffler assy. — installation .....	12
Exhaust manifold — installation .....	13
Exhaust bracket – installation .....	13
Exhaust pipe on cylinder head — installation .....	14
Finishing work .....	15

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

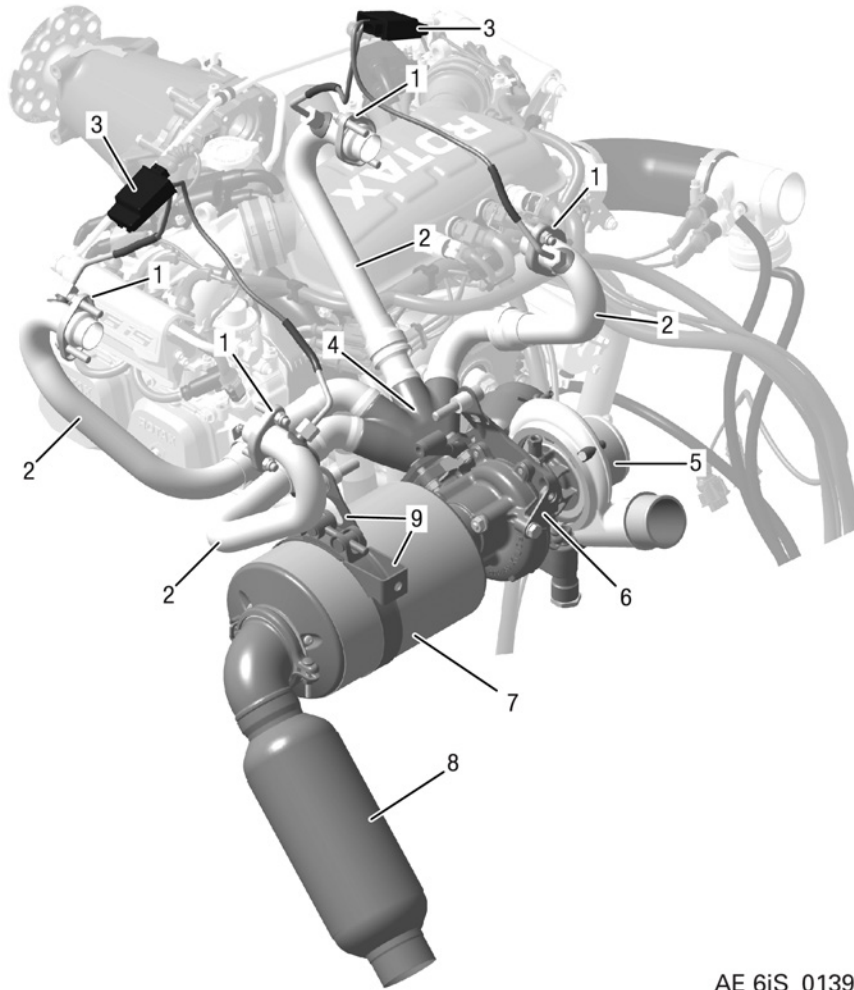

AE 6iS\_0139\_a

Figure 21.1

- |                            |                                   |
|----------------------------|-----------------------------------|
| 1 Exhaust flange           | 2 Exhaust pipe assy.              |
| 3 Temperature sensor (EGT) | 4 Exhaust manifold assy.          |
| 5 Turbocharger assy.       | 6 Turbocharger bracket Metric/UNF |
| 7 Muffler assy.            | 8 Resonator assy.                 |
| 9 Exhaust bracket          |                                   |

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE 648	899788
LOCTITE ANTI SEIZE 8151	297434



**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

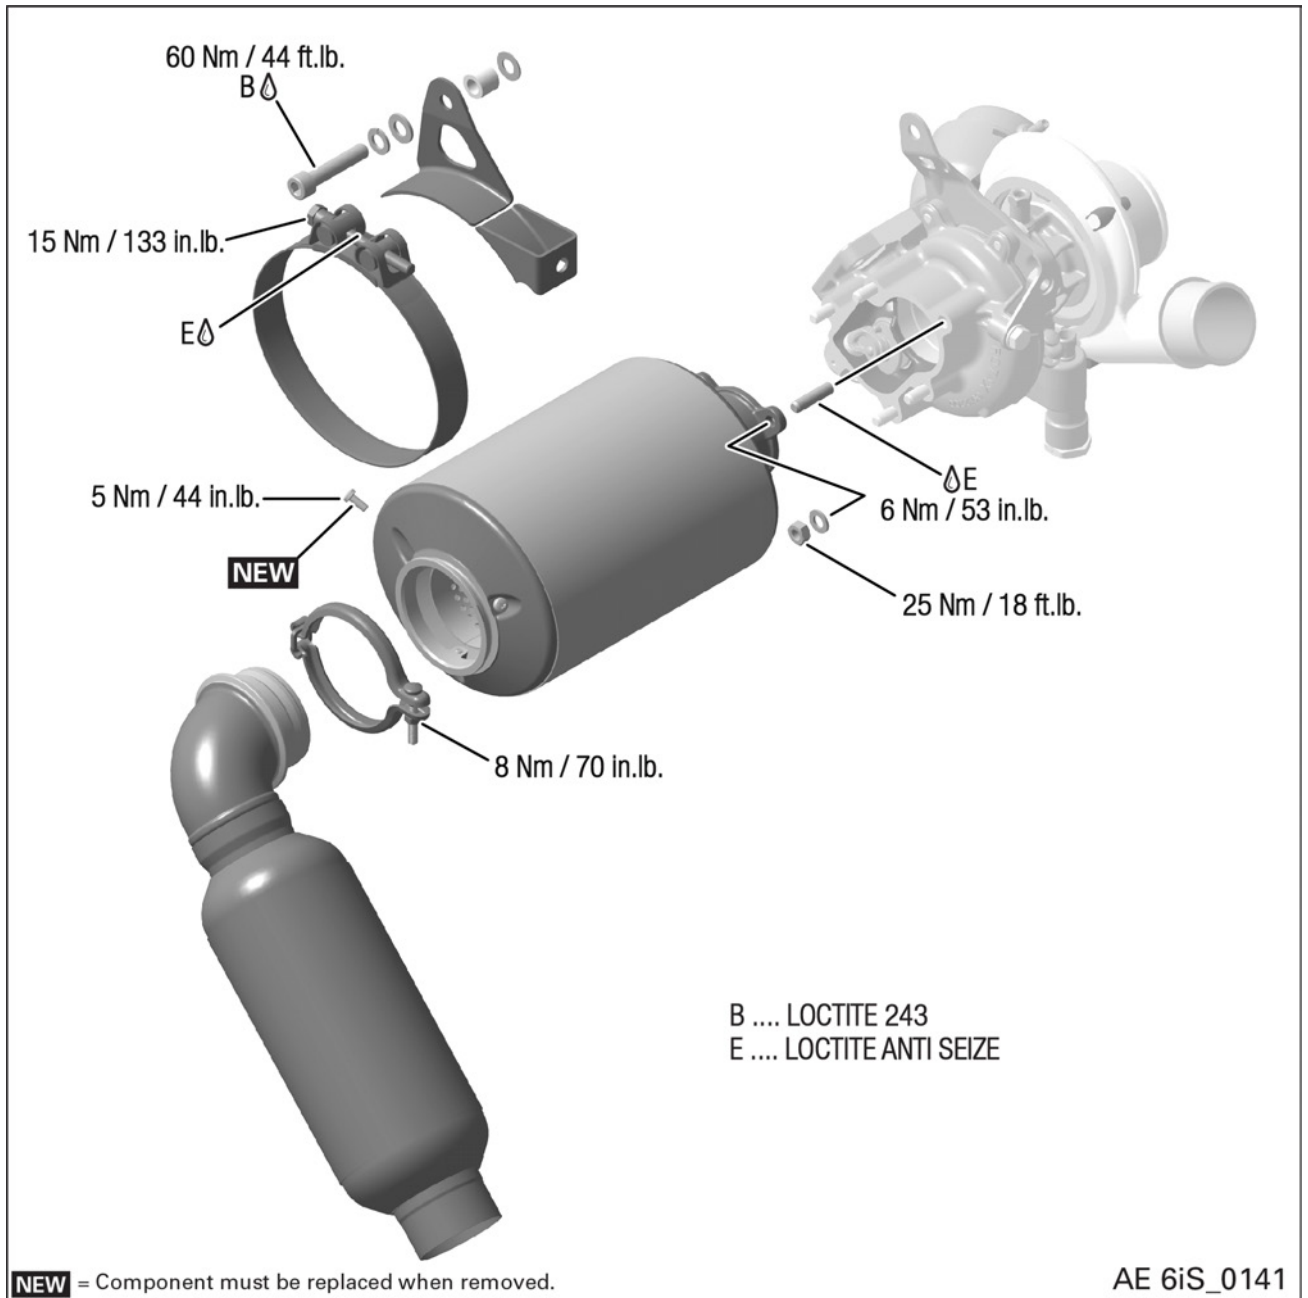


Figure 21.3: Exhaust components

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### **SYSTEM DESCRIPTION**

The exhaust collects the gases produced in the combustion chamber, leads them via the exhaust manifold to the muffler, which is used to reduce noise.

The exhaust gas passes via the outflow pipe through a tail pipe into the open.

### **MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## REMOVAL

<b>⚠ WARNING</b>
<b>Danger of severe burns and scalds! Allow the engine and exhaust system to cool to ambient temperature before starting work.</b>



Follow the aircraft manufacturer's instructions for removal.

### Preparation

- Remove the exhaust gas temperature sensor (EGT).

See Chapter 76-70-00 section [Exhaust gas temperature sensor \(EGT1\\_3/EGT2\\_4\) — removal](#).

### EXHAUST PIPE — REMOVAL

Step	Procedure
1	Loosen 2 lock nuts.

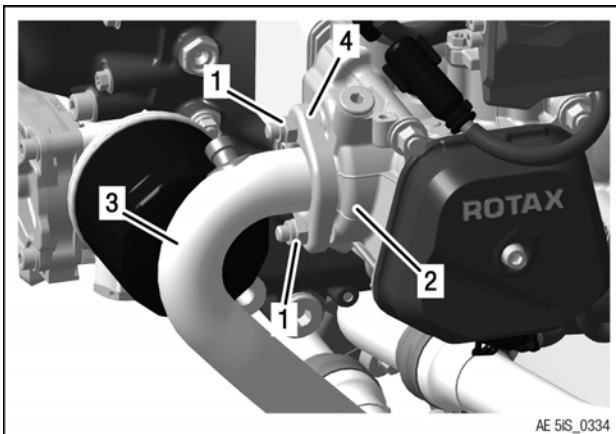


Figure 21.4: : TYPICAL

- |                |                  |
|----------------|------------------|
| 1 Lock nut     | 2 Cylinder head  |
| 3 Exhaust pipe | 4 Exhaust flange |

### Only for cylinder 2 and cylinder 4

Step	Procedure
2	Loosen four hex. nuts.
3	Remove the exhaust pipe clamp with Allen screws.

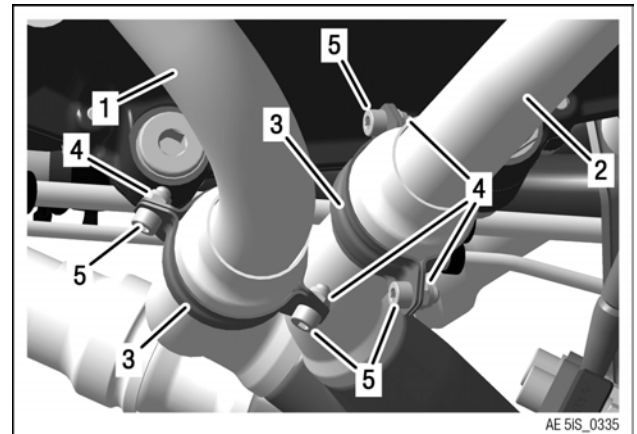


Figure 21.5

- |                       |                       |
|-----------------------|-----------------------|
| 1 Exhaust pipe cyl. 2 | 2 Exhaust pipe cyl. 4 |
| 3 Exhaust pipe clamp  | 4 Hex. nut            |
| 5 Allen screw         |                       |

### EXHAUST MANIFOLD ASSY. – REMOVAL

See Chapter 78–20–00 [Exhaust manifold assy. – removal](#).

### EXHAUST BRACKET — REMOVAL

#### Preparation

- If necessary: Remove lower coolant hoses. See [Chapter 75-00-00 Cooling system](#)
- If necessary: Remove muffler assy. See [Muffler assy. — removal](#)
- Open clamp.

#### NOTE

*There is no need to disassemble the complete unit of exhaust - turbo charger - exhaust manifold for the removal of the exhaust bracket.*

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTE

On cylinder 2/4 side thrust washers may be installed for tension free assembly. Do not lose them!

Step	Procedure
1	Loosen screw on engine suspension frame for the exhaust bracket, follow the aircraft manufacturer's instruction.
2	Remove clamp.
3	Remove Allen screw (attachment of the exhaust bracket) together with lock washer, washer and spacer.
4	Remove the thrust washer behind the suspension frame.

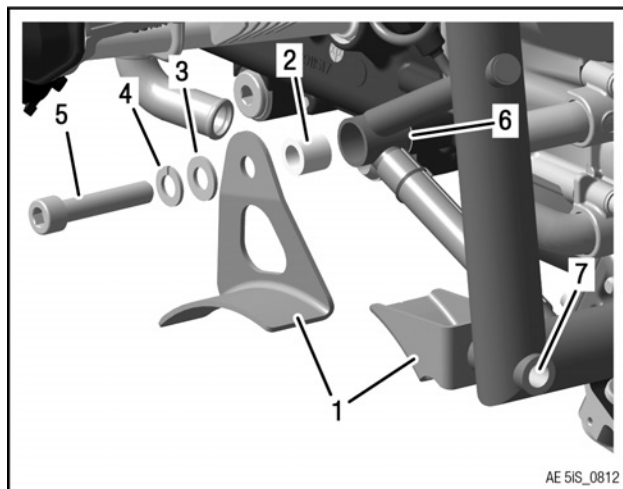


Figure 21.6

- |                   |                 |
|-------------------|-----------------|
| 1 Exhaust bracket | 2 Spacer        |
| 3 Washer          | 4 Lock washer   |
| 5 Allen screw     | 6 Thrust washer |

7 Connection exhaust bracket with engine suspension frame

## MUFFLER ASSY. — REMOVAL

### NOTE

There is no need to disassemble the complete unit for the removal of the resonator assy..

Step	Procedure
1	Remove hex. nuts with washers from turbocharger studs.

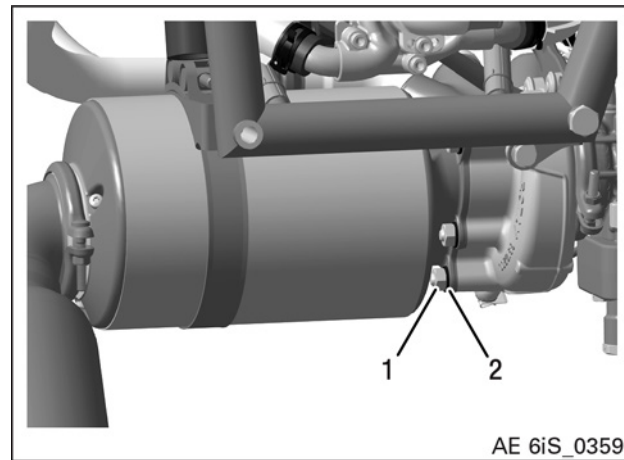


Figure 21.7

- |             |          |
|-------------|----------|
| 1 Hex. nuts | 2 Washer |
|-------------|----------|

Step	Procedure
2	Slacken clamp, but do not detach or remove it from the exhaust bracket.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

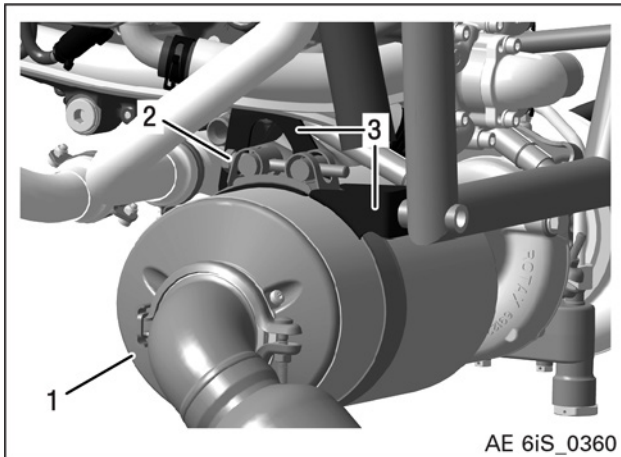


Figure 21.8

- 1 Muffler assy.
- 2 Clamp
- 3 Exhaust bracket

Step	Procedure
3	Remove muffler assy.  <b>NOTE</b> <i>Mark the position of the resonator assy. to the muffler assy.</i>
4	Remove V-Band clamp assy.
5	Slacken 3 self-tapping pan head torx screws and take out the resonator assy. from the muffler assy.

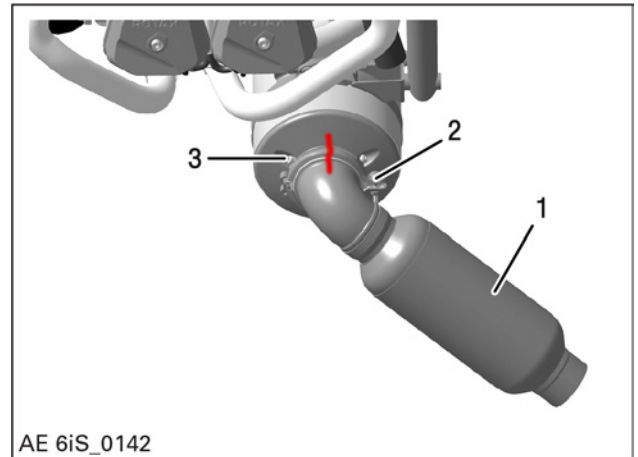


Figure 21.9

- 1 Resonator assy.
- 2 V-Band clamp assy.
- 3 Self-tapping pan head torx screws

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION

### Preparation



Clean all parts carefully.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.

### EXHAUST ASSY. — INSPECTION

Step	Procedure
1	Check the exhaust for cracks, dents and leaks.

### EXHAUST PIPE AND CYLINDER HEAD — INSPECTION

#### NOTICE

**A deformed exhaust flange must be replaced!**

Step	Procedure
1	Check the conical sealing surfaces in the cylinder head and on the exhaust pipe for deformation.

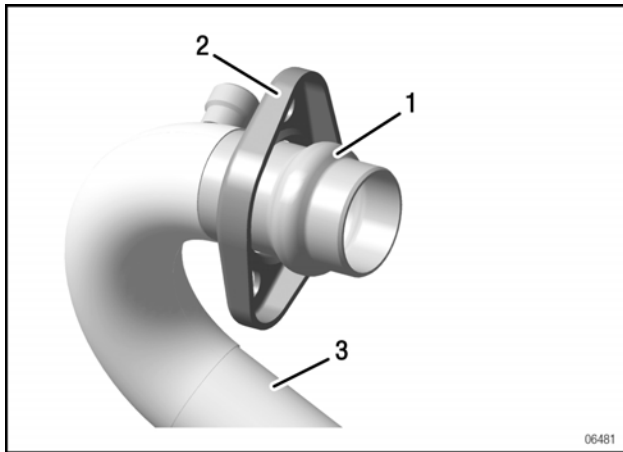


Figure 21.10

- 1 Conical seal                      2 Exhaust flange  
3 Exhaust pipe

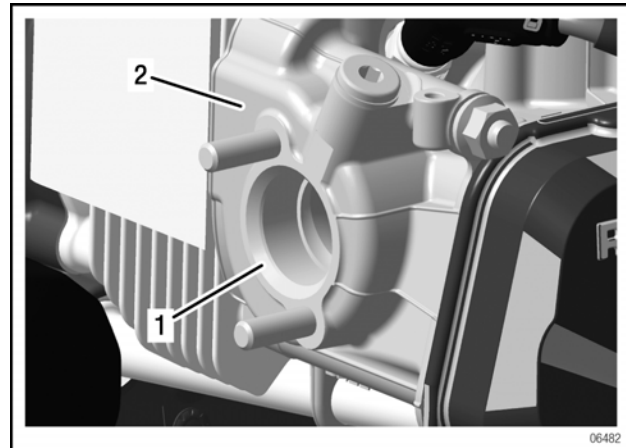


Figure 21.11

- 1 Conical seal                      2 Cylinder head

### EXHAUST BRACKET – INSPECTION

Step	Procedure
1	Check the exhaust bracket for cracks and deformation.

### MUFFLER ASSY. — INSPECTION

Step	Procedure
1	Check the muffler assy. for damage and wear.
2	Check the resonator assy. for damage and wear.
3	Check the V-Band clamp assy. for damage.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

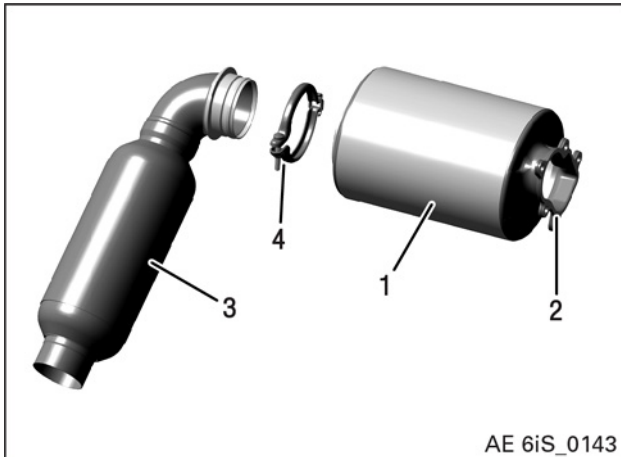


Figure 21.12

- |                   |                           |
|-------------------|---------------------------|
| 1 Muffler assy.   | 2 Exhaust muffler surface |
| 3 Resonator assy. | 4 V-Band clamp assy.      |

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**MUFFLER ASSY. — INSTALLATION**

**NOTE**

*Studs M8 are for attaching the muffler assembly. Check for tight fit and any damage. When replacing a stud, it is fitted so that the longer thread is screwed into the turbocharger. Lubricate studs with LOCTITE ANTI SEIZE and tighten them. Tightening torque 6 Nm / 53 in.lb.*

Step	Procedure
1	Install muffler assy. through the clamp on-to the studs of the turbocharger.
2	Apply LOCTITE ANTI SEIZE to the studs of the turbocharger. Tighten muffler with new washers 8.4 and Hex. nuts M8 to the turbocharger housing. Tightening torque 25 Nm (18 ft. lb).

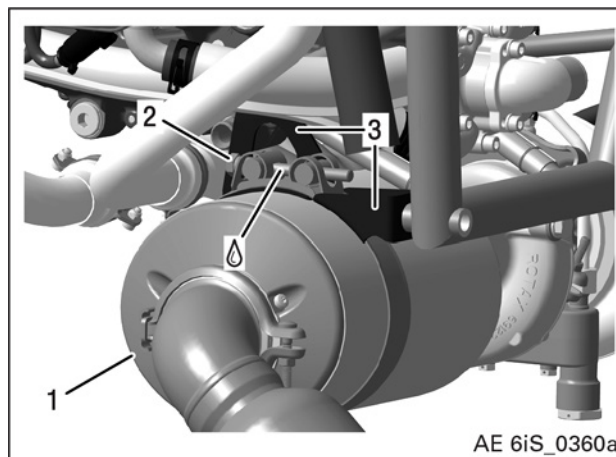


Figure 21.14

- 1 Muffler assy.
- 2 Clamp 140-148
- 3 Muffler bracket

**NOTE**

*If resonator assy. is changed see Installation Manual (IM) Chapter 78-00-00 and follow the aircraft manufacturer's instruction for installation.*

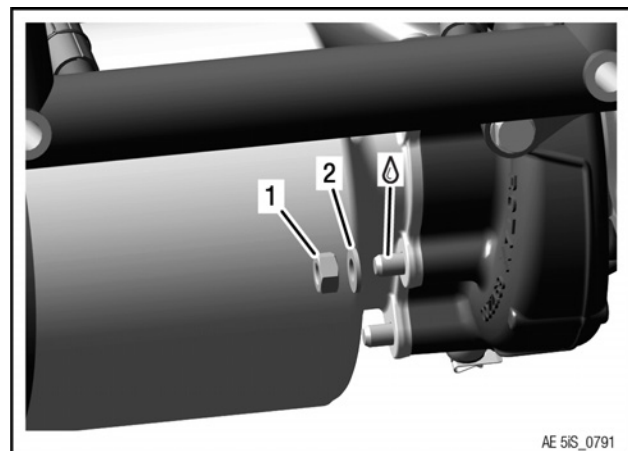


Figure 21.13: TYPICAL

- 1 Hex. nuts M8
- 2 Washer 8.4

Step	Procedure
4	Put the resonator assy. inside the muffler assy. at the correct position.
5	Install the V-Band clamp assy. 83 mm (3.27 inch.). Tightening torque 8 Nm (70 in. lb).
6	Tighten new self-tapping pan head torx screws M5x12. Tightening torque 5 Nm (44 in. lb).

Step	Procedure
3	The muffler is attached to the muffler bracket with clamp 140-148. Apply LOCTITE ANTI SEIZE on the thread. Tightening torque 15 Nm (133 in. lb).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

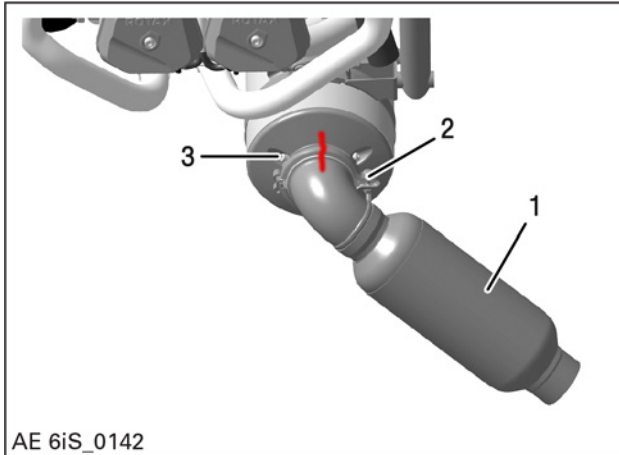


Figure 21.15

- 1 Resonator assy..
- 2 V-Band clamp assy.
- 3 Self-tapping pan head torx screws M5x12

## EXHAUST MANIFOLD — INSTALLATION

The turbocharger must be installed before exhaust manifold - installation. See [Chapter 78-20-00 Turbocharger](#)

## EXHAUST BRACKET – INSTALLATION

### NOTE

*On cylinder 2/4 side thrust washers may be installed for tension free assembly. Use as required.*

Step	Procedure
1	Install thrust washer (if needed) behind the engine suspension frame.  <b>NOTE</b> <i>Allowed maximum shimming distance is 2 mm (0.08 inch.)</i>
2	Place spacer 10.5/17/15 into engine suspension frame.

Step	Procedure
3	Install the exhaust bracket with washer 10.5, lock washer A10 and Allen screw M10x50 (hand-tight).
4	Install clamp 140 - 148 into the exhaust bracket (for engine suspension frame).  <b>NOTE</b> <i>Position tension clamp so that the tension free zone comes to rest on the edge of the exhaust bracket.</i>

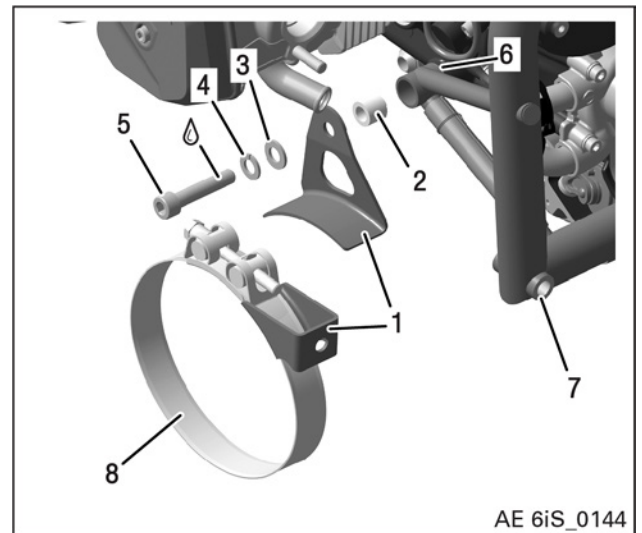


Figure 21.16

- 1 Exhaust bracket
- 2 Spacer 10.5/17/15
- 3 Washer 10.5
- 4 Lock washer A10
- 5 Allen screw M10x50
- 6 Thrust washer (if needed)
- 7 Connection exhaust bracket with engine suspension frame
- 8 Clamp 140 - 148



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
5	Install the connection exhaust bracket - engine suspension frame hand-tight, follow the aircraft manufacturer's instruction for installation.
6	Install muffler assy. See section <a href="#">Muffler assy. — installation</a> .
7	Tighten Allen screw M10x50 with LOCTITE 243. Tightening torque 60 Nm (44 ft. lb.).
8	Fasten the connection of the exhaust bracket on engine suspension frame, follow the aircraft manufacturer's instruction for installation.
9	If necessary install coolant hoses. See <a href="#">Chapter 75-00-00 Cooling system</a> .

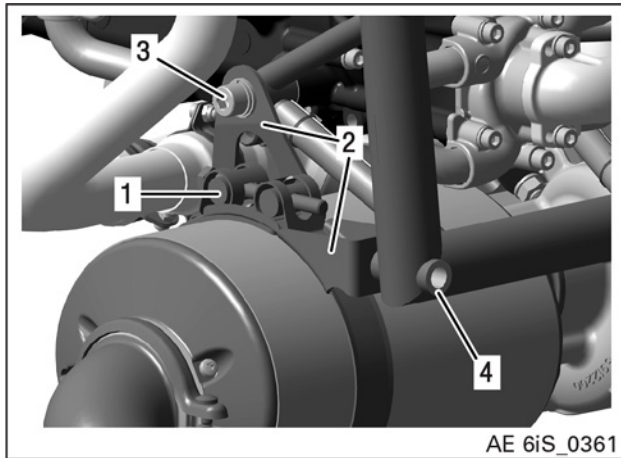


Figure 21.17

- |                      |   |
|----------------------|---|
| 1 Clamp 140 - 148    | 2 Exhaust bracket   |
| 3 Allen screw M10x50 | 4 Connection exhaust bracket with engine suspension frame |

**EXHAUST PIPE ON CYLINDER HEAD — INSTALLATION**

Step	Procedure
1	Check that the studs are firmly in place. Secure them with LOCTITE 648 if necessary and tighten them. Tightening torque 6 Nm (53 in. lb.)
2	Fasten the exhaust flange to the cylinder head with 2 new lock nuts M8. Tightening torque 15 Nm (133 in. lb.).

**NOTE**

*The exhaust flange must be parallel to the screw face on the cylinder head but must not touch it.*

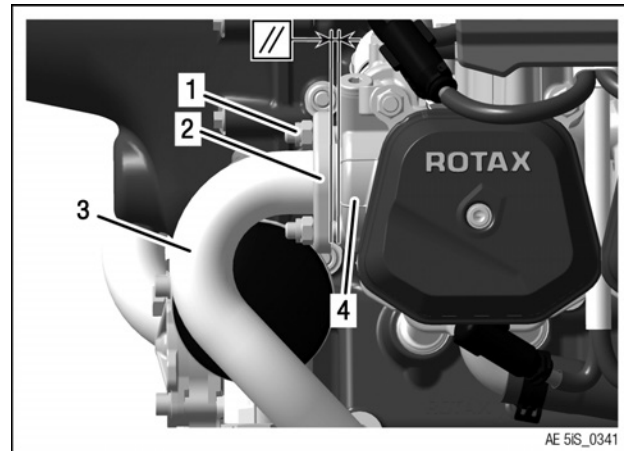


Figure 21.18

- |                |                  |
|----------------|------------------|
| 1 Lock nut M8  | 2 Exhaust flange |
| 3 Exhaust pipe | 4 Cylinder head  |

Only for cylinder 2 and cylinder 4.

Step	Procedure
3	Mount exhaust pipe clamps.
4	Fasten the exhaust pipe clamps using M5 x 10 Allen screws and <b>new</b> M5 lock nuts. Tightening torque 6 Nm (53 in. lb.).



# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTICE

The locking notches on the nuts must always be on the outside and must not be turned back.

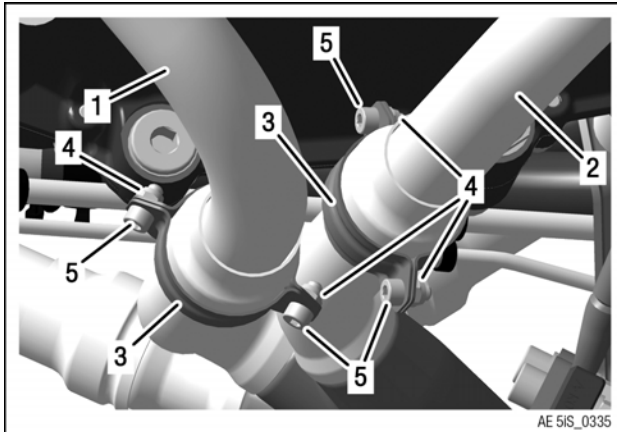


Figure 21.19

- |                       |                       |
|-----------------------|-----------------------|
| 1 Exhaust pipe cyl. 2 | 2 Exhaust pipe cyl. 4 |
| 3 Exhaust pipe clamp  | 4 Lock nut M5         |
| 5 Allen screw M5x10   |                       |

## FINISHING WORK

- Install the exhaust gas temperature sensor (EGT), see Chapter 76-70-00 section [Exhaust gas temperature sensor \(EGT1\\_3/EGT2\\_4\) — installation](#).



Fill with operating fluids (coolant, oil or fuel). See current Maintenance Manual Line (MML) for the respective engine type.



Carry out an engine test run. See current Maintenance Manual Line (MML) for the respective engine type.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK


**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 78–20–00**  
**TURBOCHARGER**

**TOPICS IN THIS CHAPTER**

<b>Service products .....</b>	<b>3</b>
<b>System description .....</b>	<b>5</b>
Maintenance .....	5
Connections for display systems.....	5
<b>Removal .....</b>	<b>6</b>
Turbocharger assy.— removal.....	6
Oil sump assy. — removal.....	7
Wastegate actuator assy. — removal .....	8
Turbocharger assy. — disassembly.....	9
<b>Inspection .....</b>	<b>11</b>
Turbocharger— inspection .....	11
Plane surfaces of the turbine opening — inspection .....	11
Threaded hole — inspection.....	11
Rotor turbine — inspection.....	11
Compressor wheel — inspection .....	11
Wastegate lever — inspection .....	12
Charger shaft — inspection .....	12
Impeller shaft — inspection .....	13
Wastegate actuator assy. — inspection .....	13
Exhaust manifold assy. — inspection.....	13
<b>Wear limits .....</b>	<b>14</b>
<b>Installation.....</b>	<b>15</b>
Turbocharger assy. assembly.....	15
Turbocharger bracket — installation.....	15
Oil sump assy. — installation .....	16
Turbocharger assy.— installation .....	17
Wastegate actuator assy.— installation .....	19
Adjustment of the wastegate .....	21
Finishing work.....	21

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

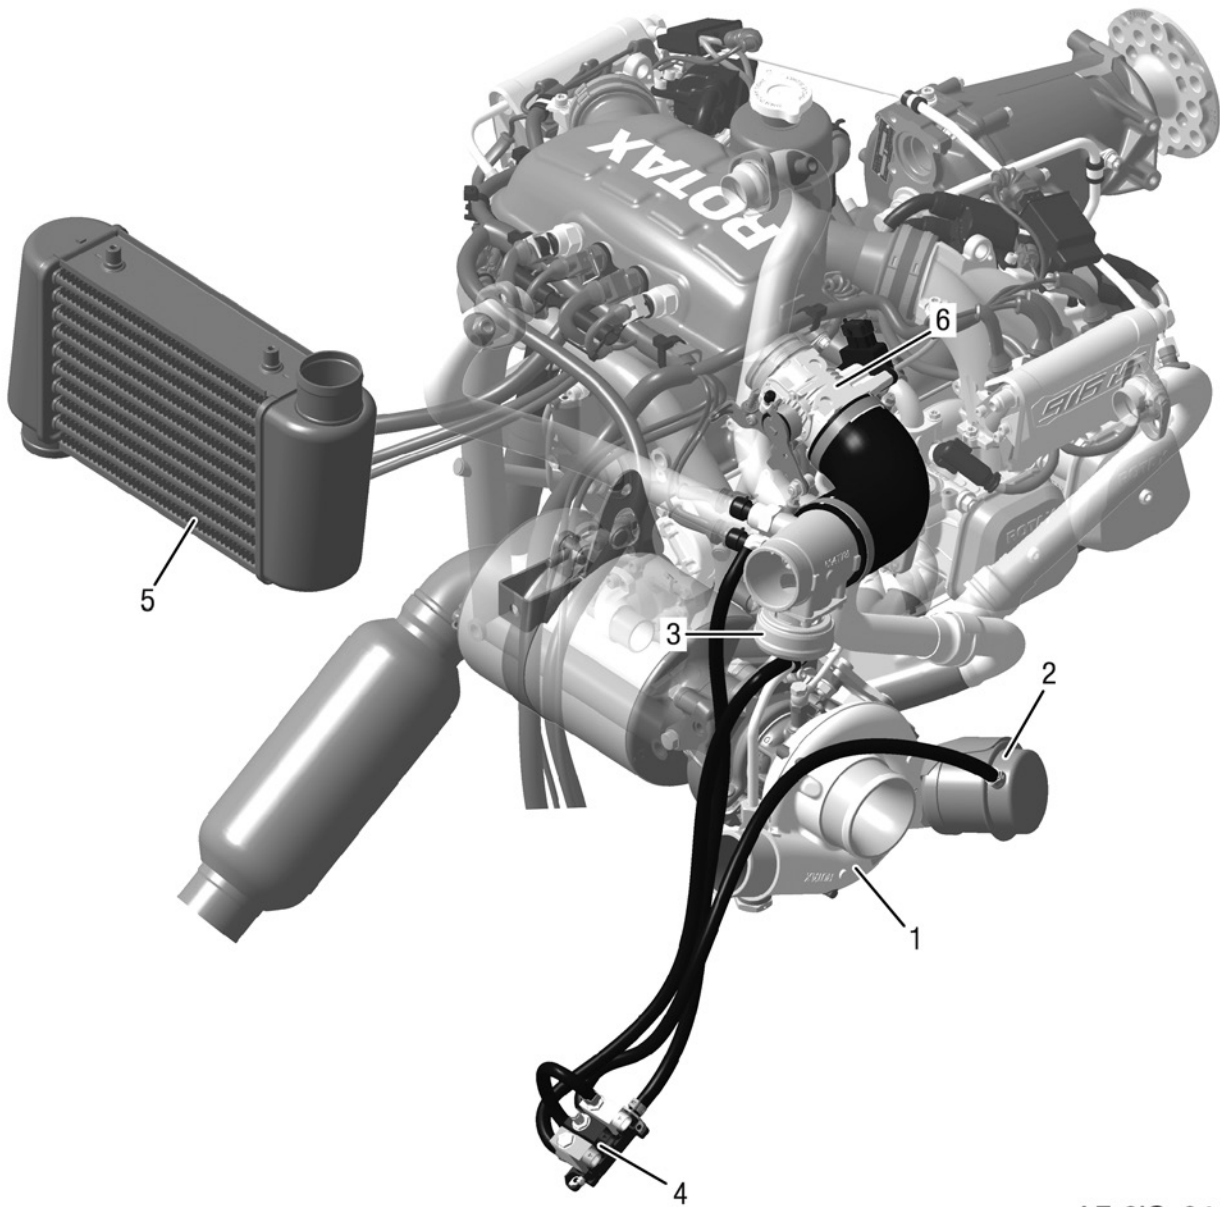

AE 6iS\_0145

Figure 22.1

- |                   |                       |
|-------------------|-----------------------|
| 1 Turbocharger    | 2 Wastegate actuator  |
| 3 Overboost valve | 4 Solenoid valve      |
| 5 Radiator        | 6 Throttle body assy. |

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SERVICE PRODUCTS**

Description	Part number
LOCTITE ANTI SEIZE 8151	297434
LOCTITE 243	897651
LOCKING PAINT	898570

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

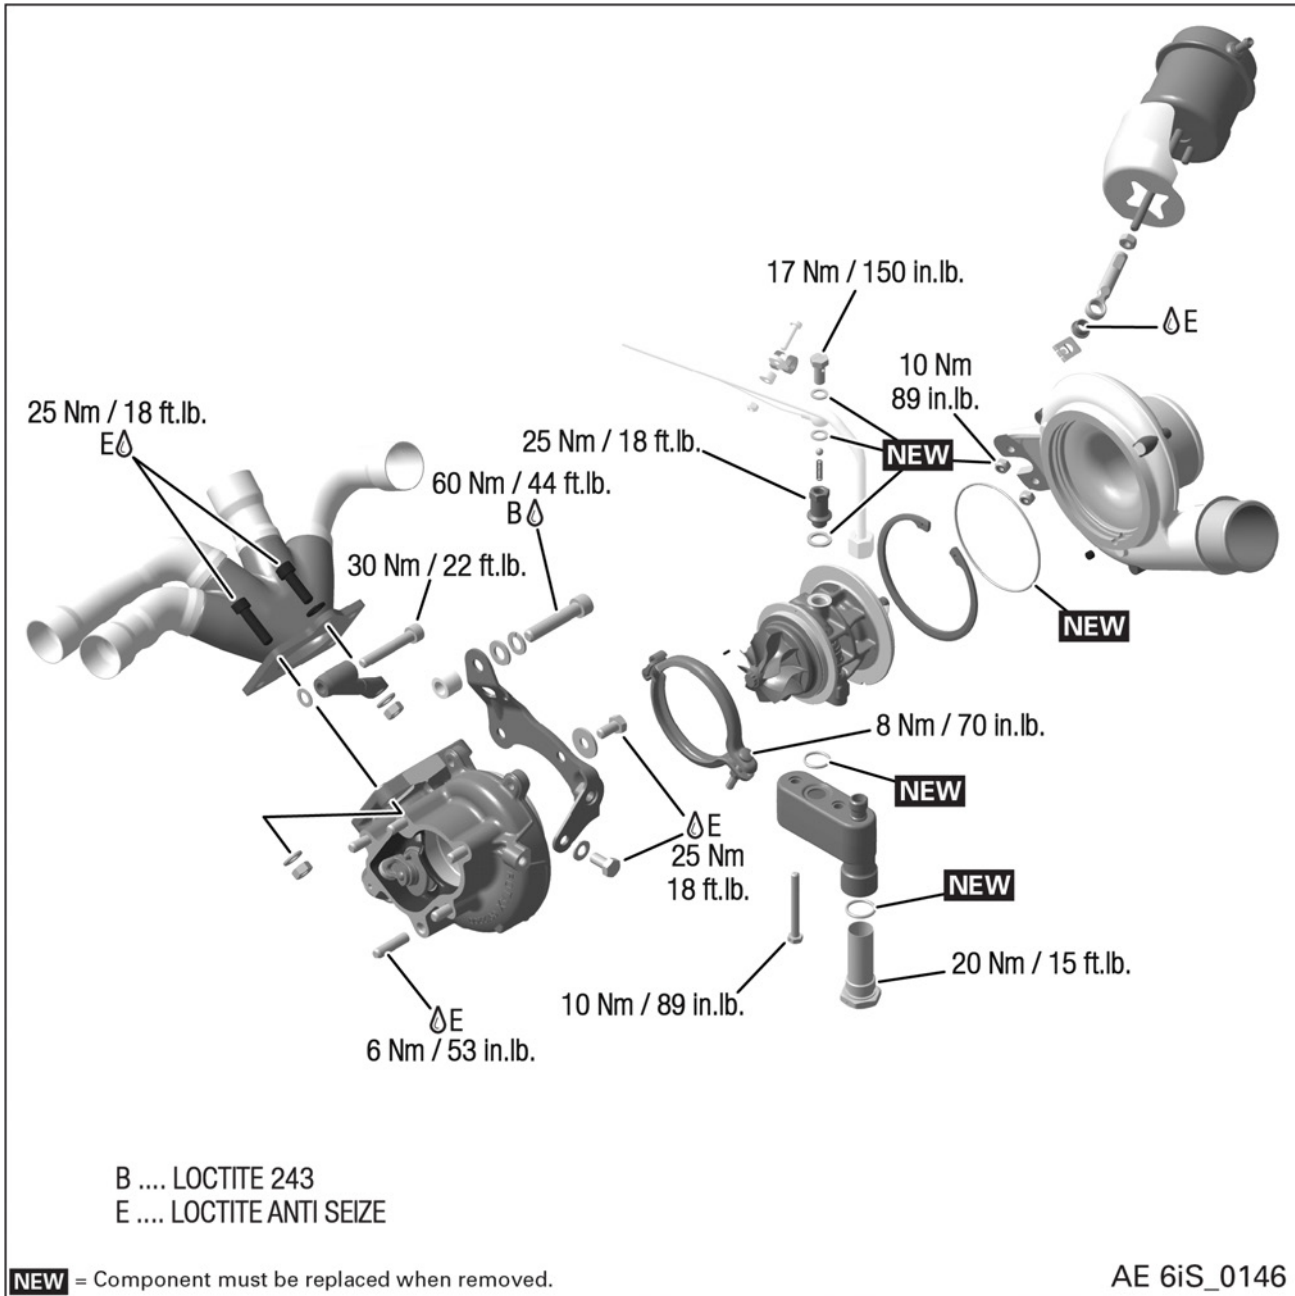


Figure 22.2

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## SYSTEM DESCRIPTION

ROTAX® engines of the 916 i A/C24 Series are equipped with an exhaust turbocharger which makes use of the energy in the exhaust gas for pre-compression of the intake air. The exhaust collects all gases which accumulate in the combustion chamber of the cylinders and routes them via exhaust bends and exhaust manifold to the exhaust turbocharger. There, the combustion gases drive the exhaust gas turbine to achieve a power increase. From the exhaust turbocharger, the combustion gases are routed to the muffler, which is fitted for noise reduction. The airbox pressure is controlled by a flap (wastegate) at the exhaust gas turbine, which is driven by a pressurized regulator. The operation of the flap works via a linkage of the pressurized regulator.

### Exhaust turbocharger

The exhaust turbocharger is basically an arrangement of two fans, a turbine and a blower, on a common shaft. The turbine transforms the energy of the hot exhaust gases and drives a blower which aspirates ambient air and transfers it pre-compressed via the carburetors into the cylinders.

The sole operational connection between engine and turbo is the air and exhaust stream. The speed of the turbo depends mainly on the pressure ratio at the turbine impeller but not directly on engine speed.

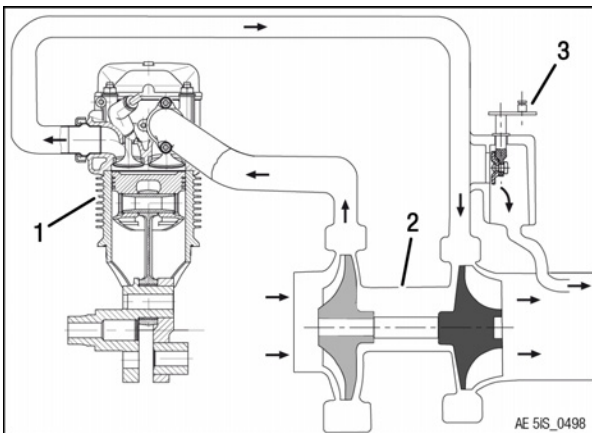


Figure 22.3: Schematic of a boost pressure

- 1 Engine
- 2 Exhaust turbocharger
- 3 Boost pressure regulating valve – wastegate

## NOTE

*The figure shows a schematic arrangement of a boost pressure control with the wastegate in the exhaust stream*

Because of the large speed range of the engine and the varying power requirement, control of the exhaust turbocharger is necessary to achieve the respective nominal pressure in the airbox. The wastegate directs part of the engine exhaust gases so that they bypass the turbine and flow directly into the exhaust (by-pass).

## MAINTENANCE



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

## CONNECTIONS FOR DISPLAY SYSTEMS

### NOTICE

**Follow the instructions in the Installation Manual (IM) for respective engine type regarding connections for instrumentation.**

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**REMOVAL**

**TURBOCHARGER ASSY.— REMOVAL**




**⚠ WARNING**

Danger of severe burns and scalds! Allow the engine and exhaust system to cool to ambient temperature before starting work.

**NOTICE**

Follow the aircraft manufacturer's instructions for removal.

**Preparation:**

-  Drain the oil. See current Maintenance Manual Line (MML) for the respective engine type.
  -  Remove the air filter. Follow the aircraft manufacturer's instructions.
  -  Remove connection turbocharger/inter-cooler, follow the aircraft manufacturer's instructions.
- Remove coolant hoses if necessary. See [Chapter 75-00-00 Cooling system](#).
  - Remove exhaust pipes. See Chapter 78-10-00 , section [Exhaust pipe — removal](#).
  - Remove muffler assy. See Chapter 78-10-00, section .

Step	Procedure
1	Remove the turbo pressure oil line and the suction oil line and remove the cable clamp for supporting the turbo suction line on the turbocharger bracket. See <a href="#">Chapter 79-00-00 Lubrication system</a> .
2	Remove hose from wastegate actuator.

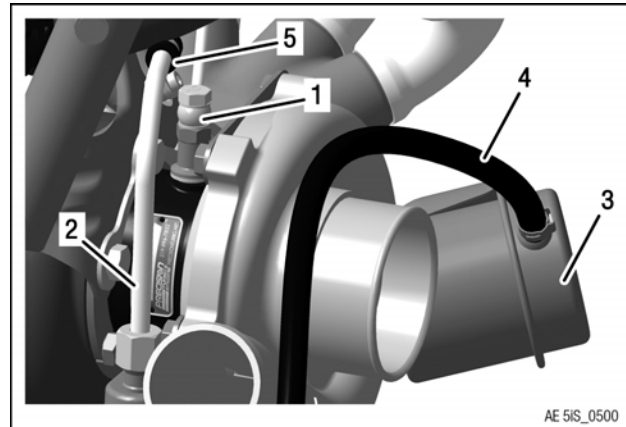


Figure 22.4: TYPICAL

- 1 Turbo pressure line      2 Suction oil line
- 3 Wastegate actuator      4 Hose (wastegate actuator)
- 5 Clamp


**⚠ CAUTION**

**Risk of dropping down components**  
 Make sure you have a second person or a possibility to prevent the turbocharger/muffler/exhaust manifold assy. from drop down.

Step	Procedure
3	Remove the Allen screw (attachment of the manifold bracket assy.) together with washers and hex. nut.
4	Remove the Allen screw (attachment of the turbocharger bracket) together with the lock washer and washer.
5	Loosen the connection turbocharger bracket, engine suspension frame, follow the aircraft manufacturer's instruction.



# BRP-Rotax MAINTENANCE MANUAL HEAVY

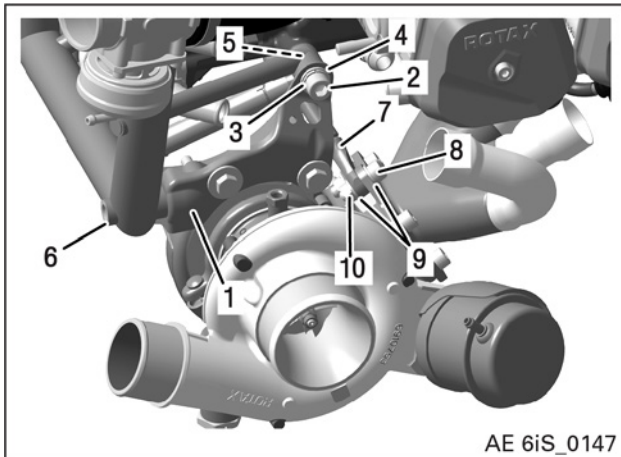

AE 6iS\_0147

Figure 22.5

- |                          |  |
|--------------------------|--|
| 1 Turbocharger bracket   | 2 Allen screw  |
| 3 Lock washer            | 4 Washer   |
| 5 Spacer                 | 6 Connection turbocharger bracket with engine suspension frame |
| 7 Manifold bracket assy. | 8 Allen screw  |
| 9 Washer                 | 10 Hex. nut  |


Step	Procedure
6	Remove the complete unit of turbocharger – exhaust manifold assy.
7	Remove spacer from the engine suspension frame.
8	Remove 4 Allen screws with hex. nuts from the exhaust manifold assy.
9	If necessary, remove 3 hex. screws with washers and remove turbocharger bracket.

## OIL SUMP ASSY. — REMOVAL

### Preparation

If necessary disconnect the turbo oil suction line. Remove the cable clamp for supporting the suction line on the turbo bracket. See [Chapter 79–00–00](#) Lubrication.

Step	Procedure
1	Loosen the Plug screw assy. with the O-ring.
2	Drain the residual oil from the oil sump assy.

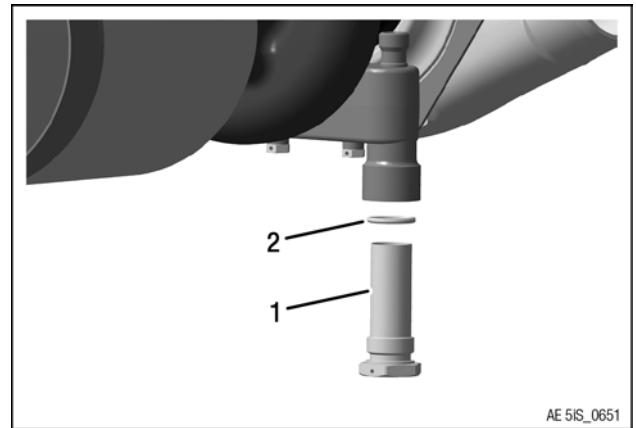

AE 5iS\_0651

Figure 22.6: TYPICAL

- |                    |          |
|--------------------|----------|
| 1 Plug screw assy. | 2 O-ring |
|--------------------|----------|



Check the oil sump assy. and the plug screw assy., see current Maintenance Manual Line (MML) for the respective engine type.

Step	Procedure
3	Loosen the 2 Hex. screw of the oil sump assy. and remove the oil sump assy. with the O-ring.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

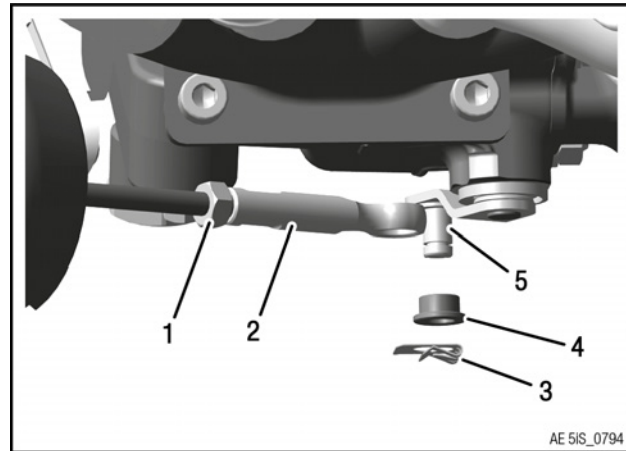
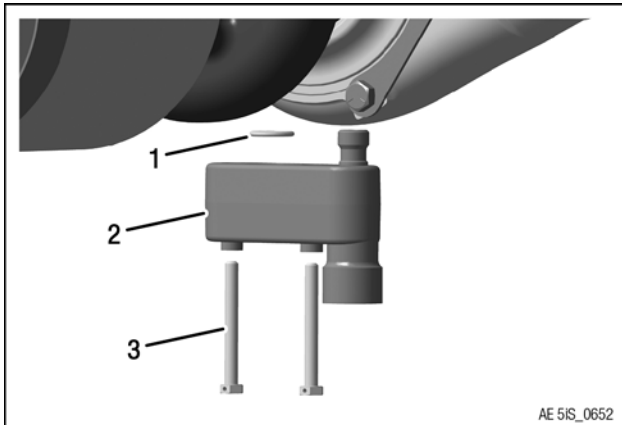


Figure 22.7: TYPICAL

- 1 O-ring
- 2 Oil sump assy.
- 3 Hex. screw

Figure 22.8

- 1 Nut
- 2 Rod end
- 3 Circlip
- 4 Bushing
- 5 Wastegate lever

**WASTEGATE ACTUATOR ASSY. —  
 REMOVAL**

**Preparation**

Before removal, check the wastegate actuator assy. as described in the latest Maintenance Manual Line (MML). If necessary remove hose from wastegate actuator.

**⚠ WARNING**

**Danger of severe burns and scalds! Allow the engine and exhaust system to cool to ambient temperature before starting work.**

Step	Procedure
3	Remove two lock nuts from wastegate actuator protection plate of the turbocharger housing.
4	Remove wastegate actuator assy. and protection plate.

Step	Procedure
1	Loosen locking nut from the rod end.
2	Remove circlip with bushing and remove rod end from the wastegate lever.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

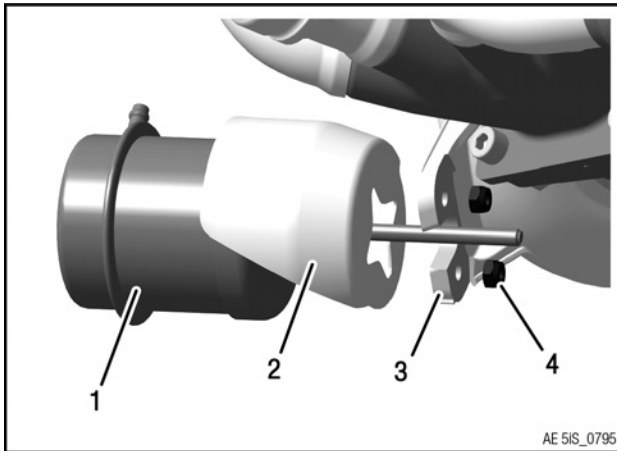


Figure 22.9

- 1 Wastegate actuator assy.
- 2 Protection plate
- 3 Turbocharger housing
- 4 Lock nut

**TURBOCHARGER ASSY. —  
DISASSEMBLY**

**Preparation**

- Remove oil sump assy. See Chapter [Oil sump assy. — removal](#)
- Remove wastegate actuator assy.. See Chapter [Wastegate actuator assy. — removal](#)

Step	Procedure
1	Remove the Allen screws with washer and remove turbocharger bracket.
2	Remove the valve housing with the compression spring and the ball including the sealing ring.  <b>NOTE</b> <i>Be sure not to lose the ball and the compression spring.</i>
3	Open the screw of the V-Band clamp assy. and remove the complete clamp from the turbocharger.

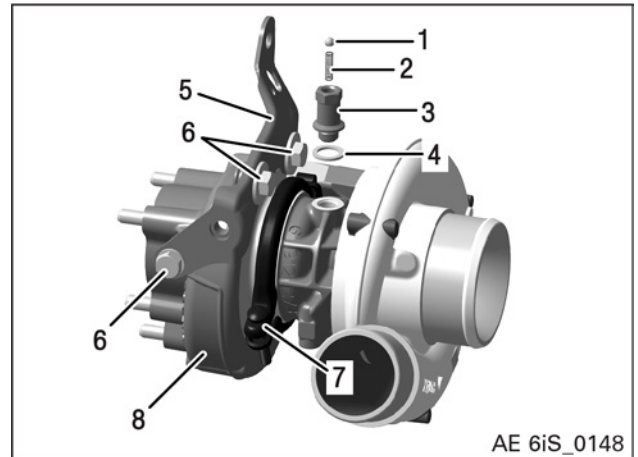


Figure 22.10

- 1 Ball
- 2 Spring
- 3 Valve housing
- 4 Sealing ring
- 5 Turbocharger bracket
- 6 Allen screw and washer
- 7 V-Band clamp assy.
- 8 Turbine housing

**NOTICE**

When removing the turbine housing assy. or the compressor housing, be careful not to damage the fins of the compressor or turbine wheel.

Step	Procedure
4	Remove the turbine housing assy. from the turbo cartridge assy.
5	Remove the retaining ring and pull off the compressor housing from the turbo cartridge assy.
6	Remove O-ring from the turbo cartridge assy..

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

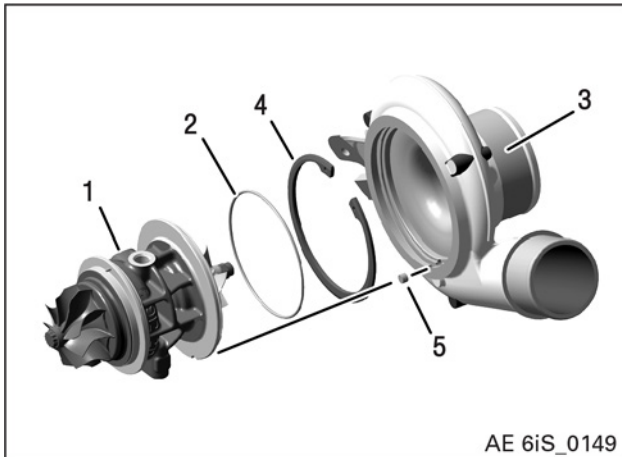


Figure 22.11

- |   |                       |   |                |
|---|-----------------------|---|----------------|
| 1 | Turbo cartridge assy. | 2 | O-ring         |
| 3 | Compressor housing    | 4 | Retaining ring |
| 5 | Guide pin             |   |                |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## INSPECTION

### TURBOCHARGER— INSPECTION

#### Preparation



Clean all parts carefully. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.



General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type.

### PLANE SURFACES OF THE TURBINE OPENING — INSPECTION

Step	Procedure
1	Use a straight edge to test for distortion (TC03). A distortion of max. 0.1 mm (0.004 inch) is permissible. If the maximal allowed distortion is exceeded then it is possible to rework the surface up to 0.5 mm (0.02 inch). The amount of the rework has to be recorded in the appendix.



Figure 22.12: TYPICAL

### THREADED HOLE — INSPECTION

#### NOTICE

It is not allowed to repair any of the threads inside of the turbine housing with thread inserts.

Step	Procedure
1	Check the threaded holes for damage and wear.

### ROTOR TURBINE — INSPECTION

Step	Procedure
1	Apply a slight radial pressure onto the shaft to minimize the gap between the compressor casing and the compressor wheel (TC04). The gap must never be less than 0.1 mm (0.004 in.). Check the complete circumference of 360°. See section wear limits Record the readings in the appendix..

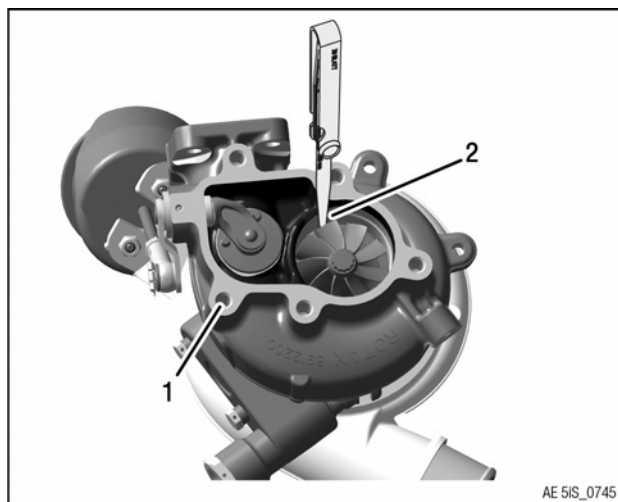


Figure 22.13: TYPICAL

1 Threaded hole      2 Gap

### COMPRESSOR WHEEL — INSPECTION

Step	Procedure
1	Apply a slight radial pressure onto the shaft whereby it must not contact the compressor housing. Check the complete circumference of 360°.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

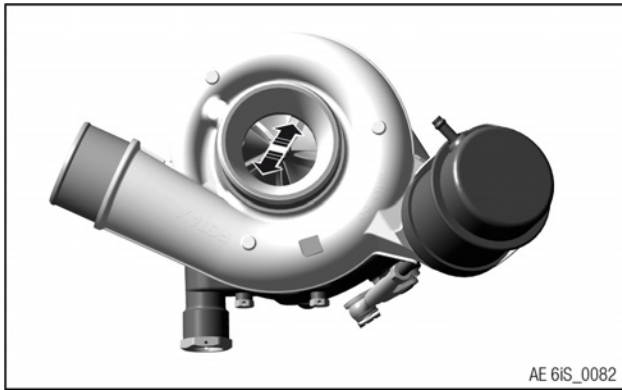


Figure 22.14: TYPICAL

**WASTEGATE LEVER — INSPECTION**

Step	Procedure
1	Check the wastegate lever for free movement. If it does not move freely, lubricate the axle of the waste gate with LOCTITE ANTI SEIZE.

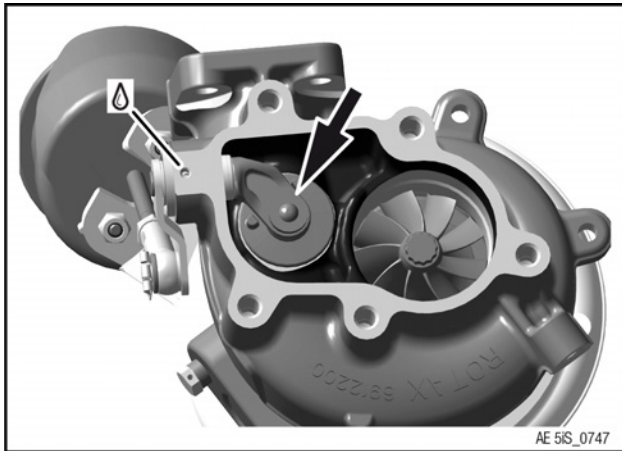


Figure 22.15: TYPICAL

**CHARGER SHAFT — INSPECTION**

Step	Procedure
1	Check the charger shaft axial clearance (TC01) and radial clearance (TC02). See section wear limits. Record the readings in the appendix.

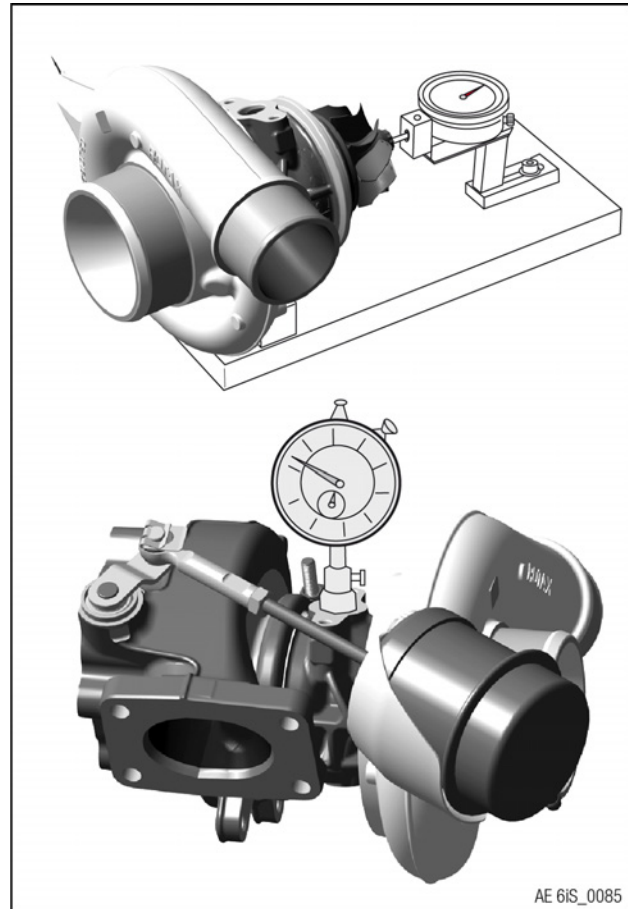


Figure 22.16: TYPICAL

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## IMPELLER SHAFT — INSPECTION

The bearings are tested by means of the pressure drop measuring method.

### NOTICE

For this test, compressed air at approx. 2 bar (29 psi) and a testing device are needed.

Testing device consisting of:

- 2 pressure gauges
- 1 orifice jet (inner diameter = 1 mm (.039 in.) / length = 3 mm (.12 in.)
- 1 connecting nipple UNS – 7/16”–24 for the thread in the middle section of the turbocharger
- 1 cover plate for the oil outlet
- connecting hoses (as required)

Step	Procedure
1	Screw in the connecting nipple and close the oil outlet with the cover plate.
2	Connect the pressure gauges together with the regulating valves.
3	Apply a constant pressure of 2 bar (29 psi) to the connection nipple. The pressure drop must not exceed.

### NOTE

*For optimum results, the position of the shaft should always be changed slightly during the check, i.e. the shaft should be moved backwards and forwards in axial and radial directions.*

## WASTEGATE ACTUATOR ASSY. — INSPECTION



General visual inspection. See for other tests (leakage test) Chapter 05-00-00 and 12-20-00 in the corresponding Maintenance Manual Line (MML) for the respective engine type.

## EXHAUST MANIFOLD ASSY. – INSPECTION

Step	Procedure
1	Check the exhaust manifold assy. for deformation.

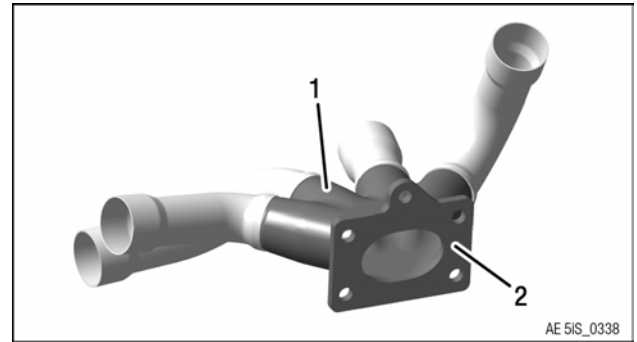


Figure 22.17

- 1 Exhaust manifold assy.      2 Flange for turbocharger

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**WEAR LIMITS**

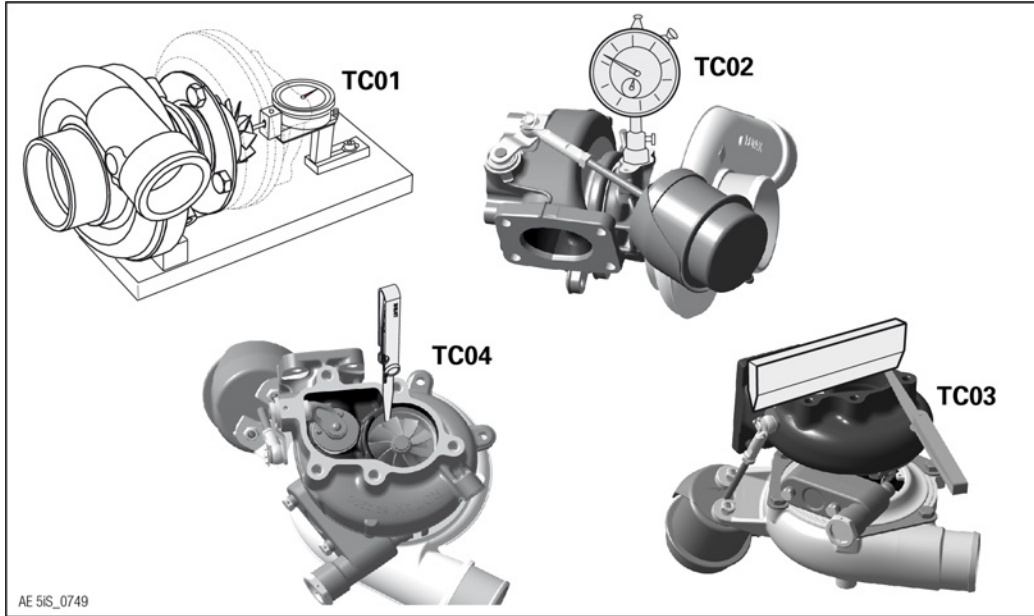


Figure 22.18: TYPICAL

Description	Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements
		min	max				
<b>Bearing bushing in gear cover</b>							
Axial clearance	TC01			0.025 mm (0.0010 in.) to 0.084 mm (0.0033 in.)	0.040 mm (0.0016 in.) to 0.070 mm (0.0028 in.)	current replaced	
Radial clearance	TC02			0.056 mm (0.0022 in.) to 0.127 mm (0.0050 in.)	0.074 mm (0.0029 in.) to 0.109 mm (0.0043 in.)	current replaced	
Rework turbine housing flange	TC03			0.5 mm (0.02 in.)			
Rotor turbine	TC04			0.1 mm (0.004 in.)			



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**INSTALLATION**

**TURBOCHARGER ASSY. ASSEMBLY**

**NOTICE**

Be sure that no foreign objects fall inside the turbo-charger assy.

**NOTICE**

When installing the turbine housing assy. or the compressor housing, be careful not to damage the fins of the compressor or turbine wheel.

Step	Procedure
1	Place a new O-ring 83x2 into the groove of the turbo cartridge assy..
2	Place guide pin into the compressor housing and install turbo cartridge assy. in the correct position.
3	Install retaining ring.

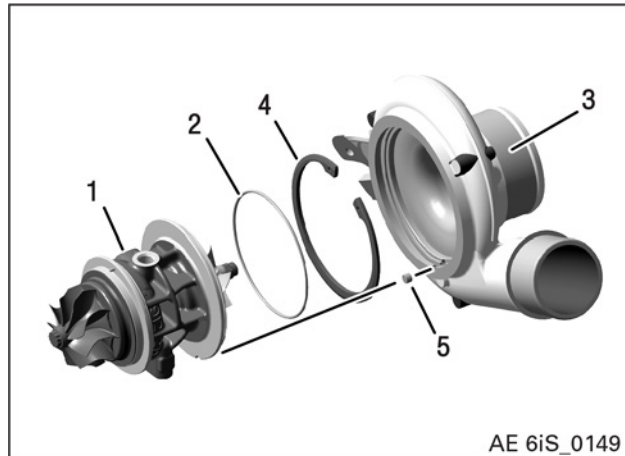


Figure 22.19

- 1 Turbo cartridge assy.
- 2 O-ring 83x2
- 3 Compressor housing
- 4 Retaining ring
- 5 Guide pin

Step	Procedure
4	Install needle pin 2x6 into the turbine housing assy..
5	Put the turbine housing assy. onto the turbo cartridge assy. in the correct position.
6	Install the V-Band clamp assy. 83 mm tightened with 8 Nm (70 in. lb) and mark the nut with locking paint.
7	Install the valve housing with sealing ring 12x18 tightened with 25 Nm (18 ft. lb) and mark with locking paint.

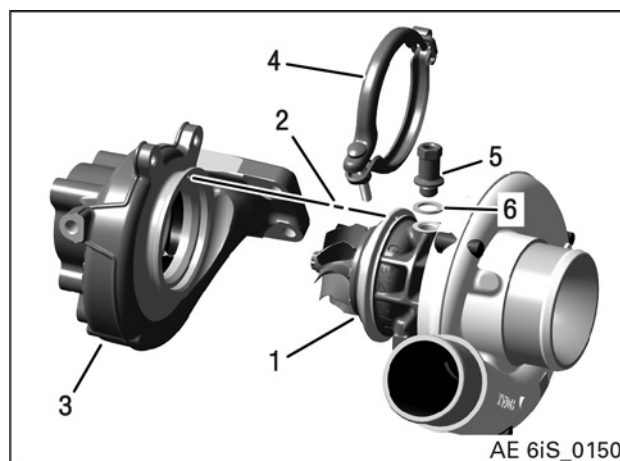


Figure 22.20

- 1 Turbo cartridge assy.
- 2 Needle pin 2x6
- 3 Turbine housing assy.
- 4 V-Band clamp assy. 83 mm
- 5 Valve housing
- 6 Sealing ring 12x18

**TURBOCHARGER BRACKET —  
 INSTALLATION**

Turbocharger bracket integrates a captive nut used for engine ring mount and aircraft suspension frame attachment. It is available in Metric (M10) or UNF (3/8"-24) (AN6).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
1	Apply LOCTITE ANTI SEIZE to the hex. screws M8x16. Tighten the bracket to the turbocharger using 3x hex. screws M8x16 with 1x washer 8.4 and 2x washer B 8.4 (bigger outer diameter). Tightening torque 25 Nm (18 ft. lb.).

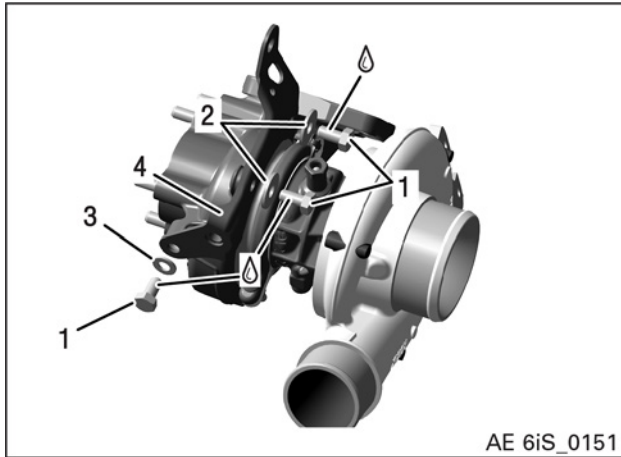


Figure 22.21

- 1 Hex. screws M8x16      2 Washer B 8.4
- 3 Washer 8.4              4 Turbocharger bracket

## OIL SUMP ASSY. — INSTALLATION

Step	Procedure
1	Place new O-ring 15.9 –2.3 into the oil sump assy..
2	Install the oil sump assy. on turbocharger with 2 Hex. screw M6x55. Tightening torque 10 Nm (89 in. lb).

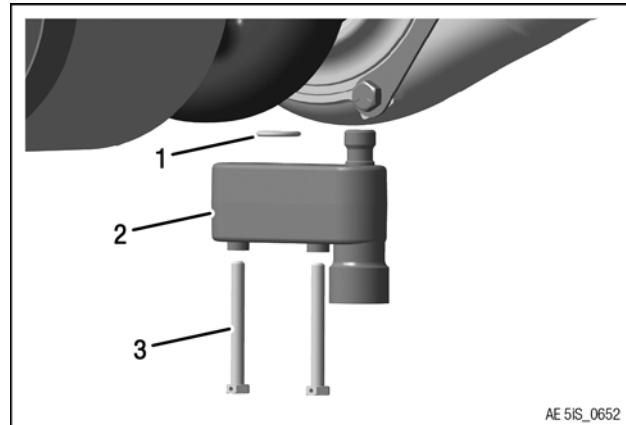


Figure 22.22: TYPICAL

- 1 O-ring 15.9 –2.3      2 Oil sump assy.
- 3 Hex. screw M6x55

Step	Procedure
3	Install plug screw assy. M22x1,5 with new O-ring 18x2.5 into the oil sump assy.. Tightening torque 20 Nm (15 ft.lb).

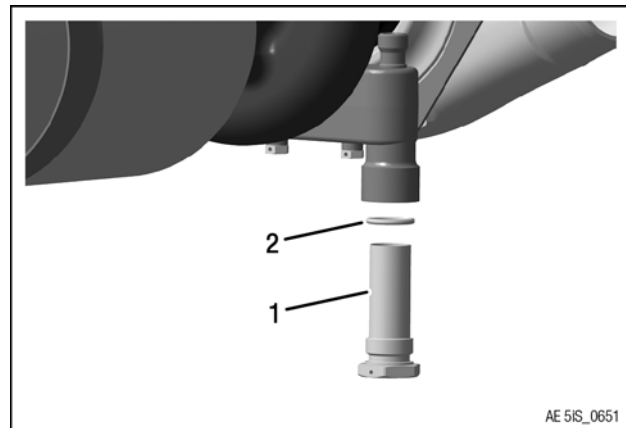


Figure 22.23: TYPICAL

- 1 Plug screw assy. M22x1.5      2 O-ring 18x2.5

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
4	Attach the safety wire between 2 Hex. screws and the plug screw.
5	If turbocharger assy. has not been removed, connect the turbo oil suction line and the cable clamp for supporting the turbo oil suction line on the turbocharger bracket. See <a href="#">Chapter 79-00-00 Lubrication</a> .

**TURBOCHARGER ASSY.—  
 INSTALLATION**

**NOTE**

*Studs M8 are for attaching the muffler assy.. Check for tight fit and any damage. When replacing a stud, it is fitted so that the longer thread is screwed into the turbocharger. Lubricate studs with LOCTITE ANTI SEIZE and tighten. Tightening torque 6 Nm (53 in. lb).*

Step	Procedure
1	Fit the exhaust manifold assy. onto the turbocharger flange with Allen screws M8x25 hand-tighten with washers 8.4 and hex. nuts M8.

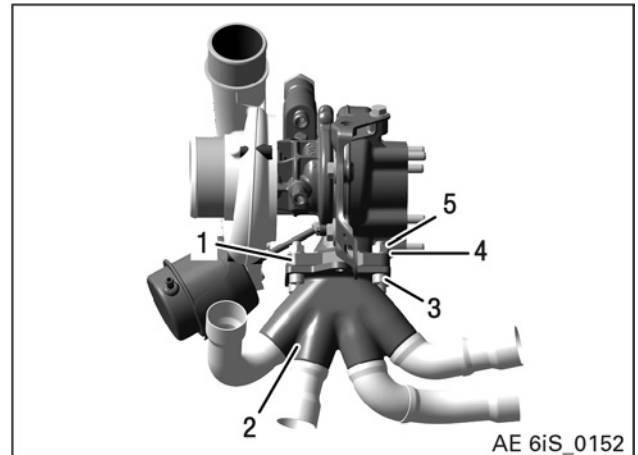


Figure 22.24

- 1 Turbocharger flange      2 Exhaust manifold assy.
- 3 Allen screw M8x25      4 Washer 8.4
- 5 Hex. nut M8

**NOTICE**

The attachment screws for exhaust manifold and turbocharger bracket are not tightened until installation on the engine is complete to prevent locking up of stresses.

**⚠ CAUTION**

**Risk of dropping down components**  
 Make sure you have a second person or a possibility to prevent the turbocharger/muffler/exhaust manifold assy. from drop down.

Step	Procedure
2	Place spacer 10.5/17/15 into the engine suspension frame.
3	Install Allen screw M10x50 (attachment of the turbocharger bracket) together with new lock washer A10 and washer 10.5. hand-tighten.
4	Install the connection turbo bracket – engine suspension frame, follow the aircraft manufacturer’s instruction for installation.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
5	Secure and tighten Allen screw M10x50 (attachment of the turbocharger bracket) with LOCTITE 243. Tightening torque 60 Nm (44 ft. lb.).
6	If manifold bracket assy. has been replaced, install thrust washer (if needed) and manifold bracket assy. on engine housing with Allen screw M8x50 hand-tight.  <b>NOTE</b> <i>If needed, install thrust washer around the exhaust bracket assy. with the hole to the exhaust manifold assy. Maximum allowed shimming distance is 2 mm (0.08 in.)</i>
7	Lubricate Allen screw with LOCTITE ANTI SEIZE. Tighten turbocharger assy. with Allen screw M8x25, 2 washers 8.4 and hex. nut M8 on manifold bracket assy. Tightening torque 25 Nm (18 ft.lb).

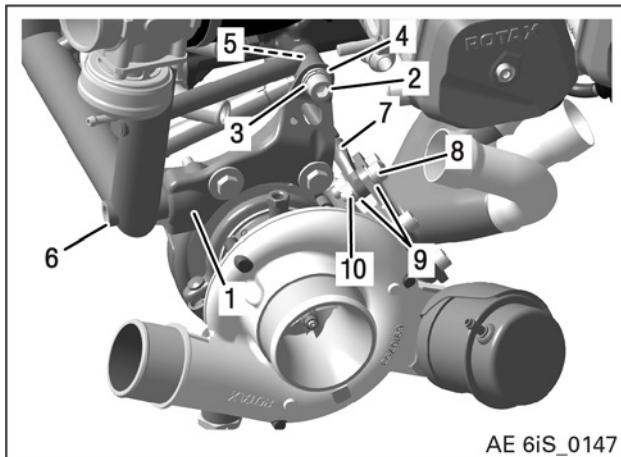


Figure 22.25

- |   |                      |   |                    |
|---|----------------------|---|--------------------|
| 1 | Turbocharger bracket | 2 | Allen screw M10x50 |
| 3 | Lock washer A10      | 4 | Washer 10.5        |

Step	Procedure		
5	Spacer 10.5/17/15	6	Connection turbocharger bracket with engine suspension frame
7	Manifold bracket assy.	8	Allen screw M8x25
9	Washer 8.4	10	Hex. nut M8

Step	Procedure
8	Install muffler assy., see Chapter 78-10-00, <a href="#">Muffler assy. — installation</a>
9	Install exhaust pipes, see Chapter 78-10-00 <a href="#">Exhaust pipe on cylinder head — installation</a>

**NOTICE**

After the exhaust is completely mounted, tighten 4 hex. screws M8x16 on turbine housing and Allen screws M8x25 on exhaust manifold assy.. Tightening torque 25 Nm (18 ft. lb.)

**NOTICE**

If manifold bracket assy. has been replaced, secure and tighten Allen screw M8x50. Tightening torque 30 Nm (22 ft. lb.).

Step	Procedure
10	If required install oil sump assy., see Chapter 78-20-20 <a href="#">Oil sump assy. — installation</a> .
11	Install the turbo pressure oil line and the suction oil line. See Chapter 79- 00-00 <a href="#">Oil line (steel line) — installation</a>
12	Install hose with clamp 10.3 –12.8 on wastegate actuator assy..

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

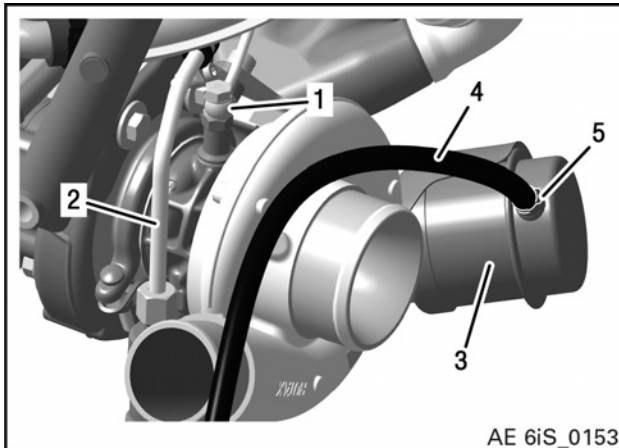


Figure 22.26

- 1 Turbo pressure line      2 Suction oil line
- 3 Wastegate actuator      4 Hose (wastegate actuator)
- 5 Clamp 10.3-12.8

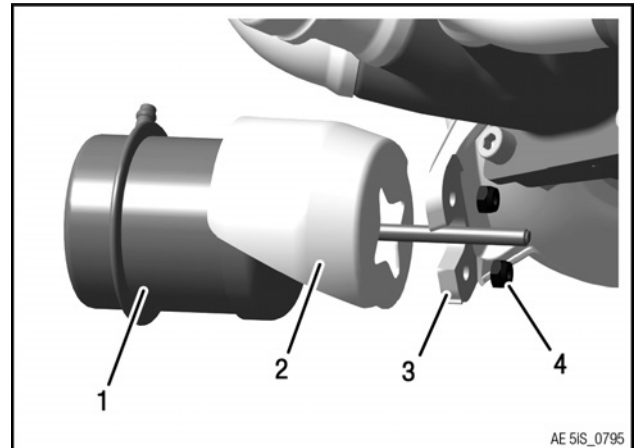


Figure 22.27

- 1 Wastegate actuator assy.      2 Heat shield
- 3 Turbocharger housing      4 Lock nut M6

**WASTEGATE ACTUATOR ASSY.—  
 INSTALLATION**

**NOTICE**

Check for leakage of the wastegate actuator assy. before installation.

Step	Procedure
1	Install wastegate actuator assy. and heat shield with two new lock nuts M6 onto the turbocharger housing. Tightening torque 10 Nm (89 in. lb).  <b>NOTE</b>  <i>The heat shield must be positioned to provide maximum shielding of radiant heat from the exhaust system. The heat shield must point towards the exhaust manifold.</i>

Step	Procedure
2	Mount hex. nut M6 and rod end.

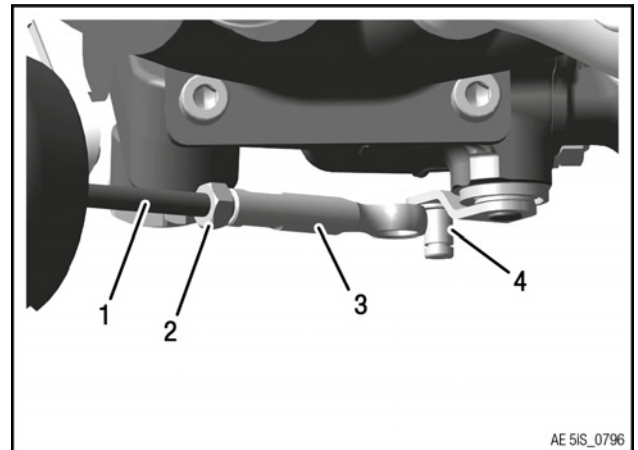


Figure 22.28

- 1 Rod      2 Hex. nut M6
- 3 Rod end      4 Wastegate lever

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
3	Lubricate the bushing with LOCTITE ANTI SEIZE.
4	Place the rod end and bushing onto the wastegate lever shaft.

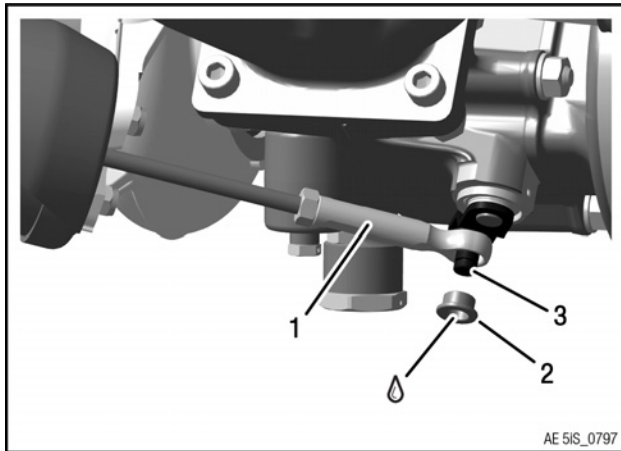


Figure 22.29

- 1 Rod end
- 2 Bushing
- 3 Wastegate lever

Step	Procedure
5	Press wastegate lever to closed position and hold it.
6	Adjust the rod end so, that the wastegate is in closed position.
7	Fix this position with the hex. nut M6 and mark with Locking paint.

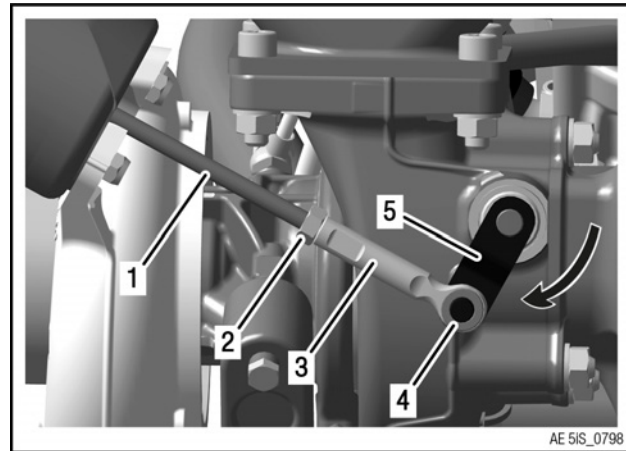


Figure 22.30

- 1 Rod
- 2 Hex. nut M6
- 3 Rod end
- 4 Bushing
- 5 Wastegate lever

Step	Procedure
8	Place the open end of the circlip into the groove of the wastegate shaft and the beveled portion of the clip over the end of the shaft.
9	Push the circlip into place until the beveled end retains the clip over the shaft.
10	Mount low pressure hose and fix with clamp 10.3 –12.8.



# BRP-Rotax MAINTENANCE MANUAL HEAVY

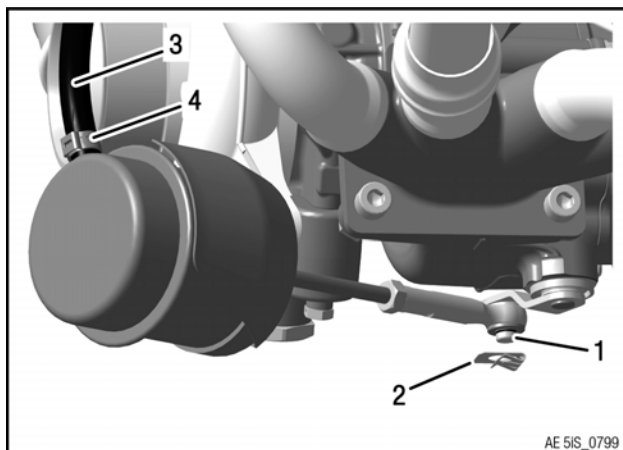


Figure 22.31

- 1 Wastegate lever shaft    2 Circlip
- 3 Low pressure hose      4 Clamp 10.3 – 12.8

## ADJUSTMENT OF THE WASTEGATE

Step	Procedure
1	<p>Check the wastegate for proper adjustment. Pressurize the wastegate and observe the following calibration table and figure. Around 150-160 mbar the wastegate must be closed, if not adjust by turning the hex. nut on wastegate lever.</p> <p><b>NOTE</b></p> <p><i>Proper adjustment allowed only while installed / connected to wastegate lever. Wastegate shaft movement has to be without friction.</i></p>

Control pressure (mbar / psi)	A = Rod travel mm [inches]	Notes / tolerance mm [inches]
150 - 160 / 2.18 - 2.32	0	closed
185 / 2.60	2 [0.079]	1 [+/- 0.04]

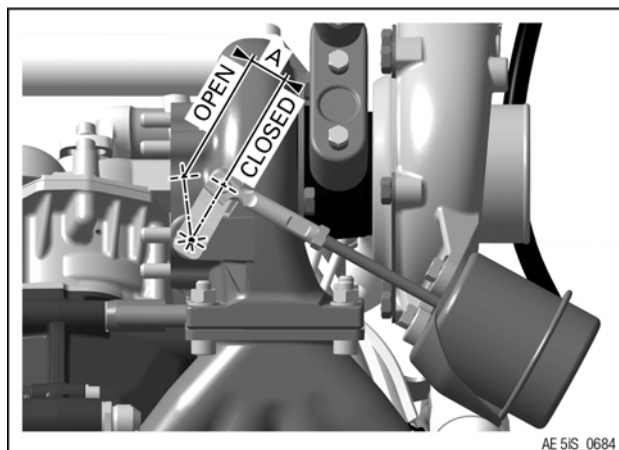


Figure 22.32: TYPICAL

## FINISHING WORK

- If necessary, install coolant hoses. See [Chapter 75-00-00 Cooling system](#).
- Install air filter, follow the instructions of the aircraft manufacturer.
- Install hose from intercooler to turbocharger, follow the instructions of the aircraft manufacturer.



Fill with operating fluids or check filling levels.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system.

See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Carry out an engine test run.

See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**Chapter: 79-00-00**  
**LUBRICATION SYSTEM**

**TOPICS IN THIS CHAPTER**

<b>Special tools</b> .....	<b>3</b>
<b>Service products</b> .....	<b>4</b>
<b>System description</b> .....	<b>6</b>
Crankcase .....	6
Oil pump .....	6
Safety instruction .....	6
<b>Connections for display systems</b> .....	<b>7</b>
Oil temperature sensor (OTS).....	7
Oil pressure sensor (OPS) .....	7
Maintenance .....	7
<b>Oil pump</b> .....	<b>8</b>
Oil pump assy. removal .....	8
Oil pump — disassembly.....	9
Oil pump single parts — inspection .....	11
Oil pump housing — inspection .....	12
Rotary piston/rotor — inspection .....	12
Oil pump shaft — inspection .....	13
Oil pressure regulator — inspection .....	13
Oil pump — assembly .....	13
Oil pump housing O-rings.....	17
Oil pump — installation .....	17
Oil filter — installation .....	19
Finishing work .....	19
Wear limits .....	20
<b>Oil tank</b> .....	<b>22</b>
Oil tank — removal .....	22
Oil tank — disassembly.....	22
Oil tank single parts — inspection .....	23
Oil tank — assembly .....	24
Oil tank — installation .....	24
Check valve .....	24
Finishing work .....	24
<b>Oil lines</b> .....	<b>25</b>
Oil hoses — removal .....	25
Oil line (steel line) — removal .....	25
Oil line — inspection .....	27
Oil line (steel line) — installation .....	27
Oil hoses — installation.....	29
Finishing work .....	29
Thread repair .....	30

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

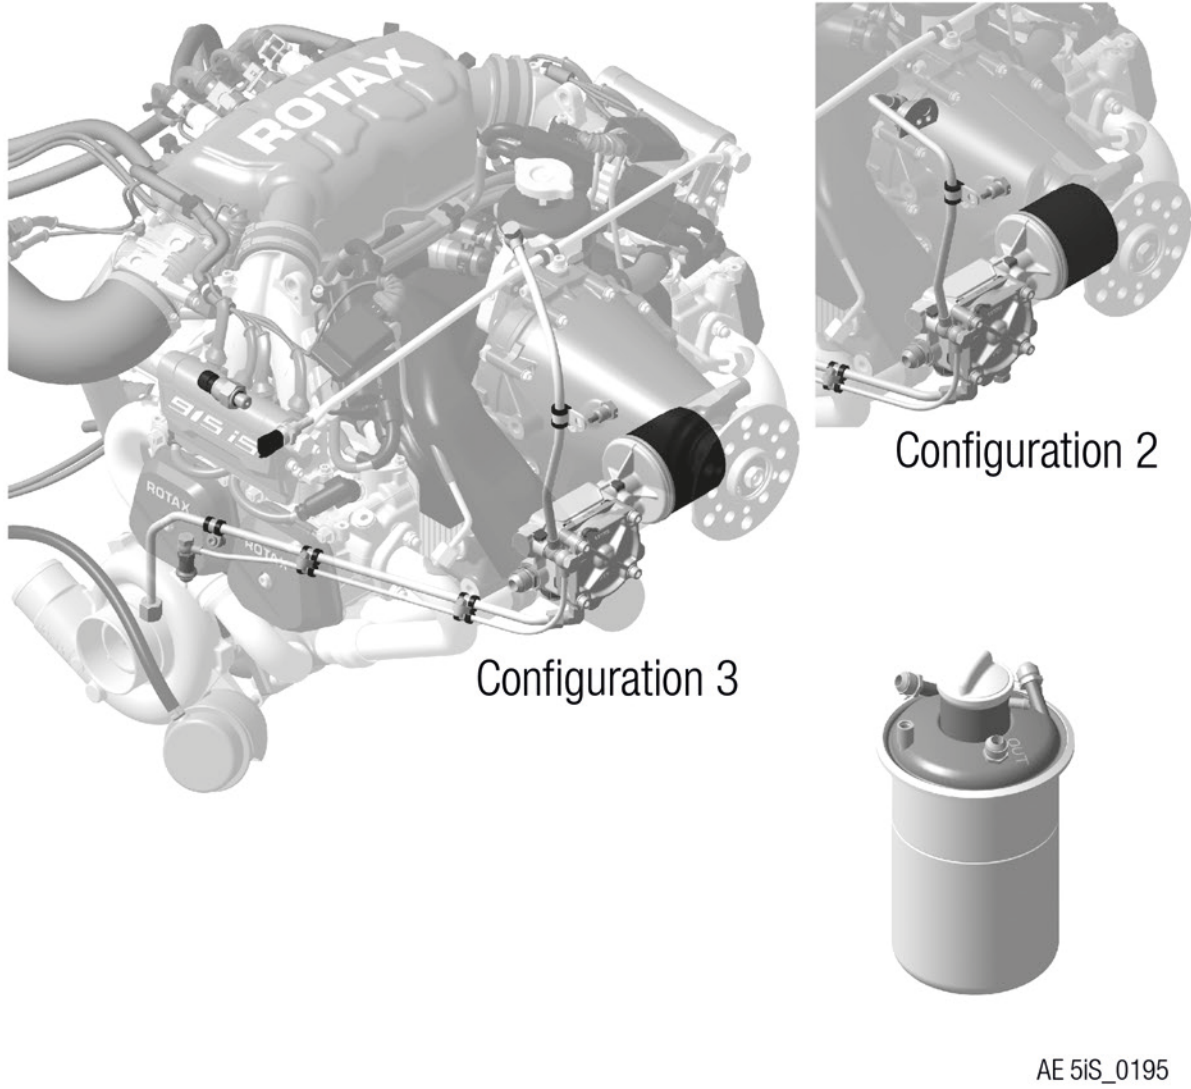


Figure 23.1: TYPICAL

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

**SPECIAL TOOLS**

Description	Part number
Oil filter wrench	877620
Socket wrench	876075
Socket wrench	876130

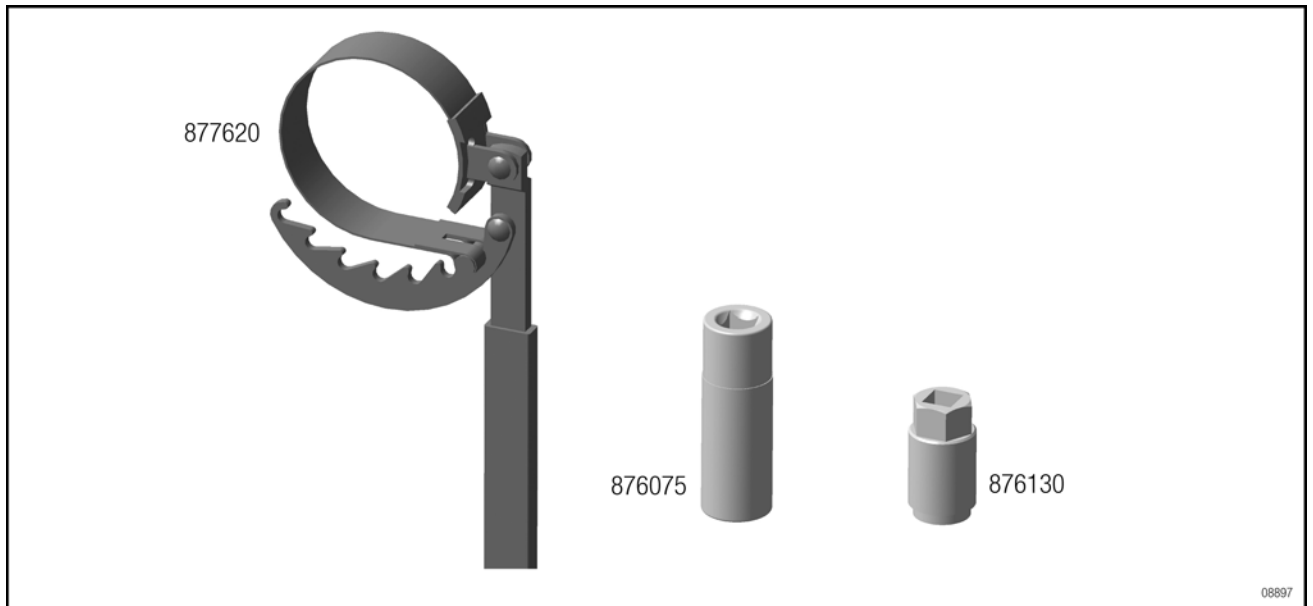


Figure 23.2: Special Tools

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SERVICE PRODUCTS**

<b>Description</b>	<b>Part number</b>
LOCTITE ANTI SEIZE 8151	898351
LOCTITE 5910	899791
LOCTITE 243	897651
LOCTITE 648	899788
Engine oil	n.a.
Insulating tape	n.a.
LOCKING PAINT	898570

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

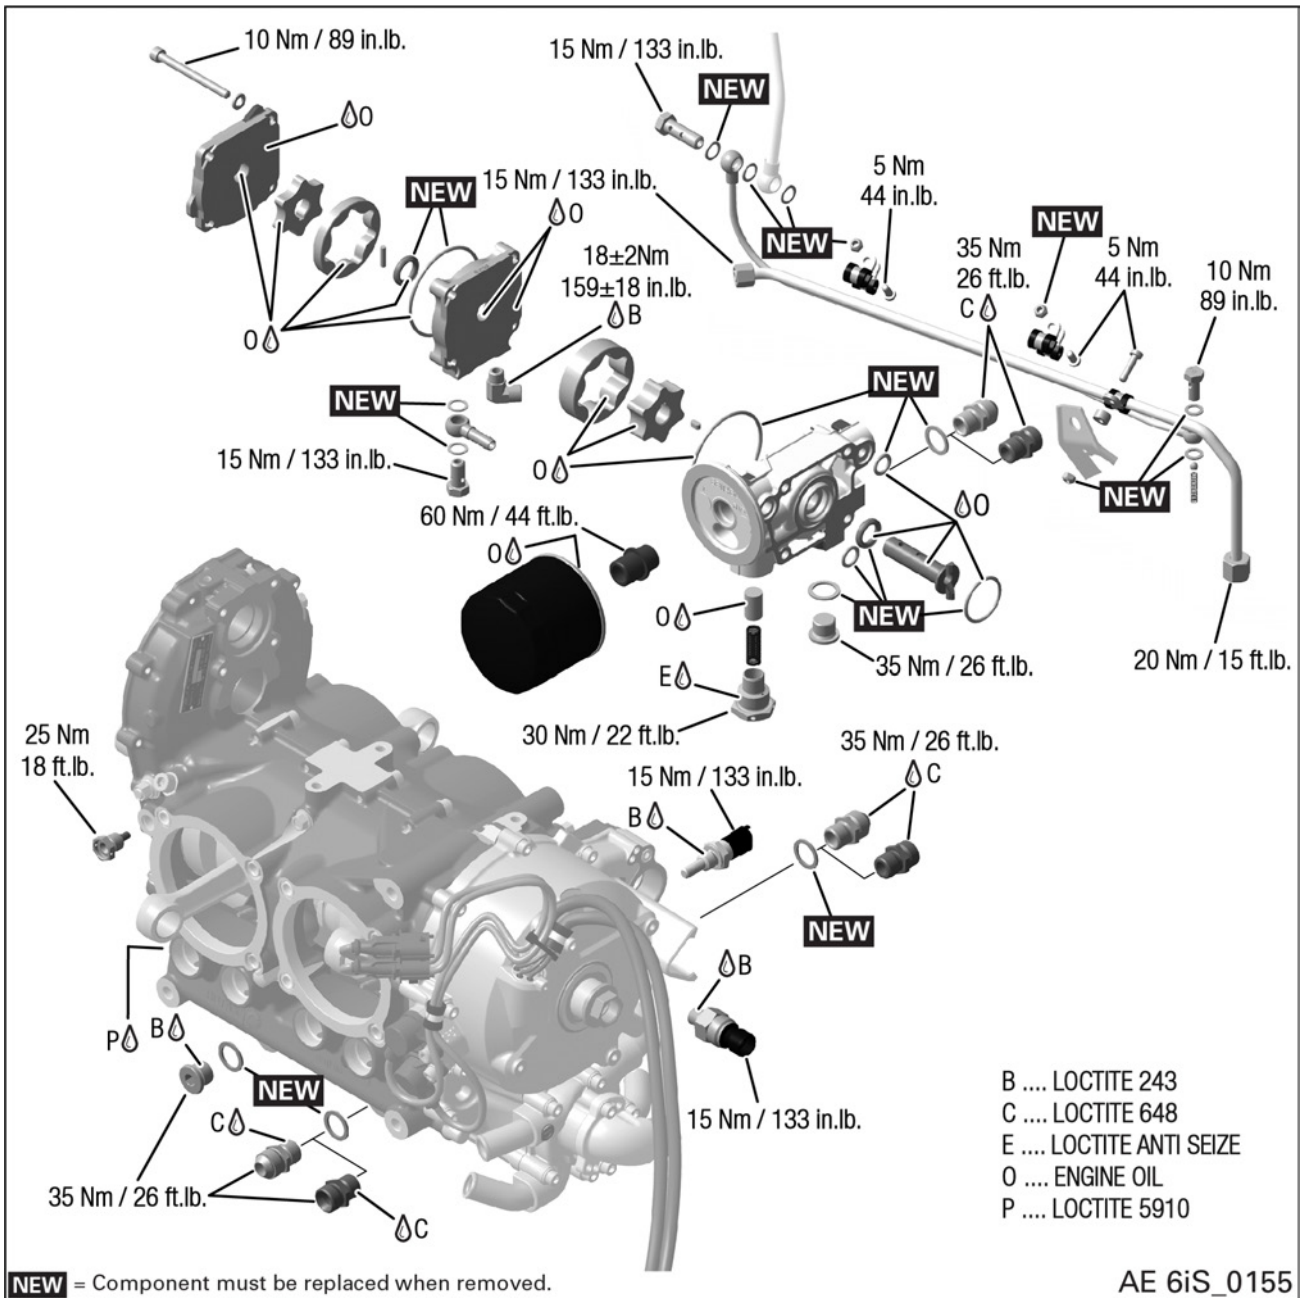


Figure 23.3: Service Products

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### **SYSTEM DESCRIPTION**

The engine is provided with a dry sump forced lubrication system with a main oil pump with integrated pressure regulator.

#### **Oil flow**

The oil pump (driven by the camshaft) sucks the motor oil from the oil tank through the oil cooler and forces it through the oil filter to the points of lubrication in the engine and the turbo charger. The escaping oil emerging from the points of lubrication accumulates on the bottom of crankcase and is forced back to the oil tank by the piston blow-by gases.

The ventilation of the oil system is done by the vent fitting on the oil tank.

#### **Turbocharger**

The turbocharger is lubricated via a separate oil line (from the main oil pump).

The oil emerging from the turbocharger collects in a stainless steel oil sump and is sucked back, through a finger sieve to the secondary oil pump and then pumps back to the main oil tank via the oil line.

### **CRANKCASE**

The engine oil emerging from the lubrication points accumulates on the bottom of crankcase and is forced back to the oil tank by the constant pressure in the crankcase (blow-by gases).

### **OIL PUMP**

The oil pump is driven by the camshaft.

### **SAFETY INSTRUCTION**

#### **⚠ WARNING**

**Danger of severe burns and scalds! Always allow the engine to cool down to ambient temperature before starting any work.**

#### **⚠ WARNING**

**Danger of serious injury! During work on the lubrication system there is a risk of injury due to pressure!**

- Ensure that the engine is in the horizontal position!
- Ensure that the lubrication system is no longer pressurized!

#### **ENVIRONMENTAL NOTE**

**Please observe the disposal regulations applicable in your area.**

#### **ENVIRONMENTAL NOTE**

**Observe the safety instructions of the manufacturer of hazardous substances (coolant, oil or fuel) and the applicable regional waste disposal regulations.**

#### **ENVIRONMENTAL NOTE**

**Work with the utmost care to ensure that no water pollutants can penetrate into the soil, water or the sewerage system.**

## **CONNECTIONS FOR DISPLAY SYSTEMS**

### **NOTICE**

**Follow the instructions in the Installation Manual (IM) for respective engine type regarding connections for instrumentation.**

### **OIL TEMPERATURE SENSOR (OTS)**

The oil temperature sensor (OTS) is situated on the crankcase and measures the oil inlet temperature. For removal, inspection and installation see [Chapter 76-70-00 section Sensors and actuators](#).

### **OIL PRESSURE SENSOR (OPS)**

The pressure sensor is situated on the ignition housing and measures the oil pressure. For removal, inspection and installation see [Chapter 76-70-00 section Sensors and actuators](#).

### **MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

### **NOTE**

*Whenever the lubrication system is removed or disassembled, O-rings and other sealing elements must be replaced with new parts.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

## **OIL PUMP**

### **OIL PUMP ASSY. REMOVAL**

**⚠ WARNING**

**Danger of severe burns and scalds! Always allow the engine to cool down to ambient temperature before starting any work.**

**ENVIRONMENTAL NOTE**

**Dispose of used oil according to local environmental regulations.**

**ENVIRONMENTAL NOTE**

**Ensure that no oil gets into the waste water system or the ground – risk of contaminating drinking water!**

**NOTICE**

**Prevent the ingress of debris particles into all disconnected lines and connections.**  
Use appropriate protective coverings.

#### **Preparation**

- Switch the ignition key OFF



Drain the oil. See current Maintenance Manual Line (MML) for the respective engine type.



Remove the oil hoses, clamps and surrounding assemblies. Follow the instructions in the aircraft manufacturer's manual.

#### **NOTE**

*The assemblies and lines are only to be removed if necessary and only as far as is necessary!*

**NOTICE**

**All gaskets, O-rings and oil seals must be replaced!**

Step	Procedure
1	Disconnect the pressure oil lines. Remove banjo bolt and take off sealing rings. See <a href="#">Chapter 61–20–00</a> .
2	Remove the safety wire of the plug screw (regulator piston).
3	Loosen the plug screw (regulator piston), otherwise it is very difficult to unscrew when the oil pump is removed.
4	Loosen cap nut from the turbo oil suction line on the oil pump housing.



Remove turbo return line to oil tank. Follow the instructions in the aircraft manufacturer's manual.

#### **NOTE**

*If necessary to remove the hose nipple, mark the position from the hose nipple (Turbo return line tank) and remove banjo bolt with sealing rings.*



# BRP-Rotax MAINTENANCE MANUAL HEAVY

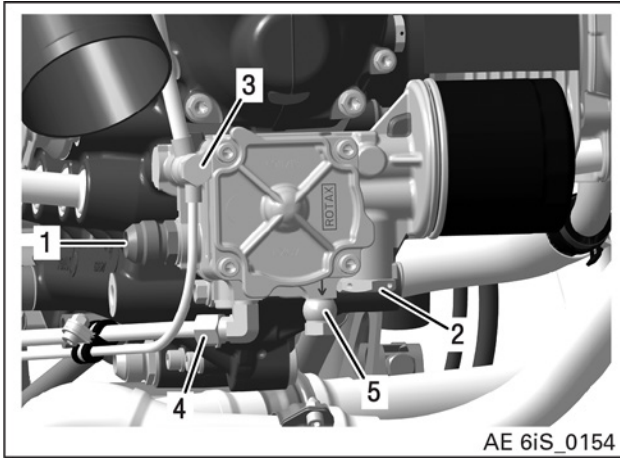


Figure 23.4

- 1 Adapter (metric or UNF) Oil inlet
- 2 Plug screw (regulator piston)
- 3 Pressure oil line (turbo and governor)
- 4 Turbo oil suction line
- 5 Hose nipple (Turbo return line to tank)

Step	Procedure
6	Unscrew the oil filter with oil filter wrench part no. 877620.

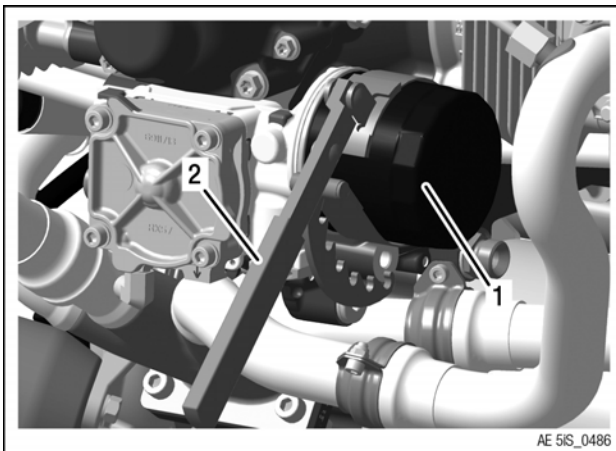


Figure 23.5: TYPICAL

- 1 Oil filter
- 2 Oil filter wrench part no. 877620.

Step	Procedure
7	Loosen 4 Allen screws with washers.
8	Remove the whole oil pump unit and O-rings.

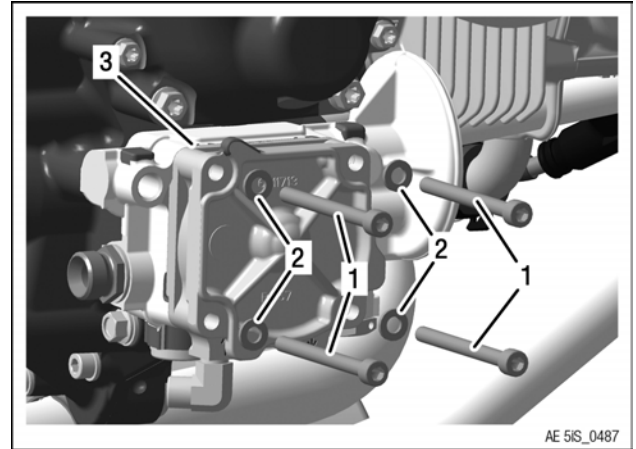


Figure 23.6

- 1 Allen screws
- 2 Washer
- 3 Oil pump housing

## OIL PUMP — DISASSEMBLY

Step	Procedure
1	Remove the plug screw, compression spring and regulating piston.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

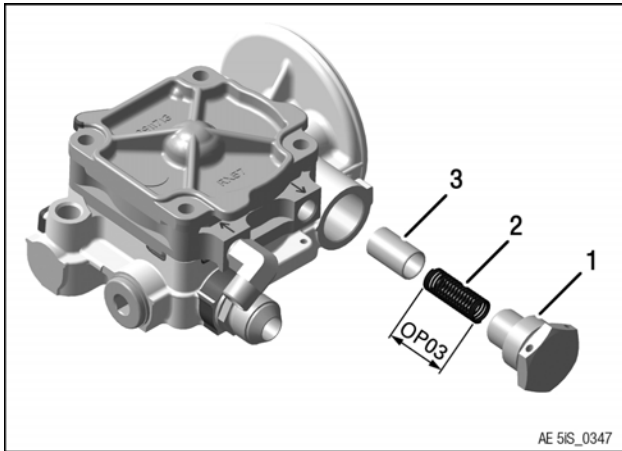


Figure 23.7: TYPICAL

- 1 Plug screw
- 2 Compression spring
- 3 Regulating piston

Step	Procedure
2	Remove the oil pump cover.

**NOTE**

*If the cover sticks (from interfacial tension), carefully release it with a soft-faced hammer.*

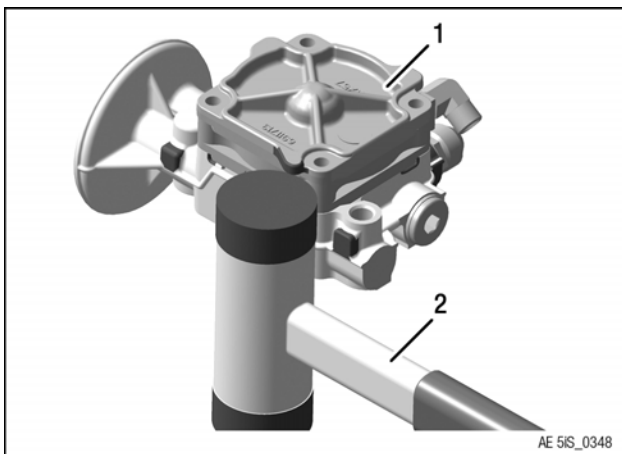


Figure 23.8: TYPICAL

- 1 Oil pump cover
- 2 Soft-faced hammer

**NOTICE**  
**The rotary piston and rotor are marked.**

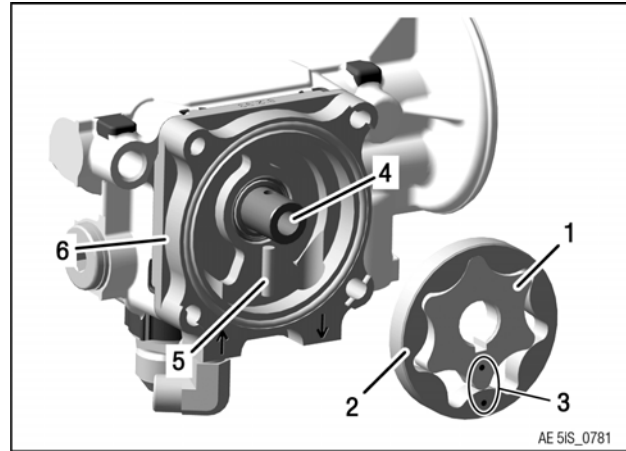


Figure 23.9: TYPICAL

- 1 Rotor (inner rotor)
- 2 Rotary piston (outer rotor)
- 3 Mark (dot)
- 4 Oil pump shaft
- 5 Needle pin
- 6 Oil pump center housing

Step	Procedure
3	Pull out the rotor and rotary piston.
4	Remove the needle pin.
5	Remove oil pump center housing.
6	Pull out the rotor and rotary piston.
7	Remove the feather key.
8	Remove oil pump shaft.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

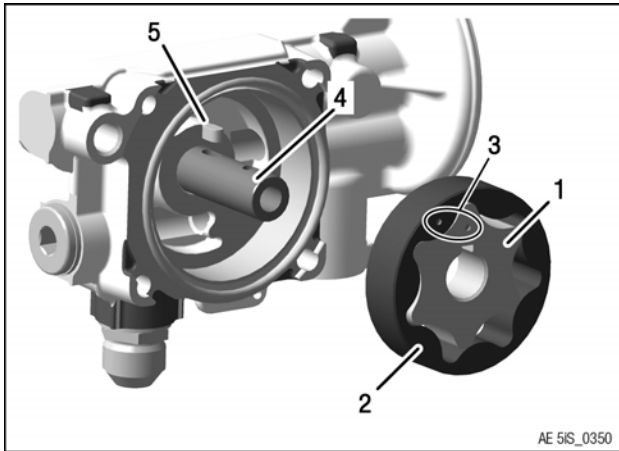


Figure 23.10: TYPICAL

- |                       |                               |
|-----------------------|-------------------------------|
| 1 Rotor (inner rotor) | 2 Rotary piston (outer rotor) |
| 3 Mark (dot)          | 4 Oil pump shaft              |
| 5 Feather key         |                               |

**NOTICE**

**The sealing lip of the oil seal is damaged when the oil pump shaft is pulled out and must be replaced.**

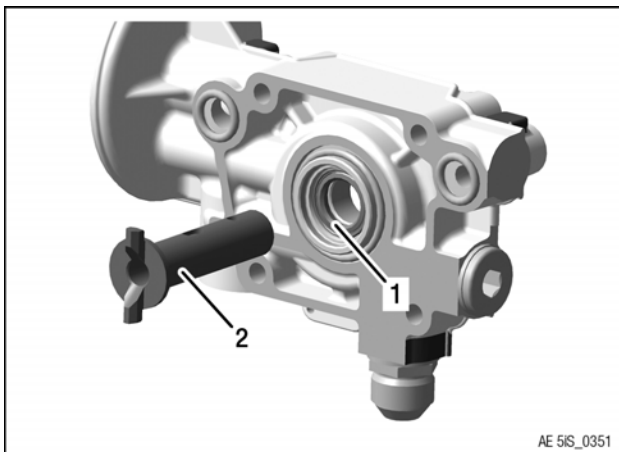


Figure 23.11: TYPICAL

- |            |                  |
|------------|------------------|
| 1 Oil seal | 2 Oil pump shaft |
|------------|------------------|

Step	Procedure
9	Carefully lever the oil seal out of the oil pump housings with a screwdriver.

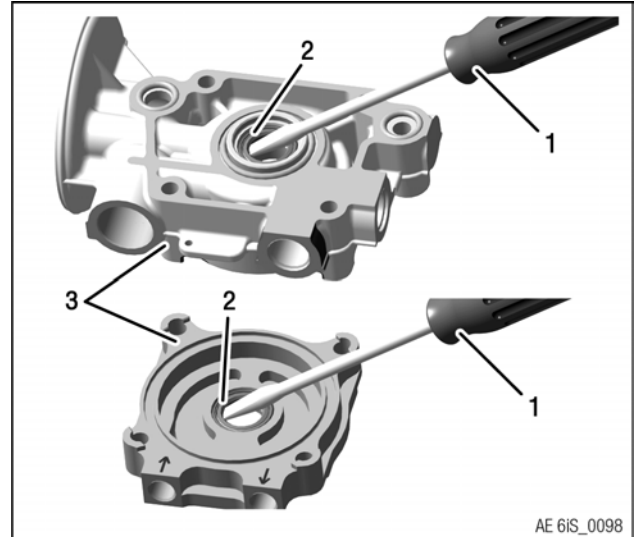


Figure 23.12

- |                    |            |
|--------------------|------------|
| 1 Screwdriver      | 2 Oil seal |
| 3 Oil pump housing |            |

## OIL PUMP SINGLE PARTS — INSPECTION

### Preparation

- Clean all parts carefully. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.
- Carry out a visual inspection. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**OIL PUMP HOUSING — INSPECTION**

**NOTICE**

The sealing surfaces on oil pump components must not be repaired! If damage to these sealing surfaces is found, the corresponding component must be replaced with a new part.

Step	Procedure
1	Visually inspect all the components of the oil pump.
2	All the O-rings must be replaced.
3	Check the oil pump cover for wear on the inside using a straight-edge.

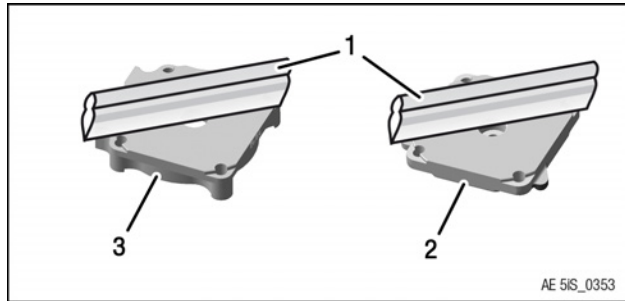


Figure 23.13

- 1 Straight-edge
- 2 Oil pump cover
- 3 Oil pump center housing

Step	Procedure
4	Check the sealing faces of the oil pump housing and pump cover for striations. Dress them out on a surface plate if necessary.

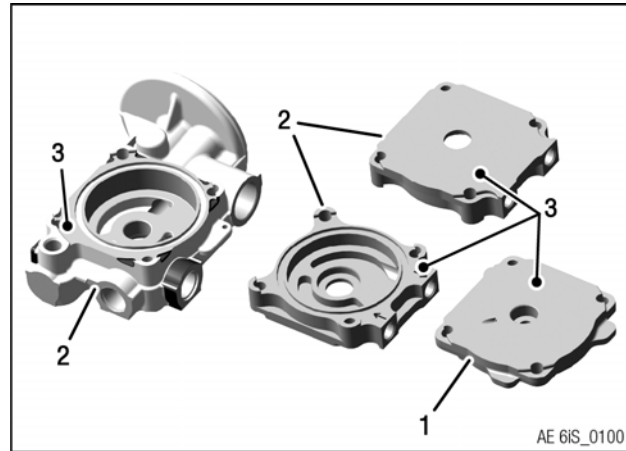


Figure 23.14

- 1 Oil pump cover
- 2 Oil pump housing
- 3 Sealing surface

Step	Procedure
5	Place the oil pump rotor and rotary piston into the oil pump housing, oil pump center housing and measure main pump spacing (OP01). See <a href="#">Wear limits</a> .

**ROTARY PISTON/ROTOR — INSPECTION**

Step	Procedure
1	Check the rotary piston and rotor for grooves.

**NOTE**

*If there are noticeable grooves on the inner side of the rotor or outer side of the rotary piston, they must both be replaced.*



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

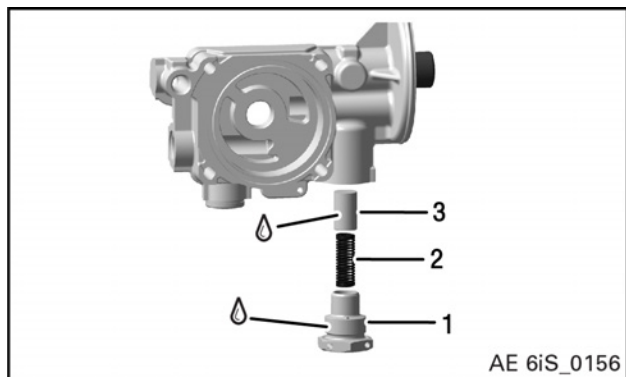


Figure 23.17

- 1 Plug screw M22x1.5    2 Compression spring
- 3 Regulating piston

Step	Procedure
3	Wrap tape over the feather key groove and bore.

**NOTICE**

**Press in the oil seal so that the closed side points towards the oil pump housing.**

Step	Procedure
4	Apply Engine oil to the oil pump shaft and push new oil seal A 14x22x4 onto the oil pump shaft while turning slightly.

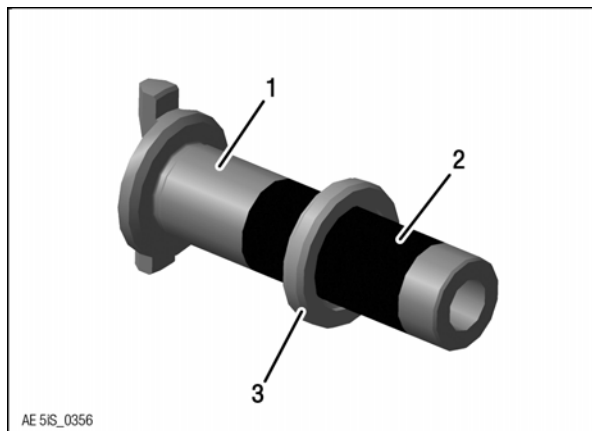


Figure 23.18

- 1 Oil pump shaft    2 Insulating tape
- 3 Oil seal A 14x22x4

Step	Procedure
5	Place the oil pump housing on a firm surface.
6	Remove the insulating tape from the oil pump shaft.
7	Insert the oil pump shaft with the oil seal and press it in as far as it will go with a soft-faced hammer.

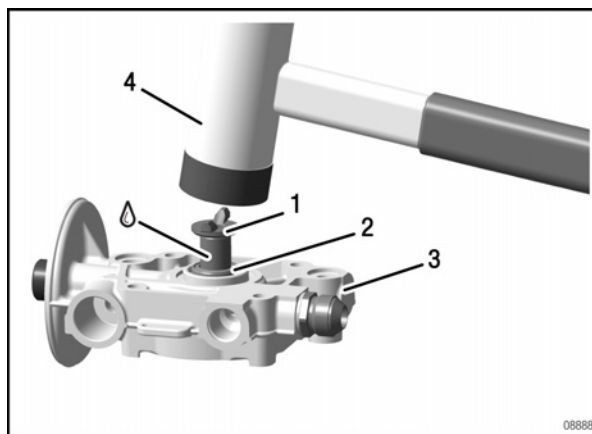


Figure 23.19

- 1 Oil pump shaft    2 Oil seal A14x22x4
- 3 Oil pump housing    4 Soft-faced hammer

# BRP-Rotax MAINTENANCE MANUAL HEAVY

**NOTICE**

**If the oil pump shaft is pulled out again, replace the oil seal (unusable).**

**NOTICE**

**Press in the oil seal so that the closed side points towards the oil pump center housing.**

**NOTE**

*Apply engine oil to the oil seal at replacement.*

Step	Procedure
8	Install a new oil seal A 14x22x4 into the oil pump center housing and press it in as far as it will go.

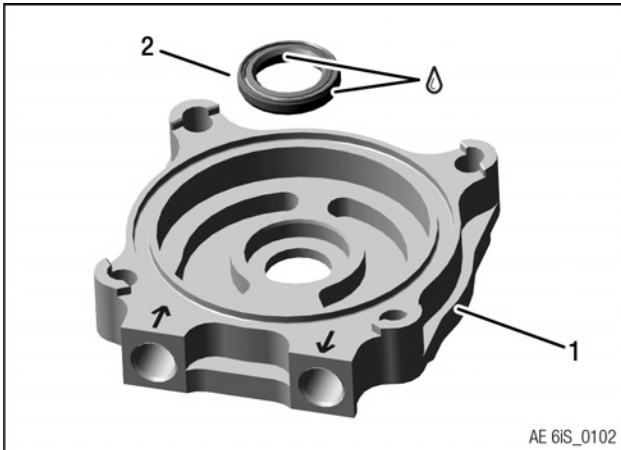


Figure 23.20

- 1 Oil pump center housing
- 2 Oil seal A14x22x4

**NOTE**

*Apply engine oil to the rotor, rotary piston and O-ring.*

Step	Procedure
9	Insert the feather key A 4x4x8 in the oil pump shaft.
10	Install the rotor (inner rotor).
11	Insert the rotary piston (outer rotor).
12	Install new O-ring 63–2.5.

**NOTICE**

**The rotor and rotary piston have a mark (dot). The mark must be visible after inserting both rotors.**

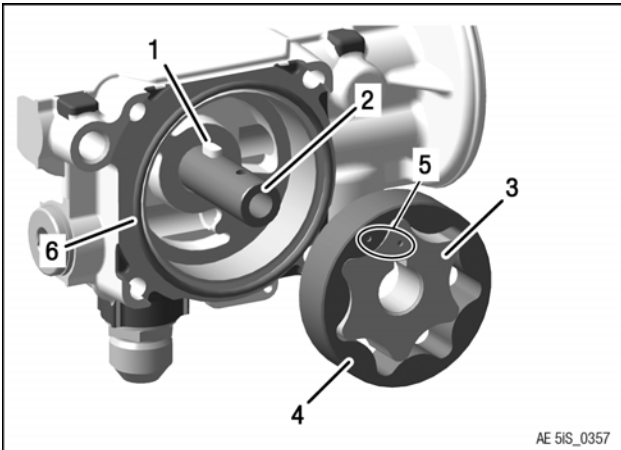


Figure 23.21: TYPICAL

- 1 Feather key A 4x4x8
- 2 Oil pump shaft
- 3 Rotor (inner rotor)
- 4 Rotary piston (outer rotor)
- 5 Mark
- 6 O-ring 63–2.5

**NOTE**

*Apply engine oil to the rotor, rotary piston and O-ring.*

Step	Procedure
13	Install oil pump center housing with new oil seal A 14x22x4.
14	Insert needle pin 4x15.8.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Step	Procedure
15	Install the rotor (inner rotor)
16	Insert the rotary piston (outer rotor)
17	Install new O-ring 63-2.5.

**NOTICE**

The rotor and rotary piston have a mark (dot). The mark must be visible after inserting both rotors.

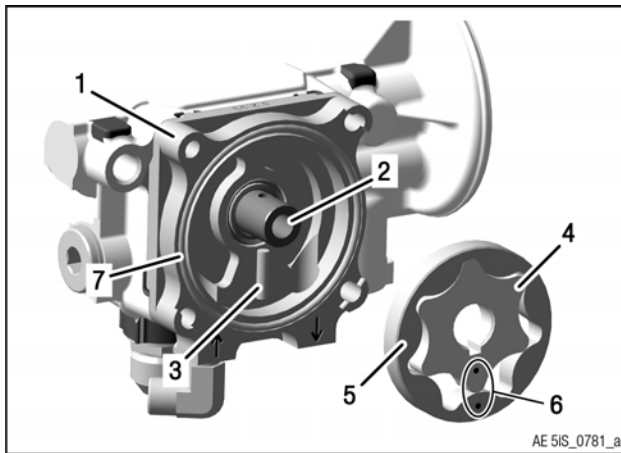


Figure 23.22: TYPICAL

- |                               |                       |
|-------------------------------|-----------------------|
| 1 Oil pump center housing     | 2 Oil pump shaft      |
| 3 Needle pin 4x15.8           | 4 Rotor (inner rotor) |
| 5 Rotary piston (outer rotor) | 6 Mark                |
| 7 O-ring 63-2.5               |                       |

**NOTICE**

Hold the oil pump shaft when installing the oil pump cover on it. Otherwise the oil pump shaft is pushed out by the air cushion.

**NOTICE**

Make sure the oil pump cover is in the correct position when installing it.

Step	Procedure
18	Place the oil pump cover on the oil pump center housing.

**NOTE**

Apply engine oil to the oil pump shaft and bearing bore of the oil pump cover.

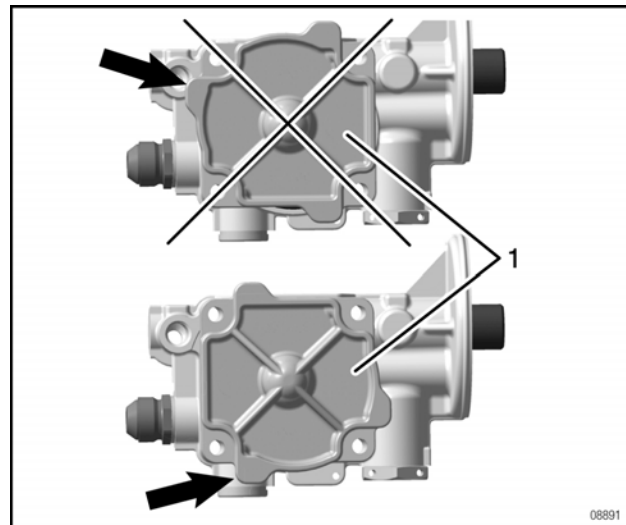


Figure 23.23: TYPICAL

- 1 Oil pump cover



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**OIL PUMP HOUSING O-RINGS**

<b>NOTICE</b>	
<b>All the O-rings must be replaced!</b>	

Step	Procedure
1	Insert new O-rings in the oil pump housing.

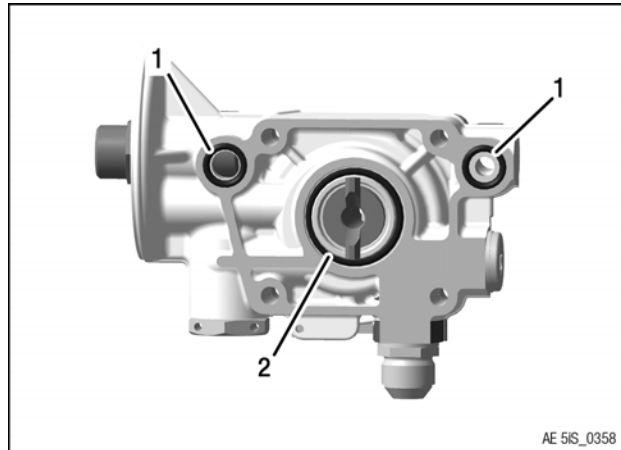


Figure 23.24: TYPICAL

- 1 O-ring 11x2.7                      2 O-ring 30x2.5

**OIL PUMP — INSTALLATION**

**Preparation**

- Check the fit of the O-rings on the oil pump housing.

<b>NOTICE</b>	
<b>Ensure that the oil pump shaft is in the correct installation position.</b>	

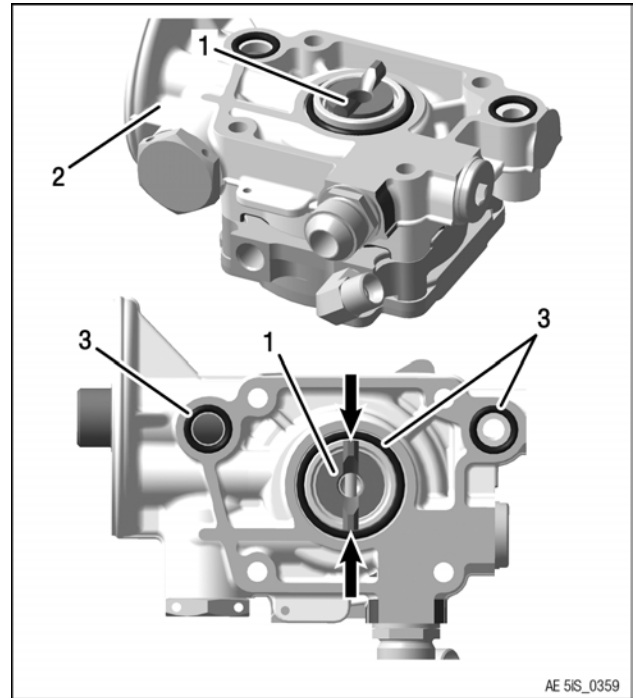


Figure 23.25: TYPICAL

- 1 Oil pump shaft                      2 Oil pump housing  
 3 O-rings

Step	Procedure
1	Apply LOCTITE 5910 to the support area on the crankcase.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

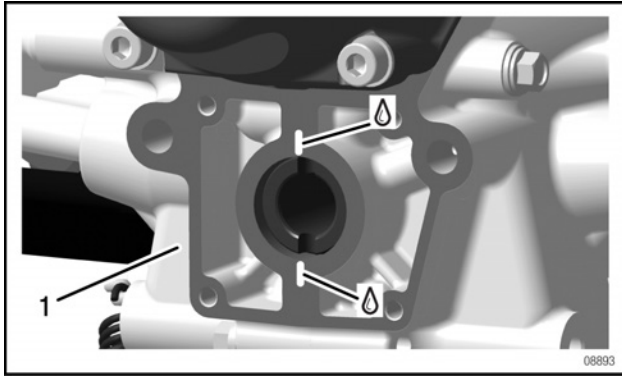


Figure 23.26

1 Crankcase

Step	Procedure
2	Install the oil pump housing with Allen screws M6x50 and washers 6.4 crosswise and by hand. Then tighten the Allen screws crosswise. Tightening torque 10 Nm (89 in. lb.).
3	Tighten plug screw M22x1.5. Tightening torque 30 Nm (22 ft. lb.).
4	Attach the safety wire of the plug screw (regulator piston).

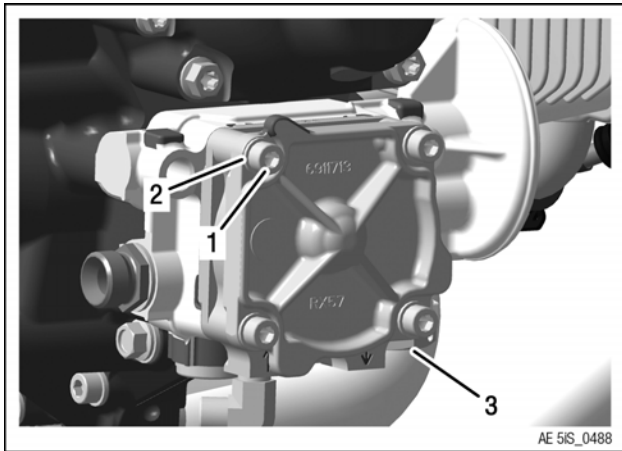


Figure 23.27

- 1 Allen screws M6x50    2 Washers 6.4  
3 Plug screw M22x1.5

Step	Procedure
5	If necessary install oil filter nipple. Tightening torque 60 Nm (44 ft. lb.).
6	If necessary install plug screw A M16x1.5 with new sealing ring A 16x22. Tightening torque 35 Nm (26 ft. lb.).
7	If necessary apply LOCTITE 648 on the Adapter metric or UNF (Oil inlet) and install with new sealing ring A 16x22. Tightening torque 35 Nm (26 ft. lb.).
8	If necessary install hose nipple 4/6 with banjo bolt M10x1x23 and 2 new sealing rings A10x14. Tightening torque 15 Nm (133 in. lb.).  <b>NOTE</b> <i>For the right position of the hose nipple, follow the aircraft manufacturer's instruction for installation.</i>
9	Install turbo return line to oil tank. Follow the aircraft manufacturer's instruction for installation.
10	Install pressure oil lines with banjo bolt M10x1x34 and 3 new sealing rings A10x14. Tightening torque 15 Nm (133 in. lb.). See Chapter <a href="#">61-20-00 Governor</a> .
11	If necessary install the male stud elbow M10x1 secured with LOCTITE 243 in the correct position (angle 146°). Tightening torque 18 Nm +/- 2 Nm (159 +/- 18 in. lb.).  <b>NOTE</b> <i>The turbo oil suction line must immediately be adjusted stress-free on the male stud elbow.</i>
12	Install turbo oil suction line. Tightening torque 15 Nm (133 in. lb.).

# BRP-Rotax MAINTENANCE MANUAL HEAVY

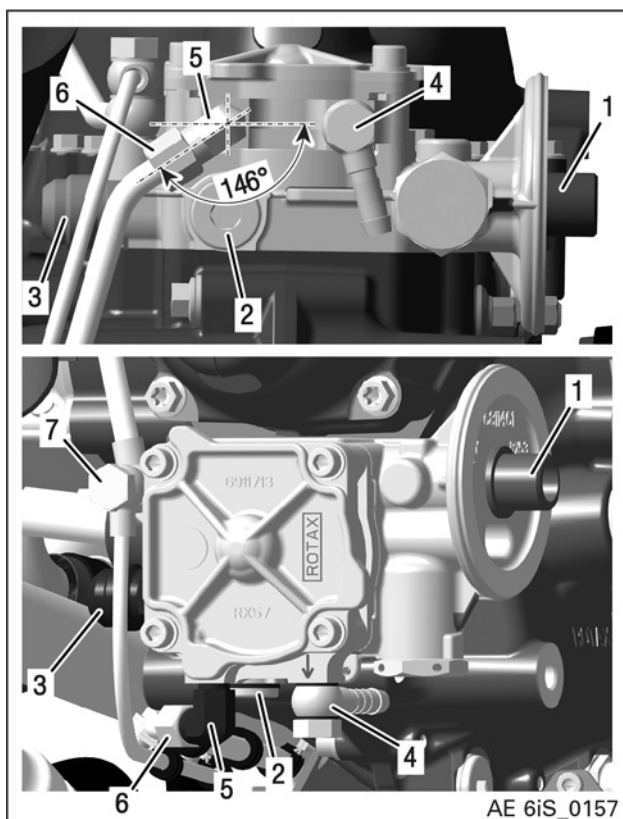


Figure 23.28

- |   |   |
|---|---|
| <p>1 Oil filter nipple</p> <p>3 Adapter metric or UNF (Oil inlet)</p> <p>5 Male stud elbow M10x1</p> <p>7 Pressure oil line</p> | <p>2 Plug screw A M16x1.5 and sealing ring A 16x22</p> <p>4 Hose nipple 4/6 (Turbo return line to tank)</p> <p>6 Turbo oil suction line</p> |
|---|---|

## OIL FILTER — INSTALLATION

Step	Procedure
1	Install the oil filter. See relevant Maintenance Manual Line (MML) for the respective engine type.

### NOTE

*Oil the gasket of the oil filter.*

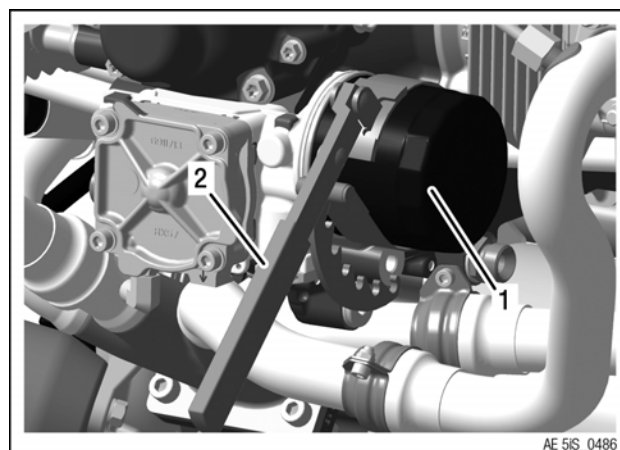


Figure 23.29: TYPICAL

- |                     |  |
|---------------------|--|
| <p>1 Oil filter</p> | <p>2 Oil filter wrench part no. 877620</p> |
|---------------------|--|

## FINISHING WORK

- Install the oil hoses, clamps and surrounding assemblies. Follow the instructions in the aircraft manufacturer's manual.
- Fill with operating fluids or check filling levels.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.
- Purge the oil system.  
See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.
- Carry out an engine test run.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance

### NOTE

*Then check that the oil filter is securely fitted after the test run.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**WEAR LIMITS**

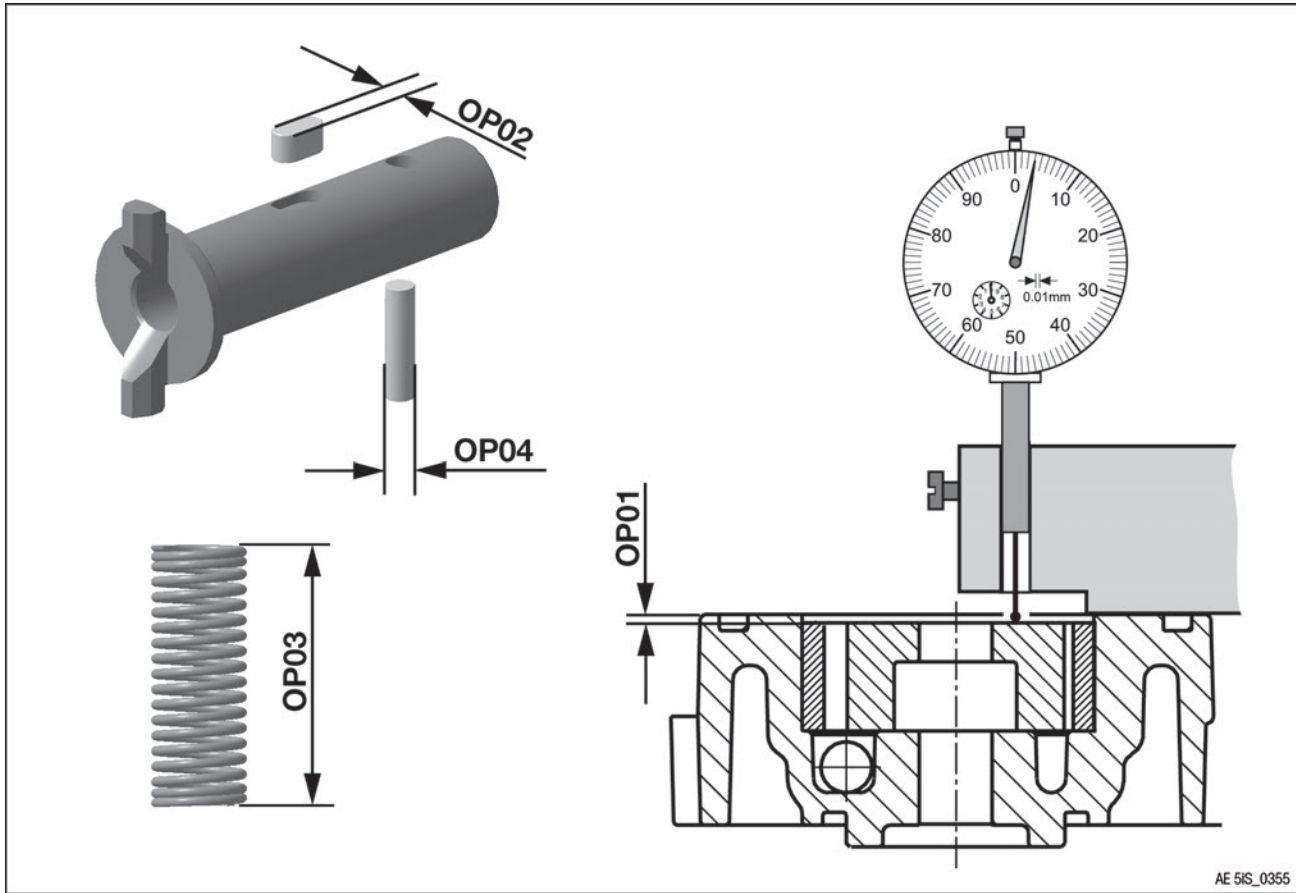


Figure 23.30: Wear Limits — Oil pump

Description	Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements
		min	max				
Main pump spacing (pump cover/rotor)	OP01	0.02 mm 0.00079 in.	0.07 mm 0.0027 in.	0.20 mm 0.0079 in.	0.14 mm 0.0053 in.	current replaced	
Clearance suction pump (pump cover/rotor)	OP01	0.00 mm 0.0000 in.	0.05 mm 0.0020 in.	0.20 mm 0.0079 in.	0.13 mm 0.0051 in.	current replaced	
Width of feather key in shaft	OP02	4 mm 0.1575 in.	4.085 mm 0.1604 in.	4.150 mm 0.163 in.	4.11 mm 0.1619 in.	current replaced	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

Description	Code	Current measurement value		Tolerance limit	Tolerance limit		Measurements
		min	max	100 %	50 %		
Pressure spring length	OP03	65.6 mm (2.58 in.)		62.6 mm (2.46 in.)	64.1 mm 2.52 in.	current replaced	
Needle pin	OP04	4 mm 0.1575 in.		3.2 mm 0.1260 in.	3.6 mm 0.1417 in.	current replaced	

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**OIL TANK**

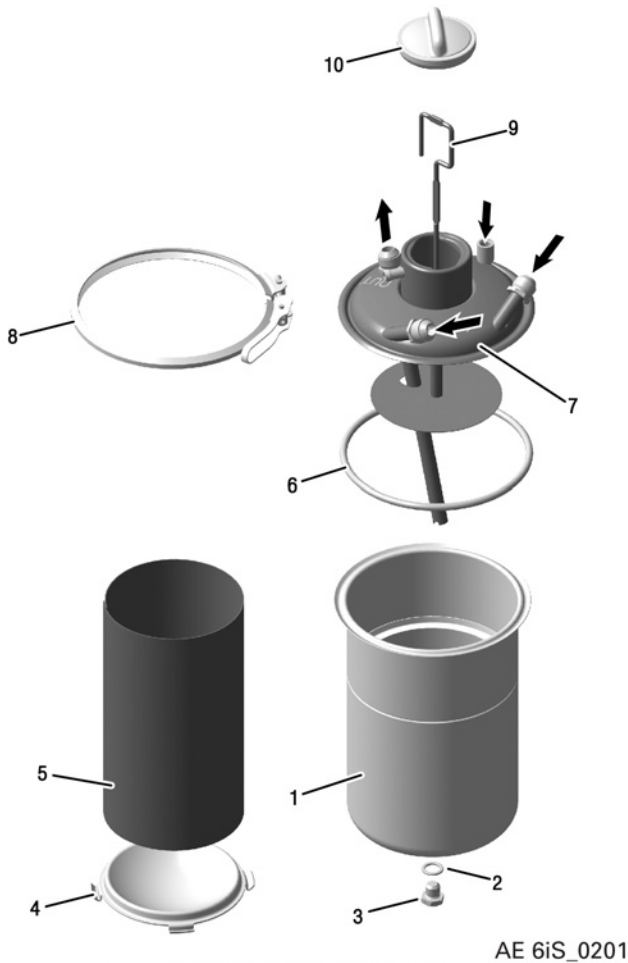


Figure 23.31

- |    |  |   |               |   |              |
|----|--|---|---------------|---|--------------|
| 1  | Oil tank   | 2 | Gasket ring   | 3 | Hex screw.   |
| 4  | Partition 2  | 5 | Baffle insert | 6 | O-ring       |
| 7  | Oil tank cover<br>cover<br>assy.<br>metric or<br>UNF | 8 | Profile clamp | 9 | Oil dipstick |
| 10 | Bayonet<br>cap                                       |   |               |   |              |

**OIL TANK – REMOVAL**

**⚠ WARNING**

**Danger of severe burns and scalds!**  
 Always allow the engine to cool down to ambient temperature before starting any work.

**ENVIRONMENTAL NOTE**

Dispose of used oil according to local environmental regulations.

**ENVIRONMENTAL NOTE**

Ensure that no oil gets into the waste water system or the ground – risk of contaminating drinking water!

**NOTICE**

Prevent the ingress of debris particles into all disconnected lines and connections.  
 Use appropriate protective coverings.

**Preparation**

- Switch the ignition key OFF.



Drain oil. See current Maintenance Manual Line (MML) for the respective engine type.



Removal of the oil tank according to the instructions in the aircraft manufacturer's manual.

**NOTE**

*The assemblies and lines are only to be removed if necessary and only as far as is necessary.*

**OIL TANK — DISASSEMBLY**

Step	Procedure
1	Open profile clamp.
2	Remove the oil tank cover assy. and O-ring.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

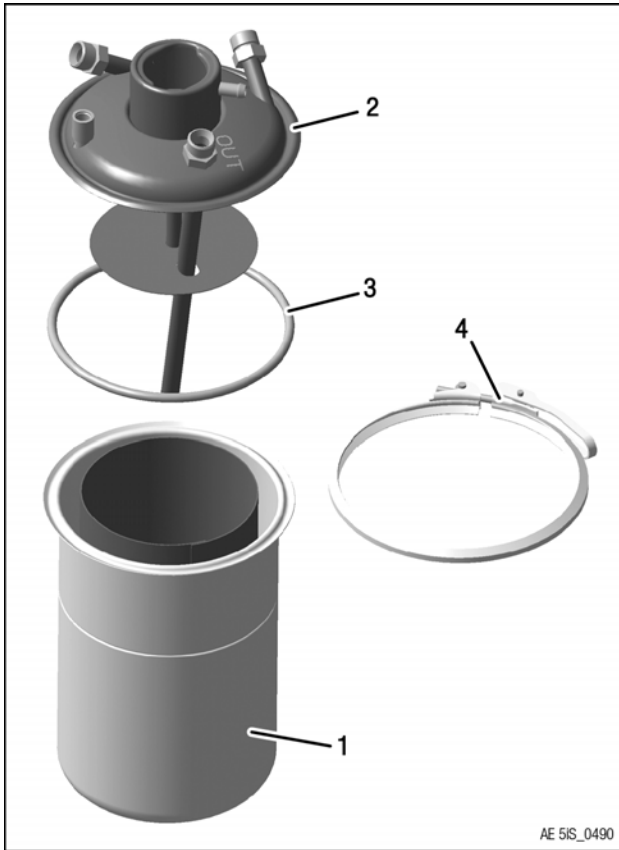


Figure 23.32

- |            |                        |
|------------|------------------------|
| 1 Oil tank | 2 Oil tank cover assy. |
| 3 O-Ring   | 4 Profile clamp        |

Step	Procedure
3	Remove the baffle insert and partition from the oil tank.
4	Remove the hex. screw with gasket ring from the oil tank.

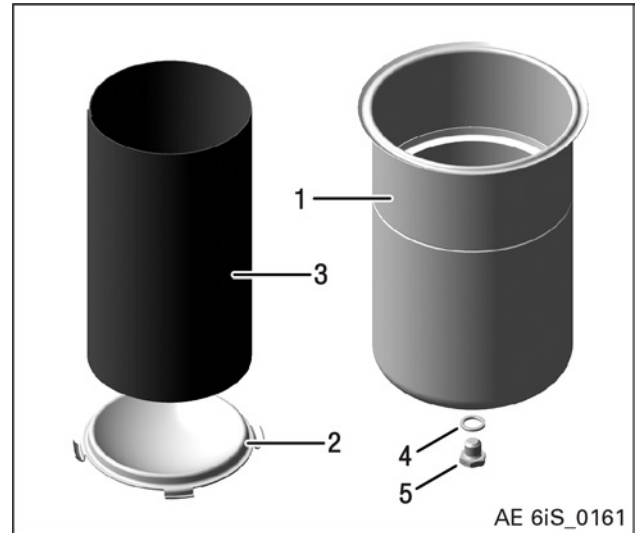




Figure 23.33

- |                          |               |
|--------------------------|---------------|
| 1 Oil tank               | 2 Partition   |
| 3 Baffle insert (screen) | 4 Gasket ring |
| 5 Hex. screw             |               |

**OIL TANK SINGLE PARTS —  
INSPECTION**

**Preparation**

 Clean all parts carefully. See current Maintenance Manual Line (MML) for the respective engine type.

 General visual inspection. See current Maintenance Manual Line (MML) for the respective engine type Chapter 05–20–00 section Visual inspection.

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**OIL TANK — ASSEMBLY**

Step	Procedure
1	Assemble the oil tank in the reverse direction.
2	Install the hex. screw M12x12 with a new gasket ring C 12x18. Tightening torque 25 Nm (18 ft. lb).
3	Attach the safety wire.

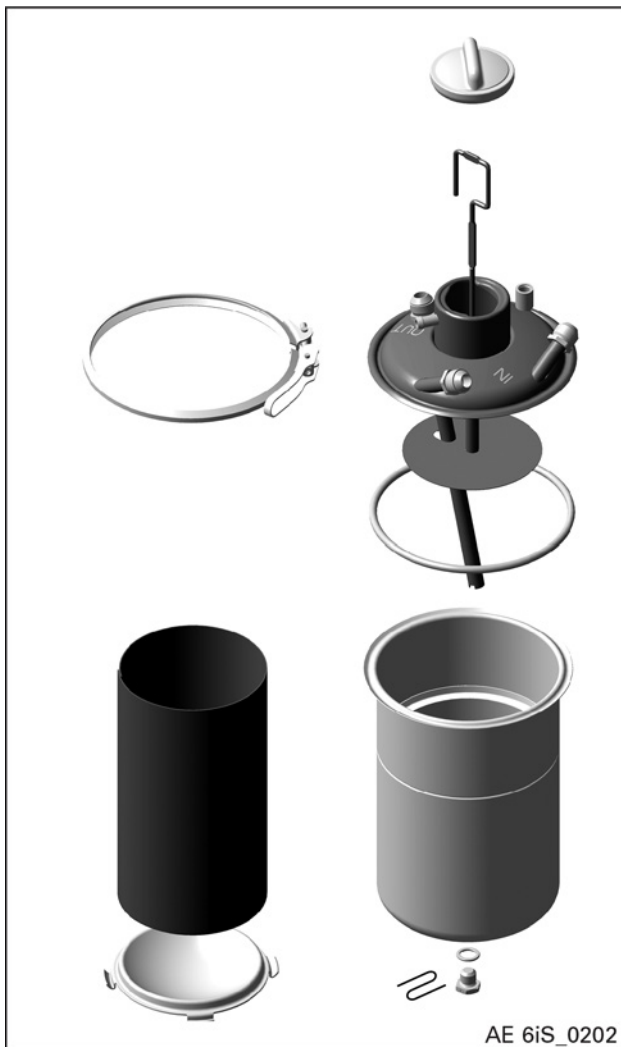


Figure 23.34

**OIL TANK — INSTALLATION**



Install the oil tank according to the instructions in the aircraft manufacturer's manual.

**CHECK VALVE**



For information of the check valve, see the latest documentation of the aircraft manufacturer.

**FINISHING WORK**



Fill with operating fluids or check filling levels. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12–10–00 section Adding operating fluids.



Purge the oil system. See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.



Carry out an engine test, see current Maintenance Manual Line (MML) for the respective engine type, Chapter 12–20–00 section Planned maintenance.



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

## OIL LINES

**⚠ WARNING**

**Danger of severe burns and scalds! Always allow the engine to cool down to ambient temperature before starting any work.**

**ENVIRONMENTAL NOTE**

**Dispose of used oil according to local environmental regulations.**

**ENVIRONMENTAL NOTE**

**Ensure that no oil gets into the waste water system or the ground – risk of contaminating drinking water!**

**NOTICE**

**Prevent the ingress of debris particles into all disconnected lines and connections.**  
Use appropriate protective coverings.

### **Preparation**

- Switch the ignition switch OFF.



Drain oil. See current Maintenance Manual Line (MML) for the respective engine type.

## **OIL HOSES — REMOVAL**

**NOTICE**

**The oil hoses are not included in the delivery of the engine and must be maintained according to the aircraft manufacturer's instructions.**



Remove the oil hoses and clamps according to the instructions in the aircraft manufacturer's manual.

## **OIL LINE (STEEL LINE) — REMOVAL**

**NOTICE**

**The steel oil lines (scope of delivery) must be removed only, if they are damaged or for maintenance and/or cleaning.**

Step	Procedure
1	Disconnect the pressure oil lines. Remove banjo bolt and take off sealing rings. See <a href="#">Chapter 61-20-00 Governor</a> .
2	Loosen the banjo bolt and sealing rings on the governor flange (configuration 3) or the oil inlet flange adaptor (configuration 2). See <a href="#">Chapter 61-20-00 Governor</a> .
3	Remove the cable clamp for supporting the governor pressure oil line from the gearbox housing. See <a href="#">Chapter 61-20-00 Governor</a> .
4	Loosen cap nut from the turbo oil suction line on the oil pump housing.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

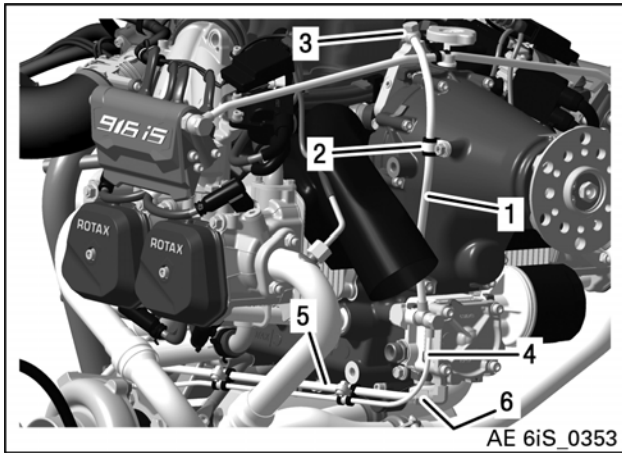


Figure 23.35: Configuration 3

- |                                 |                                    |
|---------------------------------|------------------------------------|
| 1 Pressure oil line             | 2 Cable clamp                      |
| 3 Banjo bolt with sealing rings | 4 Turbo pressure oil line          |
| 5 Turbo oil suction line        | 6 Cap nut (turbo oil suction line) |

Step	Procedure
5	Remove the cable clamps from the turbo oil lines.

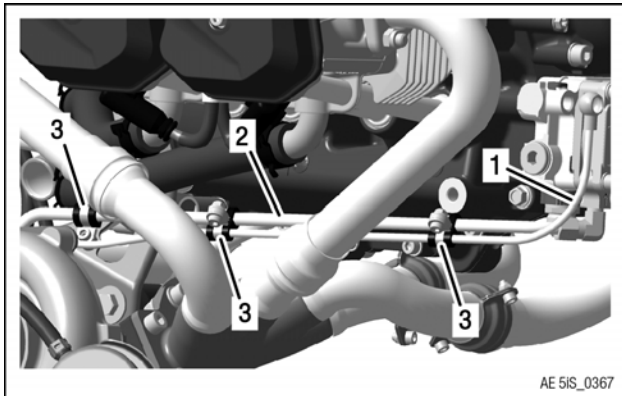


Figure 23.36

- |                           |                          |
|---------------------------|--------------------------|
| 1 Turbo pressure oil line | 2 Turbo oil suction line |
| 3 Cable clamp             |                          |

Step	Procedure
6	Loosen the banjo bolt and sealing rings on the turbocharger assy. and remove turbo pressure oil line.
7	Remove the ball and compression spring.  <b>NOTE</b> <i>Be sure not to lose the ball and the compression spring.</i>
8	Loosen cap nut on oil sump and remove turbo oil suction line.

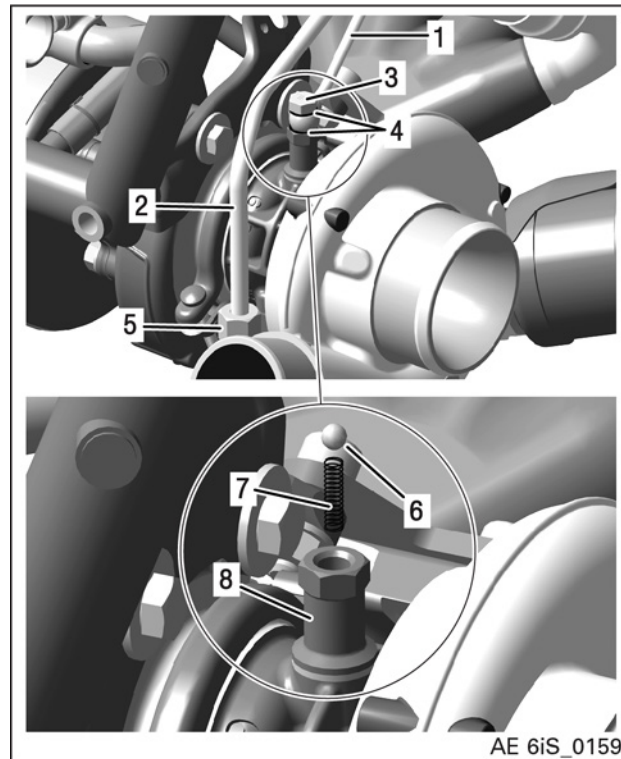


Figure 23.37

- |                           |                          |
|---------------------------|--------------------------|
| 1 Turbo pressure oil line | 2 Turbo oil suction line |
| 3 Banjo bolt              | 4 Sealing ring           |
| 5 Cap nut                 | 6 Ball                   |
| 7 Compression spring      |                          |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## OIL LINE — INSPECTION

### Preparation



Clean all parts carefully.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.



Carry out a visual inspection.  
See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.

## OIL LINE (STEEL LINE) — INSTALLATION

Step	Procedure
1	Install the pressure oil line with the banjo bolt and new sealing rings on the governor flange (configuration 3) or the oil inlet flange adaptor (configuration 2). See <a href="#">Chapter 61-20-00 Governor</a> .
2	Fasten the pressure oil line with the cable clamp on gearbox housing. See <a href="#">Chapter 61-20-00 Governor</a> .
3	Install the pressure oil line and turbo pressure oil line with banjo bolt M10x1x34 and 3 new sealing rings A 10x14 on the oil pump housing. Tightening torque 15 Nm (133 in. lb).

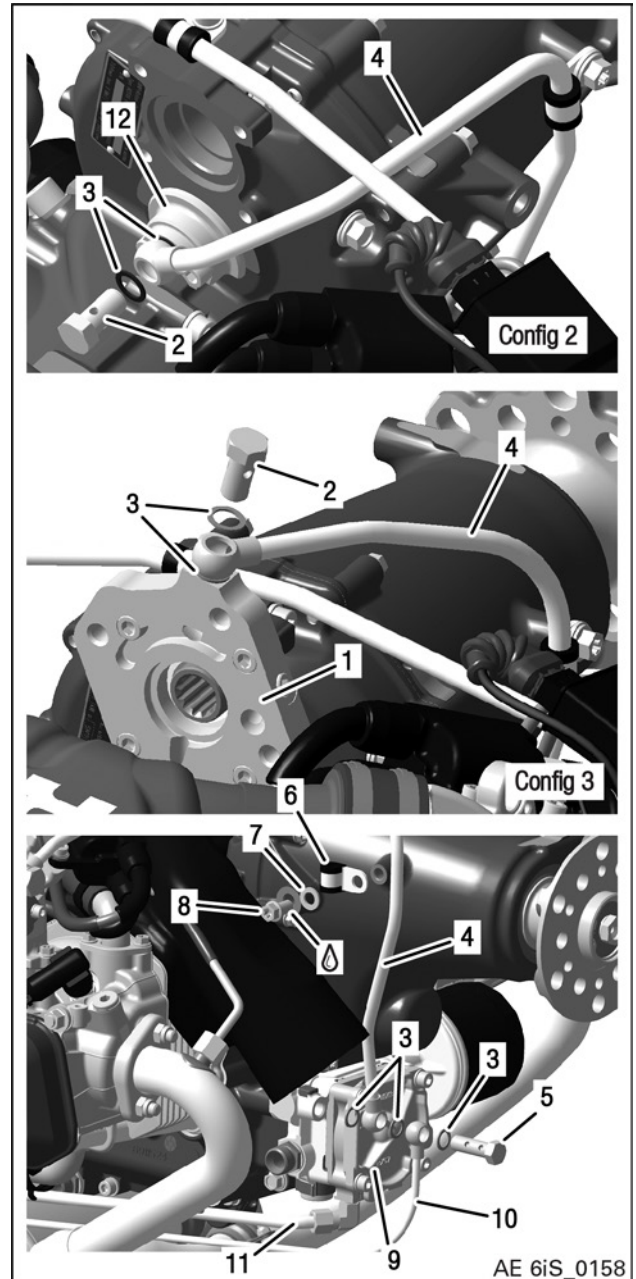


Figure 23.38: TYPICAL

- |                        |                               |
|------------------------|-------------------------------|
| 1 Governor flange      | 2 Banjo bolt                  |
| 3 Sealing ring A 10x14 | 4 Pressure oil line           |
| 5 Banjo bolt M10x1x34  | 6 Cable clamp                 |
| 7 Lock washer A8       | 8 Hex/torx-flange screw M8x16 |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

- |                           |                             |
|---------------------------|-----------------------------|
| 9 Oil pump                | 10 Turbo pressure oil line  |
| 11 Turbo suction oil line | 12 Oil inlet flange adaptor |

### NOTICE

**Do not install ball and spring for check valve in wrong order. In this case the oil supply will be blocked completely.**

Step	Procedure
4	Install compression spring 22 and ball 5.556 into the valve housing.
5	Install the turbo pressure oil line on the turbocharger assy. with banjo bolt M8x1x17 and 2 new sealing rings A 8x13. Tightening torque 10 Nm (89 in. lb).
6	Install the turbo suction line on the oil sump assy. Tightening torque 20 Nm (15 ft lb).
7	Install the turbo suction line on the oil pump housing. Tightening torque 15 Nm (133 in.b).

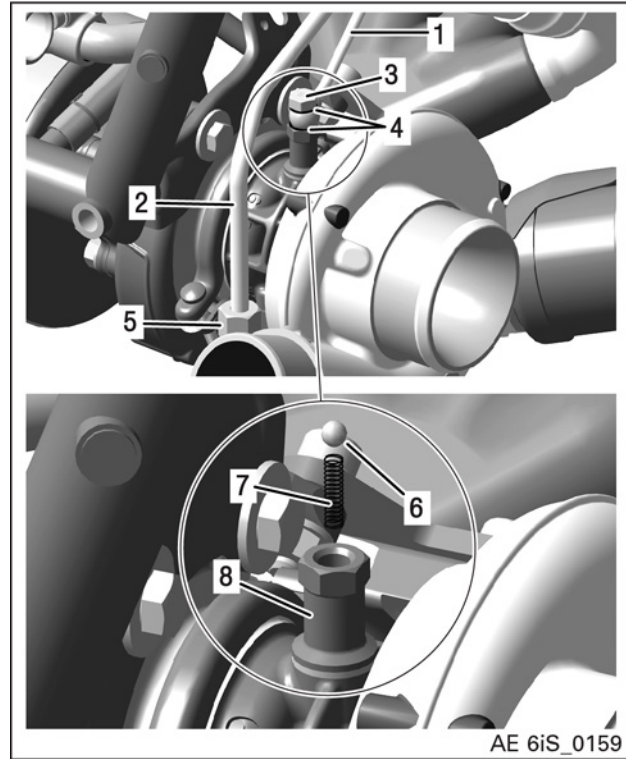


Figure 23.39

- |                           |                          |
|---------------------------|--------------------------|
| 1 Turbo pressure oil line | 2 Turbo suction oil line |
| 3 Banjo bolt M8x1x17      | 4 Sealing ring A 8x13    |
| 5 Cap nut                 | 6 Ball 5.556             |
| 7 Compression spring 22   | 8 Valve housing          |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

Step	Procedure
8	Install the cable clamp 8/M5 and spacer 5.2/11/6 for supporting the turbo oil suction line on the turbocharger bracket with Allen screw M5x20 and new lock nut M5. Tightening torque 5 Nm (44 in. lb).
9	Install the cable clamps on the turbo pressure oil line and the turbo oil suction line with Allen screws M5x20 and new lock nuts M5. Tightening torque 5 Nm (44 in. lb).  <b>NOTE</b> <i>The bends of the cable clamps must be installed in an opposed manner (back to back).</i>

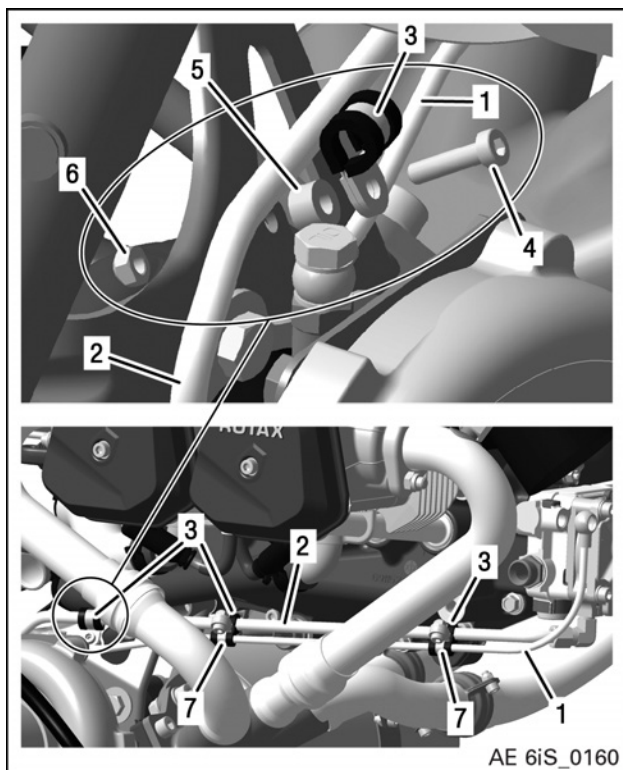


Figure 23.40

- |                           |                          |
|---------------------------|--------------------------|
| 1 Turbo pressure oil line | 2 Turbo oil suction line |
| 3 Cable clamp 8/M5        | 4 Allen screw M5x20      |

- |                    |                |
|--------------------|----------------|
| 5 Spacer 5.2/11/6  | 6 Lock. nut M5 |
| 7 Cable clamp 5/M5 |                |

### NOTICE

**All oil line (steel lines) and oil hose connections have to be marked with locking paint.**

## OIL HOSES — INSTALLATION

### NOTICE

**Ensure that the hoses are installed without tension and are not kinked. Observe minimum distances, e.g. 2 mm (0.0787 in.) from the housing.**

### NOTICE

**The oil hoses are not included in the delivery of the engine and must be maintained according to the aircraft manufacturer's instructions.**



Install the oil hoses and clamps according to the instructions in the aircraft manufacturer's manual.

### NOTE

*Only use suitable clamps, or crimp connections to fasten the hoses.*

## FINISHING WORK



Fill with operating fluids or check filling levels. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Purge the oil system. See current Installation Manual (IM) for the respective engine type, Chapter 79-00-00 section Purging the lubrication system.

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY



Carry out an engine test, see current Maintenance Manual Line (MML) for the respective engine type, Chapter 12–20–00 section Planned maintenance.

### THREAD REPAIR

#### Magnetic plug screw



See current Maintenance Manual Line (MML) for the respective engine type.

### NOTE

*It is possible to repair the thread of the magnetic plug in the crankcase with a HeliCoil.*

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**


**Chapter: 80-00-00**  
**ELECTRIC STARTER**

**TOPICS IN THIS CHAPTER**

<b>Service products</b> .....	<b>3</b>
<b>System description</b> .....	<b>4</b>
Safety instruction .....	4
Maintenance .....	4
<b>Electric starter</b> .....	<b>5</b>
Electric starter — removal .....	5
Electric starter — inspection .....	5
Electric starter — installation .....	6
Finishing work .....	7



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

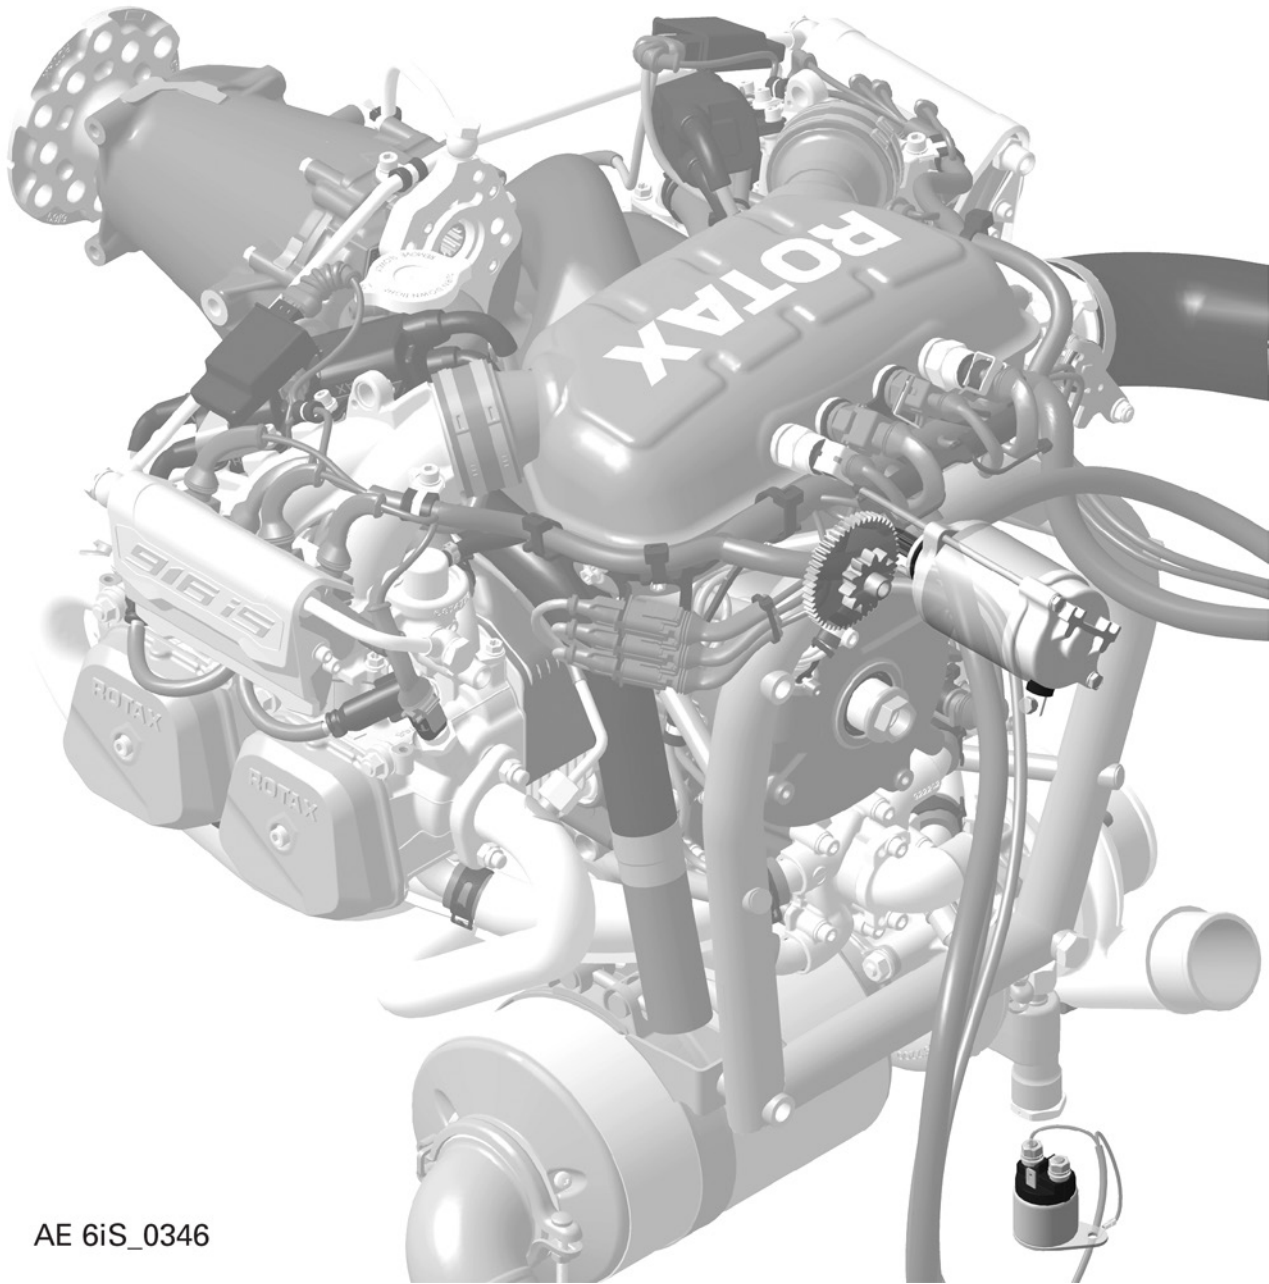

AE 6iS\_0346

Figure 24.1



**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**SERVICE PRODUCTS**

Description	Part number
LOCTITE ANTI SEIZE 8151	297434
LOCKING PAINT	898570

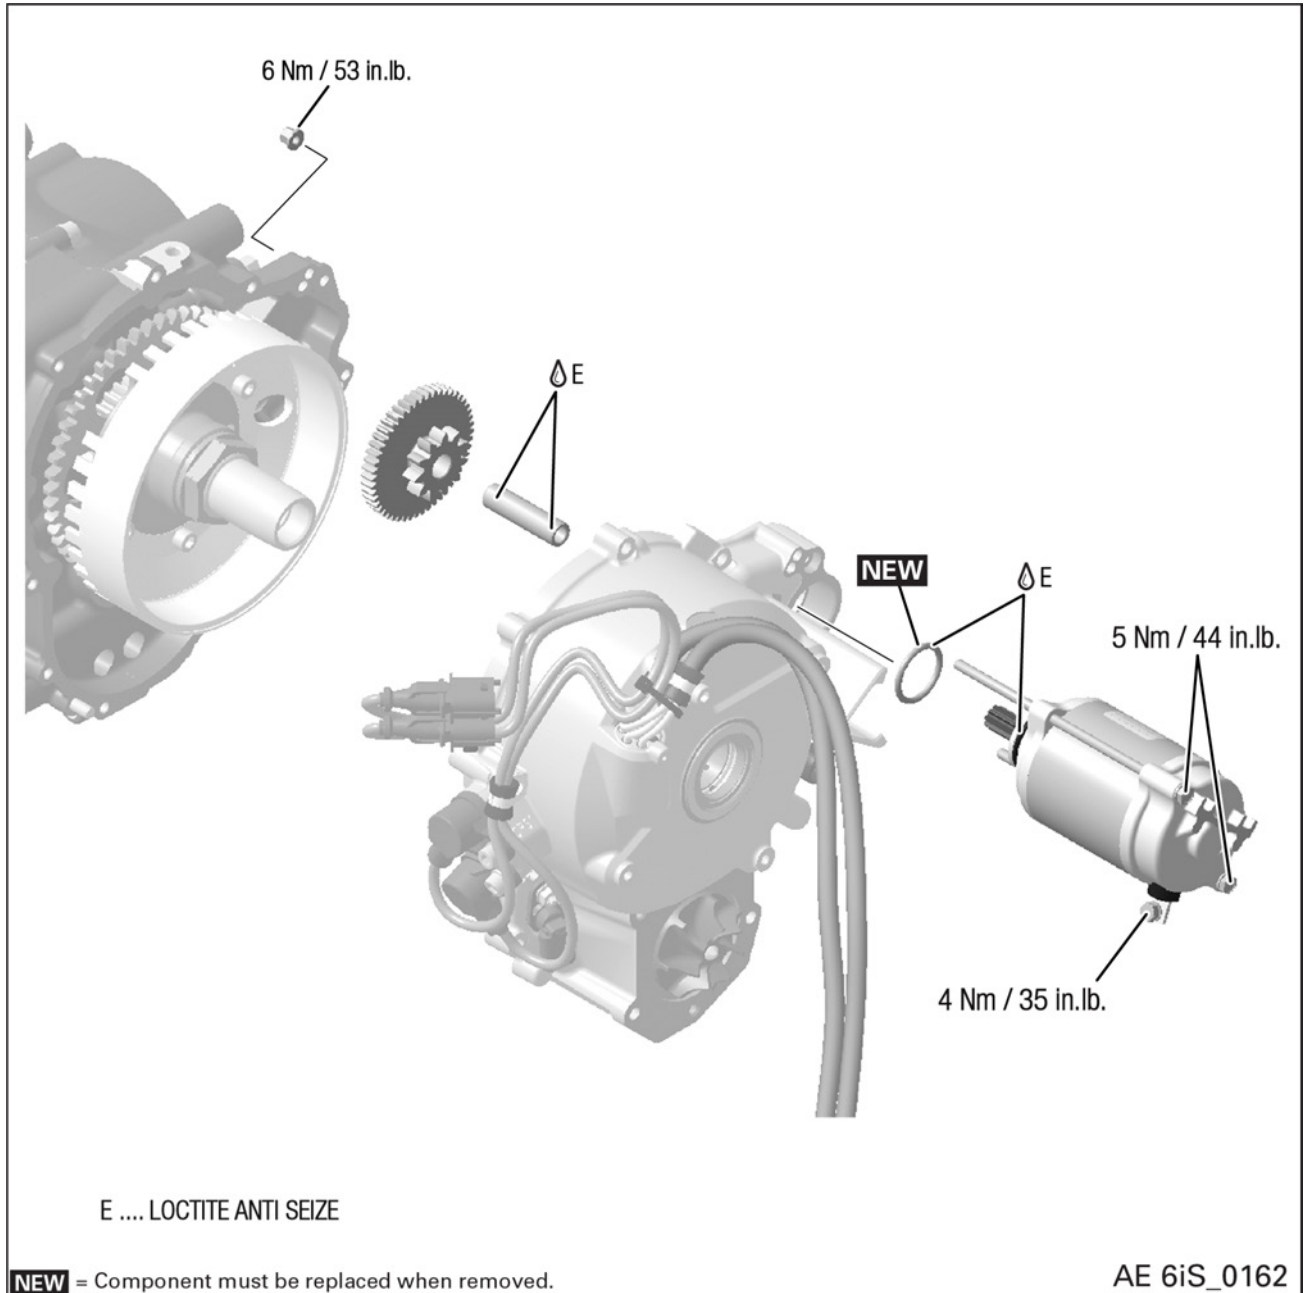


Figure 24.2

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### **SYSTEM DESCRIPTION**

The electric starter is a DC motor with a permanent magnet and carbon brushes. The geartooth system of the armature shaft is permanently engaged in the idler gear. During the starting process the sprag clutch forms a connection to the crankshaft via the idler gear and free wheel gear. As soon as the engine speed is higher than the speed generated by the electric starter, the sprag clutch breaks the connection.

### **SAFETY INSTRUCTION**

#### **⚠ WARNING**

##### **Danger of severe burns and scalds!**

Always allow the engine to cool down to ambient temperature before starting any work.

#### **⚠ WARNING**

##### **Non-compliance can result in serious injuries or death!**

All installation work on the electric starter assy. must be carried out with engine switched OFF and the battery (negative pole) disconnected.

#### **NOTICE**

**Danger of damage to engine! There is a risk of short circuits and cable fires during work on the electric starter!**

### **MAINTENANCE**



As well as the maintenance and special checks, see current Maintenance Manual Line (MML) for the respective engine type.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## ELECTRIC STARTER

### NOTE

For idle gear and idle gear shaft. See Chapter 72-20-00 *Sprag clutch housing – removal*.

### Preparation

- Starter, Master and Lane selector switches must be “OFF”!



Disconnect the negative terminal of the aircraft battery, according to the instructions in the aircraft manufacturer's manual.

## ELECTRIC STARTER — REMOVAL

### NOTE

When removing the electric starter, oil may leak from the bore.

Step	Procedure
1	Disconnect the positive pole on the electric starter.

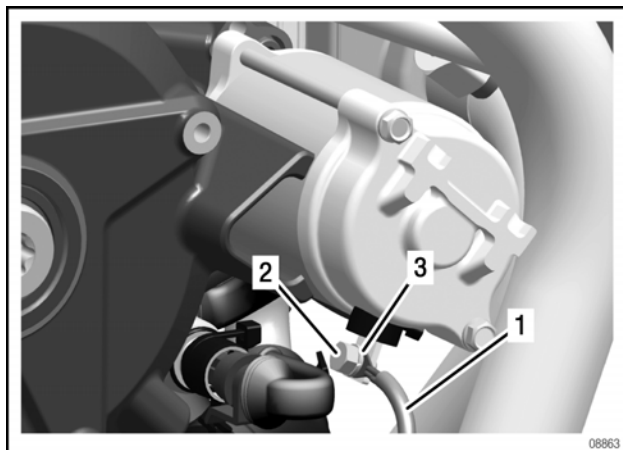


Figure 24.3: TYPICAL

- 1 Positive (+) cable      2 Terminal screw  
3 Lock washer

### NOTICE

**Hold the Mx145 hex. screw still with a suitable tool!**

Do not unscrew or remove the long M5 screws!

Step	Procedure
2	Loosen the 2 hex. nuts M5 on the rear of the crankshaft housing and remove electric starter from ignition housing.

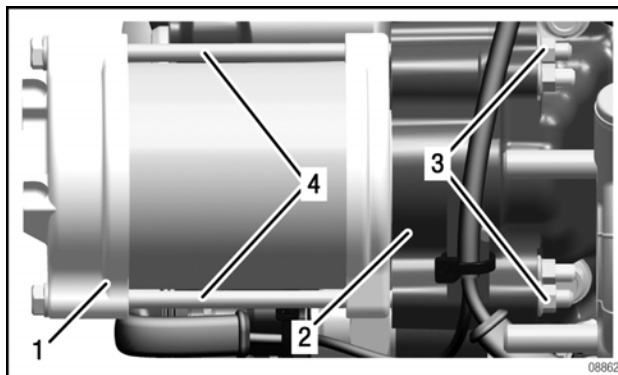


Figure 24.4

- 1 Electric starter      2 Crankshaft housing  
3 Hex. nuts M5      4 Hex. screw M5x145

### NOTICE

**Do not tap the electric starter with a hammer, the adhering magnets can come off.**

### NOTE

If the O-ring sticks, first press the electric starter gently down with a screwdriver and then pull off the starter by hand.

## ELECTRIC STARTER — INSPECTION




Clean all parts carefully. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 05-00-00 section Procedures.

# BRP-Rotax MAINTENANCE MANUAL HEAVY

## NOTICE

**Disassembly of starter assy. is not allowed!**

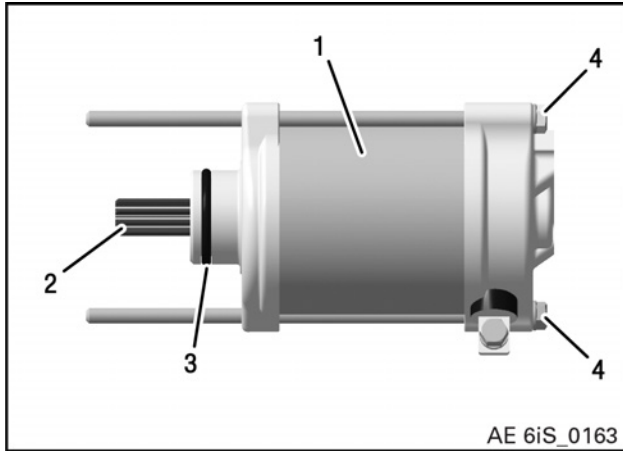

AE 6iS\_0163

Figure 24.5

- |                    |                     |
|--------------------|---------------------|
| 1 Electric starter | 2 Rotor             |
| 3 O-Ring           | 4 Hex. screw M5x145 |

Step	Procedure
1	Check the teeth of the spined drive shaft for damage and wear.
2	Check surface of the electric starter flange for damage and wear.
3	Check the two hex. screws M5x145 for correct torque: 5 Nm (44 in. lb.).

## ELECTRIC STARTER — INSTALLATION

### Preparation

- Lightly grease O-ring on the bearing flange and centring bore in the ignition housing with LOCTITE ANTI SEIZE.

## NOTICE

**Ensure that the electric starter is in the correct installation position.**

Step	Procedure
1	Install new O-ring 24.4x3.1 onto the electric starter flange greased with LOCTITE ANTI SEIZE.
2	Push the whole electric starter into the ignition housing.  <b>NOTE</b> <i>Splined drive shaft may need to be slowly rotated to align gears.</i>
3	Install the hex. nuts M5 equally. Tightening torque 6 Nm (53 in. lb.). Mark with locking paint.
4	Connect the positive pole on the electric starter. Tightening torque 4 Nm (35 in. lb.).

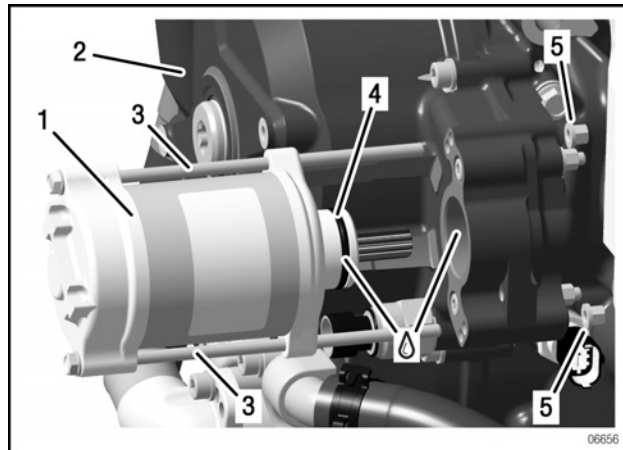


Figure 24.6: TYPICAL

- |                     |                    |
|---------------------|--------------------|
| 1 Electric starter  | 2 Ignition housing |
| 3 Hex. screw M5x145 | 4 O-Ring 24.4x3.1  |
| 5 Hex. nut M5       |                    |

# BRP-Rotax MAINTENANCE MANUAL HEAVY

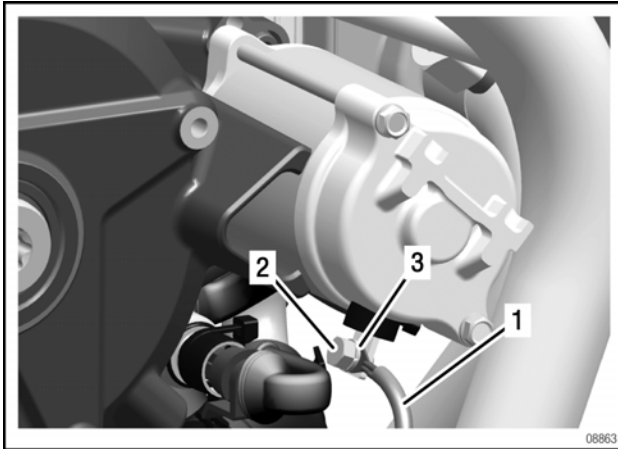


Figure 24.7: TYPICAL

- 1 Positive (+) cable      2 Terminal screw M5x8  
3 Lock washer A5

## FINISHING WORK

- Connect the negative terminal of the onboard battery according to the aircraft manufacturer's instruction.



Fill with operating fluids or check filling levels. See current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-10-00 section Adding operating fluids.



Carry out an engine test, see current Maintenance Manual Line (MML) for the respective engine type, Chapter 12-20-00 section Planned maintenance.

**BRP-Rotax**  
MAINTENANCE MANUAL HEAVY

INTENTIONALLY LEFT  
BLANK

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

### Index

#### A

Abbreviations.....	4
AC-DC Converter.....	6
AC-DC CONVERTER – Installation.....	21
AC-DC CONVERTER – Removal.....	13
Adjustment of the wastegate.....	21
AIR FILTER — INSPECTION.....	26
Air intake hose- inspection.....	21
Airbox — assembly.....	28
Airbox — inspection.....	24
Airbox — installation.....	28
Airbox — removal.....	19
Ambient air pressure and temperature sensor (AAPTS) — connection.....	30
Ambient air pressure and temperature sensor (AAPTS) — installation.....	31
Ambient air pressure and temperature sensor (AAPTS) — removal.....	10
Ambient air pressure and temperature sensors (AAPTS) — disconnection.....	12
Assembly.....	26
Axial position of water pump shaft – inspection.....	17

#### B

Ball bearing - installation.....	34
Ball bearing — installation.....	14
Ball bearing and oil seal - removal.....	12
Bearing bushing — inspection.....	22
Blinding shim - installation.....	15
Blinding shim - removal.....	10, 13
Blinding shim – installation.....	45
Boost pressure sensor (BPS) – connection.....	28
Boost pressure sensor (BPS) — installation.....	29
Boost pressure sensor (BPS) — removal.....	17

#### C

Charger shaft — inspection.....	12
Check valve.....	24
Checking the gear set.....	25
Checking the splines.....	25
Classification of parts for maintenance/repair.....	20
Compressor wheel — inspection.....	11
Connecting socket — inspection.....	24
Connections for display systems.....	8, 5, 7
Consumable materials.....	31

Conversion table.....	9
Coolant elbow — installation.....	31
Coolant elbow inlet – installation.....	30
Coolant elbow inlet — removal.....	15
Coolant elbow outlet — assembly.....	31
Coolant elbow outlet — removal.....	16
Coolant temperature sensor — disconnection.....	16
Coolant Temperature sensor (CTS).....	8
Coolant temperature sensor (CTS) — connection.....	28
Coolant temperature sensor (CTS) — installation.....	31
Coolant temperature sensor (CTS) — removal.....	14
Cooling air baffle - removal.....	12
Cooling air baffle – installation.....	28
Cooling system.....	1
Cooling system single parts — inspection.....	17
Cover – Installation.....	22
Crankcase.....	6
Crankshaft distortion — inspection.....	5
Crankshaft position sensor (CPS_1/CPS_2) — inspection.....	23, 25
Crankshaft position sensor (CPS_1/CPS_2) — installation.....	35
Crankshaft position sensor (CPS_1/CPS_2) — removal.....	15
Crankshaft position sensor (CPS) — disconnection.....	18
Crankshaft position sensor (CPS)— connection.....	28
Current measurement.....	20
Cylinder – installation.....	23
Cylinder — inspection.....	11
Cylinder and piston — installation.....	19
Cylinder and piston — removal.....	6
Cylinder head.....	14
Cylinder head - tightening torque procedure.....	36
Cylinder head – installation.....	34
Cylinder head — assembly.....	30
Cylinder head — removal.....	12
Cylinder head (single) repaired per engine side.....	35
Cylinder head assy. — inspection.....	17
Cylinder head single parts inspection.....	17
Cylinder head studs – inspection.....	17
Cylinder heads (both) repaired per engine side.....	36

#### D

Damper clutch — inspection.....	23
Damper clutch assy. - assembly.....	39

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

Damper clutch assy. - disassembly .....	16
Delivery of the engine .....	9
Destructive pitting .....	27
Displacement parts — inspection .....	9
Double ignition coil – disconnection .....	15
Double ignition coil – removal .....	7
Double ignition coil — inspection .....	27
Double ignition coil — installation .....	14, 37
Double ignition coil — removal .....	17
Double ignition coil assy. – inspection .....	11
Double ignition coil connection .....	29
Drive .....	7

### E

ECU - installation .....	9
ECU — inspection .....	8
ECU — removal .....	7
ECU removal .....	7
EGT sensor — disconnection .....	15
Electric starter .....	5
Electric starter – inspection .....	5
Electric starter – installation .....	6
Electric starter removal .....	5
EMS Power supply .....	7
Engine control unit (ECU) — connection .....	29
Engine control unit (ECU) — disconnection .....	15
Engine preservation .....	9
Engine suspension frame .....	26
Engine suspension frame – inspection .....	28
Engine suspension frame – installation .....	29
Engine suspension frame — removal .....	26
Exhaust assy. – inspection .....	10
Exhaust bracket – inspection .....	10
Exhaust bracket — installation .....	13
Exhaust bracket — removal .....	7
Exhaust gas temperature display .....	4
Exhaust Gas Temperature Sensor (EGT) — connection .....	28
Exhaust gas temperature sensor (EGT1_3/ EGT2_4) — installation .....	33
Exhaust gas temperature sensor (EGT1_3/ EGT2_4) — removal .....	12
Exhaust manifold — installation .....	13
Exhaust manifold assy. – inspection .....	13
Exhaust manifold assy. – removal .....	7
Exhaust pipe – removal .....	7
Exhaust pipe and cylinder head – inspection .....	10
Exhaust pipe on cylinder head – installation .....	14

Expansion tank — inspection .....	17
Expansion tank and form hoses — installation .....	28
Expansion tank with upper form hoses – removal ..	11

### F

Fastener information .....	25
Finishing work .....	25, 9–10, 9
Finishing work (crankshaft) .....	7
Finishing work (propeller gearbox) .....	48
Flake pitting (large-area flank fractures) .....	28
Fly wheel assy. removal .....	18
Fly wheel assy., installation .....	31
Flywheel assy. –inspection .....	23
Form hose – installation .....	22
Form hoses — removal .....	16
Free wheel gear — inspection .....	10
Fuel distribution .....	7
FUEL FILTER — INSPECTION .....	26
Fuel injector — disconnection .....	16
Fuel injector (INJ) .....	37
Fuel injector (INJ) — removal .....	17
Fuel injector— inspection .....	23
Fuel injectors— inspection .....	27
Fuel line assy. — inspection .....	22
Fuel line assy. — installation .....	34
Fuel line assy. — removal .....	11
Fuel pressure regulator — assembly .....	27
Fuel pressure regulator assy. — disassembly .....	9
Fuel pressure regulator assy. — inspection .....	22
Fuel pressure regulator assy. — installation .....	33
Fuel pressure regulator assy. — removal .....	10
Fuel pump — disconnection .....	15
Fuel rail – installation .....	30
Fuel rail — disassembly .....	14
Fuel rail — inspection .....	23
Fuel rail — removal .....	12
Fuse box .....	8
Fuse box — connection .....	30
Fuse box — disconnection .....	14
Fuse box — installation .....	23
Fuse Box — removal .....	8
Fuses .....	21

### G

Gear cover assy. - inspection .....	20
Gearbox oil line assy. and oil inlet flange adaptor - removal .....	7



# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

Gearbox re-configure .....	1	Instruction .....	13
General .....	2	Intake manifold — inspection .....	24
General information removal .....	8	Intake manifold — installation .....	29
General resistance measurement .....	18	Intake manifold — removal .....	18
General test procedure .....	18	Internal generator - removed .....	8
Governor - inspection .....	11	Internal generator — installation .....	16
Governor - removal .....	8		
Governor — removal .....	7	<b>K</b>	
Governor drive — installation .....	15	Knock sensor — inspection .....	12
Governor drive — removal - configuration 3 .....	9	Knock sensor — installation .....	13
Governor drive inspection .....	11	Knock sensor — removal .....	10
Governor flange — installation .....	15	Knock sensor (KNOCK) — connection .....	28
Governor flange — removal .....	7	Knock sensor (KNOCK) — disconnection .....	18
Governor flange and pressure oil line assy. — installation .....	10	Knock sensor (Knock) — inspection .....	24
Governor flange and pressure oil line assy. — removal .....	8	Knock sensor (KNOCK) — installation .....	34
Governor installation .....	18	Knock sensor (KNOCK) — removal .....	14
Ground cables — connection .....	30		
Ground cables — disconnection .....	13	<b>L</b>	
		List of effective pages .....	1
<b>H</b>		LOCTITE Application procedure .....	25
Hardness test method .....	18, 12		
Hex. screw - removal .....	8	<b>M</b>	
Hex. Screw — Removal .....	7	Maintenance .....	23
HIC A and HIC B — disconnection .....	12	Maintenance Concept .....	14
HIC_A and _HIC_B — connection .....	30	Maintenance propeller gearbox .....	8
Hydraulic valve tappet – installation .....	19	Maintenance, Internal generator .....	8
Hydraulic valve tappet – removal .....	7	Maintenance, Power plant .....	19
Hydraulic valve tappet — inspection .....	12	Manifold air pressure sensor (MAPS_1/MAPS_ 2) — installation .....	30
		Manifold air pressure sensor (MAPS) — connection .....	27
<b>I</b>		Manifold air pressure sensor (MAPS) — disconnection .....	18
Ignition cables — inspection .....	28	Manifold air temperature sensor (MATS_1/ MATS_2) – removal .....	11
Ignition housing .....	22	Manifold air temperature sensor (MATS) .....	27
Ignition housing - assembly .....	26	Manifold air temperature sensor (MATS) — disconnection .....	19
Ignition housing – assembly .....	20	Manifold air temperature sensor (MATS) — installation .....	32
Ignition housing — disassembly .....	15	Manifold pressure sensor (MAPS_1/MAPS_2) – removal .....	9
Ignition housing assy. ....	31	Measurements of generator A and B .....	9
ignition housing inspection .....	22	Measuring the axial clearance of the free wheel gear .....	14
Ignition housing, single part check .....	22	Muffler assy. – inspection .....	10
Impeller shaft inspection .....	13		
Inspection .....	8		
Inspection of parts .....	18		
Inspection of the fuse box installation .....	24		
Installation - Configuration 2 .....	9		
Installation - Configuration 3 .....	10		
Installation checklist .....	6		

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

Muffler assy. — installation.....	12
Muffler assy. — removal .....	8

### N

Needle bearing – Installation .....	47
Needle bearing — removal .....	13
Needle bearing and oil inlet — installation .....	15
Needle bearing and oil inlet flange— removal.....	10
Needle sleeve — installation .....	14

### O

Oil filter installation .....	19
Oil hoses – installation .....	29
Oil hoses — removal .....	25
Oil inlet flange - installation .....	45
Oil inlet flange adaptor - installation .....	18
Oil inlet flange adaptor - removal - configuration 2.....	8
Oil inlet flange adaptor and gearbox oil line assy. - installation .....	9
Oil line – inspection .....	27
Oil line (steel line) – installation .....	27
Oil line (steel line) — removal.....	25
Oil lines .....	25
Oil pressure regulator — inspection .....	13
Oil pressure sensor (OPS) - inspection .....	24
Oil pressure sensor (OPS) – removal.....	10
Oil pressure sensor (OPS) — disconnection.....	17
Oil pressure sensor (OPS) — installation .....	29
Oil pump.....	8
Oil pump – assembly .....	13
Oil pump – disassembly.....	9
Oil pump – installation .....	17
Oil pump assy. removal.....	8
Oil pump housing – inspection.....	12
Oil pump housing O rings.....	17
Oil pump shaft – inspection .....	13
Oil pump single parts – inspection .....	11
Oil return tube – installation.....	30
Oil return tubes— removal .....	15
Oil seal and rotary seal — removal .....	15
Oil seal installation .....	26
Oil seal replacement.....	26
Oil sump assy. — installation.....	16
Oil sump assy. — removal.....	7
Oil tank – installation .....	24
Oil tank — assembly.....	24
Oil tank — disassembly .....	22

oil tank removal.....	22
Oil tank single parts – inspection .....	23
Oil temperature (OTS) and Oil pressure sensor (OPS) — connection.....	28
Oil temperature sensor (OTS) — disconnection.....	17
Oil temperature sensor (OTS) — installation .....	32
Oil temperature sensor (OTS) — removal .....	14
Overload — inspection .....	22
Overload clutch - assembly.....	38
Overload clutch - disassembly.....	15

### P

Piston — inspection.....	9
Piston — installation.....	19
Piston pin — inspection .....	11
Piston rings — inspection.....	10
Pitting, general information .....	26
Plane surfaces — inspection .....	11
Pop off valve — inspection.....	21
Pop off valve — installation .....	36
Pop off valve assy. — removal.....	15
Power plant .....	20
Power plant – installation .....	21
Power plant — removal.....	20
Pressure control valve — connection .....	29
Pressure control valve — disconnection.....	13
Pressure control valve (PCV) – installation .....	30
Pressure control valve (PCV) – removal.....	11
Pressure Control Valve (PCV) – removal.....	14
Pressure control valve hoses inspection.....	21
Pressure control valve hoses instalaltion.....	37
Pressure regulator housing — inspection .....	23
Propeller gearbox.....	9
Propeller gearbox - disassembly.....	11
Propeller gearbox assy. - assembly .....	43
Propeller gearbox assy. - installation.....	9–10
Propeller gearbox single parts — inspection .....	20
Propeller shaft - removal.....	11
Propeller shaft — inspection .....	21
Propeller shaft — installation.....	35
Push rod – inspection .....	24

### R

Regulator – continuity check .....	22
Regulator A — installation.....	14
Regulator A — removal.....	9
Regulator B — installation.....	18

# BRP-Rotax

## MAINTENANCE MANUAL HEAVY

Regulator B — removal.....	11	Stator Assy. installation .....	27
Removal.....	15, 7, 6, 10, 7	Stator Assy. removal.....	18
Removal - Configuration 2 .....	7	Stator connectors - installation .....	28
Removal — Configuration 3 .....	8	Strain relief — connection .....	29
Removal of the power plant from the aircraft.....	21	Studs — installation .....	22
Removal, sealing of the plug screws, fly wheel assy. removal, .....	15	Surrounding assemblies – removal .....	10
Return to service.....	11	Surrounding assemblies — installation .....	29
Rocker arm — installation .....	33	Surrounding assemblies — removal .....	9
Rocker arm — removal.....	14	System description.....	5
Rocker arm bushing – inspection.....	23	System description – governor .....	6
Rocker arm bushing — installation .....	8	System description internal generator .....	7
Rocker arm bushing — removal .....	7		
Rocker Arm Bushing repair (TSN 1000h) .....	7		
Rocker arm check and rocker arm shaft – inspection .....	22		
Rotary piston/rotor – inspection .....	12		
Rotor turbine — inspection.....	11		
<b>S</b>		<b>T</b>	
Safety .....	10	Table of amendments .....	1
Safety information .....	11, 20, 6	Technical data.....	12
Safety instructions.....	5	Technical documentation .....	15
Sensors and actuators.....	18	Terms.....	4
Service products internal generator .....	5	Threaded hole — inspection .....	11
Slight pitting.....	26	Throttle body — inspection .....	25
Spark plug — inspection .....	12	Throttle body Assy. — installation .....	35
Spark plug — installation .....	13	Throttle body Assy. — removal .....	16
Spark plug — removal .....	10	Throttle position sensor (TPS) — connection.....	28
spark plug connector — inspection .....	12	Throttle position sensor (TPS) — disconnection ....	16
spark plug connector and ignition cable Assy. — installation .....	13	Throttle position sensor (TPS) — inspection.....	25
spark plug connector and ignition cable Assy. — removal .....	7	Throttle position sensor (TPS) — installation .....	37
Special tools internal generator .....	4	Throttle position sensor(TPS) — removal.....	16
Sprag clutch — inspection .....	10	Tools .....	35
Sprag clutch — removal.....	6	torsion bar – inspection.....	24
Sprag clutch housing – assembly .....	12	Torsion shaft — installation .....	36
Sprag clutch housing – disassembly .....	8	Torsion shaft — removal .....	9
Sprag clutch housing – installation.....	13	Treating rust and surface damage .....	11
Sprag clutch housing – removal.....	6	Trestle adapter Assy. – Installation and removal.....	23
Sprag clutch housing — inspection.....	9	Trestle adapter Assy. – removal .....	24
Sprag clutch housing single parts — inspection .....	9	Turbocharger .....	1
Spring force measurement.....	21	turbocharger – removal.....	6
Starter idle gear — inspection .....	10	Turbocharger Assy. – installation .....	17
Starter relay — connection.....	30	Turbocharger Assy. — disassembly .....	9
starter relay — disconnection .....	12	Turbocharger Assy. assembly.....	15
Stator Assy. — inspection.....	23	Turbocharger bracket — installation .....	15
		Turbocharger— inspection.....	11
		Type description.....	3
		<b>U</b>	
		Use for intended purpose.....	17

**BRP-Rotax**  
**MAINTENANCE MANUAL HEAVY**

**V**

Valve — removal .....	14
Valve cover – installation.....	38
Valve guide inspection .....	18
Valve inspection .....	19
Valve installation .....	32
Valve seats inspection .....	20
Valve spring inspection .....	21
Voltage measurement.....	19

**W**

Washer - inspection.....	21
Wastegate actuator assy. — check .....	13
Wastegate actuator assy. — removal .....	8
Wastegate actuator assy.— installation .....	19
Wastegate lever inspection .....	12
Water pump .....	7
Water pump housing — assembly .....	21
Water pump housing — disassembly .....	16
Water pump housing — inspection .....	18
Water pump housing with lower form hoses — installation .....	26
Water pump housing with lower form hoses — removal .....	12
Water pump shaft — removal .....	15
Wiring color codes.....	8
Wiring harness.....	2
Wiring harness — installation .....	23
Wiring harness — removal .....	20



# ROTAX®

---

Engine serial no.

---

Type of aircraft

---

Aircraft registration no.

Rotax® authorized distributor

**FLYROTAX.COM**

® and TM are trademarks of BRP-Rotax GmbH & Co KG.

© 2023 BRP-Rotax GmbH & Co KG. All rights reserved.

